


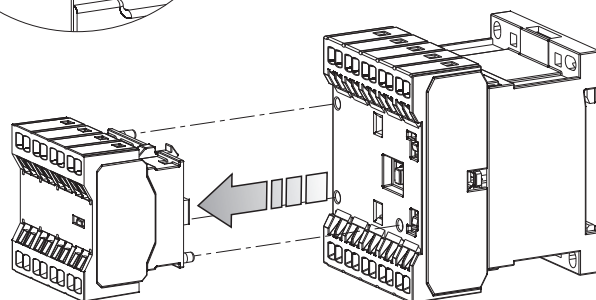
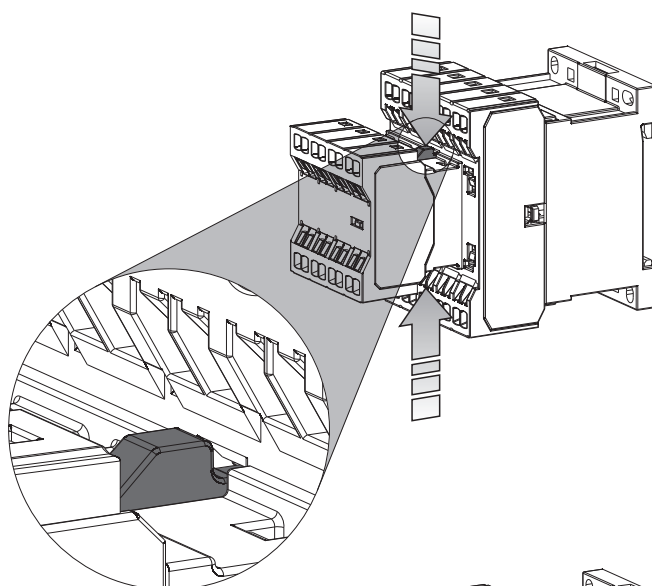
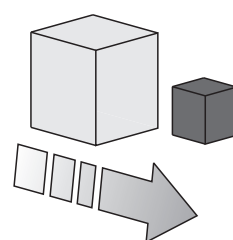
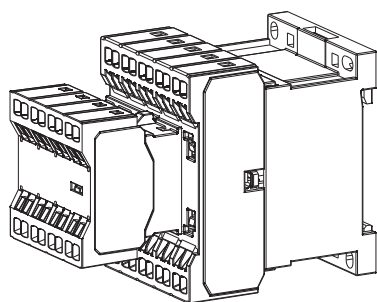


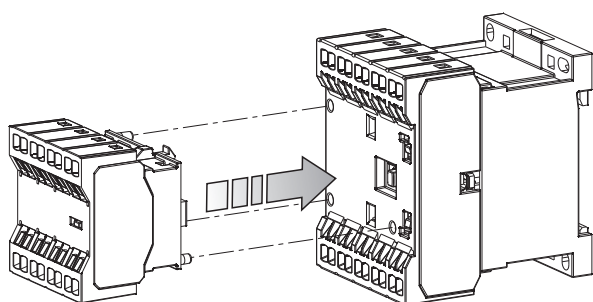



INSTRUÇÃO DE MONTAGEM - BLOCO DE CONTATO FRONTAL PARA CWC0 - TERMINAL MOLA  
ASSEMBLY INSTRUCTION - FRONT CONTACT BLOCK FOR CWC0 - SPRING TERMINAL  
INSTRUCTIVO DE MONTAJE - BLOQUE DE CONTACTO FRONTAL PARA CWC0 - TERMINAL RESORTE  
MONTAGEANLEITUNG - HILFSSCHALTERBLOCK FÜR CWC0 - FEDERZUGKLEMME

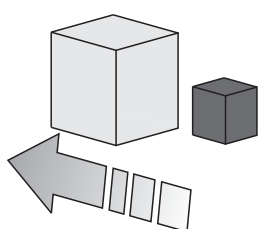

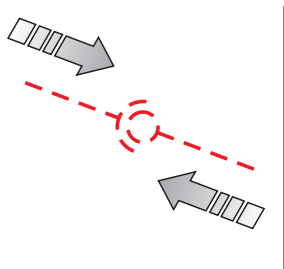

**Auxiliary Contact Block**  
**Bloques de Contactos Auxiliares**  
**Blocos de Contatos Auxiliares**  
**Hilfsschalterblöcke**

| A                                                  | B                         |
|----------------------------------------------------|---------------------------|
| 2 X 0,5...1,5<br>22 -16<br>(mm <sup>2</sup> / AWG) | 7mm / 0,27"<br>(mm / pol) |

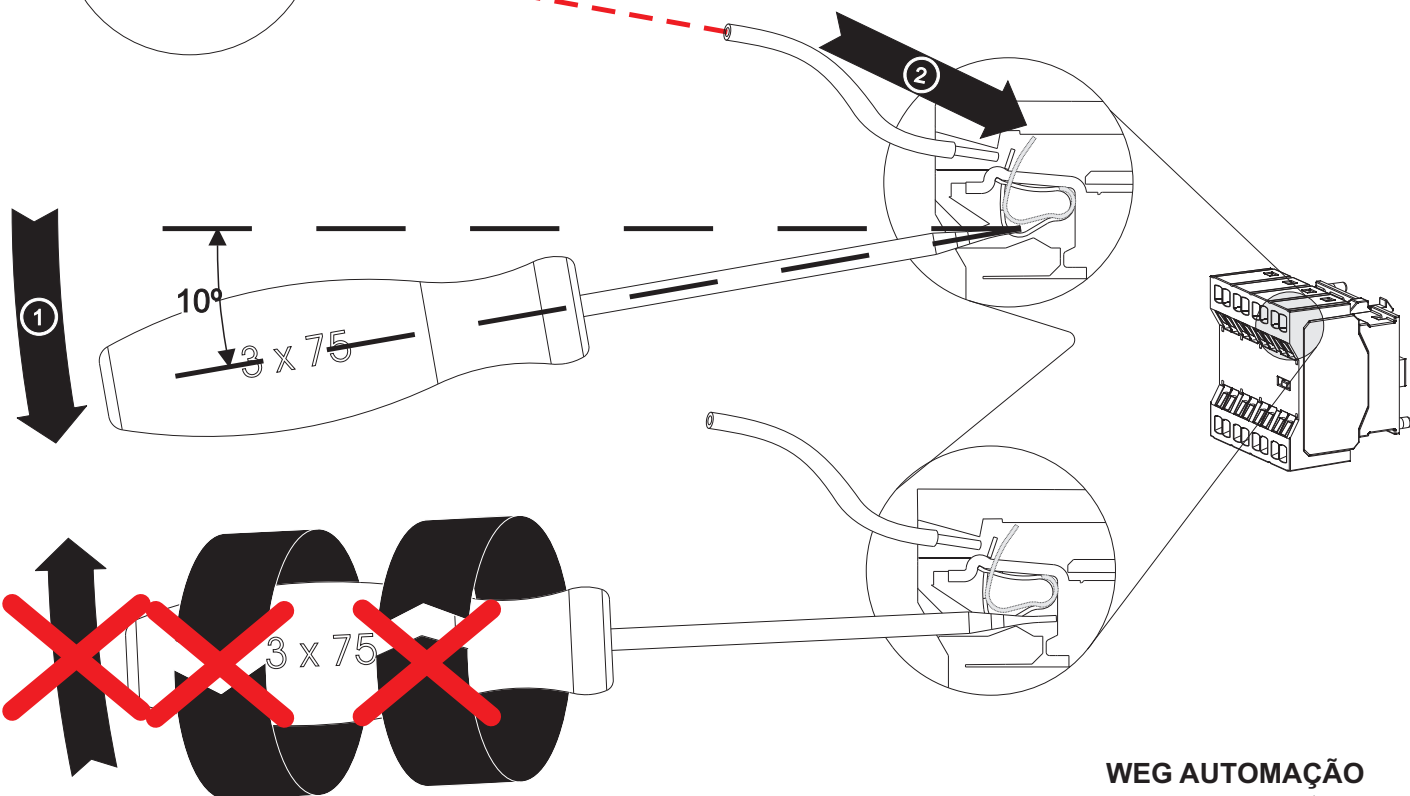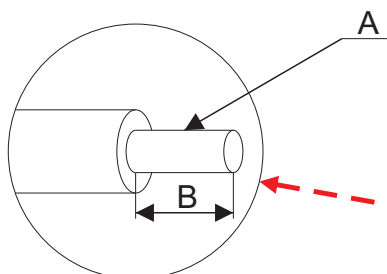

**WEG AUTOMAÇÃO**  
[www.weg.net](http://www.weg.net)