

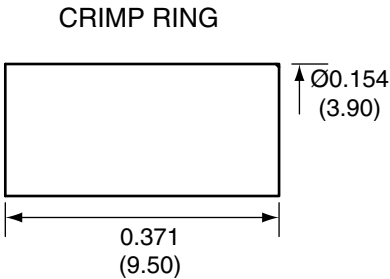
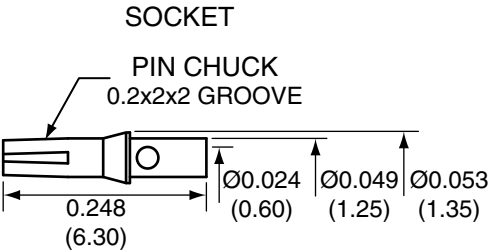


| 1           |           |        | 2 | 3 | 4 |
|-------------|-----------|--------|---|---|---|
| Description | Material  | Finish |   |   |   |
| Body        | Brass     | Nickel |   |   |   |
| Socket      | BE CU     | Gold   |   |   |   |
| Insulation  | Teflon    | Teflon |   |   |   |
| Washer      | PH Bronze | Gold   |   |   |   |
| Gasket      | SI Rubber | Rubber |   |   |   |
| Crimp Ring  | Brass     | Nickel |   |   |   |

SIDE VIEW

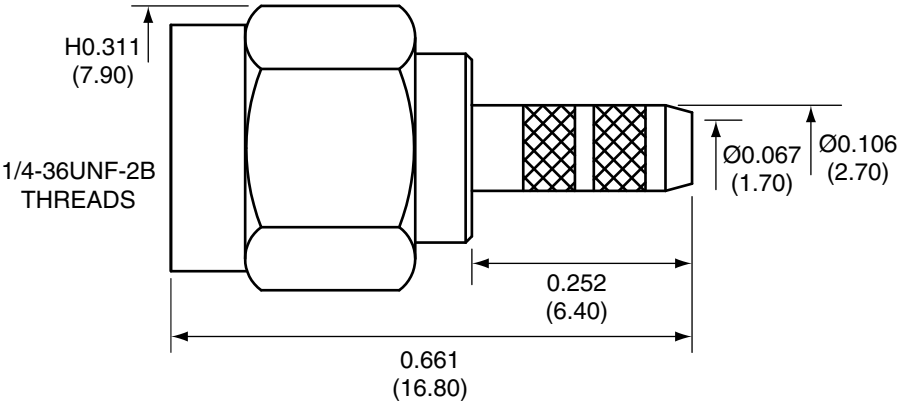

RECOMMENDED CABLE STRIPPING DIMENSIONS

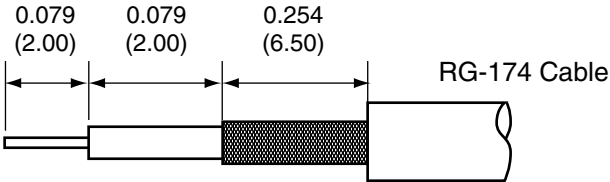

CONREVSMA007 ASSEMBLY INSTRUCTIONS

1. Solder the socket to the center conductor.
2. Insert the socket, center conductor, and insulator into the body until the top of the socket is even with the white insulation in the body.
3. Wrap the braid around the tail of the body and crimp the ring with a 0.137" hex crimp tool (or one labeled for use with RG-174 cable)

|                                                |  |                |  |
|------------------------------------------------|--|----------------|--|
| Title                                          |  | CONREVSMA007   |  |
| RP-SMA MALE CABLE END<br>CRIMP FOR RG174 CABLE |  | Revision: 1.0  |  |
| Part No.                                       |  | Date: 6/2/2006 |  |
| Dimensions:                                    |  | Sheet 1 of 1   |  |
| INCHES (mm)                                    |  |                |  |

CONNECTOR CITY  
159 ORT LANE  
MERLIN, OR 97532  
PH (541)-471-6256  
FAX (541)-471-6251

**CONNECTOR CITY**  
THE VALUE OF CONNECTIONS