


# VectorPak™ T-Struts

Vector T-Struts can be used for custom assemblies or to fit existing cage assemblies. Available with two nut slots. As an alternative, mounting brackets (BR16A, available separately) may be used to attach struts to cages. Strut material is aluminum with clear irridite finish. Struts are attached to side panels with 10-32 screws (Part No. HD90).

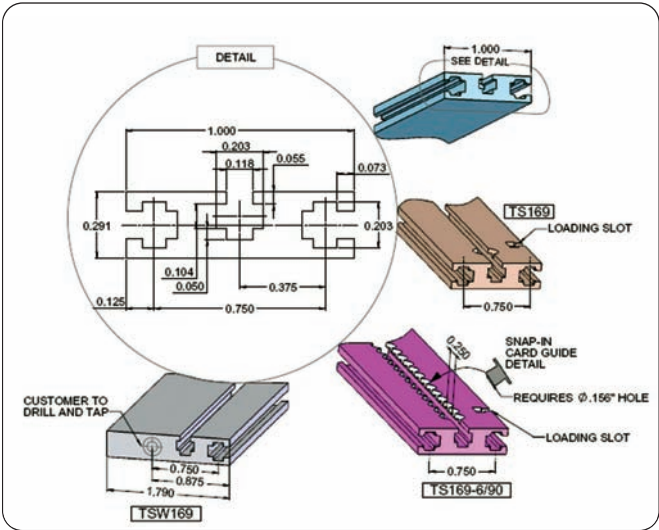

Figures showing T-Strut features - see table




TS169-6/90

**BR16A Bracket Kit** includes two each BR16-1 (right) and BR16-2 (left) brackets plus installation hardware. Bracket assemblies are normally used on rear strut, though front strut may use them as well. HD90 Self-tapping Screws (pkg. 12 not shown) may also be used to mount T-struts to sidewalls.


NT4-7PA: Pkg 25 nuts that load into "T-Strut" groove

## T-Strut Hardware Kit - HD34 or HD34B for Connector Mounting

HD34 (1/2" screws) and HD34B (1/4" screws) are complete edge-connector mounting kits for attachment to VectorPak™ 'T'-Struts. Each kit contains:  
42, 4-40 locking screws (SC4-28, 1/2"L or SC4-27, 1/4"L)  
42, 4-40 locking nuts (NT4-7)  
42 lockwashers

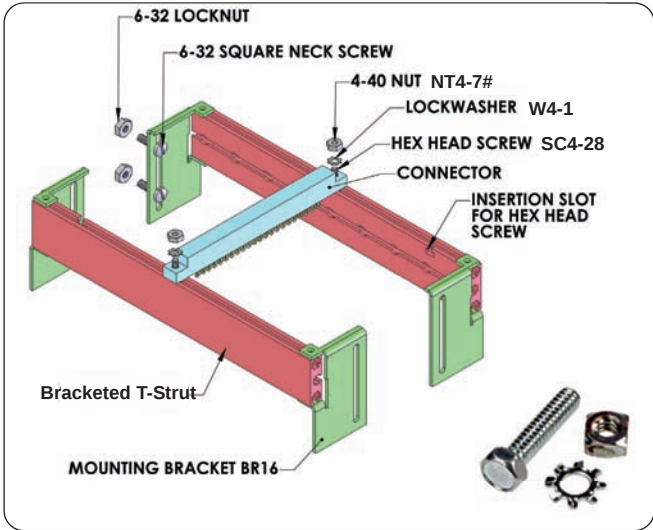

To mount connectors, simply slide nut into desired position and fasten with screws and lockwasher as illustrated. SC4-28 screws available in bulk quantities.

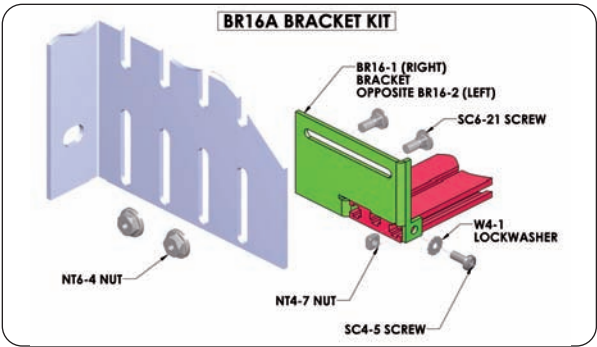

| End Part No. | Length | Width | Method of Fastening          | Fig. | Description                                                         |
|--------------|--------|-------|------------------------------|------|---------------------------------------------------------------------|
| TS81         | 8.12"  | 1"    | BR16 Brackets or HD90 Screws | 1    | 1" wide T-strut, Pk. of 1 each                                      |
| TS81-5/90    | 8.12"  | 1"    | BR16 Brackets or HD90 Screws | 4    | 1" wide T-strut, Pk. of 1 each                                      |
| TS169        | 16.85" | 1"    | BR16 Brackets or HD90 Screws | 1    | 1" wide T-strut, Pk. of 1 each                                      |
| TSW169       | 16.85" | 1.75" | HD90 Screws                  | 5    | 1.75" wide T-strut, Pk. of 1 each                                   |
| TS169-6/90   | 16.85" | 1"    | HD90 Screws                  | 4    | 1" wide T-strut, Pk. of 1 each, dimpled for Snap-in guide insertion |
| TS209        | 20.85" | 1"    | BR16 Brackets or HD90 Screws | 1    | 1" wide T-strut, Pk. of 1 each                                      |
| TS300        | 30.00" | 1"    | Raw Stock                    | 1    | 1" wide T-strut, Pk. of 1 each                                      |
| TSW300       | 30.00" | 1.75" | Raw Stock                    | 5    | 1.75" wide T-strut, Pk. of 1 each                                   |
| TS600        | 60.00" | 1"    | Raw Stock/pkg.               | 3    | 1" wide T-strut, Pk. of 4 pcs.                                      |

Custom lengths available on request



