

INDASH by PANAVISE®

75107-309

Page 1 of 1

MOUNTING LOCATION:

Above Right & Left of radio JURL

TOOLS REQUIRED:

7mm Socket Driver

Phillips Screwdriver, Cutting Tool

PARTS INCLUDED:

(1)S7-1999,(1)S7-1946Top(75002)

(1)-E- 8/32"x1.0" Needle Pt. Screw, Phillips

(2) -A-8/32"x9/16" Needle Pt. Screw

(2)-O- 8/32" Acorn Nuts, Tape

CELL PHONE & MEDIA MOUNT INSTALLATION INSTRUCTIONS

PART#: 75107-309

MFG: FORD

MODELS & YEARS:

F-150 2009-2012 (ALL)

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

STEP #1: Lift off the rubber pad on floor of cubby above CD/Radio/Display. Lift up on the front of the pad and pull out towards you.

STEP #2: Install the Protective Tape piece on the bottom of the larger piece of the mount where the dash touches the radio bezel, and trim with scizzors. See Picture.

STEP #3: With 7mm socket driver, remove either the left or right side screw that was under pad. Place Indash by PanaVise Mount over screw hole. (Left side mounting uses the right side slotted screw hole, and Right side mounting uses the right side slotted screw hole) Install 1.0" long screw supplied. Make sure the joggle on the mount fits up against the radio bezel edge.

STEP #3: Install the additional (2) 9/16" long screws into the other screw holes. NOTE: The only hole that will not be used is the one directly in front of the hole you installed the 1.0" long screw into)

STEP #4: Place the Pad back in place, as it will not go all the way in. You will need to cut some of the pad edge away to allow the rubber pad to fit in as best as it can.

STEP #5: Install the Upper mount part #75002 either in the UP(North) or the DOWN(South) direction, depending on your preferences. *Note: The top has (4) installation holes it can use to angle the top towards the driver. The Panavise logo and Part number will be side ways.*

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



1" Screw Mounting Hole, 9/16"



Rubber Mat Cut Area




Mount in Place with Mounting Plate
in Left Side Down Position on Nav.



Mount in Place with Mounting Plate
in Right Side Down Position



Mount in Place with Mounting Plate
in Left Side Down Position

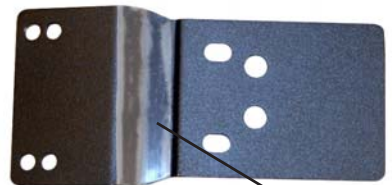

Tape Installation Location

03-13-13



There may be recent updates to this Instruction Sheet, please visit our website or contact PanaVise Products, Inc. for the latest revision as well as for the most complete up-to-date PanaVise InDash Applications List: 7540 Colbert Dr., Reno, NV, Phone: 800.759.7535, 775.850.2900, Fax: 800.395.8002, www.panavise.com. © 2002 PanaVise Products, Inc.