

TEST LEAD SETS

SOLDERLESS TIP TEST LEAD SETS

SUPPLIED IN PAIRS : 1-RED, 1-BLACK



PHONE TIPS
795-1000



SPADE LUGS
795-1001




ALLIGATOR
CLIPS
795-1002




INSULATED
ALLIGATOR
CLIPS
795-2027



SOLDERLESS
TIPS
795-1003

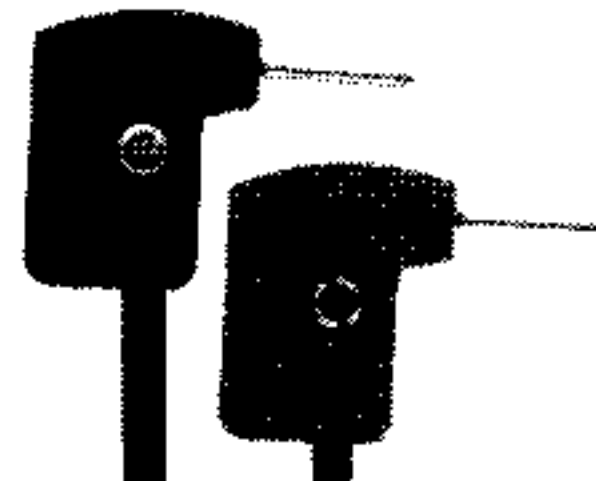

METER
PHONE
TIPS
795-1015

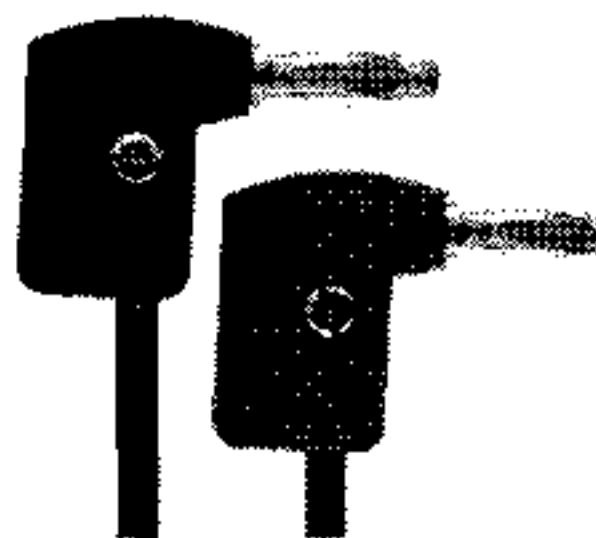


METER
BANANA
PLUGS
795-1016



STANDARD
SIZE
BANANA
PLUGS
795-1030

TEST LEAD KIT SOLDERLESS PROD 795-1035

SUPPLIED IN PAIRS, ONE RED AND ONE BLACK

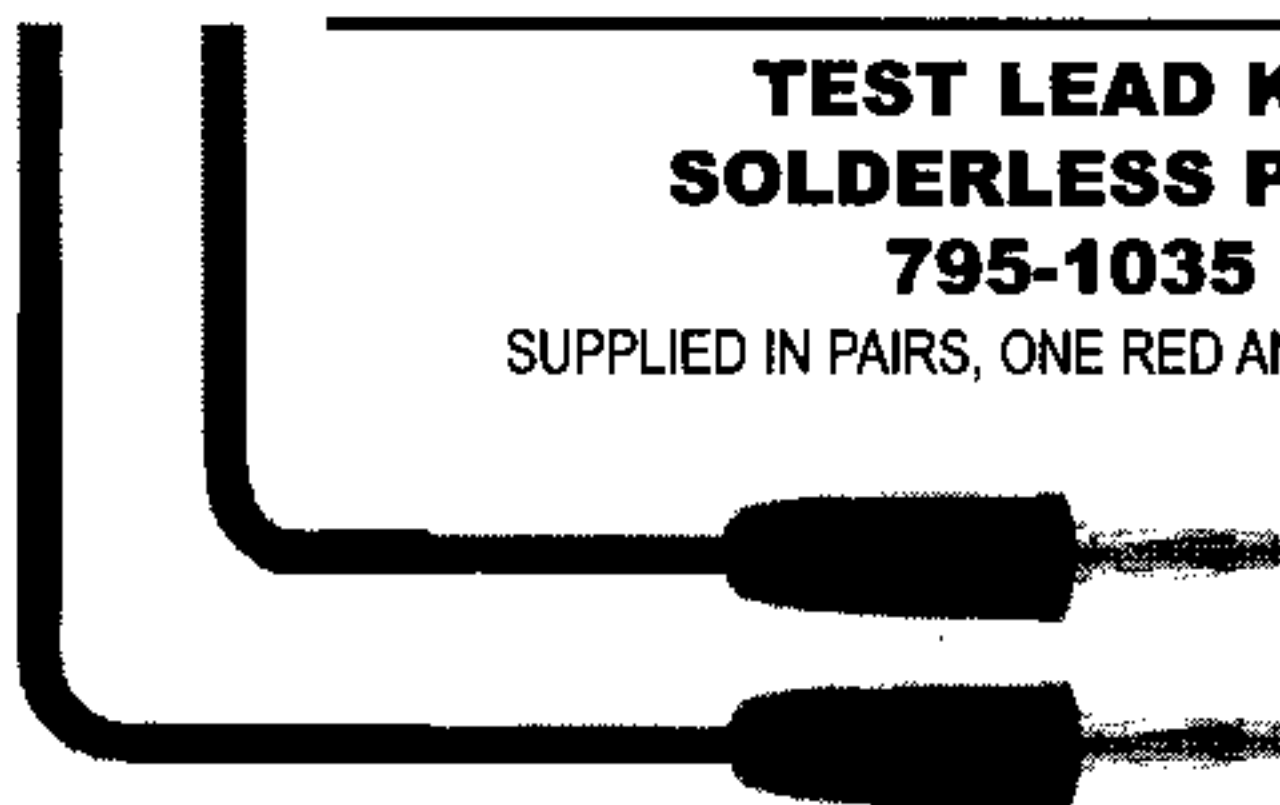

Supplied with
adapters to fit
banana plugs.



(2)
PHONE
TIPS



(2)
SPADE
LUGS



(2)
ALLIGATOR
CLIPS

PHONO NEEDLE TEST LEAD SETS

SUPPLIED IN PAIRS : 1-RED, 1-BLACK
#18 AWG RUBBER WIRE, 48" NOM LENGTH




PHONE TIPS
795-1005



SPADE LUGS
795-1006



ALLIGATOR
CLIPS
795-1007

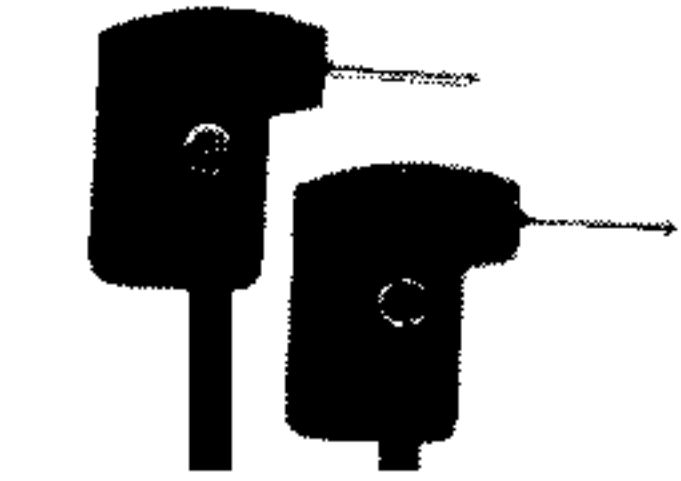


METER
PHONE
TIPS
795-1020



METER
BANANA
PLUGS
795-1021


TEST LEAD KIT PHONO NEEDLE 795-1036

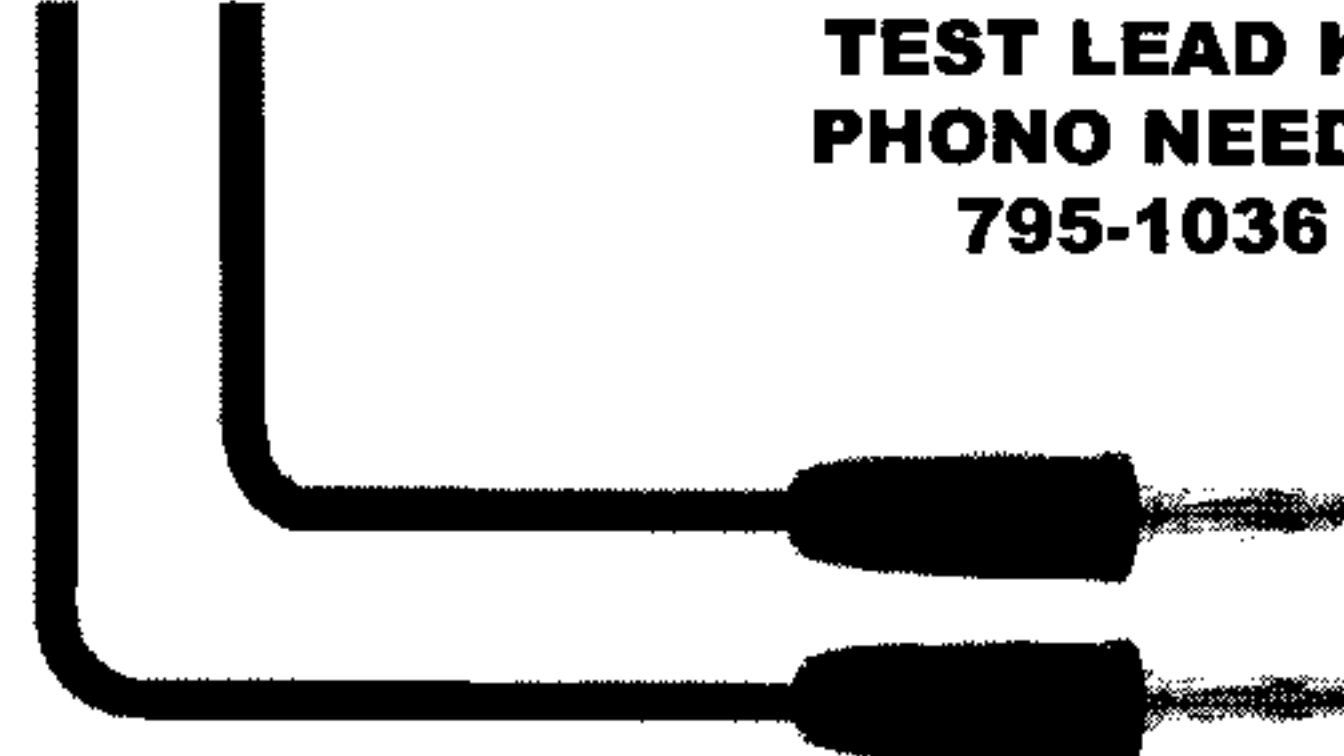

Supplied with
adapters to fit
banana plugs.



(2)
PHONE
TIPS

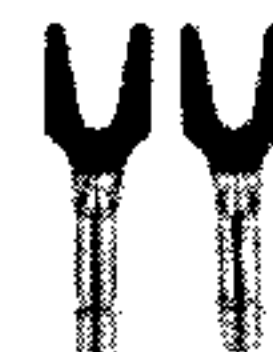


(2)
SPADE
LUGS



(2)
ALLIGATOR
CLIPS

SHORT TIP TEST LEAD SET 795-1031

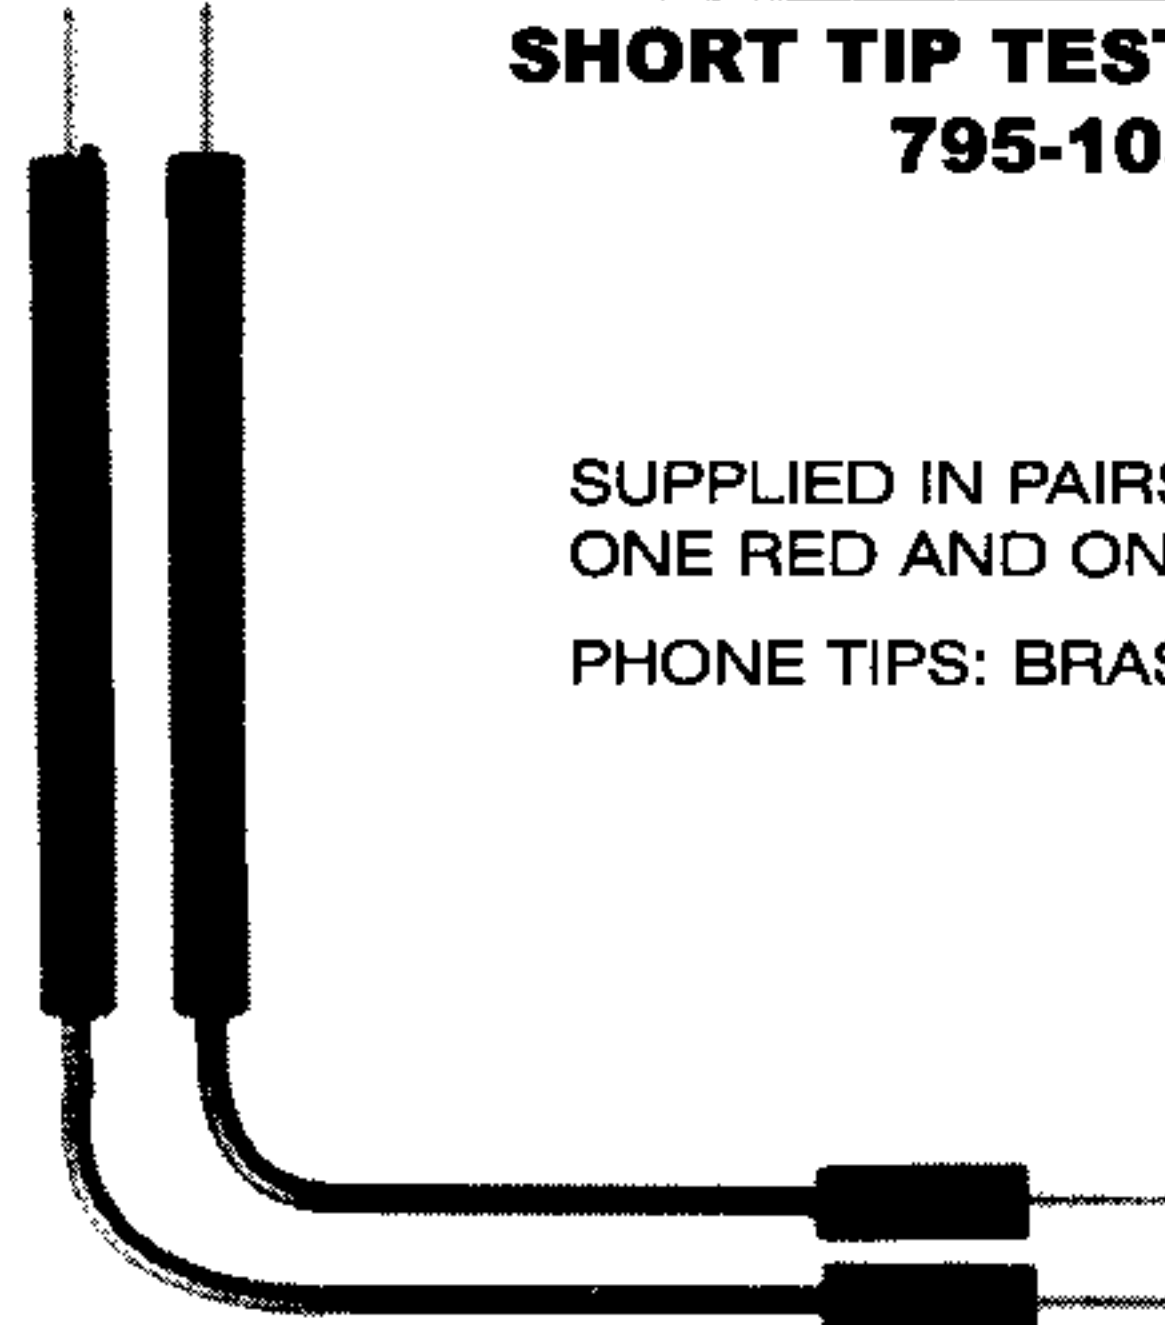

SUPPLIED IN PAIRS
ONE RED AND ONE BLACK
PHONE TIPS: BRASS, NICKEL PLATED

CONCORD