

REV	DATE	DRAWN/CHKD	DESCRIPTION	PART NUMBER	PANEL THICKNESS *A* MIN. *A* MAX.	*B*	*L*	SCREW PROJECTION *P-1* *P-2*	*T*		
A	31OCT97	MDM	PRN: 47-272	47-W0-5X2-Y2				1.4 6.2	19		
B	19MAR98	MDM	PRN: 47-299	47-W1-5X2-Y2				3.1 7.9	21		
C	01JUL99	MJS	PRN: 47-452	47-W2-5X2-Y2	1.5	3.2	0.6	1.8	4.1 8.9	22	
D	18JUL2005	CSC/MDY	PRN: P2005-0746	47-W3-5X2-Y2					6.1 10.9	24	
E	28MAR2006	RLR/MDY	PRN: P2006-0276	47-W0-5X4-Y2					3.1 7.9	21	
				47-W1-5X4-Y2	3.2	4.8	1.6	3.4	4.1 8.9	22	
				47-W2-5X4-Y2					6.1 10.9	24	
				47-W2-5X6-Y2					4.1 8.9	22	
				47-W3-5X6-Y2	4.8	6.4	3.2	5	6.1 10.9	24	
				47-W3-5X8-Y2	6.4	7.9	4.7	6.6	6.1 10.9	24	

MILLIMETERS

ALL DIMENSIONS WITHOUT TOLERANCES ARE FOR REFERENCE ONLY.

THIRD ANGLE PROJECTION

A3 PAPER SIZE

MATERIAL AND FINISH:


KNOB: ALUMINUM, NATURAL OR BLACK ORGANIC COATING.
SCREW: 1008 CASE HARDENED STEEL, ZINC PLATE CHROMATE PLUS SEALER OR BLACK ORGANIC COATING.
FERRULE: ALUMINUM, NATURAL
SPRING: 302 STAINLESS STEEL, PASSIVATED.
RATCHET MECHANISM: HARDENED STEEL, BLACK OXIDE.

'W' THREAD	'X' SCREW RECESS	'Y' FINISH ON KNOB & SCREW
1- 10-32	0- SLOTTED	2- NATURAL (BRIGHT)
8- M5	2- PHILLIPS	6- BLACK
	4- TORX®	


INSTALLATION INSTRUCTIONS:

1. PREPARE HOLE WITH COUNTERSINK ACCORDING TO THE REQUIRED *B* DIMENSION. RECOMMENDED MIN. DISTANCE FROM EDGE OF PANEL TO THE CENTERLINE OF THE HOLE IS 12.
2. INSERT FASTENER AND FLARE INTO COUNTERSUNK HOLE WITH INSTALLATION TOOL PART No. 47-115 OR 29-47-502-10.
3. HAND TIGHTEN FIRMLY TO ENGAGE THE RATCHET MECHANISM.


SCREW RECESS STYLES

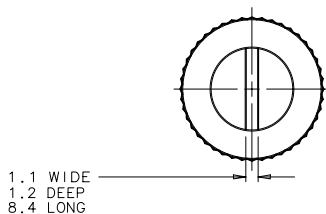


SLOTTED

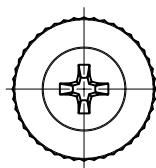


No. 2 PHILLIPS

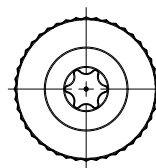


T-25 TORX®

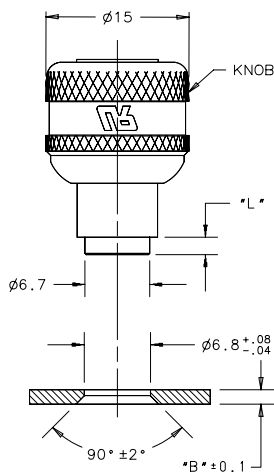

PANEL PREPARATION

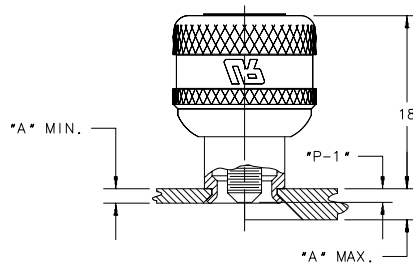

UNFASTENED

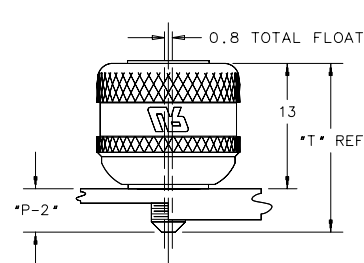

FASTENED