

# Wi.M900X/T-R Drop-In Embedded Wireless Module

868/915 MHz, 152.34kbit/sec, 32/84 channels



### **Typical Applications**

- Automated Meter Reading
- Security Sensors
- Toys
- Remote Control

#### **Description**

The Wi.M900X/T module is a microcontroller-less version of our popular Wi.232DTS module. It offers the same excellent RF performance, yet allows the design engineer to control the radio at the physical level using any microcontroller. The module is footprint compatible with the Wi.232DTS module so upgrading to the Wi.232DTS is very easy... no PCB changes are required.

The module supports two modes of operation: wide-band and narrow-band. In wide-band mode, the channel width is 600kHz and in narrow-band mode the channel width is 200kHz.

The module is configured via a simple SPI style serial interface. Data is transmitted and received using a separate digital serial interface that includes pre-amble and start-of-packet detection.

A typical circuit consists of a low-cost microcontroller, a power source, a Wi.M900X/T module, and an antenna.

The WiM900X module is a complete transceiver while the WiM900T module is transmit only. In addition, the modules can be ordered for operation in the 868 MHz band by substituting 868 for 900. For example: WiM868X.

#### **Features**

- Instant physical radio solution no external RF components required
- Simple FCC certification as digital spread spectrum device
- Supports frequency hopping
- Based on the XEMICS XE1203F transceiver
- Footprint compatible with our Wi.232DTS module
- Built data clock recovery
- Automatic packet start detection
- 2.4-3.6 volt operation
- 1.2 152.34kbit/second data rate
- SPI style digital serial interface
- Factory set 48-bit unique ID
- Smallest form factor in the world under 0.8" square
- Maximum output power +15dBm
- Maximum RF sensitivity -112dBm
- RF sensitivity @ max data rate -103dBm tvp.
- TX current = 54mA @ 15dBm typical
- RX current = 14mA typical
- NV personality memory stores factory calibration, lot code information, and unique ID
- Can be provided with or without a SAW filter.
- 868, and 915 MHz versions are available
- 32 wideband and 84 narrow band channels are available in the 915 MHz version

#### **Document Control**

#### **Document Control**

Created By	Steve Montgomery	3/4/2005
Engineering Review		
Marketing Review		
Approved –		
Engineering		
Approved – Marketing		

# **Revision History**


Revision	Author	Date	Description
1.0A	SJM	3/4/2005	Document Created

### **Table of Contents**

Typical Applications	
Features	
Description	1
Document Control	
Revision History	2
Table of Contents	3
Pin-out Diagram	4
Mechanical Drawing	4
Pin Descriptions	4
Absolute Maximum Ratings	5
Detailed Electrical Specifications	5
AC Specifications – RX	5
Notes	5
AC Specifications - TX	6
Notes	6
DC Specifications	6
Notes	6
Functional Description	7
Programming Interface	9
Non-volatile memory	12
Example circuit	12
Ordering Information	14
Contact Information	14

# **Pin-out Diagram**

# **Mechanical Drawing**

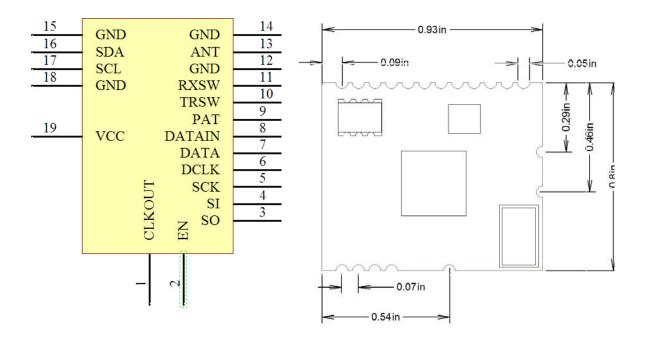

### **Pin Descriptions**

Pin Number	Name	Description
1	CLKOUT	Clock output from XE1203 – GND on Wi.23DTS
2	EN	XE1203 Programming port enable
3	SO	XE1203 Programming port serial output
4	SI	XE1203 Programming port serial input
5	SCK	XE1203 Programming port clock
6	DCLK	XE1203 Data port clock
7	DATA	XE1203 Data input/output – programmable
8	DATAIN	XE1203 Data input
9	PAT	XE1203 Pattern output – indicates start-of-packet
10	SWITCH2	Transmit enable – controls RF switch
11	SWITCH1	Receive enable – controls RF switch – not used in
		transmit only version
12	GND	Ground
13	ANT	50 ohm antenna power
14	GND	Ground
15	GND	Ground
16	SDA	Serial data pin for NV personality memory – I2C bus
17	SCL	Serial clock pin for NV personality memory – I2C bus
18	GND	Ground
19	VCC	2.4 – 3.6 volt power supply

# **Absolute Maximum Ratings**

Parameter	Min	Max	Units
VCC – power supply	0	3.9	VDC
Voltage on any pin	0	VCC	VDC
Input RF level		-5	DBm
Storage Temperature	-40	+85	°C
Operating Temperature	-40	+85	°C

# **Detailed Electrical Specifications**

### AC Specifications – RX

Parameter	Min	Тур	Max	Units	Notes
Receive Frequency – US	902		928	MHz	
Receive Frequency – EUR	868		870	MHz	
Wide band channels – US		32			<ul><li>750kHz channel spacing</li><li>235kHz deviation</li></ul>
Wide band channels – EUR		2			<ul><li>400kHz channel spacing</li><li>155kHz deviation</li><li>Channel usage depends on application</li></ul>
Narrow band channels – US		84			<ul><li>300kHz channel spacing</li><li>75kHz deviation</li></ul>
Narrow band channels – EUR		6			<ul><li>150kHz channel spacing</li><li>75kHz deviation</li><li>Channel usage depends on application</li></ul>
Receiver sensitivity		-102		dBm	<ul><li>Wideband US mode</li><li>152.34kbps data rate</li></ul>
		-108		dBm	<ul><li>Wideband US mode</li><li>2.4kbps data rate</li></ul>
		-110		dBm	<ul><li>Narrowband US mode</li><li>2.4kbps data rate</li></ul>
Receiver noise bandwidth		200		KHz	Wideband Mode
		600	•	KHz	Narrowband Mode
Adjacent Channel Rejection		55		dB	Chan+750kHz for wideband     Chan+300kHz for narrowband
LO Leakage			-70	dBm	

# AC Specifications - TX

Parameter	Min	Тур	Max	Units	Notes
Transmit Frequency – US	902		928	MHz	
Transmit Frequency – EUR	868		870	MHz	
Wide band channels – US		32			<ul><li>750kHz channel spacing</li><li>235kHz deviation</li></ul>
Wide band channels – EUR		2			<ul><li>400kHz channel spacing</li><li>155kHz deviation</li><li>Channel usage depends on application</li></ul>
Narrow band channels – US		84			300kHz channel spacing     75kHz deviation
Narrow band channels – EUR		6			<ul><li>150kHz channel spacing</li><li>75kHz deviation</li><li>Channel usage depends on application</li></ul>
Transmit Power			+15	dBm	No SAW filter
			+12	dBm	With SAW filter
Harmonics			-55	dBc	

### **DC Specifications**

Parameter	Min	Тур	Max	Units	Notes
RX current		14		mA	
TX current		54		mA	+15dBm power setting
TX current		34		mA	+10dBm power setting
TX current		27		mA	+5dBm power setting
TX current		22		mA	0dBm power setting
Sleep Current		.2	1	uA	

#### **Functional Description**

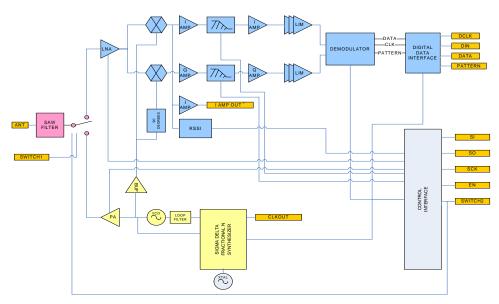


Figure 1: Block diagram of Wi.M900X/T module

The Wi.M900X/T module is based on the XEMICS XE1203E(F) transceiver RFIC. It encapsulates the remaining circuitry required to complete an RF module.

Any 50 ohm antenna can be used with the Wi.M900X/T.

The Wi.M900X module is populated with all of the transceiver components shown in figure 1. The Wi.M900T is only populated with the transmitter components; it does not have the SAW filter nor the RF switch.

On the Wi.M900X the antenna pin on the module goes either to the SAW filter or to the RF switch directly. The module can be ordered with or without a SAW filter. If the SAW filter is populated, it is critical that the antenna be AC coupled if it has a DC path to ground (which is true for most PCB antennas).

On the Wi.M900T the antenna pin connects directly to the output of the power amplifier.

If populated, the RF switch connects the antenna port to either the transmit or receive RF chain. It is controlled by SWITCH1 and SWITCH2. SWITCH2 is also connected to the SWITCH input of the XE1203. The following table shows how SWITCH1 and SWITCH2 affect the operation of the module.

SWITCH1	SWITCH2	RF MODE	XE1203 REG SET
LOW	LOW	Receive – switch off	SWParam1
HIGH	LOW	Receive	SWParam1
LOW	HIGH	Transmit	SWParam2
HIGH	HIGH	Transmit – switch off	SWParam2

Internally, the XE1203 has two identical sets of programming registers (SWParam) that control the operation of the chip. Generally, one set is programmed for receive mode and the other set is programmed for transmit mode. For the Wi.M900X/T module, set 1 is for receive mode and set 2 is for transmit mode.

For the Wi.M900T module, the register sets can be used to quickly switch between two frequencies. Register set 1 is selected when SWITCH2 is low, and register set 2 is selected when SWITCH2 is high.

In addition to the SWParam registers, there are three other register sets that set the operation of the module.

The ConfigSwitch register controls the operation of the SWITCH pin on the XE1203. Since we are using the SWITCH pin as an input, the value of ConfigSwitch does not matter.

The RTParam registers controls the operation of the radio itself. The FSParam registers controls the operation of the frequency synthesizer. The ADParam register determines the parameters of operation for the digital data interface. All of these registers are used in both receive and transmit mode. They can be programmed to meet the customer's needs. The only requirement is that bit 3 (RTParam\_Switch\_Ext) of RTParam must be set to 1.

The receive chain is a traditional zero-IF architecture. The filter bandwidth is programmable and can be set to 200kHz or 600kHz. RSSI is derived from the I-channel. It is digitized internally and can be read from the DataOut register.

Frequency error indication (FEI) is derived from both the I and Q channels. Its value can be read from the DataOut register. FEI can be used to correct for crystal frequency errors caused by temperature variations.

The demodulator re-creates the data stream. It demodulates the FSK modulated baseband carrier, extracts the bit stream timing, and samples the raw bit stream to accurately reproduce the original data.

In receive mode, the data interface is synchronous, operating as an SPI master. The module determines the data timing; the DCLK pin is the clock and the DATA pin is the data output.

In transmit mode, the data interface is asynchronous, operating as an SPI slave. The data timing is determined by the host microcontroller. The DCLK pin is not used in

transmit mode. The data input could be either DATA or DATAIN, depending on how the module is programmed.

Figure 2 shows a typical connection between the module and a host microcontroller SPI port. In this configuration, the DATA pin is programmed to be a data output in receive mode and a data output in receive mode. In receive mode, the microcontroller SPI port is configured as an SPI slave. The module generates data timing. In transmit mode, the microcontroller SPI port is configured as a SPI master. Timing is generated by the microcontroller.

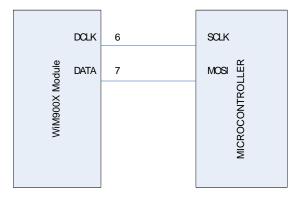


Figure 2

The transmit chain is essentially a VCO locked to a crystal reference frequency by a fractional N synthesizer. The synthesizer allows the VCO frequency to be set in 500Hz steps. It also supports direct digital FSK modulation of the transmit carrier. Frequency deviation can be set from 0 to 255kHz in 1kHz steps.

The output of the VCO is amplified by the power amp, which can be set to one of four output power levels.

For detailed information about programming the Wi.M900X/T module, please consult the current XE1203E(F) data sheet which can be found at <a href="https://www.xemics.com">www.xemics.com</a>.

### **Programming Interface**

The serial programming interface is compatible with any hardware or software implementation of a SPI serial port.

The following code example shows functions for reading and writing module registers using a software SPI implementation. The XE\_SCLK, XE\_SI, XE\_SO, XE\_EN definitions are hardware specific and correspond to the microcontroller IO pins that are connected to the XE1203 SPI pins.

```
// void halRFWriteReg(reg, val)
//
// Description:
//
     Function used to write registers in the XE1203
//
// Arguments:
                    byte reg
//
//
                               Register number to write
//
                    byte val
//
                              Value to write to register
//
// Return value:
//
     void
//---
void halRFWriteReg(byte reg, byte val)
          byte data i;
          XE_SCLK=0;
                              // Always start in a low condition
          XE_SI=1;
XE_EN=0;
                              // enable the serial port
          // start condition
          XE_SCLK=1;
          XE_SI=1;
          XE_SCLK=0;
          XE_SI=1;
XE_SCLK=1;
          XE SI=0; //
          XE_SCLK=0;
          XE_SI=0; // for delay only
          // write bit
          XE_SCLK=1;
          XE_SI=0;
          XE_SCLK=0;
          XE_SI=0; // for delay only
          for(i=0;i<=4;i++)
                    XE_SCLK=1;
                    XE\_SI=(reg\&0x10);
                    XE_SCLK=0;
                    reg<<=1;
          }
          for(i=0;i<=7;i++)
                    XE_SCLK=1;
                    XE_SI=(val\&0x80);
                    XE_SCLK=0;
                    val=val<<1;
          XE_SCLK=1;
          XE_SI=1;
          XE_SCLK=0;
XE_SI=1;
          XE_SCLK=1;
          XE_SI=1;
          XE_SCLK=0;
XE_EN=1;
          XE_SCLK=1;
          XE_SI=1;
```

```
XE_SCLK=0;
}
//-
// void halRFReadReg(reg, val)
//
// Description:
//
     Function used to read registers in the XE1203
// Arguments:
//
                     byte reg
//
                               Register number to write
//
                     byte val
//
                               Value to write to register
//
// Return value:
//
     void
//--
byte halRFReadReg(byte reg)
          byte data i;
          byte data regdat;
          regdat=0;
          XE_SCLK=0;
XE_SI=1;
                               // Always start in a low condition
          XE_EN=0;
                               // enable the serial port
          // start condition
          XE_SCLK=1;
          XE_SI=1;
          XE_SCLK=0;
          XE_SI=1;
          XE_SCLK=1;
          XE_SI=0; //
XE_SCLK=0;
          XE_SI=0; // for delay only
          // write bit
          XE_SCLK=1;
          XE_SI=1;
          XE_SCLK=0;
          XE_SI=1; // for delay only
          for(i=0;i<=4;i++)
                    XE_SCLK=1;
                     XE_SI=(reg\&0x10);
                    XE_SCLK=0;
                     reg<<=1;
          }
          for(i=0;i<=7;i++)
                     regdat=regdat<<1;
                     XE_SCLK=1;
                    regdat|= (byte)XE_SO;
XE_SCLK=0;
          XE_SCLK=1;
          XE_SI=1;
XE_SCLK=0;
          XE_SI=1;
          XE_SCLK=1;
          XE_SI=1;
XE_SCLK=0;
```

```
XE_EN=1;
XE_SCLK=1;
XE_SI=1;
XE_SCLK=0;
return regdat;
```

#### Non-volatile memory

The on-board nonvolatile memory stores a 48-bit unique identification number and a signed 8-bit calibration constant.

The calibration constant is used to correct the channel programming for offset error caused by the reference crystal. The following code snippet shows how to use this constant:

```
void halRFSetChan(byte chan)
{
       int
               offset, txword, rxword;
       txword=chanDTS[chan];
       rxword=chanDTS[chan];
       // Read offset. If the XTCAL value is below min or above max, it will
       // default to 0 (no offset).
       offset = (int)i2cRead(NV XTCAL);
       if ((offset < XTCAL_LOWER_LIMIT) || (offset > XTCAL_UPPER_LIMIT))
               offset = 0:
       // Set the transmit parameters
       txword+=offset:
       halRFWriteReg(rfrSWPARAMB_2,(byte)txword);
       halRFWriteReg(rfrSWPARAMB_1,(byte)(txword>>8));
       // Set the receive parameters
       // -----
       rxword+=offset:
       halRFWriteReg(rfrSWPARAMA 2,(byte)rxword);
       halRFWriteReg(rfrSWPARAMA_1,(byte)(rxword>>8));
}
```

The channel programming word is determined by chanDTS[channel]. The calibration constant is then read in using the I2C bus; it is stored in offset. The offset is then added to the channel programming word and sent to the Wi.M900X/T module using the programming interface.

### **Example circuit**

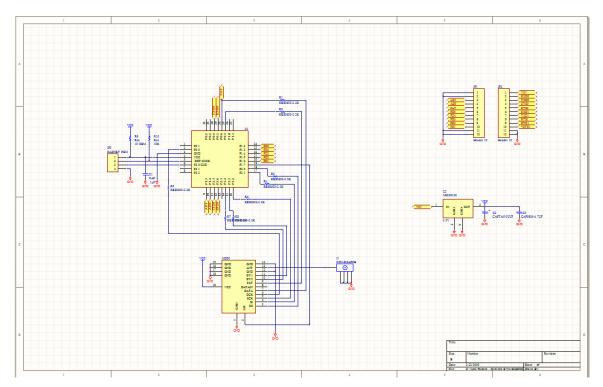


Figure 3: Example schematic

### **Ordering Information**

PRODUCT ORDER CODE	DESCRIPTION
Wi.M900X-R	US transceiver version
Wi.M868X-R	European transceiver version
Wi.M900T-R	US transmit only version
Wi.M868T-R	European transmit only version

#### **Contact Information**

Corporate Headquarters: 905 Messenger Lane Moore, Oklahoma 73160 405-794-7730

website: <a href="www.radiotronix.com">www.radiotronix.com</a> support@radiotronix.com

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

# Linx Technologies:

WI.M900X-EVM WI.M900X-EVM-R WI.M900X-DP-EVM-R WI.M868-T-R