



Elite CS-18

High Power DC-12GHz Multi - Throw Switch

SP3T to SP6T versions only


Normally Open

The CS-18 Switch is a broadband multi-position coaxial switch designed to switch RF signals from one input port to any one of 3 through 6 output ports. It is readily adapted to any 50 Ohms transmission line system. The standard actuator gives individual solenoid control of each position and when de-energized, all positions are open. Standard actuator voltage is 28 VDC. The primary advantage of this switch over the miniature versions shown on previous pages is the higher power handling capability.

SP7T and SP8T version available. See additional datasheets

Specifications

RF Contacts:	Break before make				power
Actuator	Voltage (VDC) 20°C	12	15	28	SP7T datas
	Current (mA)	600	480	270	
Switching Time:	20 msec max				
Connectors:	SMA (f), TNC(f)(max frequency 11GHz only)*, N Type (f)				
Weight:	9 oz. max (3 Position) 11 oz (6 Position)				
Temperature Range:	-55°C to +85°C (Operating)				
Shock:	MIL-STD-202 Method 213, Condition D (500G Non Operating)				
Vibration:	MIL-STD-202 Method 214, Condition D (10G RMS Non Operating)				
Humidity:	Moisture Seal Available				
Typical Contact Life:	5 Million Cycles				
RF Power Handling					

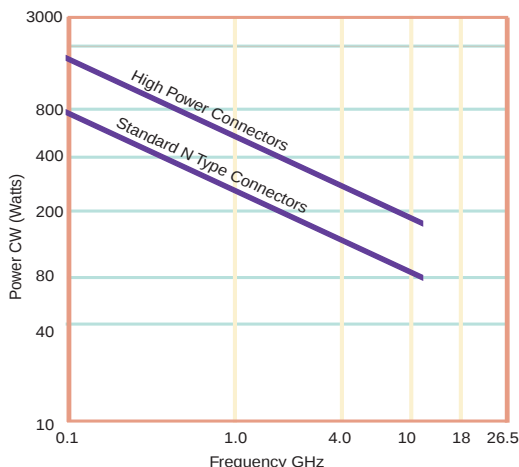

Specifications

	DC-1 GHz	1-4 GHz	4-12 GHz (TNC 11GHz only)
VSWR (max)	1.25:1	1.40:1	1.70:1
Insertion Loss (max)	0.30 dB	0.40 dB	0.50 dB
Isolation (min)	70.0 dB	60.0 dB	60.0 dB



TELEDYNE
COAX SWITCHES

Specifications subject to change without notice.

www.teledynecoax.com
email: coax@teledyne.com






Tel: (800) 351-7368
10/2007

Elite CS-18


High Power DC-12GHz Multi - Throw Switch

SP3T to SP6T versions only

Normally Open

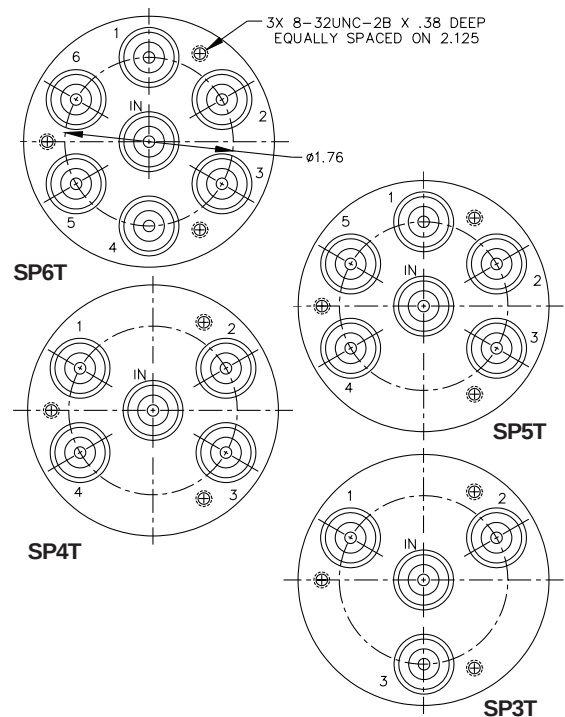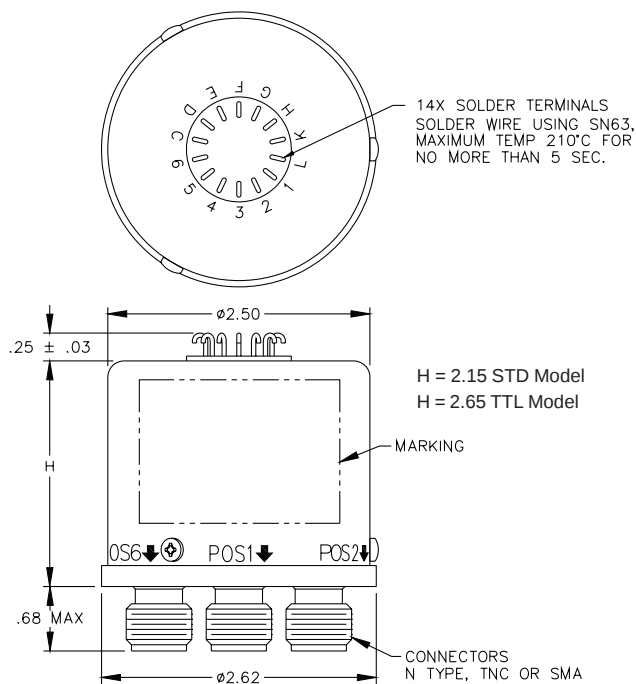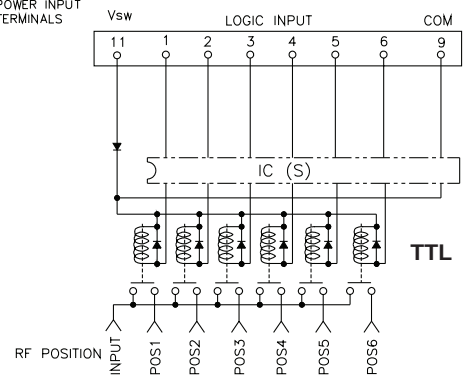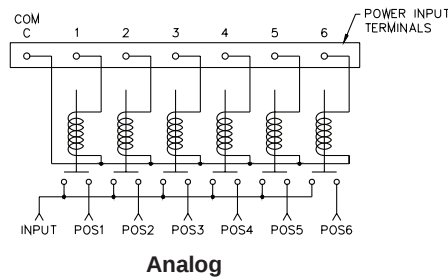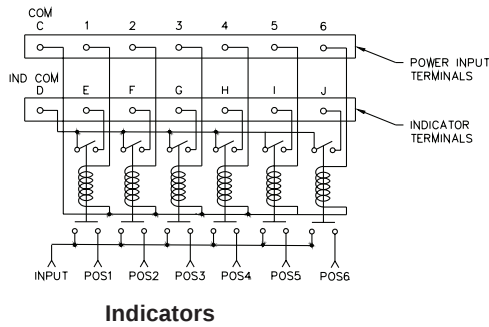

Part Numbering System for CS-18 (Normally Open)

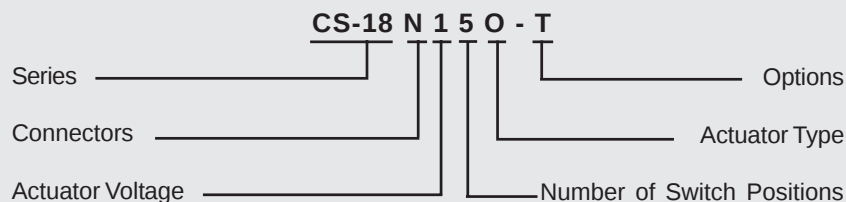

Connector	Actuator Voltage
S: SMA Female	1: 28Vdc Normally Open
N: N type Female	2: 15Vdc Normally Open
T: TNC Female*	3: 12Vdc Normally Open

Number of Positions
3: SP3T
4: SP4T
5: SP5T
6: SP6T

Actuator Type
O: No Indicator Contacts
C: Indicator Contacts

Options
T: TTL Drivers with Diodes
R: Positive + Common
TD: TTL Driver with Decoder

For other options contact Factory

See additional Datasheet for SP7T and SP8T versions



Specifications subject to change without notice.

www.teledynecoax.com
email: coax@teledyne.com

Tel: (800) 351-7368
10/2007