DATA SHEET =



# **MB511**1GHz HIGH SPEED PRESCALER

#### **HIGH SPEED PRESCALER**

The Fujitsu MB511 is a 1.0GHz high speed prescaler that forms a Phase Locked Loop (PLL) circuit when combined with a Fujitsu frequency synthesizer.Based on Fujitsu's advanced Bipolar processing, the MB511 maintains a consistent low power consumption of 23mA @ 5V. In addition, it can detect low amplitude input signals with a sensitivity of –20dBm min.

The MB511 will divide the input frequency a modulus of 1, 2, or 8, and is well suited for applications in CATV and electronically tuned TV.

#### **FEATURES**

Wide operating frequency range:
 f<sub>in</sub> = 50 to 1000MHz (v<sub>in</sub> = -20dBm)

Maximum operating frequency depends upon a divide ratio:

1/1: 250MHz max. (Buffer through)

1/2: 500MHz max. 1/8: 1000MHz max.

Low supply current: 23mA @5V

High input sensitivity: —20dBm min.

Stable Output Amplitude: 800mVp-p (C<sub>L</sub> ≤ 5pF)


• Wide temperature range:  $T_A = -40 \text{ to } +85^{\circ}\text{C}$ 


Plastic 8-pin Dual-In-Line package (Suffix: –P)
 Plastic 8-pin Flat package (Suffix: –PF)

#### **ABSOLUTE MAXIMUM RATINGS (See Note)**

Rating	Symbol	Value	Unit
Power Supply Voltage	V <sub>CC</sub>	-0.5 to +7.0	V
Input Voltage	V <sub>IN</sub>	-0.5 to V <sub>CC</sub> +0.5	V
Output Current	Io	10	mA
Storage Temperature	T <sub>STG</sub>	-55 to +125	°C

Note: Permanent device damage may occur if the above Absolute Maximum Ratings are exceeded. Functional operation should be restricted to the conditions as detailed in the operational sections of this data sheet. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

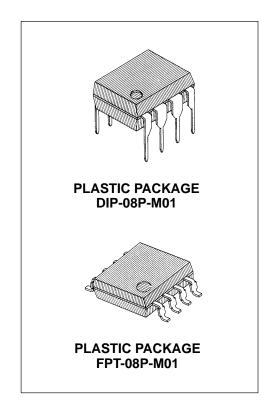

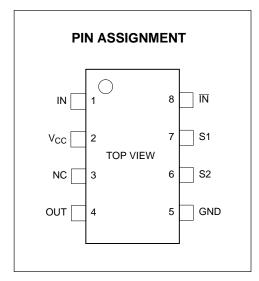

This device contains circuitry to protect the inputs against damage due to high static voltages or electric fields. However, it is advised that normal precautions be taken to avoid application of any voltage higher than maximum rated voltages to this high impedance circuit.

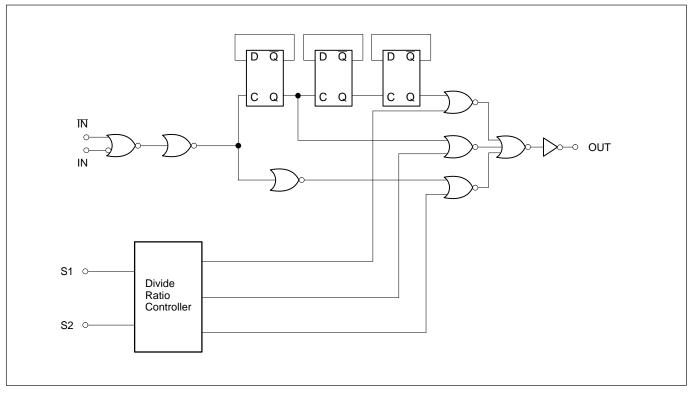


Figure 1. MB511 Block Diagram

## **FUNCTION TABLE**

<b>S</b> 1	<b>S2</b>	Divide Ratio	Operating Frequency		
L	L	Not used	_		
L	Н	1	250MHz		
Н	L	2	500MHz		
Н	Н	8	1000MHz		

H = V<sub>CC</sub> L = OPEN

## **PIN DESCRIPTIONS**

Pin Number	Symbol	I/O	Descriptions			
1	IN	ı	Input. The connection with VCO should be an AC connection.			
2	Vcc	_	Power supply voltage input.			
3	NC	_	No connection.			
4	OUT	0	Output. Termination resistor is necessary due to emitter follower output.			
5	GND	_	Ground.			
6	S2	1	Divide ratio control input.			
7	S1	ı	Divide ratio control input.			
8	ĪN	ı	Complementary Input.			

## **RECOMMENDED OPERATING CONDITIONS**

Parameter	Symbol	Value			Unit	Note
	Symbol	Min.	Тур.	Max.	Onit	Note
Power Supply Voltage	V <sub>CC</sub>	4.5	5.0	5.5	V	
Operating Temperature	T <sub>A</sub>	-40		+85	°C	
Load Capacitance	CL			5	pF	Termination resistor $500\Omega$

## **ELECTRICAL CHARACTERISTICS**

Parameter		Symbol	Value			l lmit	Note
		Symbol	Min.	Тур.	Max.	Unit	Note
Power Supply Current		I <sub>CC</sub>	15	23	32	mA	Except termination output current.
Output Amplitude		Vo	0.4	0.8	1.2	$V_{p-p}$	500Ω termination, $C_L = 5pF$ max.
	1/1	f <sub>1</sub>	50		250	MHz	Min. value is measured with coupling capacitor of 1000pF.
Input Frequency	1/2	f <sub>2</sub>	50		500	MHz	
	1/8	f <sub>3</sub>	50		1000	MHz	
Input Signal Amplitude		P <sub>IN</sub>	-20		+10	dBm	50Ω
High Level Input Voltage	S1, S2	V <sub>IH</sub>	V <sub>CC</sub> -0.7	V <sub>CC</sub>	V <sub>CC</sub> +0.5	V	
Low Level Input Voltage	31, 32	V <sub>IL</sub>		OPEN		V	
Low Level Input Current	S1, S2	I <sub>IH</sub>	40		160	μΑ	V <sub>CC</sub> = 5V

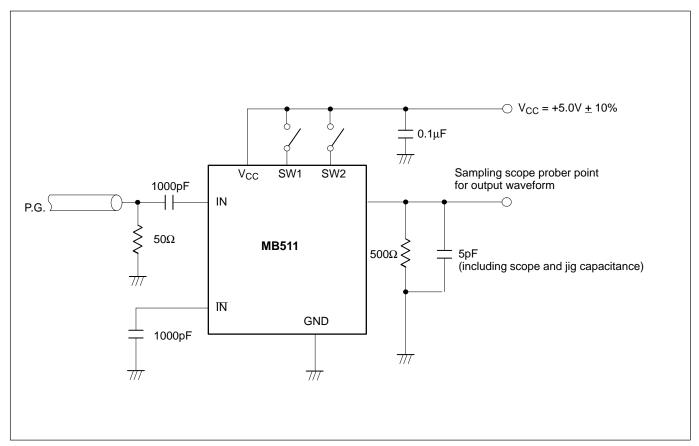


Figure 2. Test Circuit

### **TYPICAL CHARACTERISTICS CURVES**

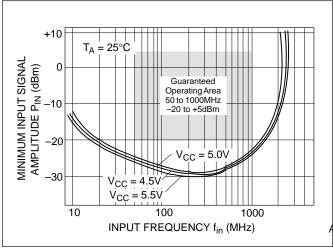


Figure 3. Input Sensitivity Curve (1/8 Divide Ratio)
Power Supply Voltage Dependency

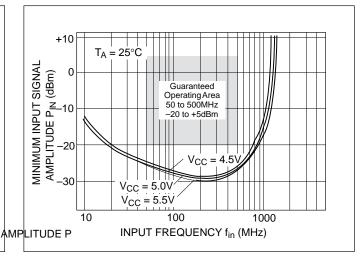


Figure 4. Input Sensitivity Curve (1/2 Divide Ratio)
Power Supply Voltage Dependency

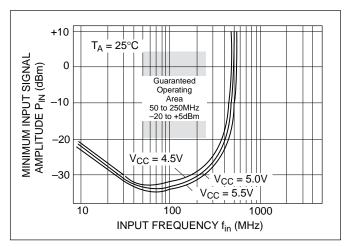


Figure 5. Input Sensitivity Curve (1/1 Divide Ratio)
Power Supply Voltage Dependency

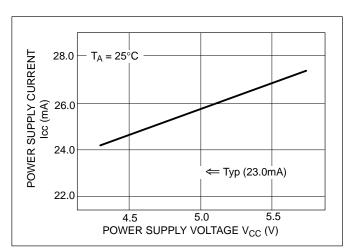


Figure 6. Power Supply Current vs. Power Supply Voltage

## **TYPICAL CHARACTERISTICS CURVES** (Continued)

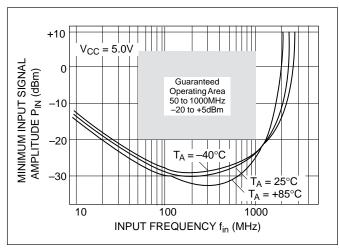


Figure 7. Input Sensitivity Curve (1/8 Divide Ratio)
Temperature Dependency

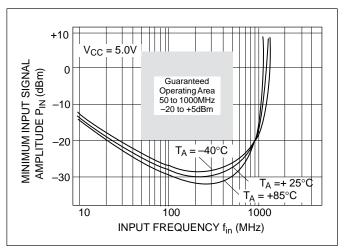


Figure 6. Input Sensitivity Curve (1/2 Divide Ratio)
Temperature Dependency

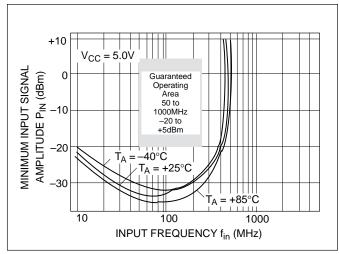


Figure 9. Input Sensitivity Curve (1/1 Divide Ratio)
Temperature Dependency



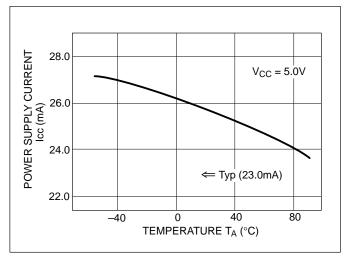


Figure 10. Power Supply Current vs. Temperature

## **PACKAGE DIMENSIONS**

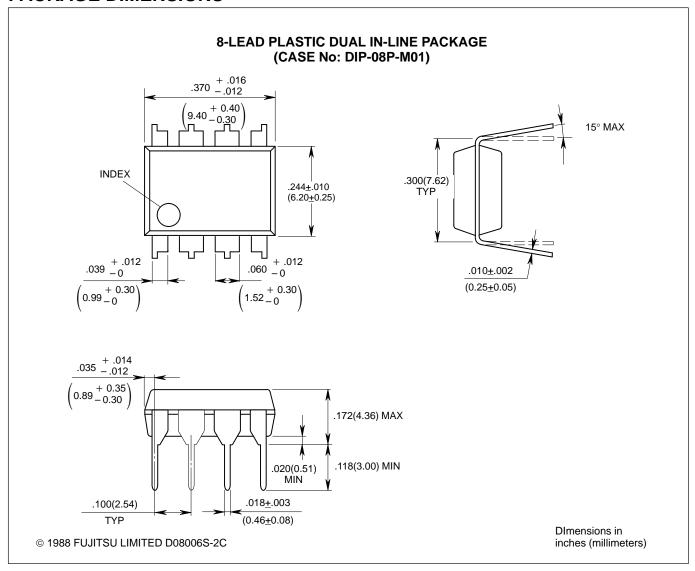

## **PACKAGE DIMENSIONS (Continued)**

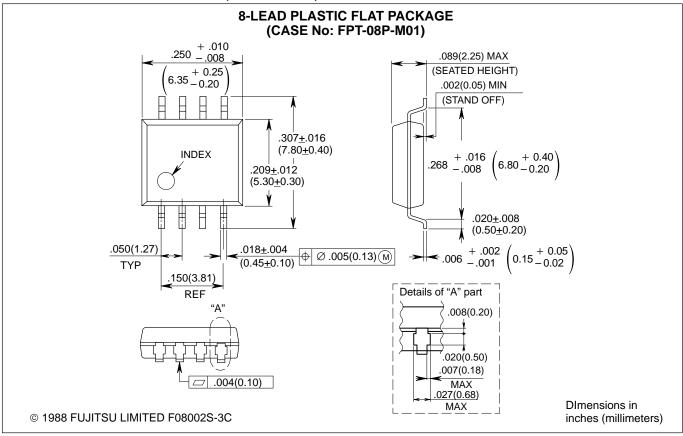

#### All Rights Reserved.

Circuit diagrams utilizing Fujitsu products are included as a means of illustrating typical semiconductor applications. Complete information sufficient for construction purposes is not necessarily given.

The information contained in this document has been carefully checked and is believed to be reliable. However, Fujitsu assumes no responsibility for inaccuracies.

The information contained in this document does not convey any license under the copyrights, patent rights or trademarks claimed and owned by Fujitsu.

Fujitsu reserves the right to change products or specifications without notice.

No part of this publication may be copied or reproduced in any form or by any means, or transferred to any third party without prior written consent of Fujitsu.

## **FUJITSU LIMITED**

For further information please contact:

#### Japan

FUJITSU LIMITED International Marketing Div. Furukawa Sogo Bldg., 6-1, Marunouchi 2-chome Chiyoda-ku, Tokyo 100, Japan Tel: (03) 3216-3211 Telex: 781-2224361

#### **North and South America**

FAX: (03) 3215-0662

FUJITSU MICROELECTRONICS, INC. Semiconductor Division 3545 North First Street San Jose, CA 95134-1804, USA Tel: 408-922-9000 FAX: 408-432-9044

#### **Europe**

FUJITSU MIKROELEKTRONIK GmbH Am Siebenstein 6-10, 6072 Dreieich-Buchschlag, Germany Tel: (06103) 690-0 Telex: 411963 FAX: (06103) 690-122

#### Asia

FUJITSU MICROELECTRONICS ASIA PTE LIMITED 51 Bras Basah Road, Plaza By The Park, #06-04 to #06-07 Singapore 0719 Tel: 336-1600

Telex: 55573 FAX: 336-1609