
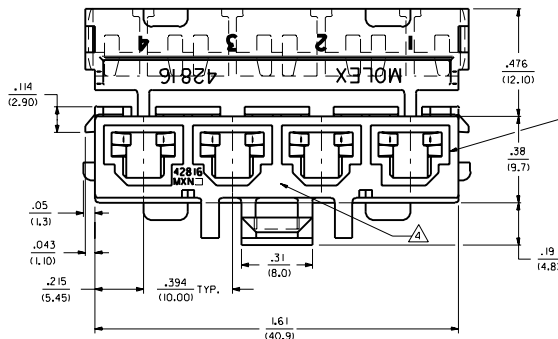
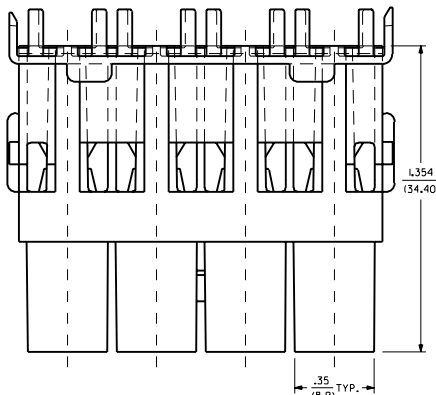
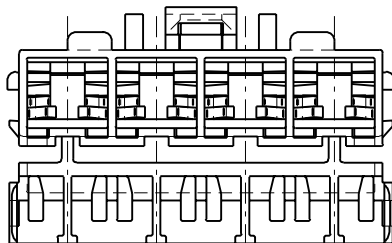
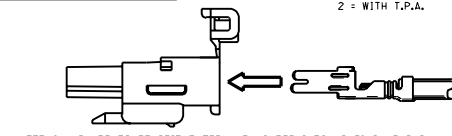
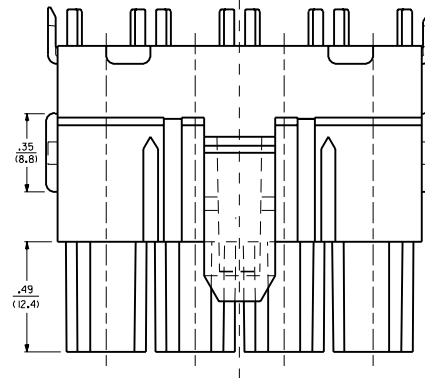



ITEM NUMBER	CIRCUIT SIZE	"A"
42816-0212	2	12.7
42816-0312	3	19.1
42816-0412	4	25.4
42816-0512	5	31.7
42816-0612	6	38.1

LEGEND:


CIRCUIT SIZE
(02-06)
T.P.A. OPTION
2 = WITH T.P.A.

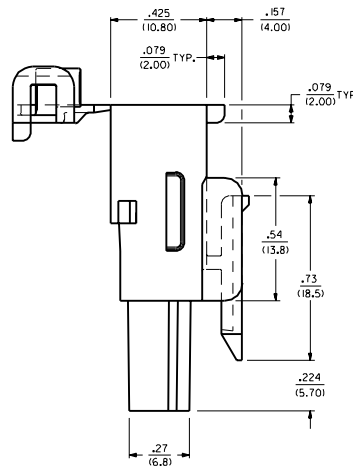


1. TERMINALS ARE TO BE ORIENTATED AND LOADED INTO HOUSING AS SHOWN.



2. TERMINALS ARE LOADED WHEN SEATED AGAINST FORWARD STOP AND TERMINAL LATCHES ARE SNAPPED BEHIND TERMINAL WALLS. RETENTION FORCE AT THIS STAGE = 0.5 Kg.

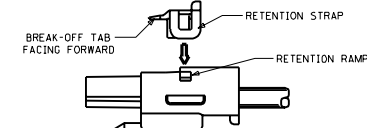


3. AFTER TERMINALS ARE LOADED INTO HOUSING, T.P.A. IS TO BE "BROKEN OFF", ORIENTATED AND INSTALLED IN THE DIRECTION SHOWN UNTIL THE RETENTION STRAPS SNAP OVER THE RETENTION RAMPS. THIS PRODUCT MUST NEVER BE USED WITHOUT THE INSTALLATION OF THE T.P.A.

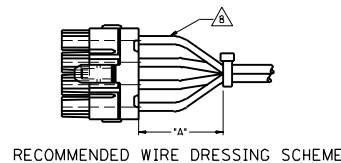

NOTES:

- 1) MATERIAL:
1 = POLYESTER, PBT, UL, 94V-0,
COLOR: MOLDED BLACK.
- 2) PART IS FOR USE WITH FEMALE CRIMP TERMINAL *42815.
- 3) PART IS DESIGNED IN METRIC.
- 4) NO CORE-OUTS UNDER LATCH ON 2, 4 & 6 CIRCUIT PARTS.
- 5) PART MATES WITH MINI-FIT SR. PLUG 42818-***2.
- 6) ITEM NUMBERS THAT ARE PRECEDED BY AN "X" ARE NOT AVAILABLE.
- 7) DUE TO THE BREAKAWAY DESIGN OF THE T.P.A. COVER, A FEW MAY HAVE PREMATURELY SEPARATED FROM THEIR HOUSINGS DURING SHIPMENT. IF A HOUSING IS MISSING A T.P.A. COVER, IT CAN BE FOUND IN THE SHIPPING CONTAINER.
- 8) EACH WIRE MUST BE DRESSED SUCH THAT THE TERMINAL MAINTAINS ITS FREE FLOAT WITHIN THE HOUSING. SEE CHART FOR RECOMMENDED CABLE TIE PLACEMENT.
- 9) FOR PACKAGING INFORMATION SEE PK-42816-001

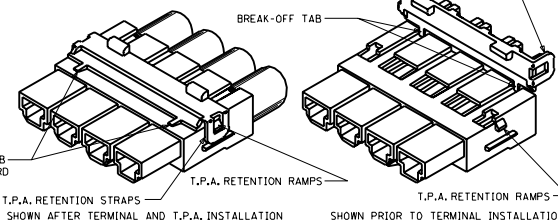

DIMENSIONS SHOWN IN METRIC UNITS		REVISE ONLY ON CAD SYSTEM	
ITEM	DESCRIPTION	REV.	DATE
1	REPT. HOUSING, BUILT-IN T.P.A., 10.00 mm CENTERS, (MINI-FIT, SR. SERIES)	1	1/3/96
2	REV. T.P.A. PER ECU 107099	2	1/3/96
3	REV. T.P.A. PER ECU 107099	3	1/3/96
4	REV. T.P.A. PER ECU 107099	4	1/3/96
5	REV. T.P.A. PER ECU 107099	5	1/3/96
6	REV. T.P.A. PER ECU 107099	6	1/3/96
7	REV. T.P.A. PER ECU 107099	7	1/3/96
8	REV. T.P.A. PER ECU 107099	8	1/3/96
9	REV. T.P.A. PER ECU 107099	9	1/3/96
10	REV. T.P.A. PER ECU 107099	10	1/3/96
11	REV. T.P.A. PER ECU 107099	11	1/3/96
12	REV. T.P.A. PER ECU 107099	12	1/3/96
13	REV. T.P.A. PER ECU 107099	13	1/3/96
14	REV. T.P.A. PER ECU 107099	14	1/3/96
15	REV. T.P.A. PER ECU 107099	15	1/3/96
16	REV. T.P.A. PER ECU 107099	16	1/3/96
17	REV. T.P.A. PER ECU 107099	17	1/3/96
18	REV. T.P.A. PER ECU 107099	18	1/3/96
19	REV. T.P.A. PER ECU 107099	19	1/3/96
20	REV. T.P.A. PER ECU 107099	20	1/3/96

THIS PRODUCT MUST NEVER BE USED WITHOUT THE T.P.A.