



# Dimension L \* W \* H 325.8 \* 107 \* 41 (1U) mm 12.8 \* 4.21 \* 1.61 (1U) inch



# **■** Features

- Charger for lead-acid batteries (Gel, flooded and AGM) and Li-ion batteries (lithium iron and lithium manganese)
- Built-in default 3 stage charging curves and programmable curve
- Built-in I<sup>2</sup>C interface, PMBus protocol (Optional CANBus protocol)
- Universal AC input / Full range
- Built-in active PFC function
- · Forced air cooling by built-in thermal controlled DC fans
- · Output voltage and current programmable
- Built-in OR-ing FET
- Active current sharing up to 6400W(1+1)
- Protections: Battery under voltage / Battery no connection
   / Short circuit / Over voltage / Over temperature
- · Optional conformal coating
- 5 years warranty

# ■ Certificates

- · Safety: UL/EN/IEC 62368-1
- EMC: EN 55032 / 55024


# Applications

- Large scale DC UPS or emergency backup system
- · Marine battery charger module
- Electric scooter or vehicle charger station
- · Wastewater treatment system
- · Electrolysis system

## Description

DBU-3200 is a 3200W single output AC/DC enclosed charger in 1U low profile with high power density, 37W/inch³. It is an intelligent charger that has pre-loaded programmable charging curves for different types of lead-acid and li-ion batteries. Output programmable function allows user to adjust the charging voltage and current via the built-in potentiometer or PMBus protocol. Various protection mechanisms as well as the temperature compensation function are provided to assure normal and safe system operation.

# ■ Model Encoding / Order Information

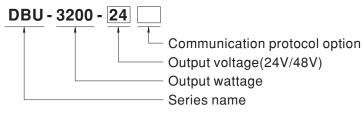

Type	Type Communication Protocol	
Blank	PMBus protocol	In Stock
CAN CANBus protocol		By request



# **SPECIFICATION**


MODEL		DBU-3200-24	DBU-3200-4	8		
	BOOST CHARGE VOLTAGE(Vboost)(default)	28.8V	57.6V			
	FLOAT CHARGE VOLTAGE(Vfloat)(default)	27.6V	55.2V			
	CONSTANT CURRENT(CC)(default)	(ault) 110A 55A				
		By built-in potentiometer, SVR				
OUTPUT	VOLTAGE ADJ. RANGE	23.5 ~ 30V	47.5 ~ 58.8V	,		
	RECOMMENDED BATTERY					
	CAPACITY(AMP HOURS) Note.3	3 330 ~ 1000Ah 180 ~ 550Ah				
	LEAKAGE CURRENT FROM		<u>'</u>			
	BATTERY (Typ.)	1.5mA				
	VOLTAGE RANGE Note.4	90 ~ 264VAC 127 ~ 370VDC				
	FREQUENCY RANGE	47 ~ 63Hz				
	POWER FACTOR (Typ.)	0.97/230VAC at full load				
INPUT	EFFICIENCY (Typ.)	93.5%	94.5%			
	AC CURRENT (Typ.) Note.4	17A/230VAC				
	INRUSH CURRENT (Typ.)	COLD START 55A/230VAC				
	LEAKAGE CURRENT	<2mA / 230VAC				
		31.5 ~ 37.5V	63 ~ 75V			
PROTECTION	OVER VOLTAGE	Protection type : Shut down o/p voltage, r	e-power on to recover			
	OVER TEMPERATURE	Shut down o/p voltage, recovers automati	cally after temperature goes down			
	OUTPUT VOLTAGE PROGRAMMABLE(PV)	Adjustment of output voltage is allowable	le to 75 ~ 125% of nominal output vo	Itage. Please refer to the Function Manual.		
	OUTPUT CURRENT PROGRAMMABLE(PC)	Adjustment of output voltage is allowable	le to 20 ~ 100% of rated current. Plea	ase refer to the Function Manual.		
FUNCTION	AUXILIARY POWER	5V @ 0.3A, tolerance $\pm$ 10%, ripple 150n	nVp-p, 12V @ 0.8A, tolerance $\pm$ 10%	, ripple 450mVp-p		
FUNCTION	REMOTE ON-OFF CONTROL	By electrical signal or dry contact Power	er ON:short Power OFF:open. Pleas	se refer to the Function Manual		
	TEMPERATURE COMPENSATION	-3mV / °C / cell / (12V = 6 cells ; 24V = 12	cells; 48V = 24 cells)			
	ALARM SIGNAL	Isolated signal output for T-alarm and DC-OK				
	WORKING TEMP.	-30 ~ +70 °C (Refer to "Derating Curve")				
	WORKING HUMIDITY	20 ~ 90% RH non-condensing				
ENVIRONMENT	STORAGE TEMP., HUMIDITY	$-40 \sim +85^{\circ}\text{C}$ , $10 \sim 95\%$ RH non-condensing				
	TEMP. COEFFICIENT	±0.03%/°C (0~50°C)				
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. ea	ch along X, Y, Z axes			
	SAFETY STANDARDS	UL62368-1, TUV EN62368-1, EAC TP TC 004 approved				
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:1.5KVAC				
	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 50				
		Parameter	Standard	Test Level / Note		
		Conducted	EN55032 (CISPR32) / EN55011 (C	,		
	EMC EMISSION	Radiated	EN55032 (CISPR32) / EN55011 (C	ISPR11) Class A		
		Harmonic Current	EN61000-3-2			
SAFETY &		Voltage Flicker	EN61000-3-3			
EMC		EN55024 , EN61204-3, EN61000-6-2		T- 11 1/11 1		
(Note 6)		Parameter	Standard	Test Level / Note		
		ESD Padiated	EN61000-4-2	Level 3, 8KV air ; Level 2, 4KV contact		
		Radiated	EN61000-4-3	Level 3		
	EMC IMMUNITY	EFT / Burst	EN61000-4-4 EN61000-6-2	Level 3		
		Surge Conducted	EN61000-6-2 EN61000-4-6	2KV/Line-Line 4KV/Line-Earth Level 3		
			EN61000-4-8	Level 4		
		Magnetic Field	EN01000-4-8	>95% dip 0.5 periods, 30% dip 25 periods,		
	MTDF	Voltage Dips and Interruptions	EN61000-4-11	>95% interruptions 250 periods		
OTHERS	MTBF	160.1K hrs min. Telcordia SR-332 (Bellcore) ; 38.9K hrs min. MIL-HDBK-217F (25°C)				
OTHERS	DIMENSION	325.8*107*41mm (L*W*H)				
	PACKING  1 Modification for charger spe	2.76Kg;4pcs/12Kg/0.83CUFT cification may be required for different bat	ttery specification. Please contact hat	ttery vendor and MEAN WELL for details		
NOTE	<ol> <li>Modification for charger specification may be required for different battery specification. Please contact battery vendor and MEAN WELL for details.</li> <li>All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.</li> <li>This is MEAN WELL's suggested range. Please consult your battery manufacturer for their suggestions about maximum charging current limitation.</li> <li>Derating may be needed under low input voltages. Please check the derating curve for more details.</li> <li>The charger is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on a 600mm*900mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available on http://www.meanwell.com)</li> <li>The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft).</li> </ol>					

3200W Intelligent Single Output Battery Charger




# ■ BLOCK DIAGRAM


PFC fosc: 110KHz PWM fosc: 90KHz

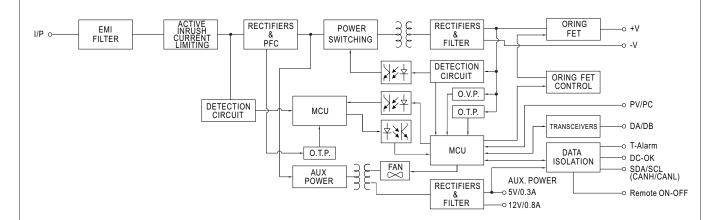

# **■** DERATING CURVE

# **■ STATIC CHARACTERISTICS**

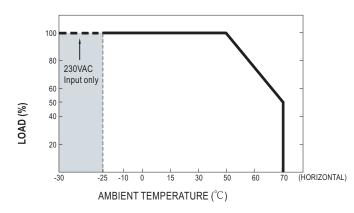

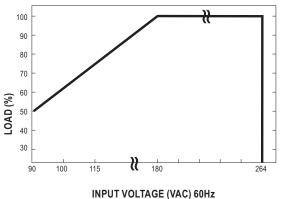




#### **■ FUNCTION MANUAL**


#### 1.PMBus Communication Interface

DBU-3200 supports PMBus Rev. 1.1 with maximum 100KHz bus speed, allowing information reading, status monitoring, output trimming, etc. For details, please refer to the Installation Manual.

#### 2. Charging Curve

- 💥 By factory default, this charger performs the default curve which can be programmed via PMBus.
- \*\* To disable / enable the charging curve, change to a 2 stage curve, a different curve frequently used for certain types of batteries in the industry, and so on, please refer to the Installation Manual.

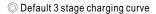

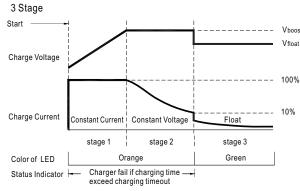

© Suitable for lead-acid batteries (flooded, Gel and AGM) and Li-ion batteries (lithium iron and lithium manganese).

## © Embedded 3 stage charging curves

MODEL	Description	Vboost	Vfloat	CC(default)	
	Default, programmable	28.8	27.6		
24V	Pre-defined, gel batter	28	27.2	110A	
Pre-defined, flooded batte	Pre-defined, flooded battery	28.4	26.8	IIUA 	
	Pre-defined, AGM battery	29	27		
	Default, programmable	57.6	55.2		
48V	Pre-defined, gel batter	56	54.4	55A	
400	Pre-defined, flooded battery	56.8	53.6	33A	
	Pre-defined, AGM battery	58	54		


#### Note:


When using this charger unit, please configured the system with recommended battery capacity defined by specification. Should battery capacity in use be much smaller so that user needs to set a low current for charging, under such condition it might cause higher current ripple.

#### 3. Front Panel LED Indicators & Corresponding Signal at Function Pins

LED	Description		
Green Float (stage 3)			
Orange Charging (stage 1 or stage 2)			
Red The LED will present a constant red light when the abnormal status (OTP, OLP, fan fail and charging timeout) arises.			
Red (Flashing)	The LED will flash with the red light when the internal temperature reaches 60°C; under this condition, the unit still operates normally without entering OTP. (In the meantime, an alarm signal will be sent out through the PMBus interface.)		

# 4. Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim) ※ In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed by applying EXTERNAL VOLTAGE.

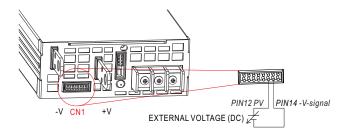


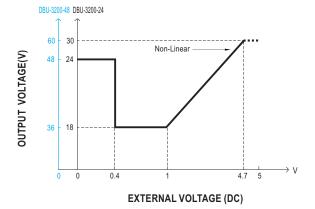




#### 5. Output Current Programming (or, PC / remote current programming / dynamic current trim)


% The output current can be trimmed to 20~100% of the rated current by applying EXTERNAL VOLTAGE.

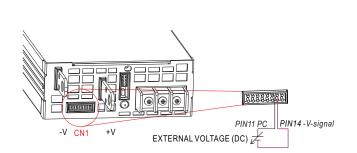

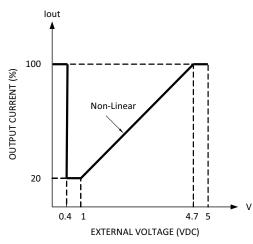


#### 6. Remote ON-OFF Control

The power supply can be turned ON/OFF individually or along with other units in parallel by using the "Remote ON-OFF" function.

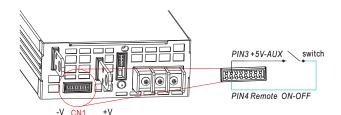


Between Remote ON-OFF and +5V-AUX	Power Supply Status
Switch Short	ON
Switch Open	OFF

#### 7. Temperature Compensation

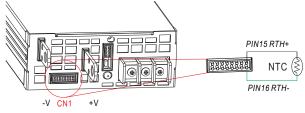

- To exploit the temperature compensation function, please attach the temperature sensor, NTC, which is enclosed with the charger, to the battery or the battery's vicinity.
- The charger is able to work normally without the NTC.

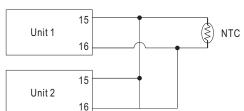


When multiple chargers are connected in parallel, please configure with the NTC as exhibited in the diagram .

If the temperature compensation is not required, RTH+ (PIN15) and RTH- (PIN16) from each unit still need to be connected.

#### 8. Alarm Signal Output

\*\* There are 2 alarm signals, DC OK and T-ALARM, in TTL signal form, on CN1. These signals are isolated from output. The maximum sink current in 10mA

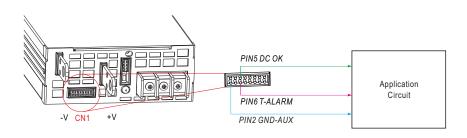




#### 9. Current Sharing with Remote Sensing


DBU-3200 has the built-in active current sharing function and can be connected in parallel, up to 2 units, to provide higher output power as exhibited below:

- X The power supplies to be paralleled should use short and large diameter wiring and then connected to the load.
- X Difference of output voltages among parallel units should be less than 0.2V.
- \*\* The total output current must not exceed the value calculated by the following equation: Maximum output current at parallel operation=(Rated current per unit) \* (Number of unit) \* 0.9
- \*When the total output current is less than 5% of the total rated current, or say (5% of Rated current per unit) × (Number of unit) the current shared among units may not be balanced.
- ※ CN500/SW1 Function pin connection

Parallel	PSU1		PSU2	
Farallel	CN500	SW1	CN500	SW1
1 unit	Х	ON	_	_
2 unit	V	ON	V	ON

(V: CN500 connected; X: CN500 not connected.)

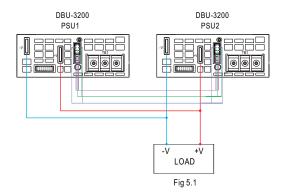


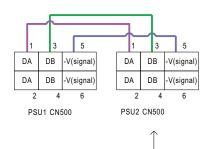

If the lines of CN500 are too long, they should be twisted in pairs to avoid the noise.

O DA, DB and -V(signal) are connected mutually in parallel.



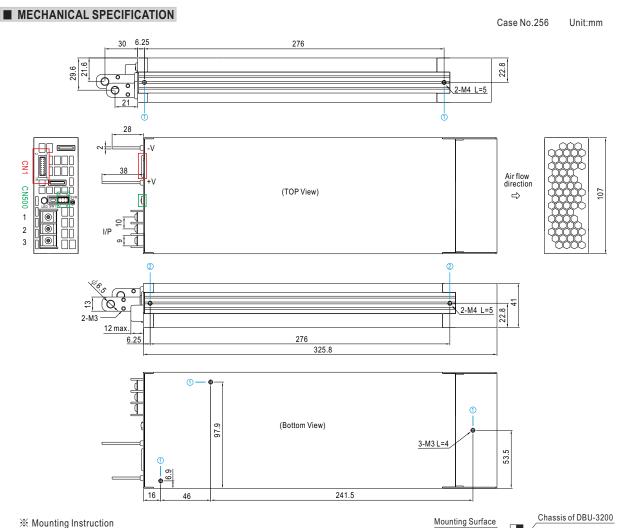

Hole No. Recommended Screw Size		MAX. Penetration Depth L	Recommended mounting torque
1	M3	6mm	6~8Kgf-cm
2	M4	7mm	7~10Kgf-cm

Mounting Surface Mounting Screw

※Control Pin No. Assignment(CN1): HRS DF11-16DP-2DS or equivalent

_1	15
0000	0000
2	16

Mating Housing	HRS DF11-16DS or equivalent	
Terminal	HRS DF11-**SC or equivalent	

Pin No.	Function	Description
1	+12V-AUX	Auxiliary voltage output, 10.6~13.2V, referenced to GND-AUX (pin2). The maximum load current is 0.8A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF".
2 GND-AUX Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V).		
3	+5V-AUX	Auxiliary voltage output, 4.5-5.5V, referenced to GND-AUX (pin2). The maximum load current is 0.3A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF
4	Remote ON-OFF	The unit can turn the output ON/OFF by electrical signal or dry contact between $Remote ON/OFF$ and $+5V-AUX$ . (Note.2) Short (4.5 ~ 5.5V): Power ON; Open (-0.1 ~ 0.5V): Power OFF; The maximum input voltage is 5.5V.
5 DC-OK High (4.5 ~ 5.5V): When the Vout ≦16V/32V ±1V. Low (-0.1 ~ 0.5V): When Vout ≧16V/32V ±1V. The maximum sourcing current is 10mA and only for output. (Note. DC OK is associated with battery low protection.		
6 T-ALARM Low (-0.1 ~ 0.5V): When the internal temperature is normal, and when Fai		High (4.5 ~ 5.5V): When the internal temperature exceeds the limit of temperature alarm, or when Fan fails.  Low (-0.1 ~ 0.5V): When the internal temperature is normal, and when Fan works normally.  The maximum sourcing current is 10mA and only for output(Note.2)
7,8,9	A0,A1,A2	PMBus interface address lines. (Note.1)
10	D0	DIP-switch interface lines for charging curve selection. (Note.1)
11	PC	Connection for output current programming. (Note.1)
12	PV	Connection for output voltage programming. (Note.1)
13	+V (Signal)	Positive output voltage signal. It cannot be connected directly to the load.
14	-V (Signal)	Negative output voltage signal. It is for certain function reference; it cannot be connected directly to the load.
15	RTH+	Temperature sensor(NTC, 5KOhm) comes along with the charger can be connected to the unit to allow temperature
16	RTH-	compensation of the charging voltage.

Note1: Non-isolated signal, referenced to the [-V(signal)].

Note2: Isolated signal, referenced to GND-AUX.



# 3200W Intelligent Single Output Battery Charger

DBU-3200 series

## $\frak{\mathrm{MC}}$ Input Terminal Pin No. Assignment

Pin No.	Assignment	Diagram	Maximum mounting torque
1	FG ±	1 2 3	
2	AC/N		8Kgf-cm
3	AC/L		

 $\label{lem:control} \ref{thm:control} \textbf{% Control Pin No. Assignment (CN500): HRS DF11-8DP-2DS or equivalent}$ 



Mating Housing	HRS DF11-8DS or equivalent	
Terminal	HRS DF11-**SC or equivalent	

Pin No.	Function	Description
1, 2	DA	Differential digital signal for parallel control.
3, 4	DB	Differential digital signal for parallel control.
5, 6	-V (Signal)	Negative output voltage signal. It is for local sense; and certain function reference; it cannot be connected directly to the load.
7	SDA	Serial clock used in the PMBus interface.
8	SCL	Serial clock used in the PMBus interface.

## ※Control Pin No. Assignment.(SW1)

Piı	n No.	Function	Description
,	1, 2	Terminal resistance	SW1 is the selector of terminal resistor that is designed for DA/DB signals and parallel control function.

# ■ INSTALLATION MANUAL

Please refer to : http://www.meanwell.com/manual.html