

- Photoelectric Sensor with built-in amplifier is applicable to a wide variety of lines and ensures a longer sensing distance than any other model.
- User-friendly Sensor takes all installation and on-site conditions into consideration.
- Eliminates the influence of installation and on-site conditions, thus increasing the reliability of the line.
- OMRON has been making efforts towards environmental protection by adopting user and environment-friendly measures.
- Greatly saves energy and resources. The economy-oriented age has evolved into the ecology-oriented age.
- Meets a variety of international standards, thus allowing use in any country.



Ordering Information

List of Models

■ Red light □ Infrared light

Sensing method	Appearance	Connection method	Sensing distance	Model	
				NPN output	PNP output
Through-beam		Pre-wired (see note 3)	15 m	E3Z-T61	E3Z-T81
		Connector		E3Z-T66	E3Z-T86
Retroreflective (with MSR function)	(see note 1)	Pre-wired (see note 3)	4 m (100 mm) (see note 2)	E3Z-R61	E3Z-R81
		Connector		E3Z-R66	E3Z-R86
Diffuse-reflective		Pre-wired (see note 3)	5 to 100 mm (wide view)	E3Z-D61	E3Z-D81
		Connector		E3Z-D66	E3Z-D86
		Pre-wired (see note 3)	1 m	E3Z-D62	E3Z-D82
		Connector		E3Z-D67	E3Z-D87

- Note:**
1. The Reflector is sold separately. Select the Reflector model most suited to the application.
 2. The sensing distance specified is possible when the E39-R1S used. Figure in parentheses indicate the minimum required distance between the Sensor and Reflector.
 3. Models provided with a 0.5-m cable are available. When ordering, specify the cable length by adding the code "0.5M" to the model number (e.g., E3Z-T61 0.5M).

Nomenclature

Through-beam Models


E3Z-T6□ Receiver

Retroreflective Models

E3Z-R6□

Diffuse-reflective Models

E3Z-D6□

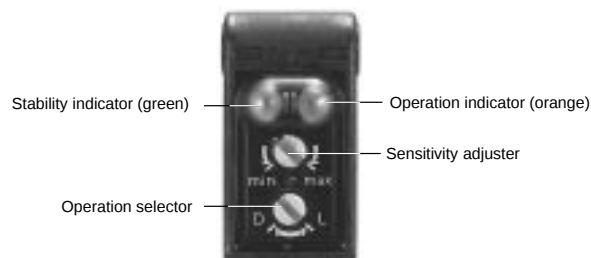

■ Accessories (Order Separately)

Slit for Through-beam Models

Slit width	Sensing distance (typical)	Minimum sensing object (typical)	Model	Quantity required	Remarks
0.5 mm dia.	50 mm	0.5 mm dia.	E39-S65A	One each for the emitter and receiver.	These Slits are available for the E3Z-T□□.
1 mm dia.	200 mm	1 mm dia.	E39-S65B		
2 mm dia.	800 mm	2 mm dia.	E39-S65C		
0.5 × 10 mm	1 m	0.7 mm dia.	E39-S65D		
1 × 10 mm	2.2 m	1.2 mm dia.	E39-S65E		
2 × 10 mm	5 m	2.4 mm dia.	E39-S65F		

Reflectors for Retroreflective Models

Name	Sensing distance (typical)	Model	Remarks
Reflector	3 m (100 mm)	E39-R1	Retroreflective models are not provided with Reflectors. The MSR function is available.
	4 m (100 mm)	E39-R1S	
	5 m (100 mm) (see note 2)	E39-R2	
Miniature Reflector	1.5 m (50 mm) (see note 2)	E39-R3	
Tape Reflector	700 mm (150 mm) (see note 2)	E39-RS1	
	1.1 m (150 mm) (see note 2)	E39-RS2	
	1.4 m (150 mm) (see note 2)	E39-RS3	

Note: 1. Figure in parentheses indicates the minimum required distance between the Sensor and Reflector.

2. The actual sensing distance may be reduced to approximately 70% of the typical sensing distance when using a Reflector other than E39-R1 or E39-R1S.

Mounting Brackets

Appearance	Model
	E39-L104
	E39-L43
	E39-L44

Appearance	Model	Remarks
	E39-L93	For Sensor adjustment use. Mounted to the aluminum frame rails of conveyors and adjustable with ease.
	E39-L98	Vertical protective cover bracket

Note: If a through-beam model is used, order two Mounting Brackets for the emitter and receiver respectively.

Sensor I/O Connectors

Cable	Appearance	Cable type		Model
Standard	Straight 	2 m	Four-wire type	XS3F-M421-402-A
		5 m		XS3F-M421-405-A
	L-shaped 	2 m		XS3F-M422-402-A
		5 m		XS3F-M422-405-A

Specifications

■ Ratings/Characteristics

Item		Sensing method	Through-beam	Retroreflective with MSR function	Diffuse-reflective	
			E3Z-T61/T66	E3Z-R61/R66	E3Z-D61/D66	E3Z-D62/D67
			E3Z-T81/T86	E3Z-R81/R86	E3Z-D81/D86	E3Z-D82/D87
Sensing distance		15 m	4 m (100 mm)* (when using E39-R1S) 3 m (100 mm)* (when using E39-R1)	White paper (100 × 100 mm): 100 mm	White paper (300 × 300 mm): 1 m	
Standard sensing object		Opaque: 12-mm dia. min.	Opaque: 75-mm dia. min.	---		
Hysteresis		---			20% max. of setting distance	
Directional angle		Both emitter and receiver: 3 to 15°	2 to 10°	---		
Light source (wave length)		Infrared LED (860 nm)	Red LED (680 nm)	Infrared LED (860 nm)		
Power supply voltage		12 to 24 VDC ±10% including 10% (p-p) max. ripple				
Current consumption		Emitter: 15 mA Receiver: 20 mA	30 mA max.			
Control output		Load power supply voltage: 26.4 V max. Load current: 100 mA max. (Residual voltage: 1 V max.) Open collector output (NPN or PNP depending on model) L-ON/D-ON selectable				
Circuit protection		Protection from load short-circuit and reversed power supply connection	Protection from reversed power supply connection, output short-circuit, and mutual interference protection			
Response time		Operation or reset: 1 ms max.				
Sensitivity adjustment		One-turn adjuster				
Ambient illumination (receiver side)		Incandescent lamp: 3,000 lx max. Sunlight: 10,000 lx max.				
Ambient temperature		Operating: −25°C to 55°C/Storage: −40°C to 70°C (with no icing or condensation)				
Ambient humidity		Operating: 35% to 85%/Storage: 35% to 95% (with no condensation)				
Insulation resistance		20 MΩ min. at 500 VDC				
Dielectric strength		1,000 VAC, 50/60 Hz for 1 min				
Vibration resistance		10 to 55 Hz, 1.5-mm double amplitude or 300 m/s ² for 2 hours each in X, Y, and Z directions				
Shock resistance		Destruction: 500 m/s ² 3 times each in X, Y, and Z directions				
Degree of protection		IP67 (IEC60529)				
Connection method		500-mm-thick pre-wired cable (standard length: 2 m) with M8 connector				
Indicator		Operation indicator (orange) Stability indicator (green) Emitter has power indicator (orange) only.				
Weight (packed state)	Pre-wired cable (2 m)	Approx. 120 g	Approx. 65 g			
	Connector	Approx. 30 g	Approx. 20 g			
Material	Case	PBT (polybutylene terephthalate)				
	Lens	Methacrylate resin				
Accessories		Instruction manual (The Reflector or Mounting Bracket is not provided with any of the above models.)				


Note: *Figures in parentheses indicate the minimum required distances between the Sensors and Reflectors.

Engineering Data

■ Parallel Operating Range (Typical)


Through-beam Models

E3Z-T□1 (T□6)

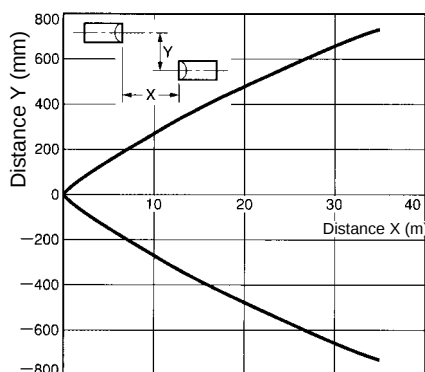


Through-beam Models

E3Z-T□1 (T□6) and Slit

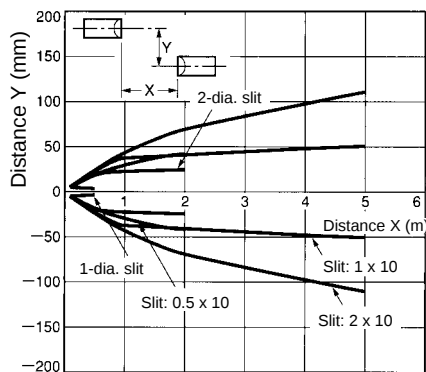

Retroreflective Models


E3Z-R□1 (R□6) and Reflector

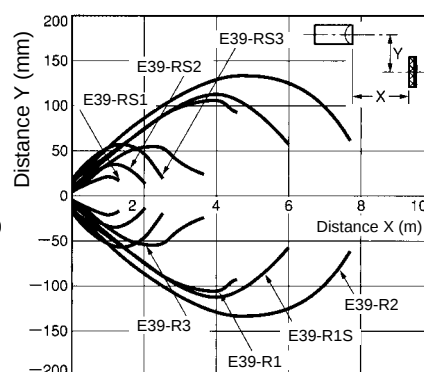

■ Operating Range (Typical)


Diffuse-reflective Models

E3Z-D□1 (D□6)

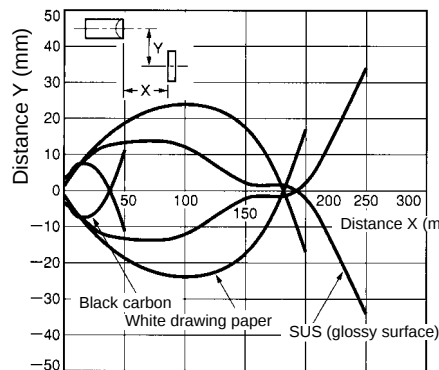

Diffuse-reflective Models


E3Z-D□2 (D□7)

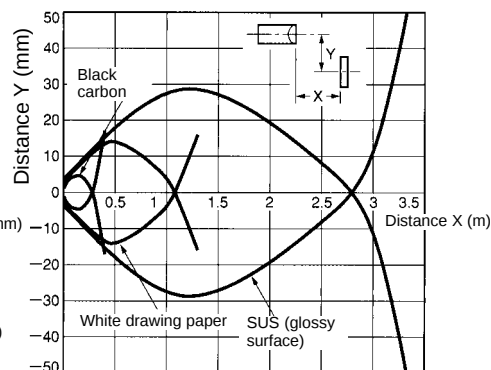

■ Excess Gain Ratio vs. Distance (Typical)


Through-beam Models

E3Z-T□1 (T□6)

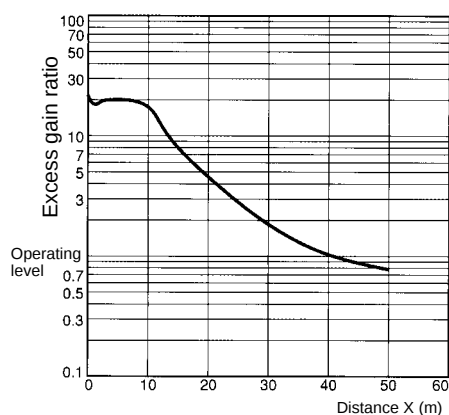


Retroreflective Models

E3Z-R□1 (R□6) and Reflector

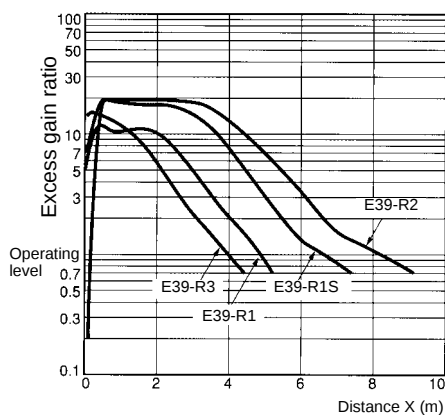


Diffuse-reflective Models

E3Z-D□1 (D□6)

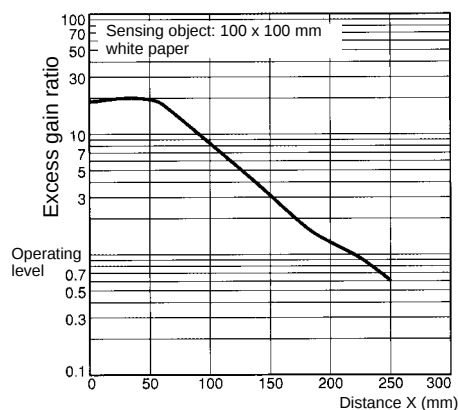

Diffuse-reflective Model


E3Z-D□2 (D□7)

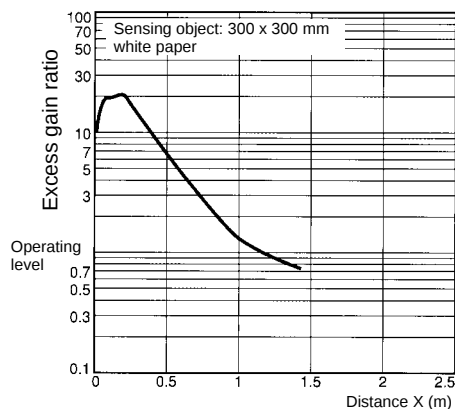

■ Sensing Object Size vs. Sensing Distance (Typical)


Diffuse-reflective Models

E3Z-D□1 (D□6)

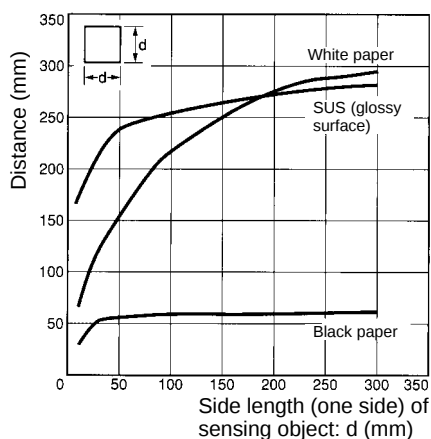




Diffuse-reflective Models

E3Z-D□2 (D□7)



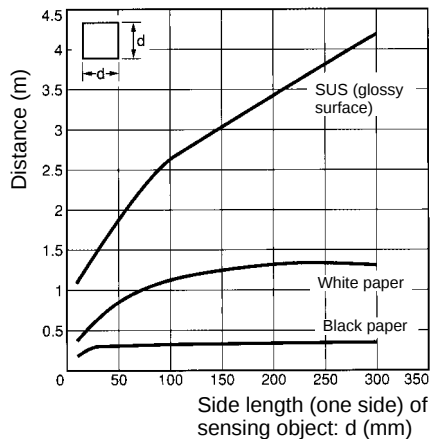


Operation


NPN Output

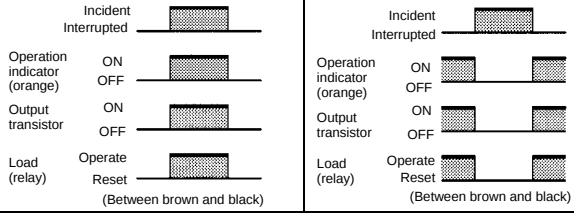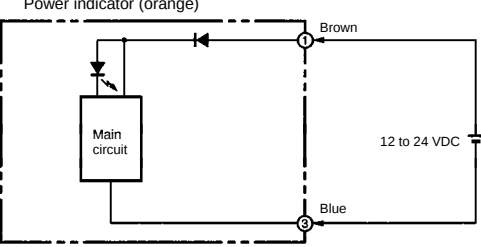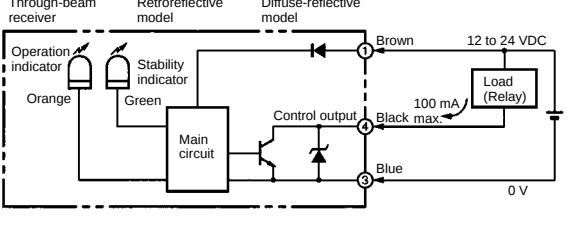Model	E3Z-T61/-T66/-R61/-R66/-D61/-D66/-D62/-D67		
Output transistor status	Light ON	Dark ON	Through-beam emitter
Timing chart			
Mode selector	Light ON (L/ON)	Dark ON (D/ON)	
Output circuit	 Connector Pin Arrangement  Pin 2 is open.		Connector Pin Arrangement  Pins 2, 4 are open.

PNP Output

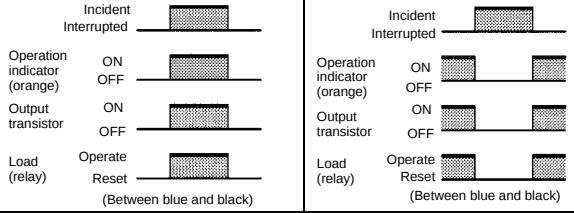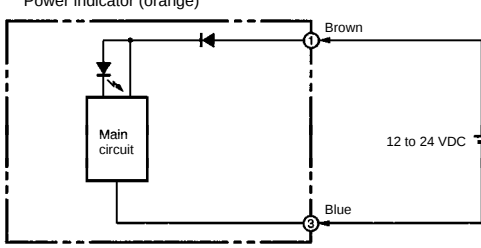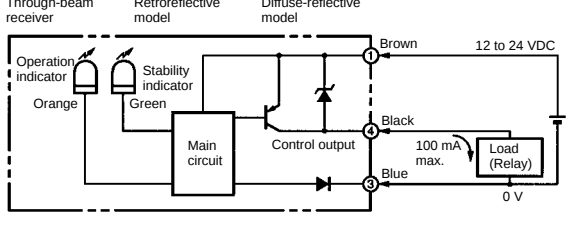Model	E3Z-T81/-T86/-R81/-R86/-D81/-D86/-D82/-D87		
Output transistor status	Light ON	Dark ON	Through-beam emitter
Timing chart			
Mode selector	Light ON (L/ON)	Dark ON (D/ON)	
Output circuit	 Connector Pin Arrangement  Pin 2 is open.		Connector Pin Arrangement  Pins 2, 4 are open.

Structure of Sensor I/O Connector

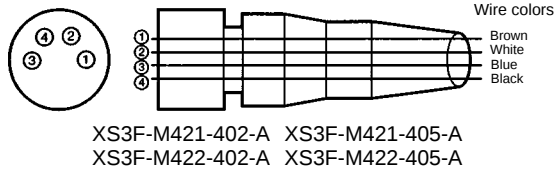

Classification	Wire color	Connector pin No.	Use
DC	Brown	①	Power supply (+V)
	White	②	---
	Blue	③	Power supply (0 V)
	Black	④	Output

Note: Pin 2 is not used.

Dimensions


Note: All units are in millimeters unless otherwise indicated.

■ Sensors

Through-beam (Pre-wired Models)

E3Z-T61


E3Z-T81

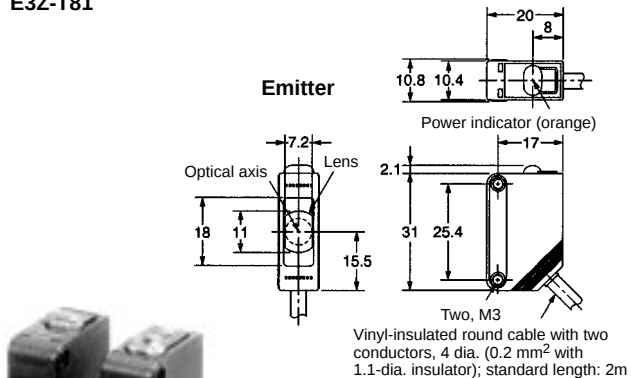

Through-beam (Connector Models)

E3Z-T66

E3Z-T86

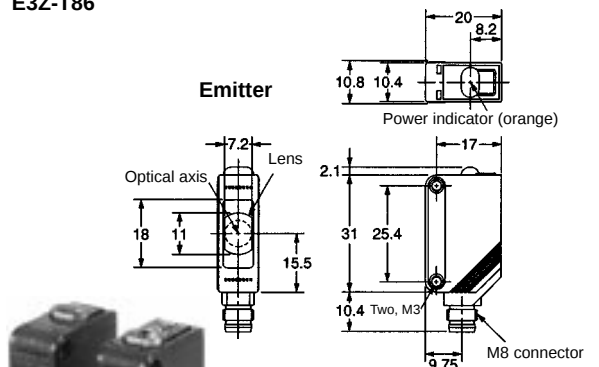

Retroreflective Models (Pre-wired Models)

E3Z-R61

E3Z-R81


Diffuse-reflective Models

E3Z-D61

E3Z-D62

E3Z-D81

E3Z-D82

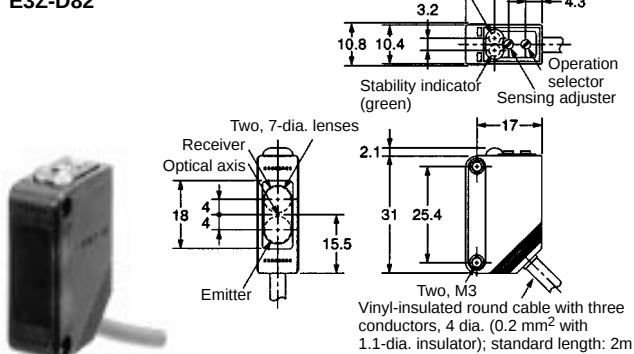

Retroreflective Models (Connector Models)

E3Z-R66

E3Z-R86


Diffuse-reflective Models

E3Z-D66

E3Z-D67

E3Z-D86


E3Z-D87

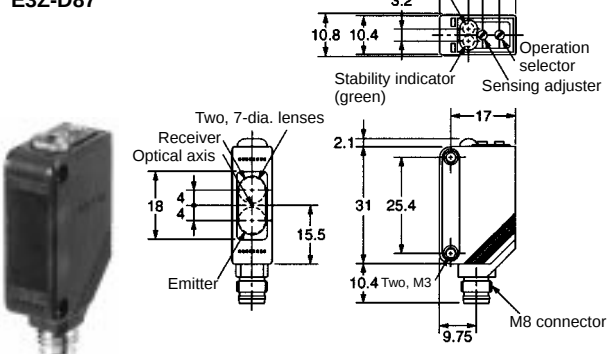

■ Accessories (Order Separately)


Slits

E39-S65A
E39-S65B
E39-S65C

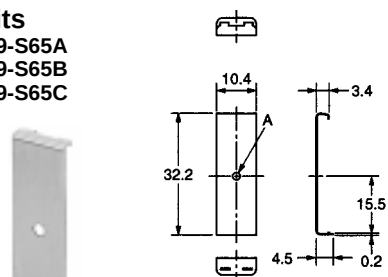

Model	Side A	Material
E39-S65A	0.5 dia.	SUS301 stainless steel
E39-S65B	1.0 dia.	
E39-S65C	2.0 dia.	


E39-S65D
E39-S65E
E39-S65F

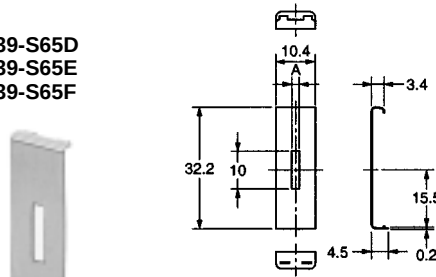

Model	Side A	Material
E39-S65D	0.5	SUS301 stainless steel
E39-S65E	1.0	
E39-S65F	2.0	


Reflectors

E39-R1
E39-R1S

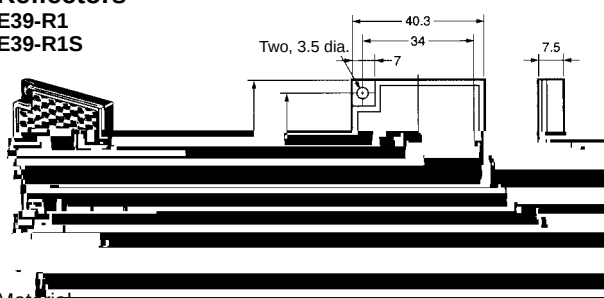

Material
Surface: Acrylic resin
Backside: ABS resin

E39-R2

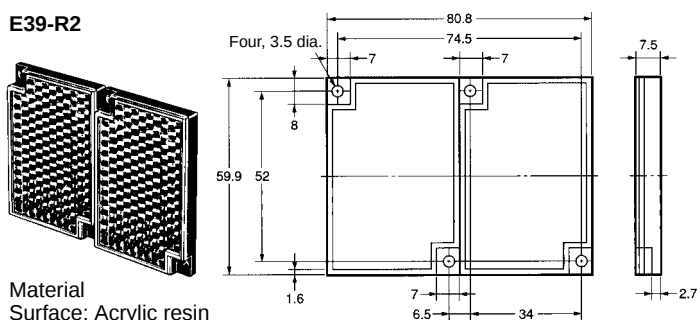


Material
Surface: Acrylic resin
Backside: ABS resin

Miniature Reflector

E39-R3




Material
Surface: Acrylic resin
Backside: ABS resin

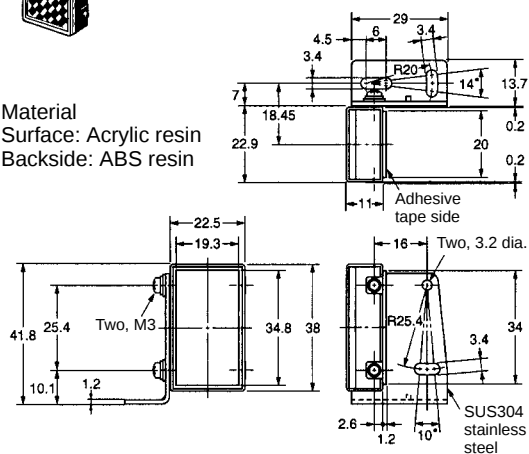


Tape Reflectors

E39-RS1

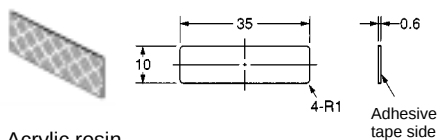


Material: Acrylic resin

E39-RS2

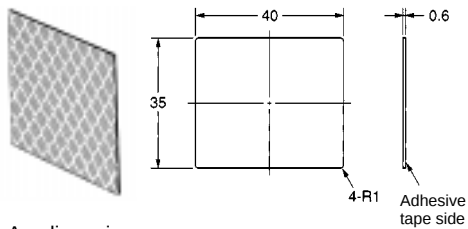

Material: Acrylic resin


E39-RS3

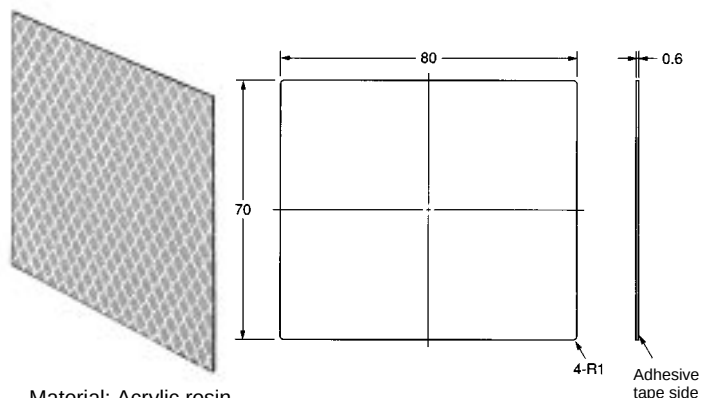



Material: Acrylic resin

Mounting Brackets



E39-L104

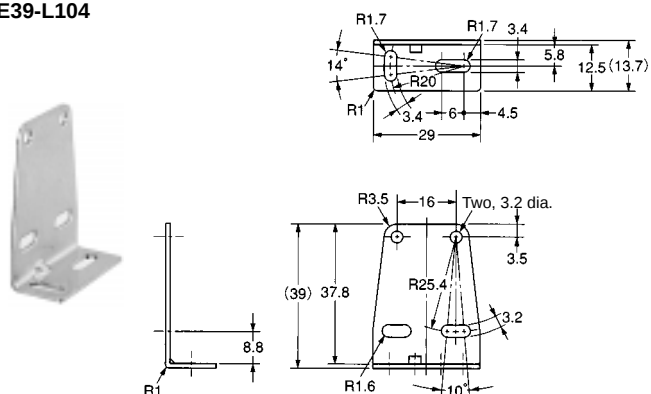

Material: SUS304 stainless steel

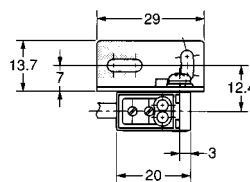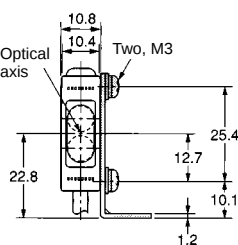
With Mounting Bracket
(E3Z-D62)

E39-L43

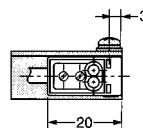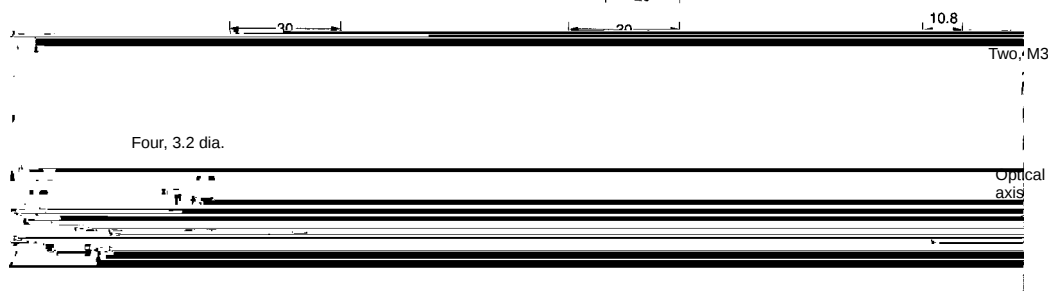With Mounting Bracket
(E3Z-D62)


Material: SUS304 stainless steel

E39-L44

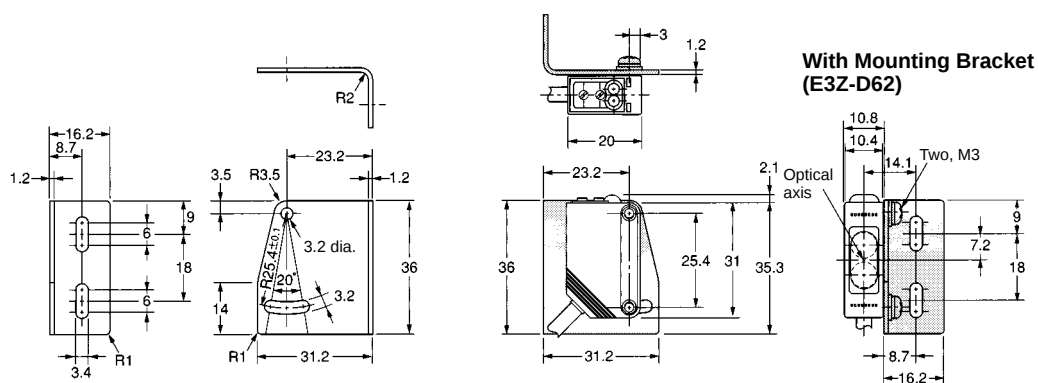


Material: SUS304 stainless steel

E39-L93

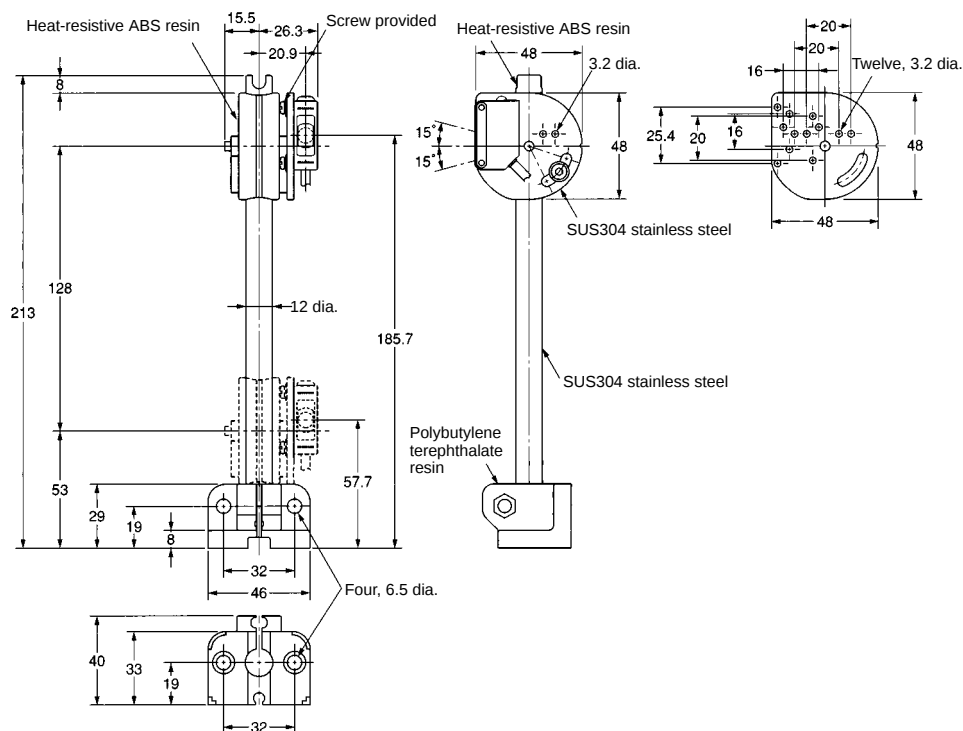

E39-L98

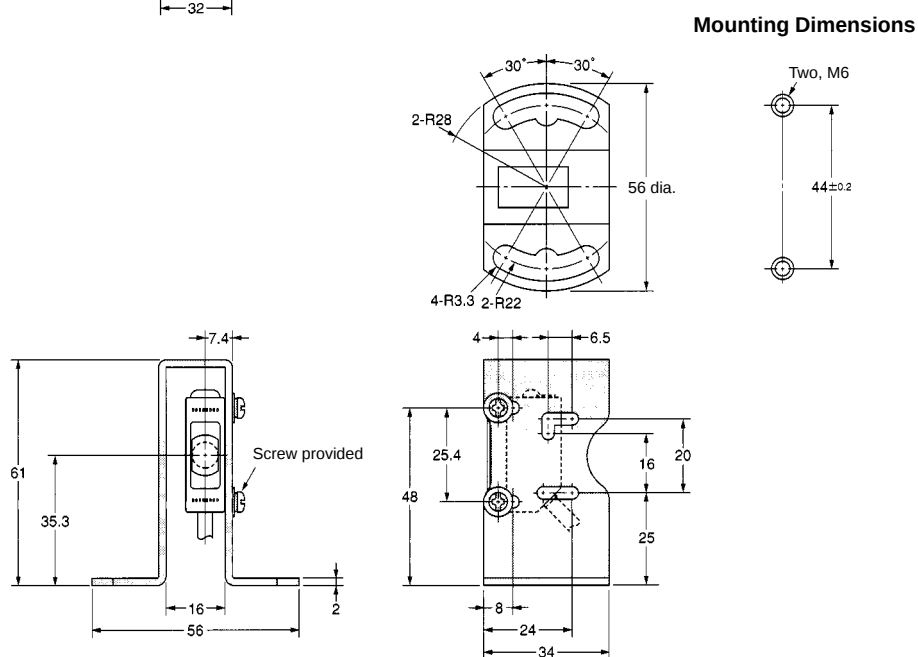


Material: SUS304 stainless steel

Sensor I/O Connectors


Straight

XS3F-M421-402-A (L=2 m)
XS3F-M421-405-A (L=5 m)

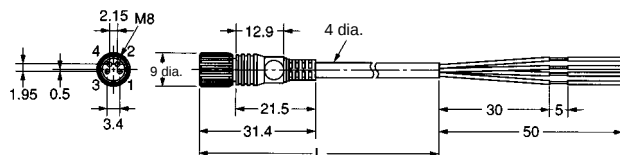

L-shaped

XS3F-M422-402-A (L=2 m)
XS3F-M422-405-A (L=5 m)

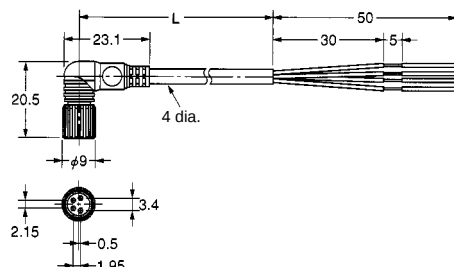

Precautions

Be sure to abide by the following precautions for the safe operation of the Sensor.

Wiring

Power Supply Voltage

Make sure that the power supply to the Sensor is within the rated voltage range and do not apply 100 VAC or more if the Sensor is a DC model, or otherwise the Sensor may explode or burn.

Load Short-circuiting

Do not short-circuit the load, otherwise the Sensor may be damaged.

■ Correct Use

Settings

Power Reset Time

The Sensor is ready to operate 100 ms after the Sensor is turned ON. If the load and Sensor are connected to independent power supplies respectively, be sure to turn ON the Sensor before turning the load ON.

Connections

M8 Metal Connector

- Be sure to connect or disconnect the metal connector after turning OFF the Sensor.
- Hold the connector cover to connect or disconnect the metal connector.
- Secure the connector cover by hand. Do not use any pliers, otherwise the connector may be damaged.
- The proper tightening torque range is between 0.3 and 0.4 N • m. Be sure to tighten the connector securely, otherwise the specified degree of protection may not be maintained or the connector may be disconnected due to vibration.

Wiring Mistakes

Do not make mistakes in wiring, such as mistakes in polarity, otherwise the Sensor may be damaged.

Connection without Load

Do not connect power supply to the Sensor with no load connected, otherwise the internal elements may explode or burn.


Operating Environment

Do not use the Sensor in locations with explosive or flammable gas.

Mounting

Sensor Mounting

Use M3 screws to mount the sensor and tighten each screw to a maximum torque of 0.53 N • m.

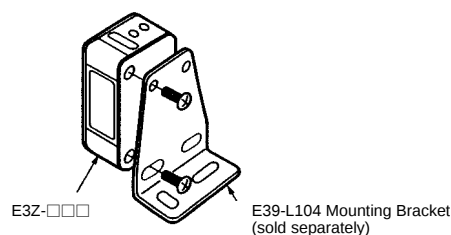

Adjustment

Slits for Through-beam Models (E39-S65A/B/C/D/E/F (Sold Separately))

Mounting method 1. Hook the upper protruding portion of the Slit to the upper indented mounting portion of the Sensor and adjust the position of the Slit so that the Slit will be in parallel to the lens side of the Sensor. 2. Press the lower protruding portion of the Slit onto the indented mounting portion of the Sensor until the Slit snaps in.	
Mounting condition	Side view Front view
Removal method 1. Press the upper portion of the Slit. 2. Disconnect the lower protruding portion of the Slit from the Sensor and remove the Slit.	

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. E308-E1-1 In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation

Industrial Automation Company

Industrial Sensors Division
Sensing Devices and Components Division H.Q.
28th Fl., Crystal Tower Bldg.,
1-2-27, Shiromi, Chuo-ku,
Osaka 540-6028 Japan
Phone: (81)6-6949-6012 Fax: (81)6-6949-6021

Printed in Japan
0799-5M (0799) ④