

# HT82M39A 3D PS/2 Mouse 3 Key

#### **Feature**


- Microsoft Intelli 3D PS/2 and IBM PS/2 mouse compatible
- Supports rolling buttons in PS/2 mouse mode
- X/Y axis photo input with built-in Holtek's special dynamic photo-input resistor
- Supports three buttons and three axis (X, Y, Z) inputs
- Z axis can support two kinds of scroller input (optomechanical and mechanical)
- 2MHz RC oscillator for system frequency with an external pull-high resistor
- 16-pin DIP package

#### **General Description**

The HT82M39A is a Plug and Play PS/2 3D mouse controller. It is compatible with Microsoft Intelli 3D PS/2

mouse. The  ${\sf Z}$  axis can support two kinds of scroller input, namely; optomechanical and mechanical.

#### **Pin Assignment**

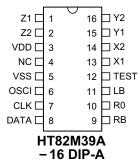

#### **Pin Description**

Pin No.	Pin Name	I/O	Description
1, 2	Z1, Z2	ı	"Z" axis input supports two kinds of scroller input; optomechanical and mechanical.
3	VDD	_	Positive power supply
4	NC	_	No connection
5	VSS	_	Negative power supply, ground
6	osci	ı	2MHz RC oscillator for system frequency with external pull-high resistor and built-in C
7	CLK	I/O	"CLK I/O": PS/2 mouse CLK line. NMOS open drain output with $5k\Omega$ pull-high resistor.
8	DATA	I/O	"DATA I/O": PS/2 mouse DATA line. NMOS open drain output with $5k\Omega$ pull-high resistor.
9~11	RB, RO, LB	I	Right Button: Normal pull-low ( $50k\Omega$ ), Pressing the button connects to high. Rolling Button: Normal pull-low ( $50k\Omega$ ), Pressing the button connects to high. Left Button: Normal pull-low ( $50k\Omega$ ), Pressing the button connects to high.
12	TEST	ı	For IC manufacture testing, user should leave it floating.
13~16	X1, X2, Y1, Y2	ı	X/Y axis photo input with built-in Holtek's special dynamic photo input resistor

Rev. 1.20 1 August 20, 2002



### **Absolute Maximum Ratings**

Supply Voltage	0.3V to 6.5V	Storage Temperature	–50°C to 125°C
Input VoltageV <sub>SS</sub> -0.	3V to V <sub>DD</sub> +0.3V	Operating Temperature	–25°C to 70°C

Note: These are stress ratings only. Stresses exceeding the range specified under "Absolute Maximum Ratings" may cause substantial damage to the device. Functional operation of this device at other conditions beyond those listed in the specification is not implied and prolonged exposure to extreme conditions may affect device reliability.


#### **Electrical Characteristics**

Ta=25°C

Cumhal	Downwater.	Te	est Conditions	Min.			Unit
Symbol	Parameter	V <sub>DD</sub>	Conditions	Wiln.	Тур.	Max.	
V <sub>DD</sub>	Operating Voltage	_	_	4.75	5.0	5.25	V
I <sub>OP</sub>	Operating Current	5V	R <sub>OSC</sub> =120kΩ	_	_	15	mA
f <sub>OSC</sub>	RC Oscillator	5V	R <sub>OSC</sub> =120kΩ	1.6	2	2.2	V
V <sub>IL1</sub>	Input Low Voltage (Z1, Z2)	5V	_	0	_	1.5	V
V <sub>IH1</sub>	Input High Voltage (Z1, Z2)	5V	_	2.2	_	5	V
V <sub>IL2</sub>	Input Low Voltage (CLK, DATA)	5V	_	0	_	0.8	V
V <sub>IH2</sub>	Input High Voltage (CLK, DATA)	5V	_	2.0	_	5.0	V
R <sub>PH2</sub>	Pull-high Resistor (CLK, DATA)	5V	V <sub>IL</sub> =0V	2	5	10	kΩ
Isink	Sink Current (CLK, DATA)	5V	V <sub>OH</sub> =0.4V	4	_	_	mA
V <sub>IL3</sub>	Input Low Voltage (RB, Ro, LB)	5V	_	0	_	1.0	V
V <sub>IH3</sub>	Input High Voltage (RB, Ro, LB)	5V	_	1.8	_	5	V
R <sub>PL3</sub>	Pull-low Resistor (RB, Ro, LB)	5V	V <sub>IL</sub> =0V	3.0	60	125	kΩ
V <sub>IL4</sub>	Input Low Voltage (X1,X2,Y1,Y2)	5V	_	0	_	1.5	V
V <sub>IH4</sub>	Input high Voltage (X1, X2, Y1, Y2)	5V	_	2.2	_	5	V
R <sub>PL5</sub>	Dynamic Photo-resistor (X1, X2, Y1, Y2, Z1, Z2)	5V	_	See D	•	resistor o	harac-

#### Dynamic resistor characteristics

#### • R-V curve

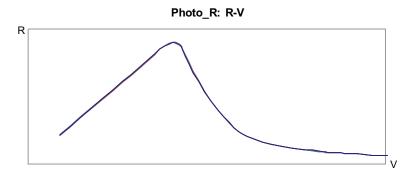



#### **Functional Description**

#### PS/2 mouse

• PS/2 status byte

Byte 1

bit

- 7: Reserved
- 6: 0=Stream Mode, 1=Remote Mode
- 5: 0=Disabled, 1=Enabled
- 4: 0=Scaling 1:1, 1=Scaling 2:1
- 3: 1=Wrap Mode, 0=Stream or Remote (different from IBM specs.)
- 2: 1=Left Button Pressed
- 1: 1=Middle Button Pressed
- 0: 1=Right Button Pressed

Byte 2

Bit 0~7 current resolution setting

(Bit 0=LSB)

Byte 3

Bit 0~7 current sampling rate (Bit 0=LSB)

• Standard PS/2 data format Variable rps, 0, 8, 1, bidirectional, synchronous

Bit No.	7	6	5	4	3	2	1	0
1st word	ΥV	ΧV	YS	XS	1	М	R	L
2nd word	X7	X6	X5	X4	ХЗ	X2	X1	X0
3rd word	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0

• Data format for 3D PS/2 Variable rps, 0, 8, 1, bidirectional, synchronous

Bit No.	7	6	5	4	3	2	1	0
1st word	YV	XV	YS	XS	1	Ro	R	L
2nd word	X7	X6	X5	X4	Х3	X2	X1	X0
3rd word	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0
4th word	<b>Z</b> 7	Z6	Z5	Z4	Z3	Z2	Z1	Z0

The x/y data report is 9-bit 2's complement

The z data report is 8-bit 2's complement

X movement towards the right is positive, moving towards the left is negative

Y upward movement is positive, moving down is nega-

Z rolling towards the user is positive, else negative

Button status: 1=pressed, 0=released

• Mouse mode changes between Standard and 3D PS/2 mode

Sending the commands in the following sequence will set the mouse to 3D PS/2 mode.


Command	Response From Mouse
F3h	FAh
C8h	FAh
F3h	FAh
64h	FAh
F3h	FAh
50h	FAh
F2h	FAh, 03h

- Any time the PC sends a reset "FFh" command to the mouse, it will reset the mouse to Standard PS/2
- After power-on reset is initiated, the mouse is set to Standard PS/2 mode.




### **Timing Diagrams**

#### X, Y axis photo-coupler crossed width



Note: For X, Y-axis tr, tp, tf >  $30\mu s$ For Z-axis tr, tp, tf > 1ms

#### X/Y/Z axis counting

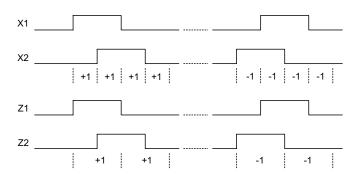


Rev. 1.20 4 August 20, 2002




#### PS/2 mouse

#### • Data output

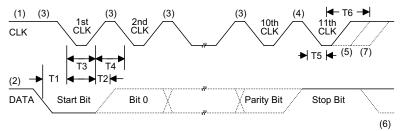

	Timing Parameter	Min./Max.
T1	DATA transition to the falling edge of CLK	5/25 μsec
T2	Rising edge of CLK to DATA transition	5/T4-5 μsec
Т3	Inactive CLK Duration	30/50 μsec
T4	Active CLK Duration	30/50 μsec
T5	Minimum time to inhibit MOUSE after clock 11	>0 μsec
Т6	Maximum time to inhibit MOUSE after clock 11 to ensure MOUSE does not start another transmission	<50 μsec

#### • Data input

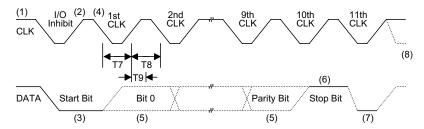


	Timing Parameter	Min./Max.
T7	CLK Duration, low	30/50 μsec
T8	CLK Duration, high	30/50 μsec
Т9	Time from low to high CLK transition to time when MOUSE samples DATA line	5/25 μsec

Rev. 1.20 5 August 20, 2002




### **Application Circuits**

HT82M39A Z axis optomechanical (this application circuit is for reference only)

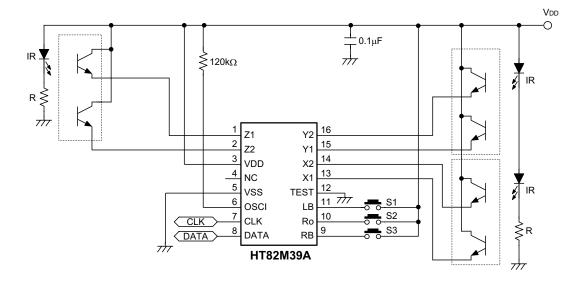

#### HT82M39A Z axis mechanical (this application circuit is for reference only)

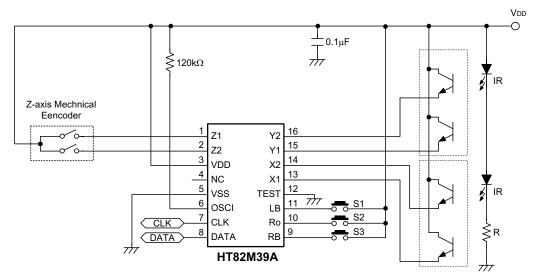



Note: R depends on IR characteristics, R=1K for reference only



# **Package Information**

## 16-pin DIP (300mil) outline dimensions







Cumbal	Dimensions in mil					
Symbol	Min.	Nom.	Max.			
А	745	_	775			
В	240	_	260			
С	125	_	135			
D	125	_	145			
Е	16	_	20			
F	50	_	70			
G	_	100	_			
Н	295	_	315			
1	335	_	375			
α	0°	_	15°			



#### Holtek Semiconductor Inc. (Headquarters)

No.3, Creation Rd. II, Science-based Industrial Park, Hsinchu, Taiwan

Tel: 886-3-563-1999 Fax: 886-3-563-1189 http://www.holtek.com.tw

#### Holtek Semiconductor Inc. (Sales Office)

11F, No.576, Sec.7 Chung Hsiao E. Rd., Taipei, Taiwan

Tel: 886-2-2782-9635 Fax: 886-2-2782-9636

Fax: 886-2-2782-7128 (International sales hotline)

#### Holtek Semiconductor (Shanghai) Inc.

7th Floor, Building 2, No.889, Yi Shan Rd., Shanghai, China

Tel: 021-6485-5560 Fax: 021-6485-0313 http://www.holtek.com.cn

#### Holtek Semiconductor (Hong Kong) Ltd.

RM.711, Tower 2, Cheung Sha Wan Plaza, 833 Cheung Sha Wan Rd., Kowloon, Hong Kong

Tel: 852-2-745-8288 Fax: 852-2-742-8657

#### Holmate Semiconductor, Inc.

48531 Warm Springs Boulevard, Suite 413, Fremont, CA 94539

Tel: 510-252-9880 Fax: 510-252-9885 http://www.holmate.com

#### Copyright © 2002 by HOLTEK SEMICONDUCTOR INC.

The information appearing in this Data Sheet is believed to be accurate at the time of publication. However, Holtek assumes no responsibility arising from the use of the specifications described. The applications mentioned herein are used solely for the purpose of illustration and Holtek makes no warranty or representation that such applications will be suitable without further modification, nor recommends the use of its products for application that may present a risk to human life due to malfunction or otherwise. Holtek's products are not authorized for use as critical components in life support devices or systems. Holtek reserves the right to alter its products without prior notification. For the most up-to-date information, please visit our web site at http://www.holtek.com.tw.