RF Connectors

Stripping Dimensions and Assembly Instructions

A	B	C	D
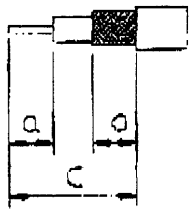	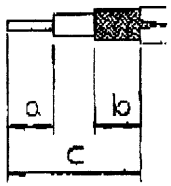	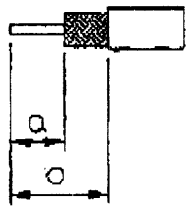	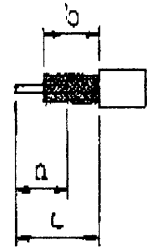

MULTICOMP P/N	MANUFACTURERS P/N	INSTRUCTIONS VERSION	CABLE STRIPPING DIMENSION (MM)			
			VERSION	A	B	C
105-545	13-17-1 58U D.G.N/Z. BNC STRAIGHT PLUG TWIST ON 50 OHM	CM-12	A	6.5	3.2	10.5
105-546	13-17-1 59U D.G.N/Z. BNC STRAIGHT PLUG TWIST ON 50 OHM	CM-12	A	6.5	3.2	10.5
105-549	13-18 58U D.G.N. BNC STRAIGHT JACK TWIST ON 50 OHM	CM-12	A	6.5	3.2	10.5
105-550	13-18 59U D.G.N. BNC STRAIGHT JACK TWIST ON 50 OHM	CM-12	A	6.5	3.2	10.5
143-773	13-06-4 58U T.G.N./Z BNC R/A PLUG CLAMP 50 OHM	CM-11	A	2.3	4.5	9.5
143-775	13-01-3 59U T.G.N/Z. BNC STRAIGHT PLUG CLAMP 50 OHM	CM-07	A	2.5	4.0	9.0
143-776	13-10-1 58U T.G.N/Z. BNC STRAIGHT PLUG CRIMP 50 OHM	CM-03	A	3.5	7.5	15.5
143-777	13-25 D.G.N. W/N.W.L. BNC STRAIGHT BULKHEAD JACK RECEPTACLE 50 OHM	X	X	X	X	X
143-779	13-22 T.G.N. BNC PANEL JACK RECEPTACLE 50 OHM	X	X	X	X	X
149-452	13-22-1 T.G.N. BNC STRAIGHT JACK PC MOUNT 50 OHM	X	X	X	X	X
149-453	13-22-4 T.G.N. BNC STRAIGHT JACK PC MOUNT 50 OHM	X	X	X	X	X
149-454	13-53 T.G.N. BNC R/A PCB MOUNT JACK RECEPTACLE 50 OHM	X	X	X	X	X
150-682	13-60-2 D.G.Z. W/N,TW.BNC R/A PCB MOUNT JACK RECEPTACLE 50 OHM-VALOX HOUSING	X	X	X	X	X
150-683	13-60-1 D.G.Z. W/N,TW.BNC STRAIGHT PCB MOUNT JACK RECEPTACLE 50OHM-VALOX HOUSING	X	X	X	X	X
150-684	18-11-2 NICKEL F STRAIGHT PLUG TWIST ON 75 OHM	CM-12	C	6.5	10.5	X
150-685	18-20-11 PP.T.N. F JACK TO JACK ADAPTOR 75 OHM	X	X	X	X	X
150-686	18-19 PP.T.N. W/N,W. F BULKHEAD JACK RECEPTACLE 75 OHM	X	X	X	X	X
150-687	18-13-2 PP/D.T/N.N. F R/A JACK PC MOUNT 75 OHM	X	X	X	X	X
150-688	13-47 PP/D.T/N.N. BNC PLUG TO F JACK ADAPTOR 50 OHM	X	X	X	X	X
150-689	11-44 D.N.N. N JACK TO F PLUG ADAPTOR 50 OHM	X	X	X	X	X
150-690	11-35 PP/D.T/N.N. N PLUG TO F JACK ADAPTOR 50 OHM	X	X	X	X	X
152-084	13-39-5 D.G.Z. BNC Y JACK TO PLUG TO JACK ADAPTOR 50 OHM	X	X	X	X	X
152-086	13-46 D.N.N. BNC PLUG TO RCA JACK ADAPTOR 50 OHM	X	X	X	X	X
152-087	13-45 D.G.N/Z. BNC PLUG TO TNC JACK ADAPTOR 50 OHM	X	X	X	X	X

152-088	15-46 D.G.N. TNC PLUG TO BNC JACK ADAPTOR 50 OHM	X	X	X	X	X
152-131	13-60-4 D.G.Z. W/N.TW. BNC R/A PCB JACK RECEPTACLE 50 OHM VALOX HOUSING LOW PROFILE	X	X	X	X	X
152-295	12-03 F 58 U D.G.N. MINI-UHF STRAIGHT PLUG CRIMP 50 OHM	CM-03	A	2.0	7.0	12.0
152-296	12-04 D.G.N. W/N, W. MINI-UHF STRAIGHT BULKHEAD JACK RECEPTACLE 50 OHM	X	X	X	X	X
152-297	13-60-3 D.G.Z. W/N,TW. BNC R/A PCB JACK RECEPTACLE (METAL HOUSING)HIGH PROFILE50 OHM	X	X	X	X	X
152-319	13-29-7 D.G.N. W/N.W. BNC ISOLATED BULKHEAD JACK TO JACK ADAPTOR 50 OHM	X	X	X	X	X
211-710	12-13 D.G.N. MINI-UHF PLUG TO BNC JACK ADAPTOR 50 OHM	X	X	X	X	X
211-722	12-14 D.G.N. MINI-UHF PLUG TO TNC JACK ADAPTOR 50 OHM	X	X	X	X	X
211-734	12-17 D.G.N. MINI-UHF JACK TO BNC PLUG ADAPTOR 50 OHM	X	X	X	X	X
211-746	13-43 D.G.N./Z BNC PLUG TO N JACK 50 OHM	X	X	X	X	X
211-758	19-34-2 T.G.N. SMA JACK TO N PLUG 50 OHM	X	X	X	X	X
211-760	11-33 D.G.N. PLUG TO TNC JACK 50 OHM	X	X	X	X	X
211-771	14-05-1 D.G.N. RCA PLUG TO BNC JACK 50 OHM	X	X	X	X	X
251-070	13-39-7 PP.G.N. BNC R/A JACK TO PLUG TO JACK ADAPTOR 50OHM	X	X	X	X	X
251-100	13-17-1-8281 D.G.N/Z. BNC STRAIGHT PLUG TWIST ON 50 OHM	CM-12	A	6.5	3.2	10.5
251-197	13-39-2 D.G.N/Z. BNC "T" JACK TO PLUG TO JACK ADAPTOR 50 OHM	X	X	X	X	X
260-538	13-33-1 D.G.N. BNC R/A PLUG TO JACK ADAPTOR 50 OHM	X	X	X	X	X
290-919	13-29-7 D.G.N. W/N.W. BNC ISOLATED BULKHEAD JACK TO JACK ADAPTOR 75 OHM	X	X	X	X	X
583-467	13-01F-3 58U T.G.N/Z BNC STRAIGHT PLUG CLAMP 50OHM .	CM-07	A	2.5	4.0	9.0
583-479	13-06F-4 58U T.G.N/Z. BNC R/A PLUG CLAMP 50 OHM	CM-11	A	2.3	4.5	9.5
583-480	13-01G-3 59U T.G.N/Z. BNC STRAIGHT PLUG CLAMP 50 OHM	CM-07	A	2.5	4.0	9.0
583-492	13-10F-1 58U T.G.N/Z. BNC STRAIGHT PLUG CRIMP 50 OHM	CM-03	A	3.5	7.5	15.5
583-509	13-25 D.G.N. W/N,W,.L. BNC BULKHEAD JACK RECEPTACLE 50 OHM	X	X	X	X	X
583-510	13-22 T.G.N. BNC PANEL JACK RECEPTACLE 50 OHM	X	X	X	X	X
583-522	13-28 ABS.G.N. W/N,TW. BNC ISOLATED BULKHEAD JACK RECEPTACLE 50 OHM	X	X	X	X	X
583-534	13-29-7 D.G.N. W/N,TW. BNC ISOLATED BULKHEAD JACK TO JACK 50 OHM	X	X	X	X	X
583-546	13-29-7 D.G.N. W/N,TW. BNC ISOLATED BULKHEAD JACK TO JACK 75 OHM	X	X	X	X	X
583-558	13-22-1 T.G.N. BNC STRAIGHT JACK PCB MOUNT 50 OHM	X	X	X	X	X
583-560	13-22-5 T.G.N. BNC STRAIGHT JACK PCB MOUNT 50 OHM	X	X	X	X	X
724-750	MC17-07-5- D.N.N. UHF BULKHEAD JACK RECEPTACLE 50 OHM	X	X	X	X	X
724-762	MC17-26B 213U T.G.N. UHF STRAIGHT JACK CLAMP 50 OHM	CM-08-2	B	4.5	1.0	8.5

724-774	MC17-26F 58U T.G.N. UHF STRAIGHT JACK CLAMP 50 OHM	CM-08-2	B	4.5	1.0	8.5
724-786	MC-17-11-8 D.N.Z. HF JACK TO JACK ADAPTOR 50 OHM	X	X	X	X	X
724-804	MC17-01F-5 58U T.G.N. UHF STRAIGHT PLUG CLAMP 50 OHM	CM-08	B	16.5	1.0	21.0
724-816	MC17-01B-5 213U T.G.N. UHF STRAIGHT PLUG CLAMP 50 OHM	CM-08	B	16.5	1.0	18.5
724-828	MC-17-03F-8 58U D.N.N. UHF STRAIGHT PLUG CRIMP 50 OHM	CM-14	A	17.5	6.5	27.0
724-830	MC-17-03G-8 59U D.N.N. UHF STRAIGHT PLUG CRIMP 50 OHM	CM-14	A	17.5	6.5	27.0
745-352	14-32 D.G.G. RCA " T" PLUG TO JACK TO JACK ADAPTOR 75 OHM	X	X	X	X	X
745-364	14-24 T.G.S. SILVER/BLACK RCA STRAIGHT PLUG SOLDER 75 OHM	X	X	X	X	X
745-376	14-24 T.G.S. SILVER/RED RCA STRAIGHT PLUG SOLDER 75 OHM	X	X	X	X	X
746-710	13-25-12 T.G.N. BNC BULKHEAD JACK RECEPTACLE 50 OHM	X	X	X	X	X
746-721	13-60-4 NUT & WASHER (5) PX NICKEL	X	X	X	X	X
886-488	11-01-7 TGN FOR ETHERNET CABLE	CM-08-1	B	7.5	2.0	9.5
886-490	11-02-10 TGN FOR ETHERNET CABLE	CM-08-1	B	6.5	2.0	8.5
886-506	11-11-5 TGN FOR ETHERNET CABLE	CM-03	A	4.5	8.5	16.5
324-1210	19-24-2 TGN - SMA PLUG TO N PLUG	X	X	X	X	X
324-1233	19-35-2 TGN - SMA JACK TO N JACK	X	X	X	X	X
324-1269	19-29-1 TGN - SMA PLUG TO BNC JACK	X	X	X	X	X
324-1270	19-39-4 TGN - SMA JACK TO BNC JACK	X	X	X	X	X
324-1282	19-30-1 TGN - SMA PLUG TO TNC PLUG	X	X	X	X	X
324-1294	19-31-3 TGN - SMA PLUG TO TNC JACK	X	X	X	X	X
324-1300	19-40-1 TGN - SMA JACK TO TNC PLUG	X	X	X	X	X
324-1312	19-41-4 TGN - SMA JACK TO TNC JACK	X	X	X	X	X
324-1324	11-32 TGN - N PLUG TO BNC JACK	X	X	X	X	X
324-1336	13-44-3 DNN - BNC PLUG TO UHF JACK	X	X	X	X	X
324-1348	17-19-3 DNN - BNC JACK TO UHF PLUG	X	X	X	X	X
324-1350	12-18 DGN - MINI UHF JACK TO TNC PLUG	X	X	X	X	X
324-1361	13-04-19 TSS FOR RG58U CABLE 50 OHM , BNC STRAIGHT PLUG CLAMP, SILVER	CM-07	A	2.8	4.5	8.5
324-1373	13-04-19 TSS FOR RG174U CABLE 50 OHM, BNC STRAIGHT PLUG CLAMP, SILVER	CM-07-1	A	4.0	4.5	8.5
324-1385	*13-04-19 TSS FOR URM70 CABLE 75 OHM, BNC STRAIGHT PLUG CLAMP, SILVER*	CM-07	A	2.8	4.5	8.5
324-1397	13-04-19 TSS FOR RG179U CABLE 75 OHM, BNC STRAIGHT PLUG CLAMP, SILVER	CM-07-1	A	4.0	4.5	8.5
324-1403	13-04-19 TSS FOR RG59 CABLE 75 OHM, BNC STRAIGHT PLUG CLAMP, SILVER	CM-07	A	2.8	4.5	8.5
324-1415	13-06-1 TSS FOR RG58U CABLE 50OHM, BNC PLUG ELBOW CLAMP, SILVER	CM-11	A	2.3	4.5	9.5
324-1427	13-07-6 TSS FOR RG58U CABLE 50 OHM, STRAIGHT JACK CLAMP,	CM-07	D	2.5	4.5	5.5

	SILVER					
324-1439	13-02-4 TSS FOR RGUR58 CABLE 50 OHM, BNC JACK BULKHEAD CLAMP, SILVER	CM-07	A	3.0	4.0	7.5
324-1440	13-25 TSS 50 OHM, BNC BULKHEAD JACK RECEPTACLE, SILVER	X	X	X	X	X
324-1452	13-25 TSS 75 OHM, BNC BULKHEAD JACK RECEPTACLE, SILVER	X	X	X	X	X
324-1464	13-21-2 TSS 50 OHM, BNC PLUG PANEL, SILVER	X	X	X	X	X
324-1476	13-10-1 TSS FOR RG58U CABLE 50 OHM, BNC PLUG CRIMP, SILVER	CM-03	A	3.5	7.5	15.5
324-1488	13-10-1 TSS FOR UR70 CABLE 75 OHM, BNC PLUG CRIMP, SILVER	CM-03	A	3.5	7.5	15.5
324-1490	13-55-1 TSS FOR RG174U CABLE 50 OHM, BNC STRAIGHT PLUG CRIMP, SILVER	CM-04	A	3.5	8.5	17.0
324-1506	13-55-6 TSS FOR RG179U CABLE 75 OHM, BNC STRAIGHT PLUG CRIMP, SILVER	CM-04	A	3.5	8.5	17.0
324-1518	13-15-1 TSS FOR RG58U CABLE 50 OHM, BNC STRAIGHT JACK CRIMP, SILVER	CM-03	A	3.5	7.5	16.5
324-1520	13-15-1 TSS FOR URM70 CABLE 75 OHM, BNC STRAIGHT JACK CRIMP, SILVER	CM-03	A	3.5	7.5	16.5
324-1531	13-15-1 TSS FOR RG59 CABLE 75 OHM, BNC STRAIGHT JACK CRIMP, SILVER	CM-03	A	3.5	7.5	16.5
324-1543	13-15-1 TSS FOR RG179U CABLE 75 OHM, BNC STRAIGHT JACK CRIMP, SILVER	CM-03	A	3.5	7.5	16.5
324-1555	13-11 TSS FOR RG174U CABLE 50 OHM, BNC STRAIGHT BULKHEAD JACK CRIMP, SILVER	CM-03	A	3.5	7.5	16.5
324-1567	11-05-3 TSS RG58U CABLE 50OHM, N STRAIGHT PLUG CLAMP, SILVER	CM-07	A	5.0	3.5	8.5
324-1579	11-19 TSS 50OHM, N TYPE PANEL SOCKET RECEPTACLE	X	X	X	X	X
324-1580	15-03 TSS RG58 CABLE 50 OHM, TNC, STRAIGHT PLUG CLAMP, SILVER	CM-07	A	2.5	4.5	8.5
324-1592	15-10-4 TSS RG58 CABLE 50 OHM, TNC PLUG CRIMP, SILVER	CM-03	A	3.5	7.5	15.5
324-1609	15-07 TSS RG58 CABLE 50 OHM, TNC STRAIGHT JACK CLAMP, SILVER	CM-07	D	2.5	4.5	5.5
324-1610	15-29-1 TSS 50 OHM, TNC STRAIGHT BULKHEAD JACK, SILVER	X	X	X	X	X
143-771	13-01-3 58U T.G.N/Z. BNC STRAIGHT PLUG CLAMP 50 OHM	CM-07	A	2.5	4.0	9.0
251094	13-60-6 D.G.Z. W/N,TW.BNC R/A PCB JACK RECEPTACLE(METAL HOUSING) LOW PORFILE50 OHM	X	X	X	X	X
251-136	13-10-1 58U T.G.N/Z. BNC STRAIGHT PLUG CRIMP 50 OHM	CM-03	A	3.5	7.5	15.5
251-148	13-11 58U T.G.N. BNC BULKHEAD JACK CRIMP 50 OHM	CM-03	A	3.5	7.5	16.5
251-173	13-52-3 BNC PLUG TERMINATION 50 OHM	X	X	X	X	X
305-2527	13-10-4 URM70-750OHM T.G.N/Z. : CRIMP BNC PLUG FOR 75R UR70 CABLE 5.8 MM T.G.N.	CM-03	A	3.5	7.5	15.5
305-2539	13-10-1 BT2003 75OHM T.G.Z : CRIMP BNC PLUG FOR 75R 2003 CABLE 6.6MM T.G.N	CM-03	A	3.5	7.5	15.5
324-1622	881105 - ALLIGATOR CLIP, RED COLOUR	X	X	X	X	X

	6.4 MM T.G.N.					
886-336	13-10-1 8281 T.G.N/Z.: CRIMP BNC PLUG FOR 75R PSF1/2M CABLE 7.5 MM T.G.N.	CM-03	A	3.5	7.5	15.5
886-348	13-11 58U T.G.N.: CRIMP BULKHEAD JACK FOR 50R RG58 CABLE 5.0MM T.G.N.	CM-03	A	3.5	7.5	16.5
886-350	13-11 URM70 T.G.N.: CRIMP BULKHEAD JACK FOR 75R UR70 CABLE 5.8MM T.G.N.	CM-03	A	3.5	7.5	16.5
886-361	13-11 179U T.G.N.: CRIMP BULKHEAD JACK FOR 75R RG179 CABLE 2.54MM T.G.N.	CM-03	A	3.5	7.5	16.5
886-373	13-11 BT2003 T.G.N.: CRIMP BULKHEAD JACK FOR 75R 2003 CABLE 6.6MM T.G.N.	CM-03	A	3.5	7.5	16.5
886-385	13-11 BT2002 T.G.N.: CRIMP BULKHEAD JACK FOR 75R 2002 CABLE 5.1MM T.G.N.	CM-03	A	3.5	7.5	16.5
886-415	13-25 T.G.N.: BULKHEAD BNC JACK 75R T.G.N.	X	X	X	X	X
886-427	13-22 T.G.N.: PANEL BNC JACK 75R T.G.N.	X	X	X	X	X
886-439	13-53 T.G.N.: RIGHT ANGLE PCB BNC JACK 50R T.G.N.(METAL HOUSING) HIGH PROFILE	X	X	X	X	X
886-440	13-60-7 D.G.Z.: DIE CAST STRAIGHT PCB BNC JACK 50 OHM	X	X	X	X	X
886-452	13-30 D.G.N/Z.: BNC PLUG TO PLUG ADAPTOR D.G.N. 50 OHM	X	X	X	X	X
886-464	13-32-3 D.G.N.: BNC JACK TO JACK ADAPTOR BRASS D.G.N. 50 OHM	X	X	X	X	X
886-476	13-39-2 D.G.N/Z.: BNC 'T' ADAPTOR JACK PLUG JACK D.G.N. 50 OHM	X	X	X	X	X
341-7633	17-08-1-RBGN/Z CONNECTOR, UHF, 50 OHM	X	X	X	X	X

MAIN BODY CONTACT PIN FERRULE





STEP 1



STEP 2

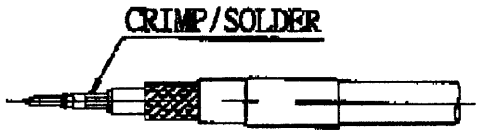

STEP 3



STEP 4

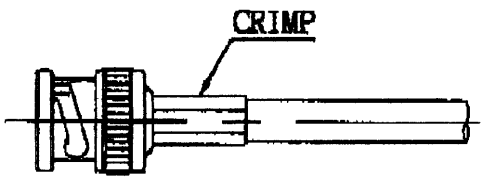

DRAWN	品名	ST. CRIMP TYPE	單位	MM	比例	SCALE	TOLERANCE	
	TITLE		UNIT			1:1		
APPROVAL	編號	CM-03	版次	A-0	日期	DATE	.X	±0.5
	NO.		REV.			11.27.00'	.XX	±0.3

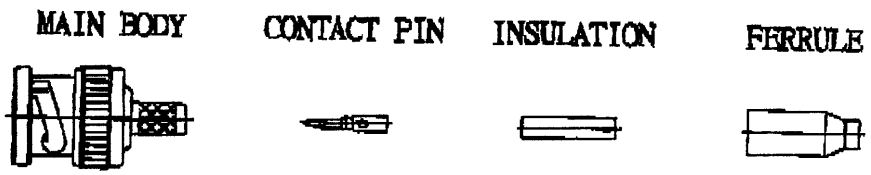

STEP 1



STEP 2

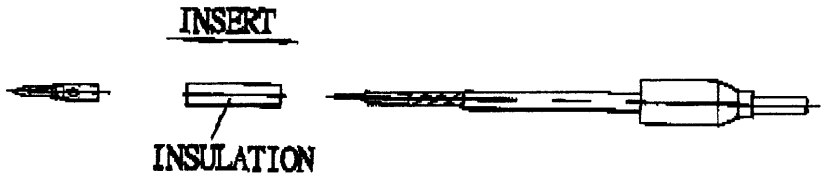

STEP 3

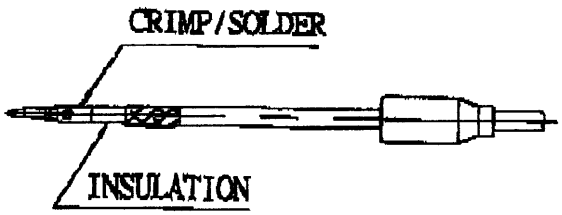

STEP 4



STEP 5

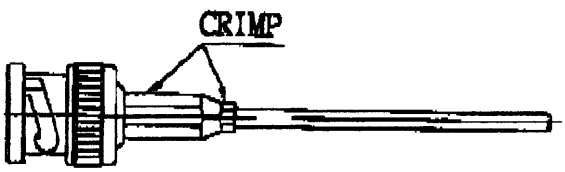

製圖	DRAWN	品名	ST. CRIMP TYPE	單位	MM	比例	SCALE	TOLERANCE		
		TITLE		UNIT			1:1			
認定	APPROVAL	編號	CM-04	版次	A-0	日期	DATE	.X	±0.5	
		NO.		REV.			04.26.01'	.XX	±0.3	

MAIN BODY CONTACT PIN INSULATION SLEEVE GASKET WASHER NUT

STEP 1



BRAID FOLD BACK

STEP 2

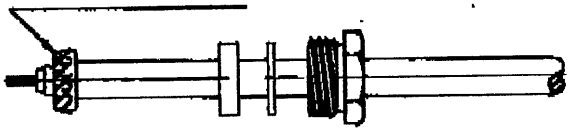

INSERT

STEP 3



SOLDER

STEP 4

STEP 5

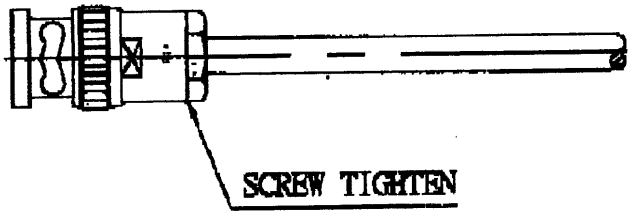

SCREW TIGHTEN

製圖	DRAWN	品名	ST. CLAMP TYPE	單位	MM	比例	SCALE	TOLERANCE	
		TITLE		UNIT			1:1		
認定	APPROVAL	編號	CM-07	版次	A-0	日期	DATE	.X	±0.5
		NO.		REV.			05.30.00'	.XX	±0.3

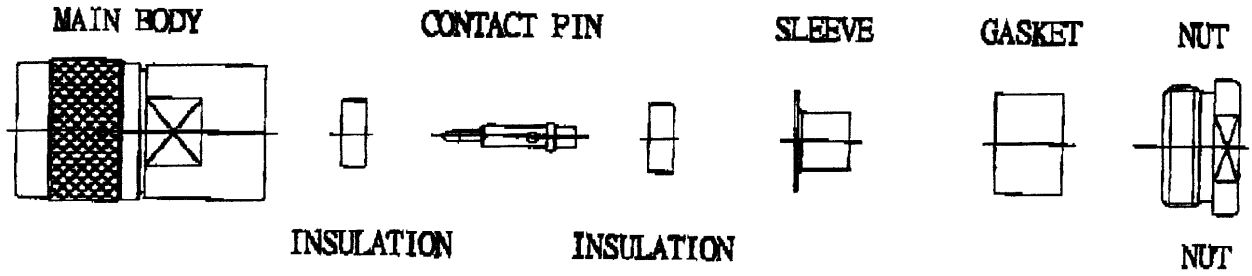

STEP 1

STEP 2

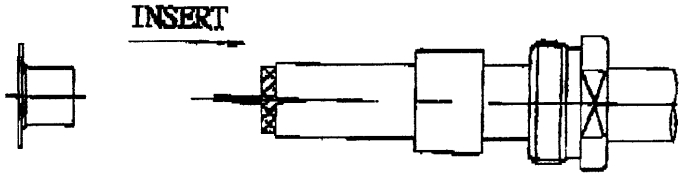

STEP 3

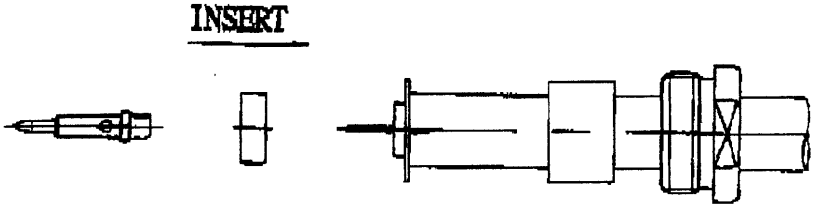

STEP 4

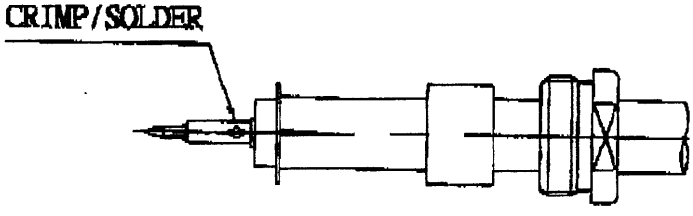

STEP 5

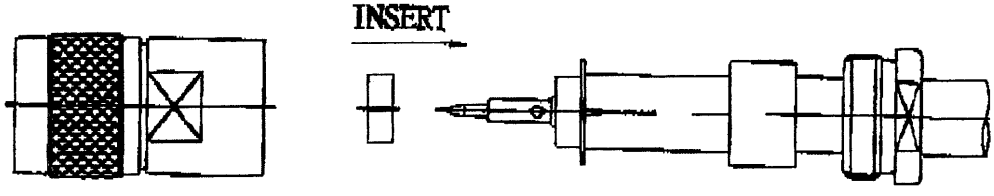

STEP 6

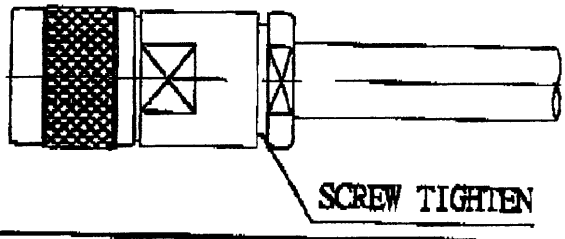

DRAWN	品名	ST. GREEN PAR	單位	MM	比例	SCALE	TOLERANCE	
	TITLE		UNIT			1:1		
APPROVAL	編號	CM-08	版次	A-0	日期	DATE	.X	±0.5
	NO.		REV.			05.30.00'	.XX	±0.3

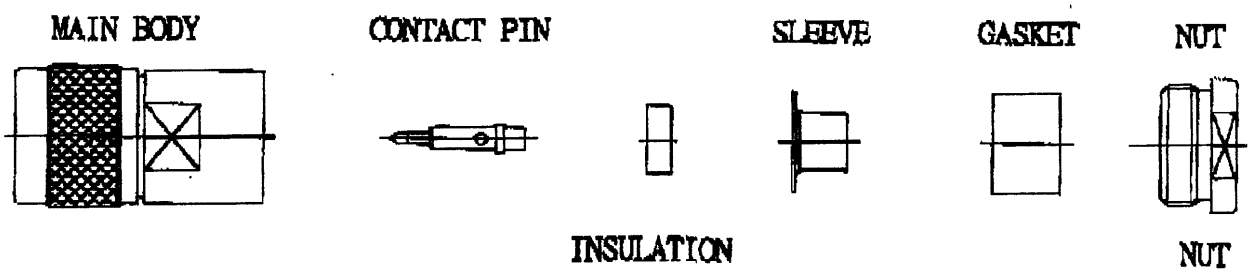

STEP 1

STEP 2

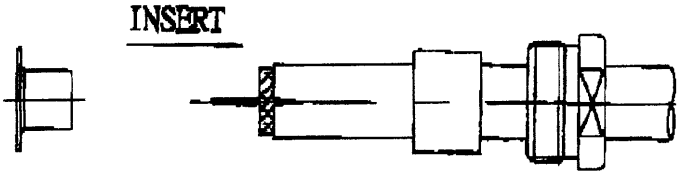

STEP 3

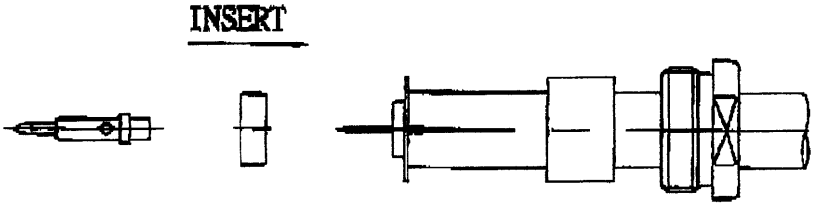

STEP 4

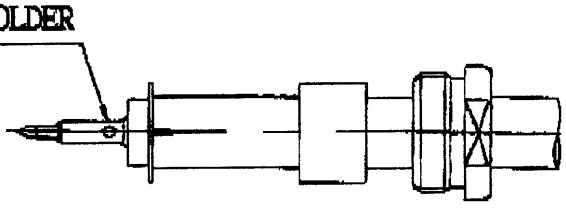

STEP 5

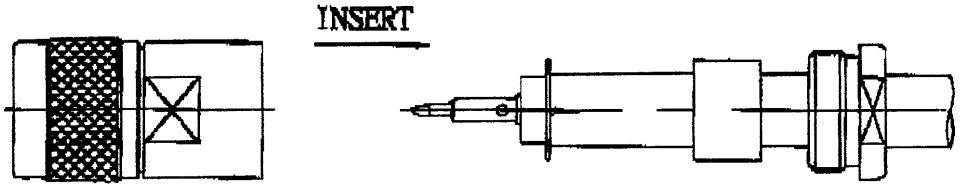

STEP 6

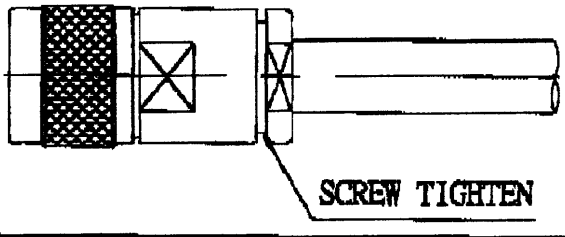

製圖	DRAWN 金金全	品名 TITLE	ST. GREEN PAR	單位 UNIT	MM	比例	SCALE 1:1	TOLERANCE		
認定	APPROVAL	編號 NO.	CM-08-2	版次 REV.	A-0	日期	DATE 05.30.00'	.X	±0.5	
								.XX	±0.3	

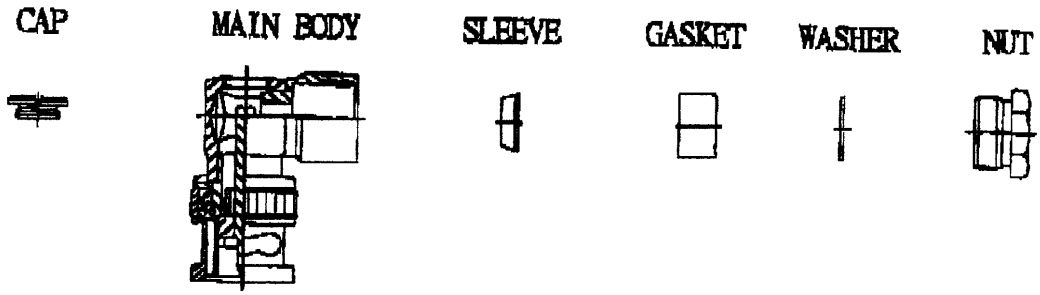

STEP 1



STEP 2

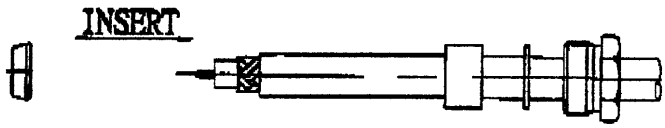

STEP 3

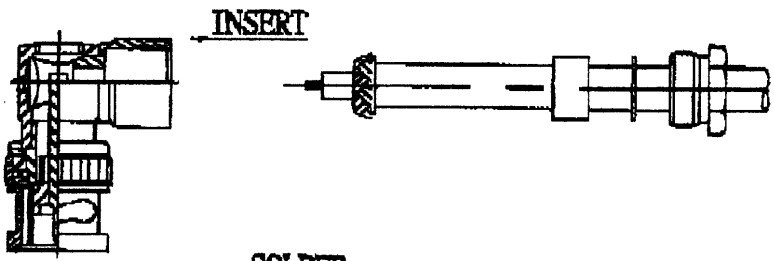

STEP 4

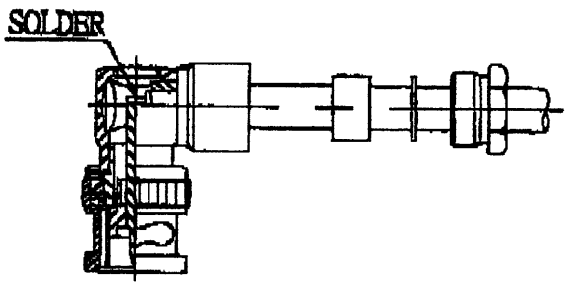



STEP 5

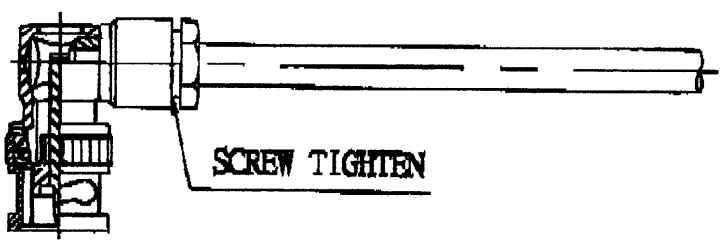

製圖	DRAWN	品名	R/A CLAMP TYPE	單位	MM	比例	SCALE	TOLERANCE	
	王金鈴	TITLE		UNIT			1:1		
認定	APPROVAL	編號	CM-11	版次	A-0	日期	DATE	.X	±0.5
		NO.		REV.			04.26.01'	.XX	±0.3

MAIN BODY



STEP 1



FORWARD SCREW IN PLACE

STEP 2

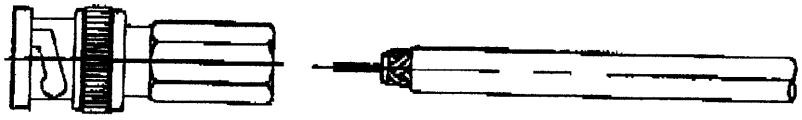

製圖	DRAWN	品名	ST. TWIST ON	單位	MM	比例	SCALE	TOLERANCE	
		TITLE		UNIT			1:1		
認定	APPROVAL	編號	CM-12	版次	A-0	日期	DATE	.X	±0.5
		NO.		REV.			04.26.01'	.XX	±0.3

MAIN BODY

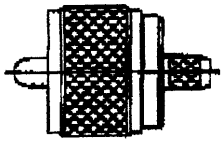

FERRULE



STEP 1



STEP 2

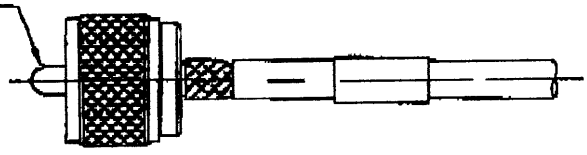

STEP 3

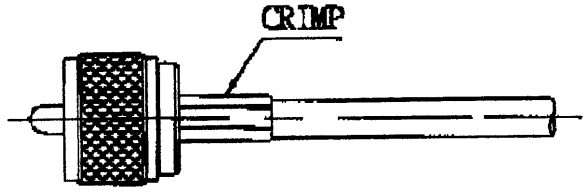

製圖	DRAWN 金金孝	品名 TITLE	ST. CRIMP TYPE	單位 UNIT	MM	比例	SCALE 1:1	TOLERANCE	
認定	APPROVAL	編號 NO.	CM-14	版次 REV.	A-0	日期	DATE 04.26.01'	.X	±0.5
								.XX	±0.3