

Models 7041

BNC (M) Crimp 179,179B,187,187A,188,188A,316



Model 7041 BNC (M) Crimp 50 Ω

Use for your 50 Ω coax cable assembly applications.

Features


- Designed for common cables (see table on page 2 for cable types and crimp die information)
- Precision machined
- Gold plated (15 micro-inches) contacts
- Insulation material is PTFE (**not delrin**)

Materials

- Body is machined brass with tarnish resistant nickel plating.
- Male center pin contacts are gold-plated (15 micro-inches) brass
- High quality machined PTFE dielectric.

Ordering Information

Model: 7041, BNC (M) Crimp 179, 179B, 187, 187A, 188, 188A, 316 50 Ω

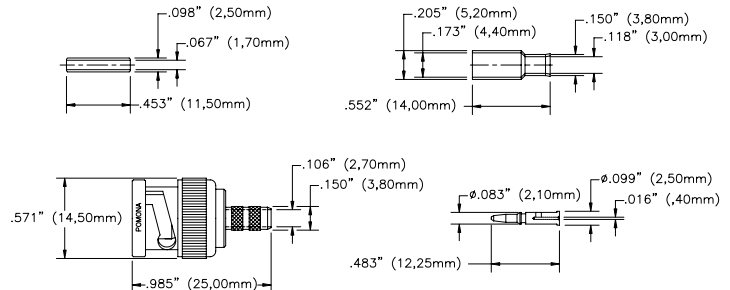

See page 2 for cable type, crimp information and cable assembly instructions.

Specifications

Nominal impedance	50 Ω
Frequency	0-4 GHz
VSWR	1.30 max. 0-4 GHz
Center / Outer contact resistance	1.5 / 1.0 mΩ
Number of insertions	500
Insulation resistance	5000 MΩ (min)
Dielectric withstand voltage	1500 Vrms
Ratings: Voltage: 500 Vrms Operating temperature: -85 °F to +131 °F (-65 °C to +155 °C) Max.	

USA: Sales: 800-490-2361 Technical Support: 800-241-2060 Fax: 888-403-3360

Europe: 31-(0) 40 2675 150 International: 425-446-5500

e-mail: technicalsupport@pomonatest.com

Where to Buy: www.pomonaelectronics.com

All dimensions are in inches. Tolerances (except noted): .xx = ±.02" (.51 mm), .xxx = ±.005" (.127 mm). All specifications are to the latest revisions. Specifications are subject to change without notice. Registered trademarks are the property of their respective companies.

Models 7041

BNC (M) Crimp 179,179B,187,187A,188,188A,316

Cable Type and Crimp Die Sizes

Connector Model #	Cable Groups	Crimp Die set* Size (Hex/Pin)
7042	RG179, 179B, 187, 187A, 188, 188A, 316	Model 7279 (.178 / .068)

*For use with Pomona Crimp Tool Model 7277

Cable Assembly Instructions


1. CUT CABLE END EVENLY AND PERPENDICULAR



2. SLIDE OUTER FERRULE OVER CABLE END.




3. STRIP CABLE JACKET, BRAID, AND DIELECTRIC TO SPECIFICATION LENGTHS. (NOTE: FOIL AND BRAID CABLES SHOULD LEAVE FOIL TO END OF DIELECTRIC).



RECOMMENDED STRIP LENGTHS FOR MODEL 7041


4. FRAY BRAID AND SLIDE THE INSULATOR ONTO DIELECTRIC AS SHOWN.

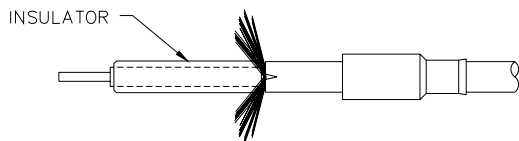


5. INSERT CONTACT PIN ONTO CABLE'S CENTER CONDUCTOR SO THAT IT IS FLUSH TO DIELECTRIC, CRIMP OR SOLDER CONTACT FIRMLY.




6. INSERT PIN-END INTO CONNECTOR BODY AND PUSH UNTIL IT CLICKS INTO PLACE.



7. SLIDE OUTER FERRULE OVER BRAID AND UP AGAINST BODY ASSEMBLY.



8. CRIMP OUTER FERRULE WITH APPROPRIATE CRIMP TOOL.



USA: Sales: 800-490-2361 Technical Support: 800-241-2060 Fax: 888-403-3360

Europe: 31-(0) 40 2675 150 International: 425-446-5500

e-mail: technicalsupport@pomonatest.com

Where to Buy: www.pomonaelectronics.com

All dimensions are in inches. Tolerances (except noted): .xx = $\pm .02$ " (.51 mm), .xxx = $\pm .005$ " (.127 mm). All specifications are to the latest revisions. Specifications are subject to change without notice. Registered trademarks are the property of their respective companies.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Pomona:

7041