


PO51 PO72 SERIES RF CO-AXIAL CONNECTORS

PCN10F series co-axial connectors

Scope

The PO51, PO72 series has been developed for the PCB multipole connector PCN10F series (DIN41612, M style).

It is the plug in type of co-axial connectors in correspondence to the DIN47297 nominal impedance 50 Ω (PO51), 75 Ω (PO72).

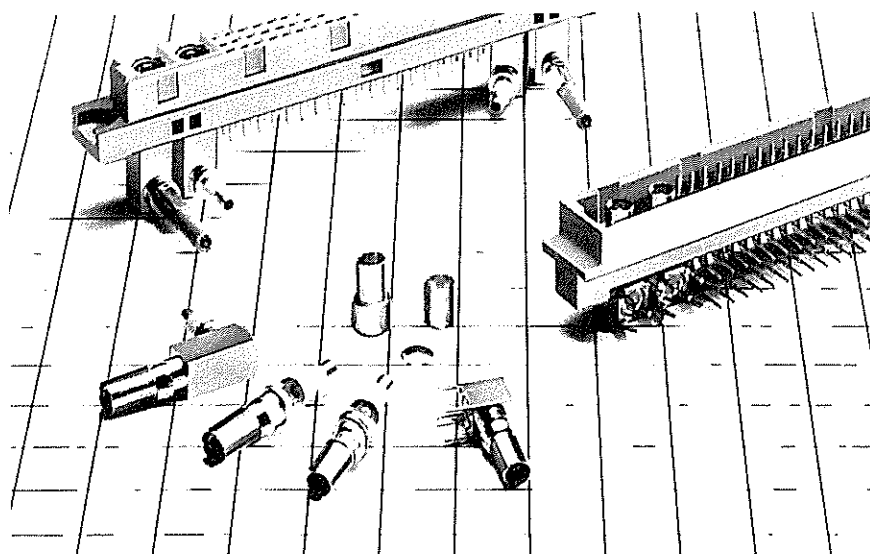

Features

- (1) In combination with PCN10F series composite connector, offers high density in applying to various electronic equipment.
- (2) The plug in type assures easy and quick connecting and disconnecting.

Applications

Communication equipment, transmission equipment, measuring instruments, etc.

Specifications

| Item | Specification | |
|---------------------------|-----------------------------------------------------------------------|-------------|
| | PO51 | PO72 |
| Part No. | PO51 | PO72 |
| Impedance characteristics | 50 Ω | 75 Ω |
| Insulation resistance | DC 500 V/1000 M Ω min. | |
| Contact resistance | Center 6 (7) m Ω max. Outer 3 (4) m Ω max. at DC 1 A | |
| Withstand voltage | AC 750 V for a minute | |
| V. S. W. R. | 10 MHz — 1 GHz under 1.2 | |

Note: Value of () shown PO51-LP-Pc-A and PO72-LR-PC-A.



PO51 PO72 SERIES RF CO-AXIAL CONNECTORS

Information

For PCN10F- S-2.54



▲ Plug

| HRS No. | Part No. | Applicable cable |
|-----------------|--------------------|------------------|
| CL330-0004-8-40 | PO51-P-1.5-1A(40) | 1.5D-2V |
| CL330-0152-5-40 | PO72-P-1.5C-1A(40) | 1.5C-2V |

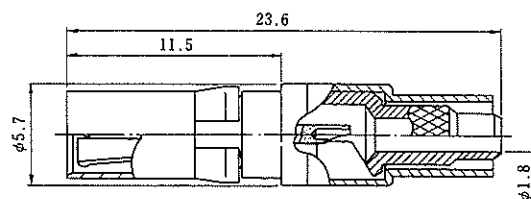
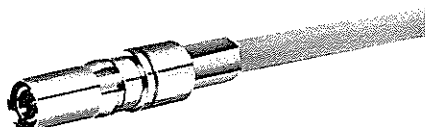


▲ L-type plug

| HRS No. | Part No. | Applicable cable |
|-----------------|--------------------|------------------|
| CL330-0007-6-40 | PO51-LP-1.5-A(40) | 1.5D-2V |
| CL330-0162-9-40 | PO72-LP-1.5C-A(40) | 1.5C-2V |

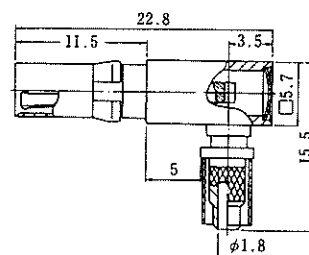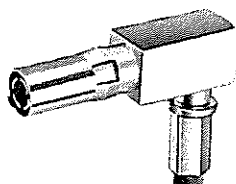




| HRS No. | Part No. | Applicable cable |
|-----------------|---------------------|------------------|
| CL330-0160-3-40 | PO72-LP-1.5C-1A(40) | 1.5C-2V |

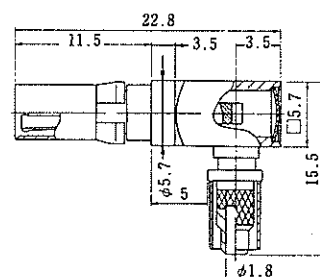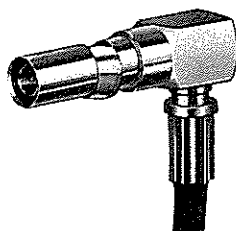

For PCN10FA- S-2.54

▲ Plug receptacle (for PCB mounting type)

| HRS No. | Part No. | Impedance characteristic |
|-----------------|------------------|--------------------------|
| CL330-0032-3-40 | PO51-PR-PC-A(40) | 50Ω |

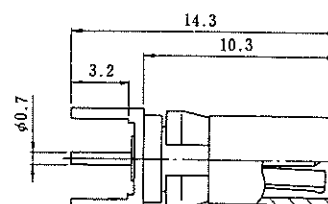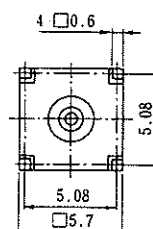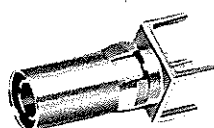


PO51 PO72 SERIES RF CO-AXIAL CONNECTORS


For PCN10F- P-254D

▲ L-type receptacle (PCB mounting type)


| HRS No. | Part No. | Impedance characteristic |
|-----------------|------------------|--------------------------|
| CL330-0017-0-40 | PO51-LR-PC-1(40) | 50Ω |
| CL330-0166-0-40 | PO72-LR-PC-1(40) | 75Ω |

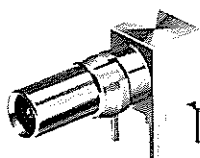


* Receptacle for PCN10F-
P254DS

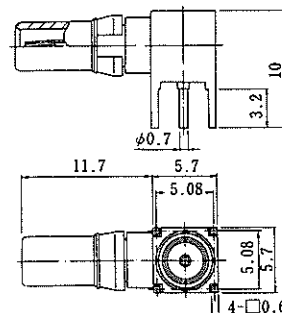

| HRS No. | Part No. | Impedance characteristic |
|-----------------|------------------|--------------------------|
| CL330-0018-2-40 | PO51-LR-PC-A(40) | 50Ω |
| CL330-0168-5-40 | PO72-LR-PC-A(40) | 75Ω |

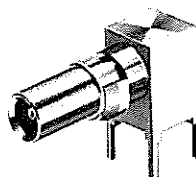



* Receptacle for PCN10FA-
P-254DS

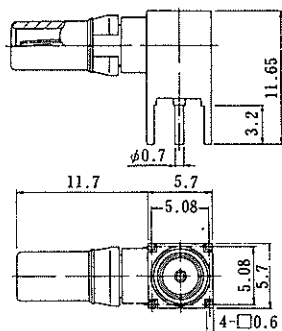

For PCN10F P-2.54DS

▲ Jack

| HRS No. | Part No. | Applicable cable |
|-----------------|-------------------|------------------|
| CL330-0253-2-40 | PO51-J-1.5-B(40) | 1.5D-2V |
| CL330-0248-2-40 | PO72-J-1.5C-A(40) | 1.5C-2V |

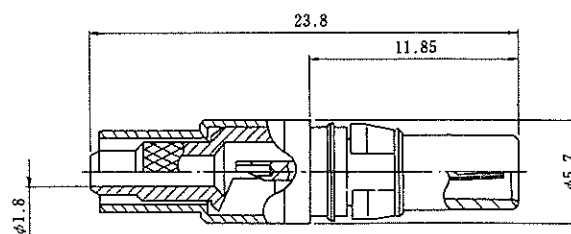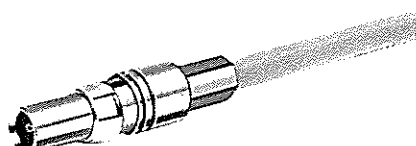


PO51 PO72 SERIES RF CO-AXIAL CONNECTORS


Extraction tools

For PO51·PO72 plug

PO51P-T-1
CL350-0037-1

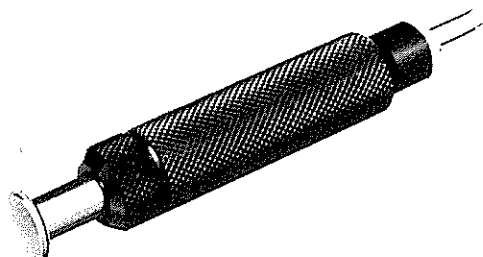


PO51P-T-1S
CL350-0039-7
Sleeve for exchange

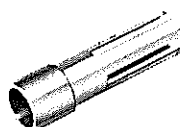

For PO51·PO72 jack

PO51J-T-1
CL350-0038-4

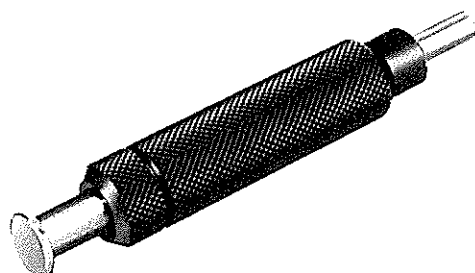


PO51J-T-1S
CL350-0040-6
Sleeve for exchange




PO51 PO72 SERIES RF CO-AXIAL CONNECTORS

Backboard dimensions


PO51-LR-PC-1、PO51-LR-PC-A、PO51-PR-PC-A、PO72-LR-PC-1、PO72-LR-PC-A

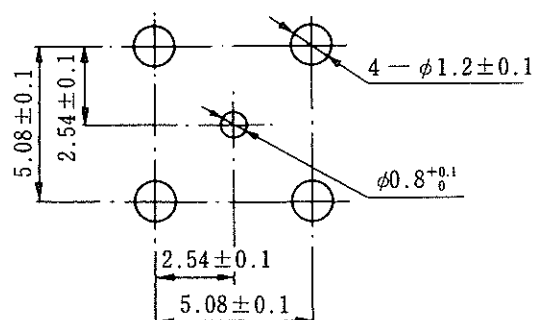

PO51-P-1.5-1A
PO72-P-1.5C-1A
PO72-LP-1.5C-1A

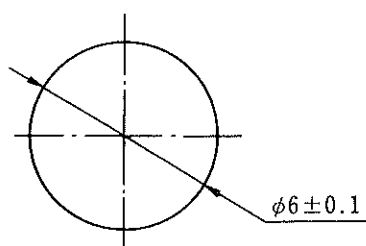





PO51-LP-1.5-A
PO72-LP-1.5C-A

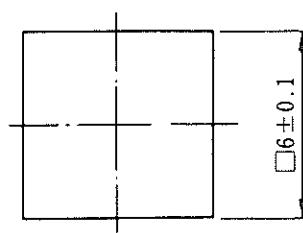

PO51 PO72 SERIES RF CO-AXIAL CONNECTORS




Terminating method

1. PO51-LP-1.5-A, PO72-LP-1.5C-A, PO72-LP-1.5C-1A
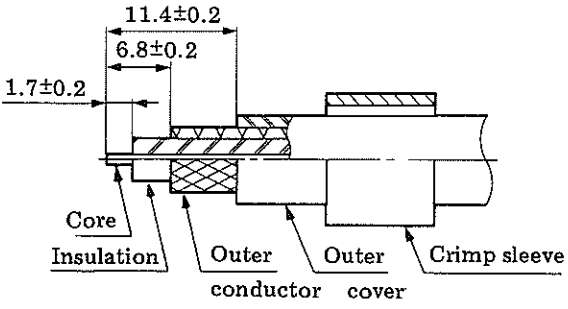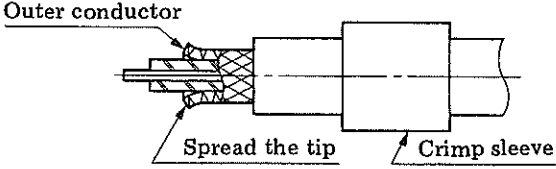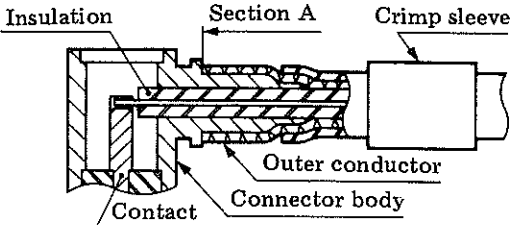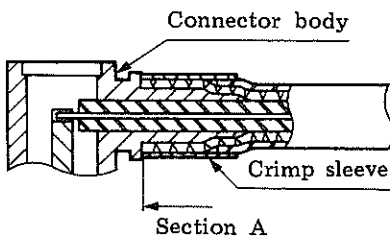
| No. | Work drawing | Description |
|-----|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 |  | <p>(1) Terminate the cable to the dimensions shown in the figure using care not to cut the components such as core, insulation, and outer conductor.</p> <p>(2) Fit the crimp sleeve to the cable as shown in the figure. Check for the direction of the sleeve.</p> |
| 2 |  | <p>(1) Spread the tip of the outer conductor as shown in the figure.</p> |
| 3 |  | <p>(1) Push the cable end into the connector body until the tip of the outer conductor touches section A or the insulation contacts the contact.</p> |
| 4 |  | <p>(1) Insert the crimp sleeve until it contacts section A as shown in the figure.</p> |

PO51 PO72 SERIES

RF CO-AXIAL CONNECTORS


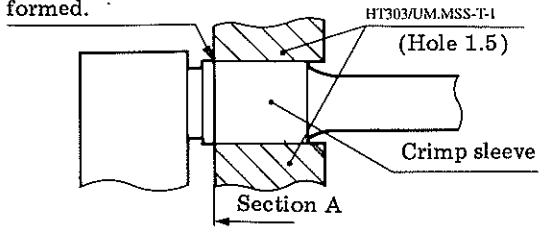
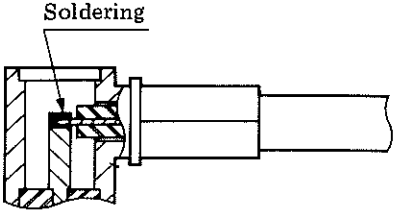
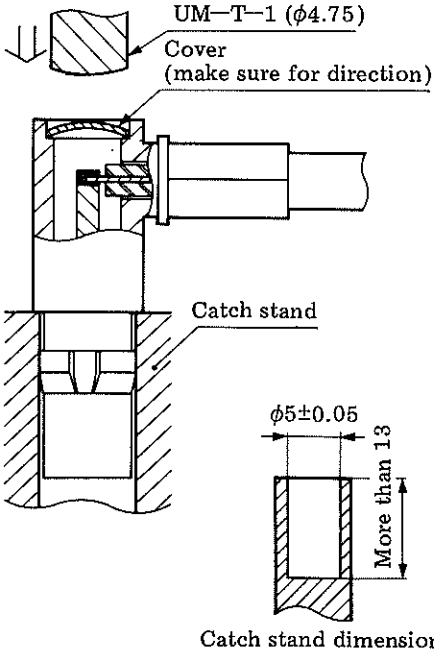
| No. | Work drawing | Description |
|-----|--------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5 | <p>Be careful not to allow a gap to be formed.</p>  | <p>(1) As shown in the figure, caulk the crimp sleeve to the cable end with a 1.5 hexagonal hole (smallest hole) in the crimping tool HT303/UM.MSS-T-1. During caulking, use care not to allow a gap to be formed between the crimping tool and section A.</p> |
| 6 |  | <p>(2) Solder the core. Avoid butt soldering. Also, prevent solder from adhering to the outer surface of the male contact. After soldering, clean the inside of the connectors using thinner and air to prevent faulty insulation and withstand voltage.</p> |
| 7 |  | <p>(1) Fit the cover in the direction as shown in the Figure, and press it until it becomes flat with the UM-T-1 (φ4.75) using a drill press.</p> |

PO51 PO72 SERIES

RF CO-AXIAL CONNECTORS

Terminating method

1. PO51-P-1.5-1A, PO51-J-1.5, PO72-P-1.5C-1A, PO72-J-1.5C
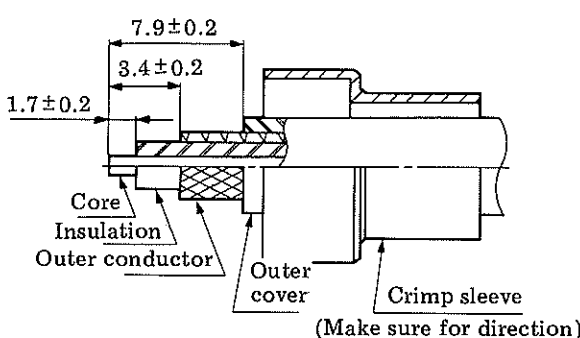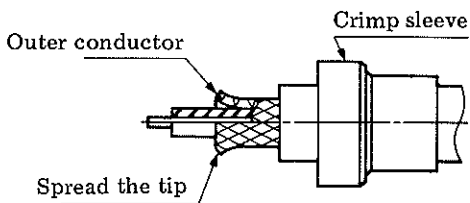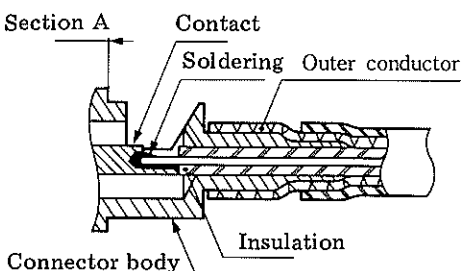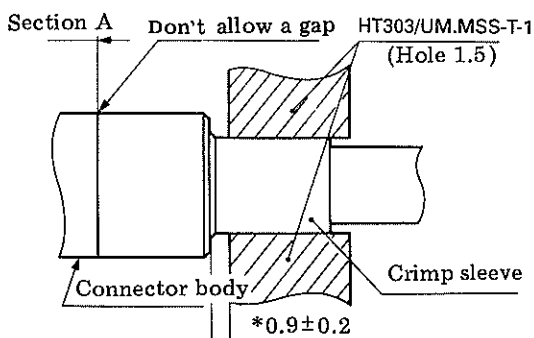
| No. | Work drawing | Description |
|-----|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 |  | <p>(1) Terminate the cable to the dimensions shown in the figure using care not to cut the components such as core, insulation, and outer conductor.</p> <p>(2) Fit the crimp sleeve to the cable as shown in the figure. Check for the direction of the sleeve.</p> |
| 2 |  | <p>(1) Spread the tip of the outer conductor as shown in the figure.</p> |
| 3 |  | <p>(1) Push the cable end into the connector body until the tip of the insulation touches the contact as shown in the figure.</p> <p>(2) Solder the core. Avoid butt soldering. After soldering, clean the inside of the connector using thinner and air to prevent faulty insulation and withstand voltage.</p> |
| 4 |  | <p>(1) As shown in the figure, caulk the crimp sleeve at the small end with the 1.5 hexagonal hole (smallest hole) in the crimping tool HT303/UM.MSS-T-1. No gap is allowed at section A where the connector body fits into the crimp sleeve.</p> <p>Note: Strictly follow the dimension marked with * (0.9 ± 0.2).</p> |

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Hirose Electric:](#)

[PO51J-T-1](#) [PO51P-T-1](#)