Digital PWM Current-Mode Controller for Quasi-Resonant Operation



1.0 Features

- Primary-side feedback eliminates opto-isolators and simplifies design
- Quasi-resonant operation for highest overall efficiency
- **EZ-EMI** ® design to easily meet global EMI standards
- Up to 130 kHz switching frequency enables small adapter size
- Built-in cable drop compensation
- Very tight output voltage regulation
- No external compensation components required
- Complies with CEC/EPA no-load power consumption and average efficiency regulations
- Built-in output constant-current control with primary-side feedback
- Low start-up current (10 µA typical)
- Built-in soft start
- Built-in short circuit protection and output overvoltage protection
- Optional AC line under/overvoltage protection
- · PFM operation at light load
- Current sense resistor short protection
- Overtemperature Protection

2.0 Description

The iW1691 is a high performance AC/DC power supply controller which uses digital control technology to build peak current mode PWM flyback power supplies. The device operates in quasi-resonant mode at heavy load to provide high efficiency along with a number of key built-in protection features while minimizing the external component count, simplifying EMI design and lowering the total bill of material cost. The iW1691 removes the need for secondary feedback circuitry while achieving excellent line and load regulation. It also eliminates the need for loop compensation components while maintaining stability over all operating conditions. Pulse-by-pulse waveform analysis allows for a loop response that is much faster than traditional solutions, resulting in improved dynamic load response. The built-in current limit function enables optimized transformer design in universal off-line applications over a wide input voltage range.

The ultra-low operating current at light load ensures that the iW1691 is ideal for applications targeting the newest regulatory standards for average efficiency and standby power.

3.0 Applications

- AC/DC adapter/chargers for cell phones, PDAs, digital still cameras
- AC/DC adapters for consumer electronics


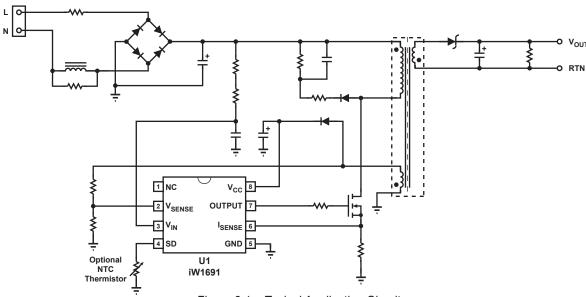


Figure 3.1: Typical Application Circuit

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



4.0 Pinout Description

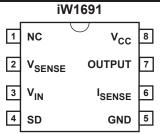

| Pin# | Name | Туре | Pin Description |
|------|--------------------|--------------|--|
| 1 | NC | - | No connection. |
| 2 | V _{SENSE} | Analog Input | Auxiliary voltage sense (used for primary side regulation). |
| 3 | V _{IN} | Analog Input | Rectified AC line average voltage sense. |
| 4 | SD | Analog Input | External shutdown control. Connect to ground through a resistor if not used. (see section 10.16) |
| 5 | GND | Ground | Ground. |
| 6 | SENSE | Analog Input | Primary current sense (used for cycle-by-cycle peak current control and limit). |
| 7 | OUTPUT | Output | Gate drive for external MOSFET switch. |
| 8 | V_{cc} | Power Input | Power supply for control logic and voltage sense for power-on reset circuitry. |

5.0 Absolute Maximum Ratings

Absolute maximum ratings are the parameter values or ranges which can cause permanent damage if exceeded. For maximum safe operating conditions, refer to Electrical Characteristics in Section 6.0.

| Parameter | Symbol | Value | Units |
|---|--------------------|-------------|-------|
| DC supply voltage range (pin 8, I _{CC} = 20mA max) | V _{CC} | -0.3 to 18 | V |
| DC supply current at V _{CC} pin | I _{cc} | 20 | mA |
| Output (pin 7) | | -0.3 to 18 | V |
| V _{SENSE} input (pin 2, I _{∨sense} ≤ 10 mA) | | -0.7 to 4.0 | V |
| V _{IN} input (pin 3) | | -0.3 to 18 | V |
| I _{SENSE} input (pin 6) | | -0.3 to 4.0 | V |
| SD input (pin 4) | | -0.3 to 18 | V |
| Power dissipation at T _A ≤ 25°C | P _D | 526 | mW |
| Maximum junction temperature | T _{J MAX} | 125 | °C |
| Storage temperature | T _{STG} | -65 to 150 | °C |
| Lead temperature during IR reflow for ≤ 15 seconds | T _{LEAD} | 260 | °C |
| Thermal Resistance Junction-to-Ambient | θ_{JA} | 160 | °C/W |
| ESD rating per JEDEC JESD22-A114 | | 2,000 | V |
| Latch-Up test per JEDEC 78 | | ±100 | mA |

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



6.0 Electrical Characteristics

 $V_{\rm CC}$ = 12 V, -40°C ≤ $T_{\rm A}$ ≤ 85°C, unless otherwise specified (Note 1)

| Parameter | Symbol | Test Conditions | Min | Тур | Max | Unit |
|---|-------------------------|--|-------|-------|-------|------|
| V _{IN} SECTION (Pin 3) | | | | | | |
| Start-up low voltage threshold | V _{INSTLOW} | T _A = 25°C, positive edge | 335 | 369 | 406 | mV |
| Start-up current | I _{INST} | $V_{IN} = 10 \text{ V}, C_{VCC} = 10 \mu\text{F}$ | | 10 | 15 | μA |
| Shutdown low voltage threshold | V _{UVDC} | T _A = 25°C, negative edge | 201 | 221 | 243 | mV |
| Input impedance | Z _{IN} | After start-up | | 25 | | kΩ |
| V _{SENSE} SECTION (Pin 2) | | | | | | |
| Input leakage current | I _{BVS} | V _{SENSE} = 2 V | | | 1 | μA |
| Nominal voltage threshold | V _{SENSE(NOM)} | T _A =25°C, negative edge | 1.523 | 1.538 | 1.553 | V |
| Output OVP threshold - 00, -01, -03 (Note 2) | V _{SENSE(MAX)} | T _A =25°C, negative edge | 1.754 | 1.846 | 1.938 | V |
| OUTPUT OVP threshold -09 (Note 2) | V _{SENSE(MAX)} | T _A =25°C, negative edge | 1.797 | 1.892 | 1.987 | V |
| Output OVP threshold -04, -08 (Note 2) | V _{SENSE(MAX)} | T_A =25°C, negative edge, Load = 100% | 1.836 | 1.933 | 2.030 | V |
| Output OVP threshold -10 (Note 2) | V _{SENSE(MAX)} | T_A =25°C, negative edge, Load = 100% | 1.871 | 1.969 | 2.067 | V |
| OUTPUT SECTION (Pin 7) | | | | | | |
| Output low level ON-resistance | R _{DS(ON)LO} | I _{SINK} = 5 mA | | 40 | | Ω |
| Output high level ON-resistance | R _{DS(ON)HP} | I _{SOURCE} = 5 mA | | 175 | | Ω |
| Rise time (Note 2) | t _R | T _A = 25°C, C _L = 330 pF 10% to 90% | | 200 | 300 | ns |
| Fall time (Note 2) | t _F | T _A = 25°C, C _L = 330 pF 90% to 10% | | 40 | 60 | ns |
| Maximum switching frequency -00, -01, -03, -04, -08, -09,-10 (Note 3) | f _{SW(MAX)} | Any combination of line and load | | 130 | 140 | kHz |

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



6.0 Electrical Characteristics (cont.)

 V_{CC} = 12 V, -40°C $\leq T_{\Delta} \leq 85$ °C, unless otherwise specified (Note 1)

| Parameter | Symbol | Test Conditions | Min | Тур | Max | Unit |
|--|------------------------|--|-------|------|-------|------|
| V _{cc} SECTION (Pin 8) | | | | | | |
| Maximum operating voltage (Note 2) | V _{CC(MAX)} | | | | 16 | V |
| Start-up threshold | V _{CC(ST)} | V _{cc} rising | 10.8 | 12 | 13.2 | V |
| Undervoltage lockout threshold | V _{CC(UVL)} | V _{cc} falling | 5.5 | 6.0 | 6.6 | V |
| Operating current | I _{CCQ} | C _L = 330 pF, V _{SENSE} = 1.5 V | | 3.5 | 5 | mA |
| I _{SENSE} SECTION (Pin 6) | | | | | | |
| Peak limit threshold | V _{PEAK} | | 1.045 | 1.1 | 1.155 | V |
| Isense short protection reference | V _{RSNS} | | 0.127 | 0.15 | 0.173 | V |
| CC regulation threshold limit (Note 2) | V _{REG-TH} | | | 1.0 | | V |
| SD SECTION (Pin 4) | | | | | | |
| Shutdown threshold | V _{SD-TH} | T _A = 25°C | 0.95 | 1.0 | 1.05 | V |
| Shutdown threshold in Startup (Note 2) | V _{SD-TH(ST)} | | | 1.2 | | V |
| Input leakage current | I _{BVSD} | V _{SD} = 1.0 V | | | 1 | μA |
| Pull down resistance | R _{SD} | T _A = 25°C | 7916 | 8333 | 8750 | Ω |

Notes:

- Note 1. Adjust VCC above the start-up threshold before setting at 12 V.
- Note 2. Guaranteed by design and characterization. Minimum output OVP threshold is specified for 100% load; for loads less than 100% the minimum output OVP threshold will be less.
- Note 3. Operating frequency varies based on the line and load conditions, see Theory of Operation for more details.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



7.0 Typical Performance Characteristics

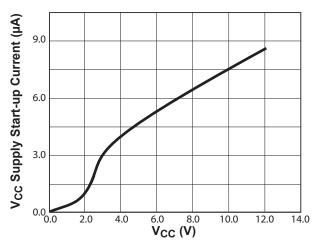


Figure 7.1 : V_{cc} vs. V_{cc} Supply Start-up Current

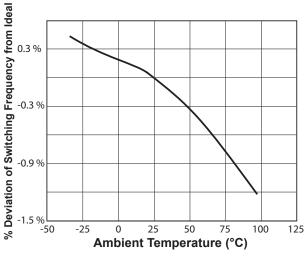


Figure 7.3: % Deviation of Switching Frequency to Ideal Switching Frequency vs. Temperature

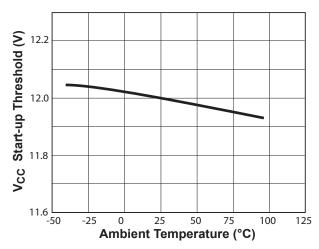


Figure 7.2: Start-Up Threshold vs. Temperature

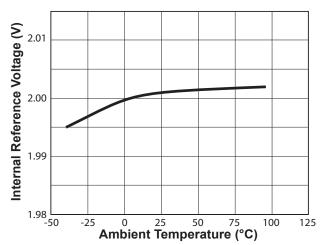


Figure 7.4: Internal Reference vs. Temperature

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



8.0 Functional Block Diagram

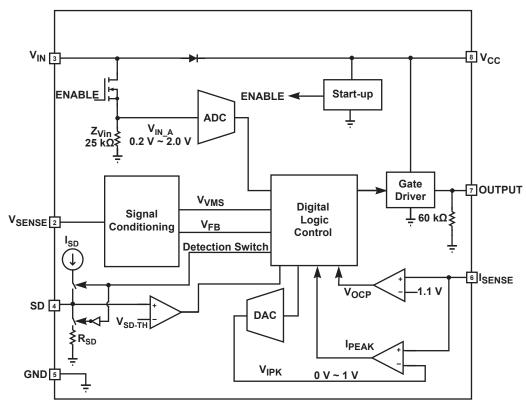


Figure 8.1: iW1691 Functional Block Diagram

9.0 Theory of Operation

The iW1691 is a digital controller which uses a proprietary primary-side control technology to eliminate the opto-isolated feedback and secondary regulation circuits required in traditional designs. This results in a low-cost solution for AC/DC adapters. The iW1691 uses Critical Discontinuous Conduction Mode (CDCM) or Pulse Width Modulation (PWM) mode at high output power levels and switches to Pulse Frequency Modulation (PFM) mode at light load to minimize power dissipation to meet EPA 2.0 specification. Furthermore, iWatt's digital control technology enables fast dynamic response, tight output regulation, and full featured circuit protection with primary-side control.

Referring to the block diagram in Figure 8.1, the digital logic control block generates the switching on-time and off-time information based on the line voltage and the output voltage feedback signal and provides commands to dynamically control the external MOSFET current. The system loop is compensated internally by a digital error amplifier. Adequate system phase and gain margin are guaranteed by design and no external analog components are required for loop compensation. The iW1691 uses an advanced digital

control algorithm to reduce system design time and improve reliability.

Furthermore, accurate secondary constant-current operation is achieved without the need for any secondary-side sense and control circuits.

The built-in protection features include overvoltage protection (OVP), output short circuit protection (SCP) and soft-start, AC line brown out, overcurrent protection, and Isense fault protection. Also the iW1691 automatically shuts down if it detects any of its sense pins to be either open or short.

iWatt's digital control scheme is specifically designed to address the challenges and trade-offs of power conversion design. This innovative technology is ideal for balancing new regulatory requirements for green mode operation with more practical design considerations such as lowest possible cost, smallest size and highest performance output control.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



9.1 Pin Detail

Pin 2 - V_{SENSE}

Sense signal input from auxiliary winding. This provides the secondary voltage feedback used for output regulation.

Pin 3 - V_{IN}

Sense signal input from the rectified line voltage. V_{IN} is used for line regulation. The input line voltage is scaled down using a resistor network. It is used for input undervoltage and overvoltage protection. This pin also provides the supply current to the IC during start-up.

Pin 4 - SD

External shutdown control. If the shutdown control is not used, this pin should be connected to GND via a resistor. (see Section 10.16).

Pin 5 - GND

Ground.

Pin 6 - I_{SENSE}

Primary current sense. Used for cycle by cycle peak current control.

Pin 7 - OUTPUT

Gate drive for the external MOSFET switch.

Pin 8 – V_{cc}

Power supply for the controller during normal operation. The controller will start up when $V_{\rm CC}$ reaches 12 V (typical) and will shut-down when the $V_{\rm CC}$ voltage is below 6 V (typical). A decoupling capacitor should be connected between the $V_{\rm CC}$ pin and GND.

9.2 Start-up

Prior to start-up the V_{IN} pin charges up the V_{CC} capacitor through the diode between V_{IN} and V_{CC} (see Figure 8.1).

When $V_{\rm CC}$ is fully charged to a voltage higher than the startup threshold $V_{\rm CC(ST)}$, the ENABLE signal becomes active and enables the control logic; the $V_{\rm IN}$ switch turns on, and the analog-to-digital converter begins to sense the input voltage. Once the voltage on the $V_{\rm IN}$ pin is above $V_{\rm INSTLOW}$, the iW1691 commences soft start function. An adaptive soft-start control algorithm is applied at startup state, during which the initial output pulses will be small and gradually get larger until the full pulse width is achieved. The peak current is limited cycle by cycle by Ipeak comparator.

If at any time the $V_{\rm CC}$ voltage drops below $V_{\rm CC(UVL)}$ threshold then all the digital logic is reset. At this time $V_{\rm IN}$ switch turns off so that the $V_{\rm CC}$ capacitor can be charged up again towards the start-up threshold.

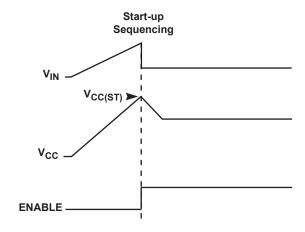


Figure 9.1 : Start-up Sequencing Diagram

9.3 Understanding Primary Feedback

Figure 9.2 illustrates a simplified flyback converter. When the switch Q1 conducts during $t_{\scriptscriptstyle ON}(t)$, the current $i_{\scriptscriptstyle g}(t)$ is directly drawn from rectified sinusoid $v_{\scriptscriptstyle g}(t)$. The energy $E_{\scriptscriptstyle g}(t)$ is stored in the magnetizing inductance $L_{\scriptscriptstyle M}$. The rectifying diode D1 is reverse biased and the load current $I_{\scriptscriptstyle O}$ is supplied by the secondary capacitor $C_{\scriptscriptstyle O}$. When Q1 turns off, D1 conducts and the stored energy $E_{\scriptscriptstyle g}(t)$ is delivered to the output.

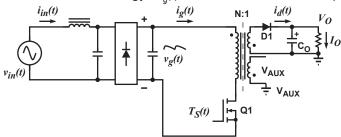


Figure 9.2: Simplified Flyback Converter

In order to tightly regulate the output voltage, the information about the output voltage and load current needs to be accurately sensed. In the DCM flyback converter, this information can be read via the auxiliary winding. During the Q_1 on-time, the load current is supplied from the output filter capacitor C_0 . The voltage across L_M is $v_g(t)$, assuming the voltage dropped across Q_1 is zero. The current in Q_1 ramps up linearly at a rate of:

$$\frac{di_g(t)}{dt} = \frac{v_g(t)}{L_M} \tag{9.1}$$

At the end of on-time, the current has ramped up to:

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



$$i_{g_peak}(t_{ON}) = \frac{v_g(t) \times t_{ON}}{L_M}$$
(9.2)

This current represents a stored energy of:

$$E_g = \frac{L_M}{2} \times i_{g_peak} (t_{ON})^2 \tag{9.3}$$

When Q_1 turns off, $i_g(t)$ in L_M forces a reversal of polarities on all windings. Ignoring the communication-time caused by the leakage inductance L_K at the instant of turn-off, the primary current transfers to the secondary at a peak amplitude of:

$$i_d(t) = \frac{N_P}{N_S} \times i_{g_peak}(t_{ON})$$
(9.4)

Assuming the secondary winding is master and the auxiliary winding is slave.

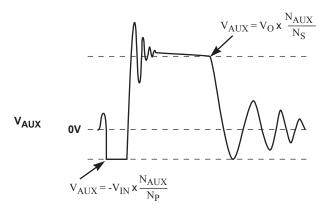


Figure 9.3: Auxiliary Voltage Waveforms

The auxiliary voltage is given by:

$$V_{AUX} = \frac{N_{AUX}}{N_S} (V_O + \Delta V) \tag{9.5}$$

and reflects the output voltage as shown in Figure 9.3.

The voltage at the load differs from the secondary voltage by a diode drop and IR losses. The diode drop is a function of current, as are IR losses. Thus, if the secondary voltage is always read at a constant secondary current, the difference between the output voltage and the secondary voltage will be a fixed ΔV . Furthermore, if the voltage can be read when the secondary current is small; for example, at the knee of the auxiliary waveform (see Figure 9.3), then ΔV will also be small. With the iW1691, ΔV can be ignored.

The real-time waveform analyzer in the iW1691 reads the auxiliary waveform information cycle by cycle. The part then generates a feedback voltage V_{FB} . The V_{FB} signal precisely

represents the output voltage and is used to regulate the output voltage.

9.4 Constant Voltage Operation

After soft-start has been completed, the digital control block measures the output conditions. It determines output power levels and adjusts the control system according to a light load or a heavy load. If this is in the normal range, the device operates in the Constant Voltage (CV) mode, and changes the pulse width (T_{ON}) , and off time (T_{OFF}) in order to meet the output voltage regulation requirements. During this mode the PWM switching frequency is between 30 kHz and 130 kHz, depending on the line and load conditions.

If less than 0.2 V is detected on V_{SENSE} it is assumed that the auxiliary winding of the transformer is either open or shorted and the iW1691 shuts down.

9.5 Valley Mode Switching

In order to reduce switching losses in the MOSFET and EMI, the iW1691 employs valley mode switching when I_{OUT} is above 50%. In valley mode switching, the MOSFET switch is turned on at the point where the resonant voltage across the drain and source of the MOSFET is at its lowest point (see Figure 9.4). By switching at the lowest V_{DS} , the switching loss will be minimized.

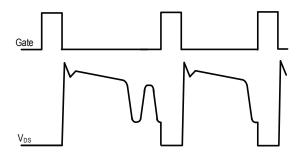


Figure 9.4: Valley Mode Switching

Turning on at the lowest $V_{\rm DS}$ generates lowest dV/dt, thus valley mode switching can also reduce EMI. To limit the switching frequency range, the iW1691 can skips valleys (seen in the first cycle in Figure 9.4) when the switching frequency becomes too high.

iW1691 provides valley mode switching during constant output current operation. So, the EMI and switching losses are still minimized during CC mode. This feature is superior to other quasi-resonant technologies which only support valley mode switching during constant voltage operation. This is beneficial to applications, such as chargers, where the power supply mainly operates in CC mode.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



9.6 Constant Current Operation

The constant current mode (CC mode) is useful in battery charging applications. During this mode of operation the iW1691 will regulate the output current at a constant level regardless of the output voltage, while avoiding continuous conduction mode.

To achieve this regulation the iW1691 senses the load current indirectly through the primary current. The primary current is detected by the I_{SENSE} pin through a resistor from the MOSFET source to ground.

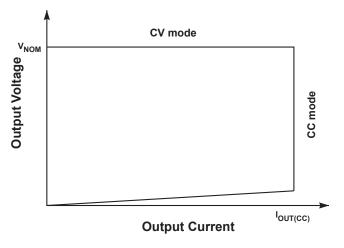


Figure 9.5: Power Envelope

9.7 PFM Mode at Light Load

The iW1691 normally operates in a fixed frequency PWM or critical discontinuous conduction mode when I_{OUT} is greater than approximately 10% of the specified maximum load current. As the output load I_{OUT} is reduced, the on-time t_{ON} is decreased. At the moment that the load current drops below 10% of nominal, the controller transitions to Pulse Frequency Modulation (PFM) mode. Thereafter, the on-time will be modulated by the line voltage and the off-time is modulated by the load current. The device automatically returns to PWM mode when the load current increases.

9.8 Variable Frequency Operation

At each of the switching cycles, the falling edge of V_SENSE will be checked. If the falling edge of V_SENSE is not detected, the off-time will be extended until the falling edge of V_SENSE is detected. The maximum allowed transformer reset time is 75 $\mu s.$ When the transformer reset time reaches 75 $\mu s.$ the iW1691 immediately shuts off.

9.9 Internal Loop Compensation

The iW1691 incorporates an internal Digital Error Amplifier with no requirement for external loop compensation. For a typical power supply design, the loop stability is guaranteed to provide at least 45 degrees of phase margin and –20dB of gain margin.

9.10 Voltage Protection Functions

The iW1691 includes functions that protect against input line undervoltage (UV) and the output overvoltage (OVP).

The input voltage is monitored by the $V_{\rm IN}$ pin and the output voltage is monitored by the $V_{\rm SENSE}$ pin. If the voltage at these pins exceed their respective undervoltage or overvoltage thresholds the iW1691 shuts down immediately. However, the IC remains biased which discharges the $V_{\rm CC}$ supply. Once $V_{\rm CC}$ drops below the UVLO threshold, the controller resets itself and then initiates a new soft-start cycle. The controller continues attempting start-up until the fault condition is removed.

9.11 PCL, OC and SRS Protection

Peak-current limit (PCL), over-current protection (OCP) and sense-resistor short protection (SRSP) are features built-into the iW1691. With the $\rm I_{\rm SENSE}$ pin the iW1691 is able to monitor the primary peak current. This allows for cycle by cycle peak current control and limit. When the primary peak current multiplied by the $\rm I_{\rm SENSE}$ sense resistor is greater than 1.1 V over current is detected and the IC will immediately turn off the gate drive until the next cycle. The output driver will send out switching pulse in the next cycle, and the switching pulse will continue if the OCP threshold is not reached; or, the switching pulse will turn off again if the OCP threshold is still reached.

If the I_{SENSE} sense resistor is shorted there is a potential danger of the over current condition not being detected. Thus the IC is designed to detect this sense-resistor-short fault after the start up, and shutdown immediately. The V_{CC} will be discharged since the IC remains biased. Once V_{CC} drops below the UVLO threshold, the controller resets itself and then initiates a new soft-start cycle. The controller continues attempting start-up, but does not fully start-up until the fault condition is removed.

9.12 Shutdown

The shutdown (SD) pin in the iW1691 provides protection against overtemperature (OTP) and additional overvoltage (OVP) for the power supply.

The SD pin alternates between monitoring overtemperature and over voltage conditions. During the overtemperature monitor cycle the IC outputs a constant current, $I_{\rm SD}$, to the

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



SD pin and it shuts down the device if the voltage at the SD pin is under 1 V. During the overvoltage monitor cycle the SD pin is tied to ground via $\rm R_{SD}$, and shutsdown the device if the voltage at the SD pin is above 1 V. Both overtemperature and overvoltage protection can be latched by the iW1691, whereby the iW1691 does not attempt to start again until after the power supply is unplugged for a few seconds and then is reconnected (i.e. the $\rm V_{CC}$ voltage needs to be 1 V below $\rm V_{CC(UVL)}$ to release the latch).

9.13 Cable Drop Compensation

The iW1691 incorporates an innovative method to compensate for any IR drop in the secondary circuitry including cable and cable connector. A 5 W AC adapter with 5 V DC output has 6% deviation at 1 A load current due to the drop across a 24 AWG, 1.8 m DC cable without cable compensation. The iW1691 compensates for this voltage drop by providing a voltage offset to the feedback signal based on the amount of load current detected.

To calculate the amount of cable compensation needed, take the resistance of the cable and connector and multiply by the maximum output current.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



10.0 Design Example

10.1 Design Procedure

This design example gives the procedure for a flyback converter using iW1691. Refer to Figure 13.1 for the application circuit. The design objectives for this adapter are given in table 10.1. It meets UL, IEC, and CEC requirements.

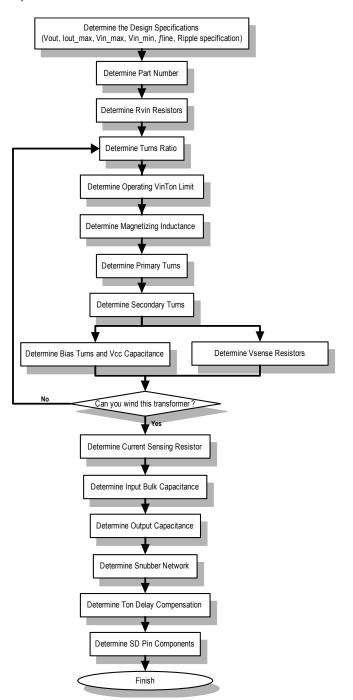


Figure 10.1: iW1691 Design Flow Chart

| Parameter | Symbol | Range | | |
|----------------|-------------------------|---------------------------|--|--|
| Input Voltage | V _{IN} | 85 - 264 V _{RMS} | | |
| Frequency | f _{IN} | 47 - 64 Hz | | |
| No Load Input | P _{IN} | 100 mW | | |
| Output Voltage | V _{OUT(Cable)} | 5.0 V | | |
| Output Current | I _{OUT} | 1 A | | |
| Output Ripple | V_{RIPPLE} | < 100 mV | | |
| Power Out | P _{out} | 5 W | | |
| CEC Efficiency | η | 69% | | |

Table 10.1: iW1691 Design Specification Table

10.2 Determine Part Number

Based on design specifications, choose the most suitable part for the design. For more information on the options see section 11.0.

Cable Drop Compensation

Cable Drop Compensation is an optional feature for the iW1691. This option helps maintain the output voltage at the end of the cable that the power supply is designed for. During CV (constant voltage) mode the output current changes as the voltage remains constant. This is true for the output voltage at the output of the power supply board; however, in certain applications the device to be charged is not directly connected to the power supply, but rather, is connected via a cable. This cable is seen by the power supply as a resistance. So, as the output current increases the output voltage at the end of the cable begins to drop. With the cable compensation option, the iW1691 can compensate for the resistance of the cable by incrementally increasing the output voltage seen on the power supply board to cancel out the selected cable resistance.

To find the right cable compensation necessary for a given cable, pick the cable drop compensation number that is closest to the voltage drop of the cable under maximum output current.

Use equation 10.1 for $\rm V_{OUT}$ in the following calculations, where $\rm V_{FD}$ is the forward voltage of the output diode.

$$V_{OUT} = V_{OUT(Cable)} + V_{CableDrop} + V_{FD}$$
(10.1)

For this example there is no cable so $\rm V_{\rm CableDrop}$ is 0 V , assuming $\rm V_{\rm FD}$ is 0.5, $\rm V_{\rm OUT}$ is:

$$V_{OUT} = 5.0V + 0V + 0.5V = 5.5V$$

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



10.3 Input Selection

 $\rm V_{_{IN}}$ resistors are chosen primarily to scale down the input voltage for the IC. The default scale factor for the input voltage in the IC is 0.0043 and the internal impedance of this pin is $\rm Z_{_{IN}}$ (25 $\rm k\Omega)$. Therefore, the $\rm V_{_{IN}}$ resistors should equate to:

$$R_{Vin} = \frac{Z_{IN}}{0.0043} - Z_{IN} \tag{10.2}$$

From equation 10.2, ideally R_{Vin} should be 5.79 $M\Omega$. A lower value of R_{Vin} can decrease the startup time of the power supply. The value of R_{Vin} affects the $(V_{\text{IN}}T_{\text{ON}})$ limits of the IC.

$$(V_{IN} \cdot T_{ON})_{\text{limit}} = 0.0043 \times \frac{720V \cdot \mu s}{Z_{IN} / (R_{Vin} + Z_{IN})}$$

$$(10.3)$$

$$(V_{IN} \cdot T_{ON})_{PFM} = 0.0043 \times \frac{135V \cdot \mu s}{Z_{IN}/(R_{Vin} + Z_{IN})}$$
(10.4)

For this example R_{Vin} is chosen to be 5.1 M Ω therefore,

$$(V_{IN} \cdot T_{ON})_{\text{limit}} = 0.0043 \times \frac{720V \cdot \mu s}{25k\Omega / (5.1M\Omega + 25k\Omega)} = 635V \cdot \mu s$$

$$(V_{IN} \cdot T_{ON})_{PFM} = 0.0043 \times \frac{135V \cdot \mu s}{25k\Omega/(5.1M\Omega + 25k\Omega)} = 119V \cdot \mu s$$

Keep in mind, by changing $R_{\text{\tiny Vin}}$ to be something other than 5.79 $\text{M}\Omega$ the minimum and maximum input voltage for startup also changes.

Since the iW1691 uses the exact scaled value of $V_{\rm IN}$ for its calculations, there should be a filter capacitor on the input pin to filter out any noise that may appear on the $V_{\rm IN}$ signal. This is especially important for line in surge conditions.

10.4 Turns Ratio

The maximum allowable turns ratio between the primary and secondary winding is determined by the minimum detectable reset time of the transformer during PFM mode.

$$N_{TR(\text{max})} = \frac{\left(V_{IN} \cdot T_{ON}\right)_{PFM}}{T_{RESET(\text{min})} \times V_{OUT}}$$
(10.5)

Setting T_{RESET(min)} at 1.5 μs,

$$N_{TR(\text{max})} = \frac{119V \cdot \mu s}{1.5\mu s \times 5.5V} = 14.4$$

A turns ratio between 11 to 15 is suggested for optimal performance. So for this example 13.8 is chosen.

Keep in mind in valley mode switching the higher the turns ratio the lower the $V_{\rm DS}$ turn-on voltage, which means less switch turn-on power loss. Also consider the voltage stress on the MOSFET ($V_{\rm DS}$) is higher with an increase in turns ratio. The voltage stress on the output diode is lower with an increase in turns ratio respectively.

10.5 Operating Maximum (V_{IN}T_{ON})

Maximum operating $V_{\text{IN}}T_{\text{ON}}$ or $(V_{\text{IN}}T_{\text{ON}})_{\text{MAX}}$ for valley mode switching is traditionally designed at full load and lowest input voltage. For the iW1691, two constraints (equation 10.6 and 10.7) need to be satisfied so that indeed $(V_{\text{IN}}T_{\text{ON}})_{\text{MAX}}$ occurs at full load and lowest input voltage.

$$T_{P(QR\min)} > \frac{1}{100kHz} \tag{10.6}$$

$$T_{P(QR\,\text{min})} > \frac{1}{110kHz} + T_{RES}$$
 (10.7)

 T_{RES} is the V_{DS} resonant period as shown in Figure 10.2. T_{RES} can be estimated to be approximately 2 μ s as a starting point and then adjusted after the power supply is made.

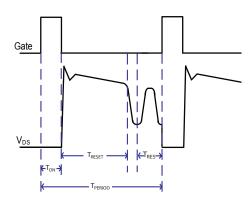


Figure 10.2 : V_{DS} Timing

When both criterion are met then $(V_{IN}T_{ON})_{MAX}$ can be determined by equation 10.8.

$$(V_{IN} \cdot T_{ON})_{\text{max}} = \left[f_{SW(\text{max op})} \times \left(\frac{1}{V_{INDC(\text{min})}} + \frac{1}{N_{TR} \times V_{OUT}} \right) \right]^{-1}$$
where, $f_{SW(\text{max op})} = \frac{1}{T_{P(ORmin)}}$ (10.8)

Where $V_{\text{INDC(min)}}$ is the minimum input voltage across the bulk capacitor. In order to avoid input undervoltage detection during normal operation, $V_{\text{INDC(min)}}$ should be set above the input undervoltage shutdown limit.

$$V_{INDC(\min)} > \frac{R_{Vin} + Z_{IN}}{Z_{IN}} \cdot V_{UVDC}$$
(10.9)

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



Assuming T_{RES} is 2 μs then:

$$T_{P(QR\min)} > 10\mu s$$

 $T_{P(QR\min)} > \frac{1}{110kHz} + 2\mu s = 11.1\mu s$

$$V_{INDC(\text{min})} > \frac{5.1M\Omega + 25k\Omega}{25k\Omega} \times 0.369V = 76V$$

To give some margin, we use 85 V for $V_{\text{INDC(min)}}$ in equation 10.8.

Choosing,
$$f_{SW(\text{max op})} = 85kHz$$
 for $T_{P(QR \text{min})} = 11.8 \mu s$
 $(V_{IN} \cdot T_{ON})_{\text{max}} = \left[85kHz \times \left(\frac{1}{85V} + \frac{1}{13.8 \times 5.5V} \right) \right]^{-1} = 472V \cdot \mu s$

Also, to provide enough margin for component values, usually:

$$(V_{IN} \cdot T_{ON})_{\text{max}} < (V_{IN} \cdot T_{ON})_{\text{limit}} \times 0.85$$

$$(I0.10)$$

$$(V_{IN} \cdot T_{ON})_{\text{max}} < 635V \cdot \mu s \times 0.85 = 540V \cdot \mu s$$

Since we calculated 472 V· μ s as our V $_{\text{IN}}$ ·T $_{\text{ON}}$ we have enough margin.

10.6 Magnetizing Inductance

A feature of the iW1691 is the lack of dependence on the magnetizing inductance for the CC curve.

Although the constant current limit does not depend on the magnetizing inductance, there are still restrictions on the magnetizing inductance. The maximum $L_{\scriptscriptstyle M}$ is limited by the amount of power that needs to come out of the transformer in order for the power supply to regulate. This is given by:

$$\begin{split} L_{M(\text{max})} &= \frac{\left(V_{IN} \cdot T_{ON}\right)_{\text{max}}^{2} \times f_{sw(\text{max op})}}{2 \times P_{XFMR(\text{max})}} \\ P_{XFMR(\text{max})} &= \frac{V_{OUT} \times I_{OUT}}{\eta_{X}} \end{split} \tag{10.11}$$

Where η_x is the efficiency of the transformer, for this example we assume it's 87 %.

$$P_{XFMR(\text{max})} = \frac{5.5V \times 1A}{0.87} = 6.32W$$

$$L_{M(\text{max})} = \frac{(472V \cdot \mu s)^2 \times 85kHz}{2 \times 6.32W} = 1.50mH$$

The minimum $L_{\rm M}$ is limited by the maximum allowable peak primary current. $V_{\rm REG-TH}$ corresponds to the maximum $I_{\rm SENSE}$ voltage. Therefore $L_{\rm M}$ is limited by:

$$L_{M(\min)} = \frac{2 \times P_{XFMR(\max)}}{f_{SW(\max \text{ op})} \times \left(\frac{V_{REG-TH}}{R_{Isense}}\right)^{2}}$$
(10.12)

$$L_{M \text{(min)}} = \frac{2 \times 6.32W}{85kHz \times \left(1.0V/3.0\Omega\right)^2} = 1.34mH$$

For this example, we choose L_{M} to be 1.42 mH.

If these limits do not give enough tolerance for $L_{\rm M}$, increasing $(V_{\rm IN}T_{\rm ON})_{\rm max}$ can raise the maximum limit on $L_{\rm M}$. Take care not to go above $(V_{\rm IN}T_{\rm ON})_{\rm limit}$. Also, keep in mind that if equation 10.6 and 10.7 are not met then $(V_{\rm IN}T_{\rm ON})_{\rm max}$ does not occur at full load and lowest input voltage, thus some of the equations here would be invalid.

10.7 Primary Winding

In order to keep the transformer from saturation, the maximum flux density must not be exceeded. Therefore the minimum primary winding must meet:

$$N_{PRI} \ge \frac{\left(V_{IN} \cdot T_{ON}\right)_{\text{max}}}{B_{\text{max}} \times A_e} \tag{10.13}$$

Where B_{MAX} is maximum allowed flux density and A_e is the core area. From the transformer core datasheet we find that for this example B_{MAX} is 320 mT. For an EFD15 core, A_e is 15 mm².

$$N_{PRI} \ge \frac{472V \cdot \mu s}{320mT \times 15mm^2} = 98T$$

For this example, we choose 138 primary turns.

10.8 Secondary Winding

From the primary winding turns, we obtain the secondary winding.

$$N_{SEC} = \frac{N_{PRI}}{N_{TR}} \tag{10.14}$$

Thus, in our example:

$$N_{SEC} = \frac{138T}{13.8} = 10T$$

10.9 Bias Winding and V_{cc} Capacitance

 $V_{\rm cc}$ is the supply to the iW1691 and should be below 16 V. The bias winding needs to ensure than $V_{\rm cc}$ does not exceed 16 V during normal operation.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



$$N_{BLAS} = \frac{N_{SEC} \left(V_{CC} + V_{FD} \right)}{V_{OUT}} \tag{10.15}$$

Set V_{cc} at around 10 V

$$N_{BLAS} = \frac{10T \times 10.5V}{5.5V} = 19T$$

Choose a value for N_{BIAS} to be close to this number, for this example we choose 17 turns.

The V_{CC} capacitor (C_{Vcc}) stores the V_{CC} charge during IC operation and the controller checks this voltage and makes sure it is within range before starting and operating. The startup time is a function of how quickly this capacitor can charge up.

$$t_{START-UP} = \frac{C_{V_{CC}} \times V_{CC(ST)}}{\frac{V_{INAC} \times \sqrt{2}}{R_{V_{IM}}} - I_{INST}}$$
(10.16)

10.10 V_{SENSE} Resistors and Winding

The output voltage regulation is mainly determined by the feedback signal $\mathbf{V}_{\text{SENSE}}.$

$$V_{SENSE} = V_{OUT_PCB} \times K_{SENSE}$$
 (10.17)

Where:

$$K_{SENSE} = \frac{R_{BVsns}}{\left(R_{BVsns} + R_{TVsns}\right)} \times \frac{N_{Vsense}}{N_{SEC}}$$
(10.18)

Internally, $\rm V_{SENSE}$ is compared to a reference voltage $\rm V_{SENSE(nom)}.$ Where, $\rm V_{SENSE(nom)}$ is 1.538 V.

$$K_{SENSE} = \frac{V_{SENSE(nom)}}{V_{OUT_PCB}}$$
(10.19)

$$K_{SENSE} = \frac{1.538V}{5.0V} = 0.3076$$

From here we can find the ratio necessary for $R_{\text{\tiny BVsns}}$ and $R_{\text{\tiny TVsns}}.$ For this example we set $R_{\text{\tiny TVsns}}$ to be 10 k $\Omega.$ Assuming we use the same winding for both $V_{\text{\tiny SENSE}}$ and $V_{\text{\tiny CC}}.$

$$0.3076 = \frac{R_{BVSNS}}{R_{BVSNS} + 10k\Omega} \times \frac{17T}{10T}$$

$$\rightarrow R_{BVSNS} = 2.2k\Omega$$

At this point the transformer design is complete. This would be a good time to confirm that this transformer is feasible to build.

10.11 Current Sense Resistor

The I_{SENSE} resistor determines the maximum current output of the power supply. The output current of the power supply is determined by:

$$I_{OUT} = \frac{1}{2} \times N_{TR} \times I_{PRI(pk)} \times \frac{T_{RESET}}{T_{PERIOD}} \times \eta_X$$
(10.20)

When the maximum current output is achieved the voltage seen on the I_{SENSE} pin (V_{Isense}) should reach its maximum. Thus, at constant current limit:

$$I_{PRI(pk)} = \frac{V_{Isense(CC)}}{R_{Isense}}$$
 (10.21)

Substituting this into equation 10.20 we get:

$$V_{Isense(CC)} = \frac{T_{PERIOD}}{T_{RESET}} \times K_C$$
 (10.22)

For iW1691 $\rm K_{\rm C}$ is 0.5 V, therefore $\rm R_{\rm Isense}$ depends on the maximum output current by;

$$R_{Isense} = \frac{N_{TR} \times K_C}{2 \times I_{OUT}} \times \eta_X \tag{10.23}$$

From table 10.1 $\rm I_{OUT}$ is given to be 1.0 A, therefore $\rm R_{Isense}$ is:

$$R_{ISNS} = \frac{13.8 \times 0.5V}{2 \times 1.4} \times 0.87 = 3.0\Omega$$

We recommend using ±1% tolerance resistors for R_{Isense}.

10.12 Input Bulk Capacitor

The input bulk capacitor, C_{BULK} is chosen to maintain enough input power to sustain constant output power even as the input voltage is dropping. In order for this to be true C_{BULK} must be:

$$C_{BULK} = \frac{2 \times P_{IN} \times \left[0.25 + \frac{1}{2\pi} \times \arcsin\left(\frac{V_{INDC(\min)}}{\sqrt{2} \times V_{INAC(\min)}}\right)\right]}{\left(2 \times V_{INAC(\min)}^2 - V_{INDC(\min)}^2\right) \times f_{line}}$$

$$P_{IN} = \frac{V_{OUT(Cable)} \times I_{OUT}}{\eta_{\text{power supply}}}$$
(10.24)

 $V_{INAC(min)}$ is the minimum input voltage (rms) to be inputted into the power supply and f_{iine} is the lowest line frequency for the power supply (in this case 47 Hz). $V_{INDC(min)}$ is calculated from equation 10.9.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



$$\begin{split} P_{IN} &= \frac{5.0V \times 1A}{0.69} = 7.25W \\ C_{BULK} &= \frac{2 \times 7.25W \times \left[0.25 + \frac{1}{2\pi} \times \arcsin\left(\frac{85V}{\sqrt{2} \times 85V_{ac}}\right) \right]}{\left(2 \times \left(85V_{ac} \right)^2 - \left(85V \right)^2 \right) \times 47Hz} = 16 \mu F \end{split}$$

For this example C_{BULK} is chosen to be 20 μF .

10.13 Output Capacitance

The output capacitance affects both the steady state ripple and the dynamic response of the power supply.

Assuming an ideal capacitor where ESR (equivalent series resistance) and ESL (equivalent series inductance) are negligible then:

$$C_{OUT(\text{Steady State})} = \frac{Q_{OUT}}{V_{OUT(ripple)}}$$
(10.25)

The output capacitor supplies the load current when the secondary current is below the output current.

$$Q_{OUT} = \frac{L_M \times \left(I_{SEC(pk)} - I_{OUT}\right)^2}{2 \times N_{TR}^2 \times \eta_X \times V_{OUT}}$$
(10.26)

The I_{SEC(pk)} is:

$$I_{SEC(pk)} = \frac{\left(V_{IN} \cdot T_{ON}\right)_{MAX}}{L_{M}} \times N_{TR} \times \eta_{X}$$
(10.27)

So to keep $V_{OUT(ripple)}$ to be 50 mV,

$$I_{SEC(pk)} = \frac{472V \cdot \mu s}{1.42mH} \times 13.8 \times 0.87 = 3.99A$$

$$Q_{OUT} = \frac{1.42mH (3.99A - 1A)^2}{2 \times 13.8^2 \times 0.87 \times 5.5V} = 6.97 \mu C$$

$$C_{OUT(\text{Steady State})} = \frac{6.97 \mu C}{50 mV} = 139 \mu F$$

In this calculation ESR and ESL are ignored; the reason this calculation is still valid is because of the second stage LC filter on the output of the supply. These two components reduce the ESR and ESL ripple; however keep in mind that the ripple is a little higher in reality than this calculation would suggest.

Assume that the load transient goes from no load to I_OUT(HIGH). Then from section 11.3, equation 11.3 we find that the relationship between output capacitance (C_OUT(Dynamic)) and V_DROP(IC) is:

$$C_{OUT(Dynamic)} = \frac{I_{OUT(HIGH)} \times T_{P(No load)}}{V_{DROP(IC)}}$$
(10.28)

Then solving for $V_{DROP(IC)}$ from Figure 11.2, where $V_{Dynamic(DROP)}$ is the maximum allowable drop in voltage for the design during dynamic response, $V_{DROP(Cable)}$ is the drop in voltage due to the cable resistance, and $V_{DROP(sense)}$ is the drop in voltage before V_{SENSE} signal is low enough to register a dynamic transient.

$$C_{OUT \text{(Dynamic)}} = \frac{I_{OUT \text{(HIGH)}} \times T_{P \text{(No load)}}}{V_{Dynamic \text{(Drop)}} - V_{DROP \text{(Cable)}} - V_{DROP \text{(sense)}}}$$
(10.29)

Where $T_{P(No\ load)}$ is the maximum period under no load condition, given by equation 10.30:

$$T_{P(\text{No load})} = \frac{R_{\text{Preload}} \times (V_{IN} \cdot T_{ON})_{PFM}^{2}}{2 \times L_{M} \times V_{OUT}^{2}} \times \eta_{\text{No load}}$$
(10.30)

Assume that we want no more than 1.0 V drop on $V_{\text{OUT(PCB)}}$ during load transient from no load to 50% load and the efficiency of the power supply at no load $(\eta_{\text{No load}})$ is 50% then, $C_{\text{OUT(Dynamic)}}$ is:

$$T_{P(\text{No load})} = \frac{4.4k\Omega \times (119V \cdot \mu s)^2}{2 \times 1.42mH \times (5.5V)^2} \times 0.5 = 363\mu s$$

Since there is no cable, $V_{DROP(cable)}$ is 0 V.

$$V_{DROP(sense)} = (1.538V - 1.38V) \times \frac{5.0V}{1.538V} = 0.514V$$

Plug everything into equation 10.19:

$$C_{OUT(Dynamic)} = \frac{0.5A \times 363 \mu s}{1.0V - 0V - 0.514V} = 373 \mu F$$

Pick the larger capacitance value between $C_{\text{OUT}(Dynamic)}$ and $C_{\text{OUT}(Steady\ State)}.$ In this case C_{OUT} is chosen to be 570 $\mu F.$

10.14 Snubber Network

The snubber network is implemented to reduce the voltage stress on the MOSFET immediately following the turn off of the gate drive. The goal is to dissipate the energy from the leakage inductance of the transformer. For simplicity and a more conservative design first assume the energy of the leakage inductance is only dissipated through the snubber. Thus:

$$\frac{1}{2} \times L_{lk} \times I_{PRI(pk)}^2 = \frac{1}{2} \times C_{SNUB} \times \left[V_{Snub(pk)}^2 - V_{Snub(val)}^2 \right]$$
(10.31)

 $L_{\rm lk}$ can be measured from the transformer and $V_{\rm DS}$ is the voltage across the MOSFET. $V_{\rm Snub(pk)}$ and $V_{\rm Snub(val)}$ refer to the voltage measured across the snubber capacitor. Choose

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



a $C_{\text{SNUB}},$ keeping in mind that the larger the value of C_{SNUB} the lower the voltage stress is on the MOSFET. However, capacitors are more expensive the larger their capacitance. Choose C_{SNUB} based on these two criteria and select $V_{\text{Snub(pk)}}$ and $V_{\text{Snub(val)}}.$ Now a resistor needs to be selected to dissipate $V_{\text{Snub(val)}}$ to $V_{\text{Snub(val)}}$ during the on-time of the gate driver. The dissipation of this resistor is given by:

$$\frac{V_{Snub(val)}}{V_{Snub(pk)}} = e^{-T_{P(\min op)}/R_{SNUB} \cdot C_{SNUB}}$$
(10.32)

Using equation 10.32 solve for $\rm R_{SNUB}.$ This gives a conservative estimate of what $\rm C_{SNUB}$ and $\rm R_{SNUB}$ should be.

Included in the snubber network is also a resistor in series with a diode. The diode directs current to the snubber capacitor when the MOSFET is turned off; however there is some reverse current that goes through the diode immediately after the MOSFET is turned back on. This reverse current occurs because there is a short period of time when the diode still conducts after switching from forward biased to reverse biased. This conduction distorts the falling edge of the V_{SENSE} signal and affects the operation of the IC. So, the resistor in series with the diode is there to diminish the reverse current that goes through the diode immediately after the MOSFET is turned on.

10.15 Ton Delay Filter

iW1691 also contains a feature that allows for adjustment to match high line and low line constant current curves. The mismatch in high line and low line is due to the delay from the IC propagation delay, driver turn-on delay, and the MOSFET turn-on delay. The driver turn-on delay maybe further increased by a gate resistor to the MOSFET. To adjust for these delays the iW1691 factors these delays into its calculations and slightly over compensates for them to provide flexibility. $R_{\mbox{\tiny Dly}}$ and $C_{\mbox{\tiny Dly}}$ provide extra delay in the circuit to tweak the compensation. To determine values $R_{\mbox{\tiny Dly}}$ and $C_{\mbox{\tiny Dly}}$ follow these steps:

- Measure the difference between high line and low line constant current limit without filter components.
- 2. Find the curve that best matches this difference from Figure 12.7.
- 3. Find the $L_{_{M}}$ that matches the power supply, and find the $\tau_{_{RC}}.$

4. Find R_{Dly} and C_{Dly} from equation 10.33
$$\tau_{RC} = R_{Dly} \times C_{Dly} \tag{10.33}$$

10.16 SD Protection

The SD pin can be configured to provide three different types of protection: OTP protection, OVP protection and both OVP and OTP Protection. Figure 10.3 shows the three configurations plus the configuration for no OTP and OVP protection.

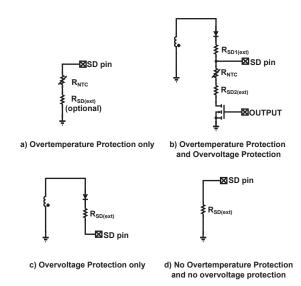


Figure 10.3 : SD Pin Application Configurations

OTP Only

To detect an overtemperature protection the iW1691 sends a 100 μA current (I $_{SD}$) to the SD pin every four cycles (see section 11.5). On the last cycle the iW1691 observes the voltage on the SD pin and detects an OTP fault if the voltage is lower than $V_{SD\text{-}TH}$, 1.0 V during normal operation and 1.2 V during startup. So $R_{SD(ext)}$ in series with NTC must meet

$$\left(R_{NTC} + R_{SD(ext)}\right) \times I_{SD} > V_{SD-TH}$$
(10.34)

in order not to trigger OTP fault during normal operation.

OVP Only

For the other four cycles, the iW1691 connects the SD pin to $R_{\rm SD}$ to ground (see section 11.5). At the last cycle the iW1691 observes the voltage on the SD pin and detects an OVP fault if the voltage is higher than $V_{\rm SD-TH},\,1$ V. In order to not trigger OVP fault, assuming 0 V drop across the series diode, $R_{\rm SD(ext)}$ must meet:

$$\frac{V_{OUT_PCB}}{N_{SEC}} \times N_{AUX} \times \frac{R_{SD}}{R_{SD} + R_{SD(ext)}} < V_{SD-TH}$$
(10.35)

where, R_{SD} = 8.333 k Ω

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



Both OTP and OVP

To find $R_{\rm SD1(ext)}$ so that OVP can be detected, use equation 10.35. To find $R_{\rm SD2(ext)}$ in series with the NTC use equation 10.34.

No OTP and OVP

If OTP and OVP from the SD pin are not needed, simply place a resistor, $R_{\text{SD(ext)}}$ to ground from the SD pin. Make sure $R_{\text{SD(ext)}}$ meets equation 10.36 so OTP protection does not trip.

$$R_{SD(ext)} \times I_{SD} > V_{SD-TH} \tag{10.36}$$

Note that this means OVP is not detected through the SD pin; however, OVP from V_{SENSE} pin is still active and the iW1691 still shuts down if overvoltage condition is detected.

Since for this example OTP and OVP are not necessary we place a resistor from SD pin to ground and calculate its value from equation 10.36.

$$R_{SD(ext)} > 1.2V / 100 \mu A = 12k\Omega$$

10.17 PCB Layout

In the iW1691, there are two signals that are important to control the output performance; these are the I_{SENSE} signal and the V_{SENSE} signal. The I_{SENSE} resistor should be close to the source of the MOSFET to avoid any trace resistance from contaminating the I_{SENSE} signal. Also, the I_{SENSE} signal should be placed close to the I_{SENSE} pin. The V_{SENSE} signal should be placed close to the transformer to improve the quality of the sensing signal. Also for better output performance all bypass capacitors should be placed close to their respective pins.

To reduce EMI, switching loops need to be minimized. These loops include:

- The input bulk capacitor, primary winding, MOSFET and R_{Isense} loop.
- 2. The output diode, output capacitor and secondary winding loop.
- 3. V_{cc} winding and rectifier diode loop.

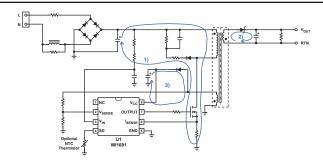


Figure 10.4: Switching Loops

To improve ESD performance provide a low impedance path from the ground pin of the transformer to the ac power source and make sure this path does not go through the IC ground pin. A discharge spark gap helps to transfer ESD and EOS energy from the secondary side of the power supply directly to the external ac power source.

In a switch-mode power supply there are several ground signals, namely: the power ground, the switching ground and the control logic ground. These ground signals should be connected by a star connection. Ground traces should be kept as short as possible. A thick trace on the switching ground helps to lessen switching losses.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



11.0 Product Options

11.1 Startup Options

Startup options only affect the power supply in startup and no where else.

CC Delay

CC delay forces the IC to go into CC mode after a given amount of time, specified by the option. This helps to limit the amount of current overshoot seen at the output during an output short or startup into CC. The trade off of this option is that for heavy loads the startup rise time may become longer.

11.2 Constant Voltage Regulation

The iW1691 is designed with the capability of keeping very tight constant voltage regulation at the end of an output cable and also during dynamic load conditions.

Cable Drop Compensation

Cable drop compensation is an optional feature on the iW1691 to help compensation for the degradation of the output voltage from the output cable to the load. During CV (constant voltage) mode the output current changes as the voltage remains constant. This is true for the output voltage at the output of the power supply board; however, in certain applications the device to be charged is not directly connected to the power supply, but rather, is connected via a cable. This cable is seen by the power supply as a resistance. So, as the output current increases the output voltage at the end of the cable begins to drop. With its built-in cable compensation feature the iW1691 can incrementally increase the output voltage with respect to the output current to compensate for the voltage drop in the cable.

The cable compensation option refers to the percentage of the output voltage that would be due to the voltage drop due to the cable under maximum output current. For example, if a 5 V power supply has a voltage drop across its cable of 300 mV then the 6% option should be chosen, since 300 mV is 6% of 5 V.

V_{MIN} Option

There are three components that compose the voltage drop during a load transient event.

 $V_{\mbox{\tiny DROP(cable)}}$ is the drop in voltage due from the increased current going through the connector and/or the cable.

$$V_{DROP(cable)} = R_{CABLE} \times \Delta I_{OUT}$$
(11.1)

The second component which affects the voltage drop during load transient is $V_{\text{DROP(sense)}}.$ This voltage drop is the drop in voltage before the V_{SENSE} signal is able to show a significant drop in output voltage. This is determined by V_{MIN} or the reference voltage at which a load transient is detected. The larger the $V_{\text{SENSE(min)}}$ is the smaller this drop in voltage is.

$$V_{DROP(sense)} = \left(V_{SENSE(nom)} - V_{SENSE(min)}\right) \times \frac{V_{OUT(PCB)}}{V_{SENSE(nom)}}$$
(11.2)

Keep in mind that a larger $V_{\text{SENSE}(\text{min})}$ is less tolerant of noise and distortions in V_{SENSE} than a smaller one.

The final drop in voltage is due to the time from when V_{SENSE} drops $V_{\text{SENSE(min)}}$ to when the next V_{SENSE} signal appears. In the worst case condition this is how much voltage drops during the longest switching period.

$$V_{DROP(IC)} = \frac{I_{OUT} \times T_{P(\text{No load})}}{C_{OUT}}$$
(11.3)

A larger output capacitance in this case greatly reduces the $V_{\mbox{\tiny DROP(IC)}}.$

$T_{P(dynamic)}$ Clamp Option

The iW1691 also has an option to clamp the switching period during dynamic transient from heavy load to light load ($T_{P(dynamic)}$). This option helps to ensure enough supply voltage is available to support the IC during transient condition cycles.

11.3 Output Voltage Protection

The iW1691 also offers both output overvoltage and output undervoltage protection. For output overvoltage select the percentage above the output voltage that the power supply should shut down. Both of these protections are detected by the V_{SENSE} signal cycle-by-cycle. Output undervoltage protection can be latched; if that is the case, then the power supply remains in shutdown mode until V_{CC} is 1 V below $V_{\text{CC(UVL)}}$.

11.4 Input Voltage Protection

iW1691 also offers input under voltage protection. The power supply does not attempt to start up until input is above V_{INSTLOW} .


11.5 SD Pin Latch

The SD pin offers latched output overvoltage and/ or overtemperature protection. The iW1691 switches between monitoring overtemperature fault and overvoltage fault. In order to detect the resistance in the NTC for an

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



overtemperature fault, the iW1691 connects a current source to the SD pin and checks the voltage on the pin. To ensure that the current source is settled before the voltage is checked both OTP and OVP are detected on the last cycle, as depicted in figure 11.1.

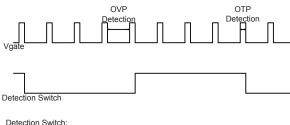

- - When switch is low SD pin is connected to R_{SD}

 When switch is high SD pin is connected to a current source I_{SD}

Figure 11.1 : SD Pin Detection Cycles

During an overvoltage monitor cycle the SD pin is connected to a resistance internal to the chip, R_{sp}, to ground and the voltage on the SD pin is observed.

If OTP and OVP are selected to latch then, once a fault is detected the controller shuts down and remains in shut down until V_{CC} drops below 1 V of $V_{CC(UVL)}$.

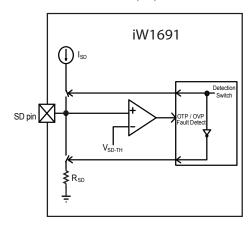


Figure 11.2: Internal Function of SD Pin

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



12.0 Design Example Performance Characteristics

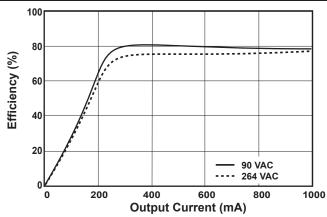


Figure 12.1 : Efficiency at 90 V_{AC} and 264 V_{AC}

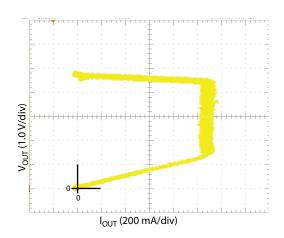


Figure 12.2: Regulation without Cable Drop Compensation

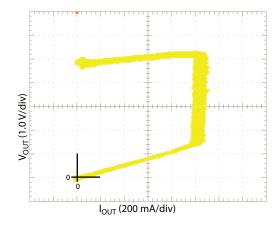


Figure 12.3: Regulation with Cable Drop Compensation

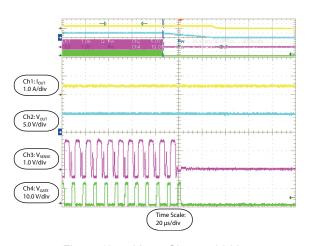


Figure 12.4 : $V_{\rm SENSE}$ Short at 90 $V_{\rm AC}$

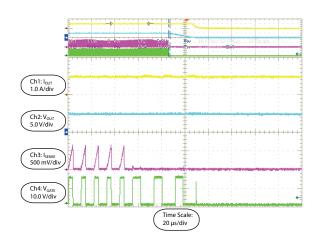


Figure 12.5 : I_{SENSE} Short at 90 V_{AC}

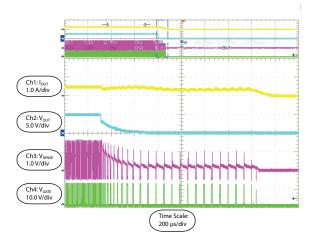


Figure 12.6: Output Short Fault (50% load)



12.0 Design Example Performance Characteristics (cont.)

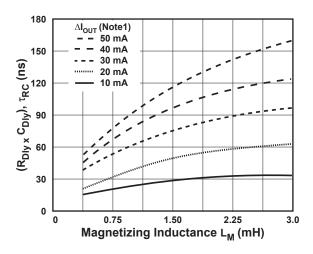


Figure 12.7 : T_{ON} Compensation Chart $R_{DS(ON)}$ = 55 - 250 Ω

13.0 Application Circuit

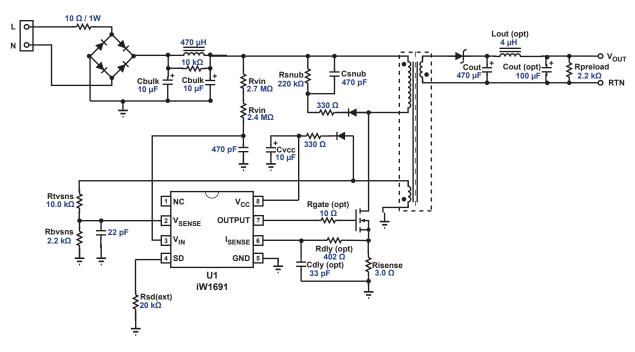


Figure 13.1: Typical Application Circuit


Note 1: ΔI_{OUT} refers to the difference in constant current limit between 264 V_{ac} and 90 V_{ac} when no R_{DLY} are applied.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



14.0 Physical Dimensions

8-Lead Small Outline (SOIC) Package

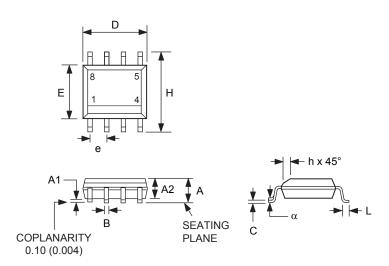

| Symbol | Incl | hes | Millimeters | | |
|--------|--------|-------|-------------|------|--|
| Syr | MIN | MAX | MIN | MAX | |
| Α | 0.053 | 0.069 | 1.35 | 1.75 | |
| A1 | 0.0040 | 0.010 | 0.10 | 0.25 | |
| A2 | 0.049 | 0.059 | 1.25 | 1.50 | |
| В | 0.014 | 0.019 | 0.35 | 0.49 | |
| С | 0.007 | 0.010 | 0.19 | 0.25 | |
| D | 0.189 | 0.197 | 4.80 | 5.00 | |
| Е | 0.150 | 0.157 | 3.80 | 4.00 | |
| е | 0.050 | BSC | 1.27 | BSC | |
| Н | 0.228 | 0.244 | 5.80 | 6.20 | |
| h | 0.10 | 0.020 | 0.25 | 0.50 | |
| L | 0.016 | 0.049 | 0.4 | 1.25 | |
| α | 0° | 8° | | | |

Figure 14.1: Physical dimensions, 8-lead SOIC package

Compliant to JEDEC Standard MS12F

Controlling dimensions are in inches; millimeter dimensions are for reference only

This product is RoHS compliant and Halide free.

Soldering Temperature Resistance:

- [a] Package is IPC/JEDEC Std 020D Moisture Sensitivity Level 1
- [b] Package exceeds JEDEC Std No. 22-A111 for Solder Immersion Resistance; package can withstand 10 s immersion < 270°C

Dimension D does not include mold flash, protrusions or gate burrs. Mold flash, protrusions or gate burrs shall not exceed 0.15 mm per end. Dimension E1 does not include interlead flash or protrusion. Interlead flash or protrusion shall not exceed 0.25 mm per side. D and E1 dimensions are determined at datum H.

The package top may be smaller than the package bottom. Dimensions D and E1 are determined at the outermost extremes of the plastic bocy exclusive of mold flash, tie bar burrs, gate burrs and interlead flash, but including any mismatch between the top and bottom of the plastic body.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



15.0 Ordering Information

| Part Number | Options | Package | Description |
|-------------|---|---------|--------------------------|
| iW1691-00 | Cable Comp = 0 mV, $V_{SENSE(min)} = 1.38 \text{ V}, f_{SW(MAX)} = 140 \text{ kHz}$ | SOIC-8 | Tape & Reel ¹ |
| iW1691-01 | Cable Comp = 0 mV, $V_{SENSE(min)}$ = 1.515 V, OTP/OVP latch, Output Low Protection latch, $f_{SW(MAX)}$ = 140 kHz | SOIC-8 | Tape & Reel ¹ |
| iW1691-03 | Cable Comp = 0 mV, $V_{SENSE(min)}$ = 1.515 V, OTP/OVP latch, $f_{SW(MAX)}$ = 140 kHz | SOIC-8 | Tape & Reel ¹ |
| iW1691-04 | Cable Comp = 300 mV, CC Delay = 30 μ s, V _{SENSE(min)} = 1.48 V, $f_{SW(MAX)}$ = 140 kHz | SOIC-8 | Tape & Reel ¹ |
| iW1691-08 | Cable Comp = 300 mV, CC Delay = 30 μ s, V _{SENSE(min)} = 1.48 V, $f_{SW(MAX)}$ = 140 kHz, $T_{P(dynamic)}$ = 200 μ s | SOIC-8 | Tape & Reel ¹ |
| iW1691-09 | Cable Comp = 150 mV, $V_{SENSE(min)}$ = 1.515 V, OTP/OVP latch $f_{SW(MAX)}$ = 140 kHz, $T_{P(dynamic)}$ = 200 μs | SOIC-8 | Tape & Reel ¹ |
| iW1691-10 | Cable Comp = 400 mV, CC Delay = 30 μ s, V _{SENSE(min)} = 1.48 V, $f_{SW(MAX)}$ = 140 kHz, $T_{P(dynamic)}$ = 200 μ s | SOIC-8 | Tape & Reel ¹ |

Note 1: Tape & Reel packing quantity is 2,500/reel.

Digital PWM Current-Mode Controller for Quasi-Resonant Operation



About iWatt

iWatt Inc. is a fabless semiconductor company that develops intelligent power management ICs for computer, communication, and consumer markets. The company's patented *pulseTrain*™ technology, the industry's first truly digital approach to power system regulation, is revolutionizing power supply design.

Trademark Information

© 2009 iWatt, Inc. All rights reserved. iWatt, the iW light bulb, *EZ-EMI* and *pulseTrain* are trademarks of iWatt, Inc. All other trademarks and registered trademarks are the property of their respective companies.

Contact Information

Web: http://www.iwatt.com
E-mail: info@iwatt.com
Phone: 408-374-4200
Fax: 408-341-0455

iWatt Inc.

101 Albright Way

Los Gatos CA 95032-1827

Disclaimer

iWatt reserves the right to make changes to its products and to discontinue products without notice. The applications information, schematic diagrams, and other reference information included herein is provided as a design aid only and are therefore provided as-is. iWatt makes no warranties with respect to this information and disclaims any implied warranties of merchantability or non-infringement of third-party intellectual property rights.

Certain applications using semiconductor products may involve potential risks of death, personal injury, or severe property or environmental damage ("Critical Applications").

IWATT SEMICONDUCTOR PRODUCTS ARE NOT DESIGNED, INTENDED, AUTHORIZED, OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS, OR OTHER CRITICAL APPLICATIONS.

Inclusion of iWatt products in critical applications is understood to be fully at the risk of the customer. Questions concerning potential risk applications should be directed to iWatt, Inc.

iWatt semiconductors are typically used in power supplies in which high voltages are present during operation. High-voltage safety precautions should be observed in design and operation to minimize the chance of injury.