


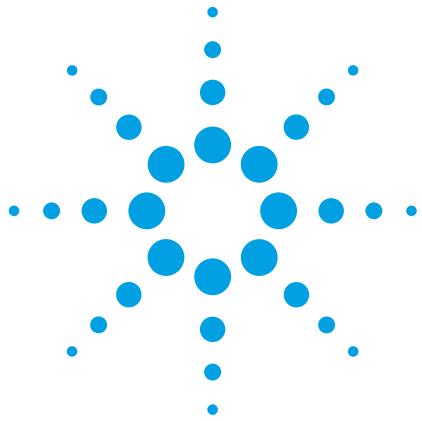

## Agilent 53131A/132A/181A Counters


High-performance, low-cost counters simplify and speed systems and bench frequency measurements

Data Sheet

Recommended replacement products:

53200 Series RF & universal frequency counter/timers

(Data sheet publication number: 5990-6283EN)

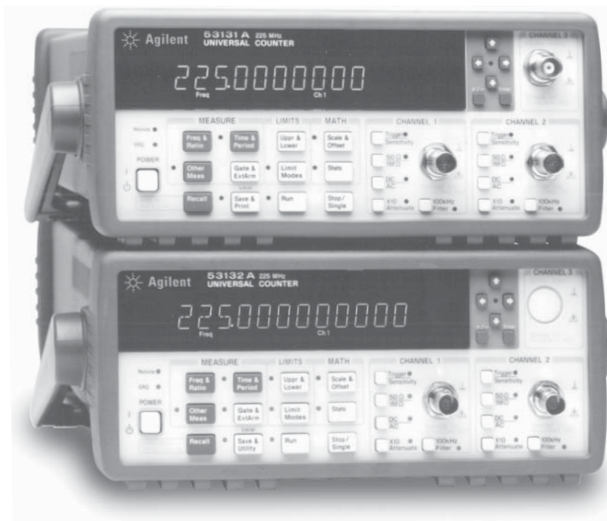

- 225 MHz bandwidth (optional 1.5, 3, 5, or 12.4 GHz)
- 10- or 12-digit resolution with 1 s gate time
- GPIB interface and IntuiLink connectivity software standard
- Data transfer rate of up to 200 fully formatted measurements/second

### **A family of universal and RF counters to meet your needs**

Agilent Technologies 53131A/132A/181A high-performance counters give you fast, precise frequency measurements at an affordable price. These counters feature an intuitive user interface and one-button access to frequently used functions so you can make accurate measurements quickly and easily.



**Agilent Technologies**

Real-time digital signal processing technology is used to analyze data while simultaneously taking new readings, speeding measurement throughput. The technology, developed for Agilent's high-end line of modulation domain analyzers, allows the counters to gather more data for each measurement, so you get higher-resolution measurements in a fraction of the time it takes other counters.

The 53131A/132A/181A counters offer built-in statistics and math functions so you can scale measurements and simultaneously measure and track average, min/max and standard deviation. Automated limit testing lets you set upper and lower limits for any measurement. An analog display mode lets you see at a glance whether a measurement is within pass/fail limits. The counters flag out-of-limit conditions and can generate an output signal to trigger external devices when a limit is exceeded. For quick access to frequently used tests, a single keystroke recalls up to 20 different stored front-panel set-ups.

For computer-controlled systems applications, each counter includes a standard GPIB interface with full SCPI-compatible programmability and a data transfer rate of up to 200 fully formatted measurements per second. The standard RS-232C talk-only interface provides printer support or data transfer to a computer through a terminal-emulation program.

#### **Agilent 53131A universal counter**

The two-channel 53131A counter offers 10 digits per second of frequency/period resolution and a bandwidth of 225 MHz. Time interval resolution is specified at 500 ps. An optional third channel provides frequency measurements up to 3 GHz, 5 GHz, or 12.4 GHz. Standard measurements include frequency, period, ratio, time interval, pulse width, rise/fall time, phase angle, duty cycle, totalize, and peak voltage.

#### **Agilent 53132A universal counter**

For applications requiring higher resolution, the 53132A offers the same features and functions as the 53131A, with up to 12 digits/sec frequency/period resolution and 150 ps time interval resolution. In addition, the 53132A offers advanced arming modes for time interval measurements.

#### **Agilent 53181A RF counter**

Optimized for RF applications, the single-channel 10 digit/s 53181A measures frequency, period and peak voltage. A digit-blanking function lets you easily eliminate unnecessary digits when you want to read measurements quickly. For higher-frequency measurements, choose an optional second channel that provides measurements up to 1.5 GHz, 3 GHz, 5 GHz, or 12.4 GHz. A self-guided shallow menu makes this counter exceptionally easy to use.

### Agilent IntuiLink provides easy access to the counter's data from your PC

The Agilent 53131A/132A/181A counters, capture precise frequency and time measurements. IntuiLink software allows that data to be put to work easily. You work in a familiar environment at all times, using PC applications such as Microsoft Excel® or Word® to analyze, interpret, display, print, and document the data you get from the counter.

It gives you the flexibility to configure and run tests from your PC making data gathering more convenient.

Agilent IntuiLink lets you:

- Configure tests, including measurement type, number of readings, measurement speed, and more.
- Choose display modes from real-time strip chart, histogram, readout, and table mode.
- Scale measurements data.
- Copy captured data to other programs.

### Optional timebases offer increased stability

Optional timebases are available for 53131A/132A/181A counters to increase measurement accuracy. Option 010 provides a high stability oven timebase with aging of less than  $5 \times 10^{-10}$  per day.

### 1-year warranty

Each counter comes with operating, programming and service manuals, IntuiLink software, a power cord and a full 1-year warranty.

## Time Base

**Internal time base stability** (see graph 3 for timebase contribution of measurement error)

|                                                      |            | Standard<br>(0° to 50°C) | Medium oven<br>(Option 001)               | High oven<br>(Option 010)                  | Ultra high oven<br>(Option 012 for 53132A only) |
|------------------------------------------------------|------------|--------------------------|-------------------------------------------|--------------------------------------------|-------------------------------------------------|
| <b>Temperature stability (referenced to 25°C)</b>    |            | $< 5 \times 10^{-6}$     | $< 2 \times 10^{-7}$                      | $< 2.5 \times 10^{-9}$                     | $< 2.5 \times 10^{-9}$                          |
| <b>Aging rate</b><br>(after 30 days)                 | Per Day:   |                          | $< 4 \times 10^{-8}$                      | $< 5 \times 10^{-10}$                      | $< 1 \times 10^{-10}$                           |
|                                                      | Per Month: | $< 3 \times 10^{-7}$     | $< 2 \times 10^{-7}$                      | $< 1.5 \times 10^{-8}$                     | $< 3 \times 10^{-9}$                            |
|                                                      | Per Year:  |                          |                                           |                                            | $< 2 \times 10^{-8}$                            |
| <b>Turn-on stability vs. time</b><br>(in 30 minutes) |            |                          | $< 2 \times 10^{-7}$<br>referenced to 2 h | $< 5 \times 10^{-9}$<br>referenced to 24 h | $< 5 \times 10^{-9}$<br>referenced to 24 h      |
| <b>Calibration</b>                                   |            | Manual adjust            | Electronic                                | Electronic                                 | Electronic                                      |

Note that power to the time base is maintained when the counter is placed in standby via the front panel switch. The internal fan will continue to operate when in standby to maintain long-term measurement reliability.

## Instrument Inputs

### Input specifications

**Channel 1 & 2 (53131A, 53132A)<sup>1</sup>**  
**Channel 1 (53181A)**

#### Frequency range

|              |                                                                     |
|--------------|---------------------------------------------------------------------|
| dc coupled   | dc to 225 MHz                                                       |
| ac coupled   | 1 MHz to 225 MHz (50 $\Omega$ )<br>30 Hz to 225 MHz (1 M $\Omega$ ) |
| FM tolerance | 25%                                                                 |

#### Voltage range and sensitivity (Sinusoid)<sup>2</sup>

|                    |                                                                                                     |
|--------------------|-----------------------------------------------------------------------------------------------------|
| dc to 100 MHz      | 20 mVrms to $\pm 5$ V ac + dc                                                                       |
| 100 MHz to 200 MHz | 30 mVrms to $\pm 5$ V ac + dc                                                                       |
| 200 MHz to 225 MHz | 40 mVrms to $\pm 5$ V ac + dc<br>(all specified at 75 mVrms with opt. rear connectors) <sup>3</sup> |

#### Voltage range and sensitivity (Single-shot pulse)<sup>2</sup>

|                             |                                                                             |
|-----------------------------|-----------------------------------------------------------------------------|
| 4.5 ns to 10 ns pulse width | 100 mVpp to 10 Vpp<br>(150 mVpp with optional rear connectors) <sup>3</sup> |
| >10 ns pulse width          | 50 mVpp to 10 Vpp<br>(100 mVpp with optional rear connectors) <sup>3</sup>  |

#### Trigger level<sup>2</sup>

|            |                                                      |
|------------|------------------------------------------------------|
| Range      | $\pm 5.125$ V                                        |
| Accuracy   | $\pm (15 \text{ mV} + 1\% \text{ of trigger level})$ |
| Resolution | 5 mV                                                 |

#### Damage level

|                                  |                                            |
|----------------------------------|--------------------------------------------|
| 50 $\Omega$                      | 5 Vrms                                     |
| 0 to 3.5 kHz, 1 M $\Omega$       | 350 Vdc + ac pk                            |
| 3.5 kHz to 100 kHz, 1 M $\Omega$ | 350 Vdc + ac pk linearly derated to 5 Vrms |
| >100 kHz, 1 M $\Omega$           | 5 Vrms                                     |

### Input characteristics

**Channel 1 & 2 (53131A, 53132A)<sup>1</sup>**  
**Channel 1 (53181A)**

|                          |                                                                                                 |
|--------------------------|-------------------------------------------------------------------------------------------------|
| Impedance                | 1 M $\Omega$ or 50 $\Omega$                                                                     |
| 1 M $\Omega$ capacitance | 30 pF                                                                                           |
| Coupling                 | ac or dc                                                                                        |
| Low-pass filter          | 100 kHz, switchable<br>-20 dB at > 1 MHz                                                        |
| Input sensitivity        | Selectable between Low, Medium, or High (default).<br>Low is approximately 2x High Sensitivity. |

**Trigger slope** Positive or negative

#### Auto trigger level

|                 |                                         |
|-----------------|-----------------------------------------|
| Range           | 0 to 100% in 10% steps                  |
| Frequency       | > 100 Hz                                |
| Input amplitude | > 100 mVpp<br>(No amplitude modulation) |

#### Attenuator

|               |     |
|---------------|-----|
| Voltage range | x10 |
| Trigger range | x10 |

### Input Specifications<sup>4</sup>

**Channel 3 (53131A, 53132A)**  
**Channel 2 (53181A)**

#### Frequency range

|                              |                                                           |
|------------------------------|-----------------------------------------------------------|
| Option 015 (for 53181A only) | 100 MHz to 1.5 GHz<br>(see Opt. 030 for additional specs) |
| Option 030                   | 100 MHz to 3 GHz                                          |
| Option 050                   | 200 MHz to 5 GHz                                          |
| Option 124                   | 200 MHz to 12.4 GHz                                       |

#### Power range and sensitivity (Sinusoid)

|            |                                                                                      |
|------------|--------------------------------------------------------------------------------------|
| Option 030 | 100 MHz to 2.7 GHz:<br>-27 dBm to +19 dBm<br>2.7 GHz to 3 GHz:<br>-21 dBm to +13 dBm |
| Option 050 | 200 MHz to 5 GHz:<br>-23 dBm to +13 dBm                                              |
| Option 124 | 200 MHz to 12.4 GHz<br>-23 dBm to +13 dBm                                            |

#### Damage level

|            |         |
|------------|---------|
| Option 030 | 5 Vrms  |
| Option 050 | +25 dBm |
| Option 124 | +25 dBm |

### Characteristics

|           |             |
|-----------|-------------|
| Impedance | 50 $\Omega$ |
| Coupling  | AC          |
| VSWR      | < 2.5:1     |

### External arm input specifications<sup>5</sup>

#### Signal input range

TTL compatible

#### Timing Restrictions

|                    |          |
|--------------------|----------|
| Pulse width        | > 50 ns  |
| Transition time    | < 250 ns |
| Start-to-stop time | > 50 ns  |

**Damage level** 10 Vrms

### External arm input characteristics<sup>5</sup>

|                   |                      |
|-------------------|----------------------|
| Impedance         | 1 k $\Omega$         |
| Input capacitance | 17 pF                |
| Start/stop slope  | Positive or negative |

### External time base input specifications

|               |                                                  |
|---------------|--------------------------------------------------|
| Voltage range | 200 mVrms to 10 Vrms                             |
| Damage level  | 10 Vrms                                          |
| Frequency     | 1 MHz, 5 MHz, and 10 MHz<br>(53132A 10 MHz only) |

### Time base output specifications

|                  |                                                   |
|------------------|---------------------------------------------------|
| Output frequency | 10 MHz                                            |
| Voltage          | > 1 Vpp into 50 $\Omega$<br>(centered around 0 V) |

1. Specifications and characteristics for Channels 1 and 2 are identical for both common and separate configurations.

2. Values shown are for X1 attenuator setting. Multiply all values by 10 (nominal) when using the X10 attenuator setting.

3. When the 53131A or 53132A are ordered with the optional rear terminals (Opt. 060), the channel 1 and 2 inputs are active on both front and rear of the counter. When the 53181A is ordered with the optional rear terminal, the channel 1 input is active on both front and rear of the counter. For this condition, specifications indicated for the rear connections also apply to the front connections.

4. When optional additional channels are ordered with Opt. 060, refer to configuration table for Opt. 060 under ordering info on page 8. There is no degradation in specifications for this input, as applicable.

5. Available for all measurements except peak volts. External arm is referred to as external gate for some measurements.

**For automatic or external arming:**  
(and signals < 100 Hz using timed arming)

$$\text{LSD displayed: } \left( \frac{t_{res}}{\text{Gate time}} \right) \times \frac{\text{Frequency}}{\text{or period}}$$

$$\text{RMS resolution: } \left( \frac{\sqrt{t_{res}^2 + (2 \times \text{Trigger error})^2}}{\text{Gate time}} \right) \times \frac{\text{Frequency}}{\text{or period}}$$

|         | 53131A $t_{res}$ | 53132A $t_{res}$ | 53181A $t_{res}$ |
|---------|------------------|------------------|------------------|
| typical | 650 ps           | 200 ps           | 650 ps           |

see graphs for worst case resolution performance

$$\text{For automatic arming: } \text{Gate time} = \frac{N}{\text{Frequency}}$$

where N = 1 for standard channel frequency < 1 MHz  
4 for standard channel frequency > 1 MHz  
128 for optional channel

$$\text{Systematic uncertainty: } \left( \pm \text{Time base error} \pm \frac{t_{acc}}{\text{Gate time}} \right) \times \frac{\text{Frequency}}{\text{or period}}$$

|            | 53131A $t_{acc}$ | 53132A $t_{acc}$ | 53181A $t_{acc}$ |
|------------|------------------|------------------|------------------|
| Typical    | 350 ps           | 100 ps           | 350 ps           |
| Worst case | 1.25 ns          | 500 ps           | 1.25 ns          |

**Trigger:** Default setting is auto trigger at 50%

**For time or digits arming:**

$$\text{LSD displayed: } \left( \frac{2\sqrt{2} \times t_{res}}{\text{Gate time} \times \sqrt{\text{Number of samples}}} + \frac{t_{jitter}}{\text{Gate time}} \right) \times \frac{\text{Frequency}}{\text{or period}}$$

$$\text{RMS resolution (see graph 2): } \left( \frac{4 \times \sqrt{t_{res}^2 + (2 \times \text{Trigger error})^2}}{\text{Gate time} \times \sqrt{\text{Number of samples}}} + \frac{t_{jitter}}{\text{Gate time}} \right) \times \frac{\text{Frequency}}{\text{or period}}$$

|         | 53131A/181A $t_{res}$ | 53131A/181A $t_{jitter}$ | 53132A $t_{res}$ | 53132A $t_{jitter}$ |
|---------|-----------------------|--------------------------|------------------|---------------------|
| Typical | 500 ps                | 50 ps                    | 225 ps           | 3 ps                |

See graphs for worst case resolution performance

Number of samples = Gate time × Frequency (Frequency < 200 kHz)  
Gate time × 200,000 (Frequency > 200 kHz)

$$\text{Systematic uncertainty: } \left( \pm \text{Time base error} \pm \frac{t_{acc}}{\text{Gate time}} \right) \times \frac{\text{Frequency}}{\text{or period}}$$

|            | 53131A/181A $t_{acc}$ | 53132A $t_{acc}$ |
|------------|-----------------------|------------------|
| Typical    | 100 ps                | 10 ps            |
| Worst case | 300 ps                | 100 ps           |

**Trigger:** Default setting is auto trigger at 50%

## Measurement Specifications

### Frequency (53131A, 53132A, 53181A)

#### Channel 1 and 2 (53131A, 53132A) Channel 1 (53181A)

Range 0.1 Hz to 225 MHz

#### Channel 3 (53131A, 53132A) Channel 2 (53181A)

Option 015 100 MHz to 1.5 GHz

(53181A only)

Option 030 100 MHz to 3 GHz

Option 050 200 MHz to 5 GHz

Option 124 200 MHz to 12.4 GHz

(Period 2 or 3 selectable via GPIB only)

### Period (53131A, 53132A, 53181A)

#### Channel 1 and 2 (53131A, 53132A) Channel 1 (53181A)

Range 4.44 ns to 10 s

#### Channel 3 (53131A, 53132A) Channel 2 (53181A)

Option 015 0.66 ns to 10 ns

(53181A only)

Option 030 0.33 ns to 10 ns

Option 050 0.2 ns to 5 ns

Option 124 80 ps to 5 ns

### Frequency ratio (53131A, 53132A, 53181A)

Measurement is specified over the full signal range of each input.

Results range  $10^{-10}$  to  $10^{11}$

"Auto" gate time 100 ms

### Time interval (53131A, 53132A)

Measurement is specified over the full signal ranges<sup>6</sup> of Channels 1 and 2.

Results range -1 ns to  $10^5$  s

LSD 500 ps (53131A)/150 ps (53132A)

### Phase (53131A, 53132A)

Measurement is specified over the full signal range of Channels 1 and 2.

Results range  $-180^\circ$  to  $+360^\circ$

### Duty cycle (53131A, 53132A)

Measurement is specified over the full signal range of Channel 1. However, both the positive and negative pulse widths must be greater than 4 ns.

Results range 0 to 1 (e.g. 50% duty cycle would be displayed as .5)

### Rise/fall time (53131A, 53132A)

Measurement is specified over the full signal ranges of Channel 1. The interval between the end of one edge and start of a similar edge must be greater than 4 ns.

Edge selection Positive or negative

Trigger Default setting is auto trigger at 10% and 90%

Results range 5 ns to  $10^5$  s

LSD 500 ps (53131A)/150 ps (53132A)

### Pulse width (53131A, 53132A)

Measurement is specified over the full signal range of Channel 1. The width of the opposing pulse must be greater than 4 ns.

Pulse selection Positive or negative

Trigger Default setting is auto trigger at 50%

Results range 5 ns to  $10^5$  s

LSD 500 ps (53131A)/150 ps (53132A)

### Totalize (53131A, 53132A)

Measurement is specified over the full signal range of Channel 1.

Results range 0 to  $10^{15}$

Resolution  $\pm 1$  count

### Peak volts (53131A, 53132A, 53181A)

Measurement is specified on Channels 1 and 2 for dc signals; or for ac signals of frequencies between 100 Hz and 30 MHz with peak-to-peak amplitude greater than 100 mV.

Results range -5.1 V to +5.1 V

Resolution 10 mV

### Peak volts systematic uncertainty

for ac signals: 25 mV + 10% of V

for dc signals: 25 mV + 2% of V

Use of the input attenuator multiplies all voltage specifications (input range, results range, resolution and systematic uncertainty) by a nominal factor of 10.

### Gate time

Auto mode, or 1 ms to 1000 s

### Measurement throughput

GPIB ASCII 200 measurements/s (maximum)

### Measurement arming

Start Free run, manual, or external measurement

Stop Continuous, single, external, or timed measurement

Time interval 100  $\mu$ s to 10 s (53131A)

Delayed 100 ns to 10 s (53132A) arming

### Arming modes

(Note that not all arming modes are available for every measurement function.)

5. Available for all measurements except peak volts. External arm is referred to as external gate for some measurements.

6. See specifications for pulse width and rise/fall time measurements for additional restrictions on signal timing characteristics.

**Time interval, pulse width, rise/fall time (53131A and 53132A only):**

$$\text{RMS resolution: } \sqrt{(t_{\text{res}})^2 + \text{Start trigger error}^2 + \text{Stop trigger error}^2}$$

**Systematic uncertainty:**

$\pm (\text{Time base error} \times \text{Measurement})$  Trigger level timing error  $\pm 1.5 \text{ ns}$  Differential channel error (53131A)  
 $\pm (\text{Time base error} \times \text{Measurement})$  Trigger level timing error  $\pm 900 \text{ ps}$  Differential channel error (53132A)  
 where  $t_{\text{res}} = 750 \text{ ps}$  for the 53131A, 300 ps for the 53132A

$$\text{Frequency ratio: } \frac{\text{Ch1}}{\text{Ch2}} \cdot \frac{\text{Ch1}}{\text{Ch3}} \cdot \frac{\text{Ch2}}{\text{Ch1}} \cdot \frac{\text{Ch3}}{\text{Ch1}} \text{ (53131A and 53132A)} \quad \frac{\text{Ch1}}{\text{Ch2}} \cdot \frac{\text{Ch2}}{\text{Ch1}} \text{ (53181A)}$$

$$\text{LSD: Ratio } \frac{1}{2}: \frac{1}{\text{Ch2 Freq} \times \text{Gate time}} \quad \text{Ratio } \frac{2}{1}: \frac{\text{Ch2 Freq}}{(\text{Ch1 Freq})^2 \times \text{Gate time}}$$

$$\text{RMS Resolution: Ratio } \frac{1}{2}: \frac{2 \times \sqrt{1 + (\text{Ch1 Freq} \times \text{Ch2 Trigger error})^2}}{\text{Ch2 Freq} \times \text{Gate time}}$$

$$\text{Ratio } \frac{2}{1}: \frac{2 \times \text{Ch2 Freq} \times \sqrt{1 + (\text{Ch1 Freq} \times \text{Ch2 Trigger error})^2}}{(\text{Ch1 Freq})^2 \times \text{Gate time}}$$

**Systematic uncertainty:**  $\pm 2 \times \text{resolution}$

For measurements using Ch3, substitute Ch3 for Ch2 in these equations. To minimize relative phase measurement error, connect the higher frequency signal to channel 1.

**Phase (53131A and 53132A)**

$$\text{RMS resolution: } \sqrt{((T_{\text{res}})^2 + (2 \times \text{Trigger error}^2)) \times \left(1 + \left(\frac{\text{Phase}}{360^\circ}\right)^2\right) \times \text{Frequency} \times 360^\circ}$$

**Systematic uncertainty:**

$(\pm \text{Trigger level timing error} \pm 1.5 \text{ ns Differential channel error}) \times \text{Frequency} \times 360^\circ$  (53131A)  
 $(\pm \text{Trigger level timing error} \pm 900 \text{ ps Differential channel error}) \times \text{Frequency} \times 360^\circ$  (53132A)

**Duty cycle (53131A and 53132A)**

$$\text{RMS resolution: } \sqrt{((T_{\text{res}})^2 + (2 \times \text{Trigger error}^2)) \times (1 + \text{Duty cycle}^2) \times \text{Frequency}}$$

|                  |        |        |
|------------------|--------|--------|
| $t_{\text{res}}$ | 53131A | 53132A |
|                  | 750 ps | 300 ps |

**Auto arming:** Measurements are initiated immediately and acquired as fast as possible, using a minimum number of signal edges.

**Timed arming:** The duration of the measurement is internally timed to a user-specified value (also known as the “gate time”).

**Digits arming:** Measurements are performed to the requested resolution (number of digits) through automatic selection of the acquisition time.

**External arming:** An edge on the external arm input enables the start of each measurement. Auto arming, timed arming modes or another edge on the external arm input may be used to complete the measurement.

**Time interval delayed arming:** For time interval measurements, the stop trigger condition is inhibited for a user-specified time following the start trigger. The 53132A offers advanced time interval arming capabilities including use of user specified time or Channel 2 events to delay both start and stop triggers.

**Measurement limits**

**Limit checking:** The measurement value is checked against user-specified limits at the end of each measurement.

**Display modes:** The measurement result may be displayed as either the traditional numeric value or graphically as an asterisk moving between two vertical bars.

**Out-of-limits Indications:**

- The limits annunciator will light on the front panel display.
- The instrument will generate an SRQ if enabled via GPIB.
- The limits hardware signal provided via the RS-232 connector will go low for the duration of the out-of-limit condition.
- If the analog display mode is enabled, the asterisk appears outside the vertical bars, which define the upper and lower limits.

### Fractional time base error (see graph 3)

Time base error is the maximum fractional frequency variation of the time base due to aging or fluctuations in ambient temperature or line voltage:

$$\text{Time base error} = \left( \frac{\Delta f}{f} \text{ Aging rate} + \frac{\Delta f}{f} \text{ Temperature} + \frac{\Delta f}{f} \text{ Line voltage} \right)$$

Multiply this quantity by the measurement result to yield the absolute error for that measurement. Averaging measurements will not reduce (fractional) time base error. The counters exhibit negligible sensitivity to line voltage; consequently the line voltage term may be ignored.

---

### Trigger error

External source and input amplifier noise may advance or delay the trigger points that define the beginning and end of a measurement. The resulting timing uncertainty is a function of the slew rate of the signal and the amplitude of spurious noise spikes (relative to the input hysteresis band).

The (rms) trigger error associated with a single trigger point is:

$$\text{Trigger error} = \frac{\sqrt{(E_{\text{input}})^2 + (E_{\text{signal}})^2}}{\text{Input signal slew rate at trigger point}} \quad (\text{in seconds})$$

where

$E_{\text{input}}$  = RMS noise of the input amplifier: 1 mVrms (350  $\mu$ Vrms typical). Note that the internal measurement algorithms significantly reduce the contribution of this term.

$E_{\text{signal}}$  = RMS noise of the input signal over a 225 MHz bandwidth (100 kHz bandwidth when the low-pass filter is enabled). Note that the filter may substantially degrade the signal's slew rate at the input of the trigger comparator.

For two-trigger-point measurements (e.g. rise time, pulse width), the trigger errors will be referred to independently as start trigger error and stop trigger error.

---

### Trigger level timing error (see graph 6)

Trigger level timing error results from a deviation of the actual trigger level from the specified level.

The magnitude of this error depends on resolution and accuracy of the trigger level circuit, input amplifier fidelity, input signal slew rate, and width of the input hysteresis band.

The following equations should be summed together to obtain the overall trigger level timing error.

At the "High" sensitivity input setting, the hysteresis band can be assumed to be the sensitivity of the counter input (see page 2). Reduction of input sensitivity or use of the attenuator will increase the size of this band.

$$\text{Input hysteresis error:} \quad \frac{0.5 \times \text{hysteresis band}}{\text{Input signal slew rate at start trigger point}} - \frac{0.5 \times \text{hysteresis band}}{\text{Input signal slew rate at stop trigger point}}$$

$$\text{Trigger level setting error: } \pm \frac{15 \text{ mV} \pm (1\% \times \text{start trigger level setting})}{\text{Input signal slew rate at start trigger point}} \pm \frac{15 \text{ mV} \pm (1\% \times \text{stop trigger level setting})}{\text{Input signal slew rate at stop trigger point}}$$

---

### Differential channel error


The differential channel error term stated in several systematic uncertainty equations accounts for channel-to-channel mismatch and internal noise. This error can be substantially reduced by performing a TI calibration (accessible via the utility menu) in the temperature environment in which future measurements will be made.

**Graph 1:**  
**Agilent 53131A/181A–Worst case**  
**RMS resolution<sup>7</sup>**  
 (Automatic or external arming)


The graphs may also be used to compute errors for period measurements. To find the period error (DP), calculate the frequency of the input signal ( $F = 1/P$ ) and find the frequency error (DF) from the chart.

Then calculate the period error as:

$$\Delta P = \left( \frac{\Delta F}{F} \right) \times P$$

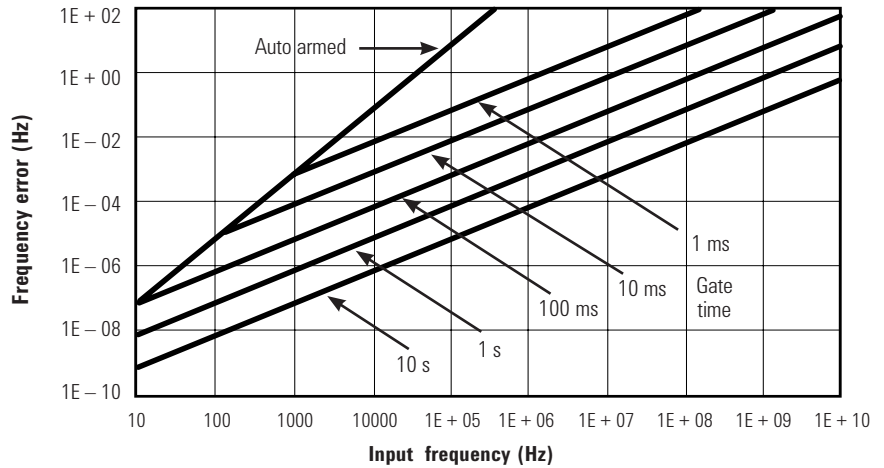

**Graph 2:**  
**Agilent 53131A/181A–Worst case**  
**RMS resolution<sup>7</sup>**  
 (Time or digits arming)

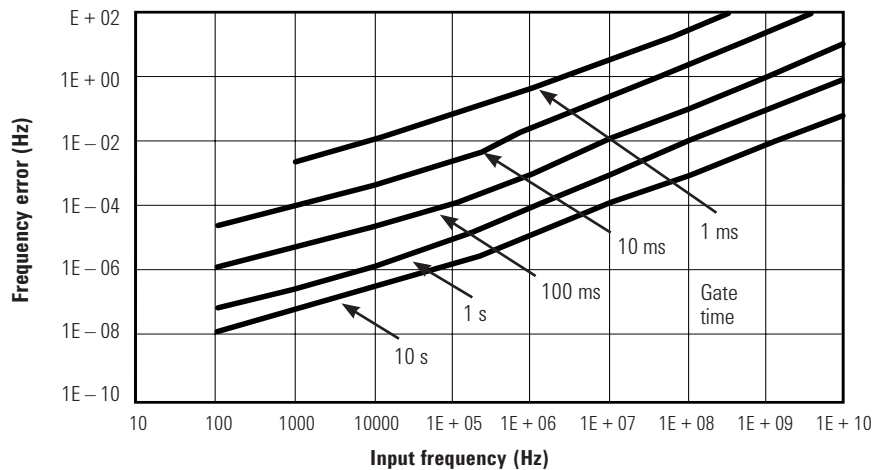

**Graph 3:**  
**Timebase error**


7. Graphs 1, 2, 4 and 5 do not reflect the effects of trigger error. To place an upper bound on the added effect of this error term, determine the frequency error from the appropriate graph and add a trigger error term as follows:

Time or digit arming


$$\text{Frequency error} + \left( \frac{4 \times \sqrt{2} \times \text{Trigger error}}{\text{Gate time} \times \sqrt{\text{Number of samples}}} \right) \times \frac{\text{Frequency or period}}{\text{Gate time}}$$

Automatic or external arming


$$\text{Frequency error} + \left( \frac{\sqrt{2} \times \text{Trigger error}}{\text{Gate time}} \right) \times \frac{\text{Frequency or period}}{\text{Gate time}}$$

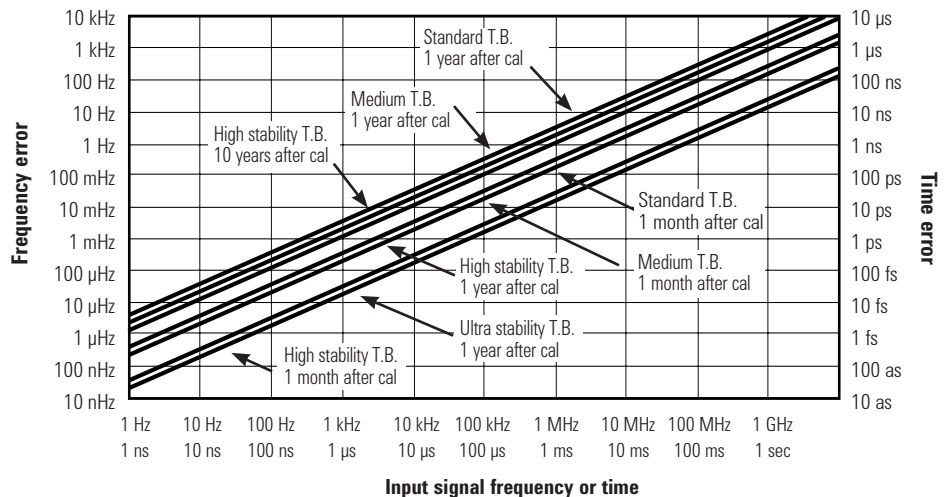

**Graph 4:**  
**Agilent 53132A—Worst case**  
**RMS resolution<sup>7</sup>**  
 (Automatic or external arming)

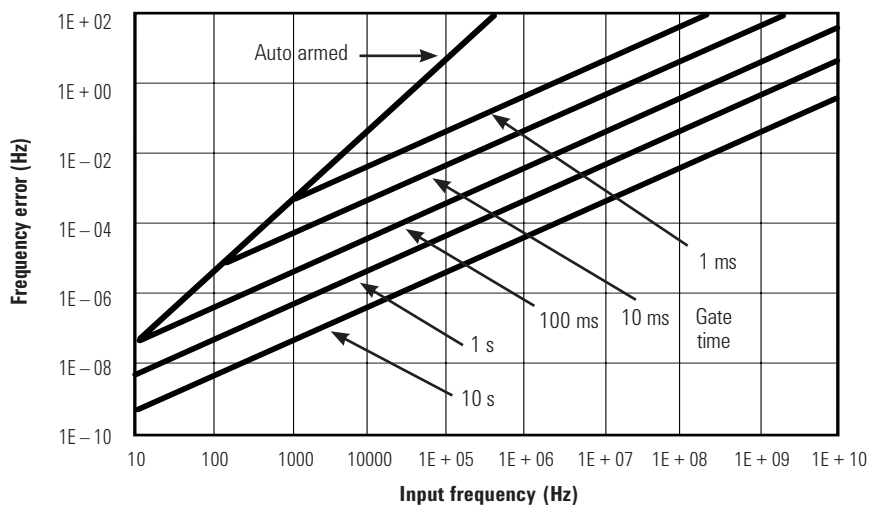

**Graph 5:**  
**Agilent 53132A—Worst case**  
**RMS resolution<sup>7</sup>**  
 (Time or digits arming)

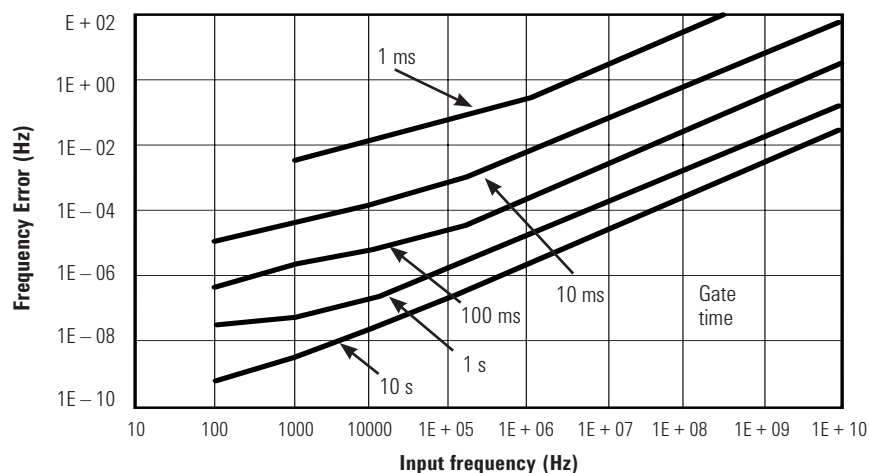

**Graph 6:**  
**Trigger level timing error**  
 (Level setting error and  
 input hysteresis)


7. Graphs 1, 2, 4 and 5 do not reflect the effects of trigger error. To place an upper bound on the added effect of this error term, determine the frequency error from the appropriate graph and add a trigger error term as follows:

Time or digit arming

$$\text{Frequency error} + \left( \frac{4 \times \sqrt{2} \times \text{Trigger error}}{\text{Gate time} \times \sqrt{\text{Number of samples}}} \right) \times \frac{\text{Frequency or period}}{\text{period}}$$

Automatic or external arming

$$\text{Frequency error} + \left( \frac{\sqrt{2} \times \text{Trigger error}}{\text{Gate time}} \right) \times \frac{\text{Frequency or period}}{\text{period}}$$

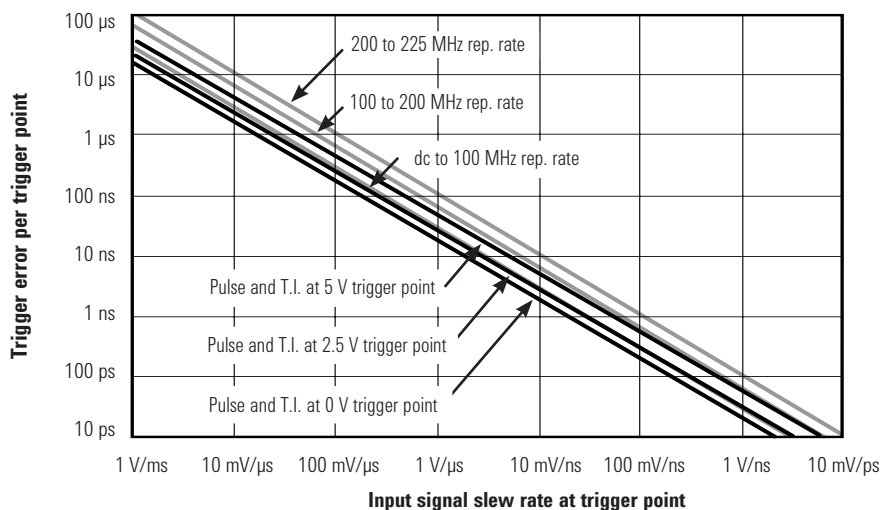

## Measurement Statistics

### Available statistics

Mean, Minimum, Maximum, Standard Deviation

### Number of measurements 2 to 1,000,000.

Statistics may be collected on all measurements or on only those which are between the limit bands. When the limits function is used in conjunction with statistics, N (number of measurements) refers to the number of in-limit measurements. In general, measurement resolution will improve in proportion to N, up to the numerical processing limits of the instrument.

### Measurements

Statistics may be collected for all measurements except peak volts and totalize.

## General Information

### Save and recall

Up to 20 complete instrument setups may be saved and recalled later. These setups are retained when power is removed from the counter.

### Rack dimensions (HxWxD)

88.5 mm x 212.6 mm x 348.3 mm

### Weight

3.5 kg maximum

### Warranty

1 year

### Power supply

100 to 120 VAC  $\pm$  10% -50, 60 or  
400 Hz  $\pm$  10% 220 to 240 VAC  
 $\pm$  10% -50 or 60 Hz  $\pm$  10%

### ac Line selection

Automatic

### Power requirements

170 VA maximum (30 W typical)

### Environment

0°C to 55°C operating  
–40°C to 71°C storage

### Remote Interface

GPIO (IEEE 488.1-1987,  
IEEE 488.2-1987)

### Remote programming language

SCPI-1992.0 (Standard Commands  
for Programmable Instruments)

### Safety

Designed in compliance with IEC-1010,  
UL-3111-1 (draft), CAN/CSA 1010.1

### EMC

CISPR-11, EN50082-1,  
IEC 801-2, -3, -4

### Radiated immunity testing

When the product is operated at maximum sensitivity (20 mVrms) and tested at 3 V/m according to IEC 801-3, external 100 to 200 MHz electric fields may cause frequency miscounts.

## Ordering Information

### 53131A

10 digit/s, 500 ps universal counter

### 53132A

12 digit/s, 150 ps universal counter

### 53181A

10-digit/s RF counter

### Accessories included

Each counter comes with IntuiLink software, standard timebase, and power cord. CD with the following: IntuiLink software, Operating, Programming, Service and Getting Started Guides, a data sheet, and application notes.

### Manual options

(please specify one when ordering)

|            |                |
|------------|----------------|
| <b>ABA</b> | US English     |
| <b>ABD</b> | German         |
| <b>ABE</b> | Spanish        |
| <b>ABF</b> | French         |
| <b>ABJ</b> | Japanese       |
| <b>ABZ</b> | Italian        |
| <b>AB0</b> | Taiwan Chinese |
| <b>AB1</b> | Korean         |
| <b>AB2</b> | Chinese        |

### Other options


|                 |                                                               |
|-----------------|---------------------------------------------------------------|
| <b>Opt. 001</b> | Medium-stability timebase                                     |
| <b>Opt. 010</b> | High-stability timebase                                       |
| <b>Opt. 012</b> | Ultra-high stability timebase (53132A only)                   |
| <b>Opt. 015</b> | 1.5 GHz RF input Ch 2 for 53181A only                         |
| <b>Opt. 030</b> | 3 GHz RF input Ch 3 (Ch 2 on 53181A)                          |
| <b>Opt. 050</b> | 5 GHz RF input with type N connector Ch 3 (Ch 2 on 53181A)    |
| <b>Opt. 124</b> | 12.4 GHz RF input with type N connector Ch 3 (Ch 2 on 53181A) |
| <b>Opt. 060</b> | Rear-panel connectors*                                        |
| <b>Opt. A6J</b> | ANSI Z540 compliant calibration                               |

### \*Opt 060 configuration table

|                    |                                       |
|--------------------|---------------------------------------|
| <b>53131A/132A</b> |                                       |
| Ch1 & Ch2          | front & rear (in parallel)            |
| Ch3                | Opt. 030 rear only, front plugged     |
| Ch3                | Opt. 050/124 front only               |
| Ch2                | Opt. 050/124 front only               |
| <b>53181</b>       |                                       |
| Ch1                | front & rear (in parallel)            |
| Ch2                | Opt. 015/030 rear only, front plugged |
| Ch2                | Opt. 050/124 front only               |

### Accessories

|               |                                                                                                                                                                                                                                            |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>34131A</b> | Hard carrying case                                                                                                                                                                                                                         |
| <b>34161A</b> | Accessory pouch                                                                                                                                                                                                                            |
| <b>34190A</b> | Rackmount kit: designed for use with only one instrument, mounted on either the left or the right side of the rack.                                                                                                                        |
| <b>34191A</b> | 2U dual flange kit: secures the instrument to the front of the rack. This kit can be used with the 34194A dual lock link kit to mount two half-width, 2U height instruments side-by-side.                                                  |
| <b>34194A</b> | Dual lock link kit: recommended for side-by-side combinations and includes links for instruments of different depths. This kit can be used with the 34191A 2U dual flange kit to mount two half-width, 2U height instruments side-by-side. |

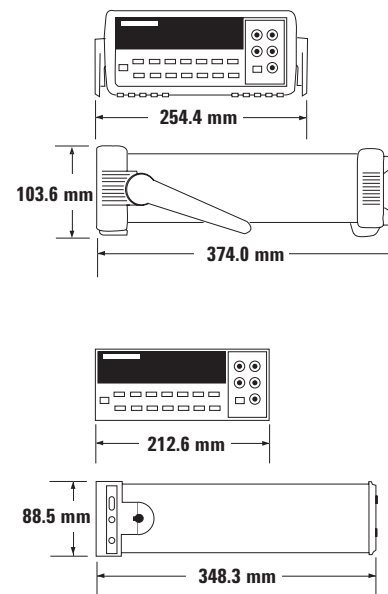



### Agilent Email Updates

[www.agilent.com/find/emailupdates](http://www.agilent.com/find/emailupdates)

Get the latest information on the products and applications you select.



[www.axistandard.org](http://www.axistandard.org)

AdvancedTCA® Extensions for Instrumentation and Test (AXIe) is an open standard that extends the AdvancedTCA for general purpose and semiconductor test. Agilent is a founding member of the AXIe consortium.



[www.lxistandard.org](http://www.lxistandard.org)

LAN eXtensions for Instruments puts the power of Ethernet and the Web inside your test systems. Agilent is a founding member of the LXI consortium.



[www.pxisa.org](http://www.pxisa.org)

PCI eXtensions for Instrumentation (PXI) modular instrumentation delivers a rugged, PC-based high-performance measurement and automation system.

### Agilent Channel Partners

[www.agilent.com/find/channelpartners](http://www.agilent.com/find/channelpartners)

Get the best of both worlds: Agilent's measurement expertise and product breadth, combined with channel partner convenience.



Agilent Advantage Services is committed to your success throughout your equipment's lifetime. To keep you competitive, we continually invest in tools and processes that speed up calibration and repair and reduce your cost of ownership. You can also use Infoline Web Services to manage equipment and services more effectively. By sharing our measurement and service expertise, we help you create the products that change our world.

[www.agilent.com/find/advantageservices](http://www.agilent.com/find/advantageservices)



[www.agilent.com/quality](http://www.agilent.com/quality)

[www.agilent.com](http://www.agilent.com)

[www.agilent.com/find/counters](http://www.agilent.com/find/counters)

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

[www.agilent.com/find/contactus](http://www.agilent.com/find/contactus)

### Americas

|               |                |
|---------------|----------------|
| Canada        | (877) 894 4414 |
| Brazil        | (11) 4197 3500 |
| Mexico        | 01800 5064 800 |
| United States | (800) 829 4444 |

### Asia Pacific

|                    |                |
|--------------------|----------------|
| Australia          | 1 800 629 485  |
| China              | 800 810 0189   |
| Hong Kong          | 800 938 693    |
| India              | 1 800 112 929  |
| Japan              | 0120 (421) 345 |
| Korea              | 080 769 0800   |
| Malaysia           | 1 800 888 848  |
| Singapore          | 1 800 375 8100 |
| Taiwan             | 0800 047 866   |
| Other AP Countries | (65) 375 8100  |

### Europe & Middle East

|                |                      |
|----------------|----------------------|
| Belgium        | 32 (0) 2 404 93 40   |
| Denmark        | 45 70 13 15 15       |
| Finland        | 358 (0) 10 855 2100  |
| France         | 0825 010 700*        |
|                | *0.125 €/minute      |
| Germany        | 49 (0) 7031 464 6333 |
| Ireland        | 1890 924 204         |
| Israel         | 972-3-9288-504/544   |
| Italy          | 39 02 92 60 8484     |
| Netherlands    | 31 (0) 20 547 2111   |
| Spain          | 34 (91) 631 3300     |
| Sweden         | 0200-88 22 55        |
| United Kingdom | 44 (0) 131 452 0200  |

For other unlisted countries:

[www.agilent.com/find/contactus](http://www.agilent.com/find/contactus)

Revised: June 8, 2011

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2006, 2011  
Published in USA, November 8, 2011  
5967-6039EN



**Agilent Technologies**