

CHROMOFLEX**Barthelme**
LED Solutions

Full-Spectrum-Colour-Control



Chromoflex-Module V1.0 (Model „I350“)



Infrared-Remote Control(s) (optionally)

Overview

Chromoflex is an excellent value full colour control and was designed for use with modern High-Power RGB LEDs. There are two models available „I350“ for use with constant current LEDs and „STRIPE“ for use with LED stripes. Chromoflex is able to synthesise up to 16 millions of different colours with 3 (optionally 4) channels. Hence it is the ideal control for all kind of sophisticated effect illuminations, deco and wellness lighting.

Chromoflex comes with several built in effects (from calming colour change, up to show effects). External manual buttons, DIP switches or a PC software can be used to control the modules. Up to 30 modules can be connected as a network.

The complete network can be controlled by standard push-buttons or (very convenient) with a infrared remote control

Usage

The modules were designed for in-house use in dry places, but the LEDs (if suited) might also be used in wet environments or outdoor.

Important: The modules must be operated with a power supply, that is matched to the used LEDs! Other loads than LEDs (especially inductive loads like motors, coils, ..) might destroy the module.

Safety Instructions

The modules might produce some heat. Care must be taken for unrestricted air ventilation.

Connecting the power in reverse polarity (even for a short time) can destroy the module. A fuse is built in, but it can only be changed by soldering.

Important: It is guaranteed by design, that the Chromoflex modules will never generate any higher voltage than the supply voltage. This makes the module an ideal solution for use in low-voltage areas, like pools, steam baths, SPAs, ...

Do not modify the electronics. Regard the official regulations for electrical devices (like DIN, VDE, EN), especially if the LEDs are used in wet areas! This product is not a toy, keep away from children!

We decline any liability, loss, or damage caused by improperly used modules! Also guarantee is lost in such cases.

Also LEDs can get quite hot. We strongly recommend to take care, that the maximum operating temperature is not exceeded, because this might reduce the expected life time of the LEDs significantly.

WARNING #1: LED light can have very high intensity, even if dimmed. Some modern LEDs even fall under the lasers marking obligation. Particularly in connection with optics also weak LEDs can become very dangerous. Staring into LEDs can cause irreparable damage to the eye's retina. Hence: NEVER STARE INTO THE BEAM. Use diffusers to spread the intensity!

WARNING #2: Please be aware that LED light may cause side effects, because this light can change intensity very fast! Changing light can affect the perception. Light pulses can release complaints or seizures to humans with inclination to epilepsy.

Contents


Each Chromoflex is shipped with (this) short manual, a connector for power supply and a connector for the network interface, a short pigtail (cable) for connecting up to 4 external buttons. The connector cable to a PC (RS232) is available as separate item or can easily be made self (see software documentation).

The Infrared-Remote Control (plus receiver) is an optional accessory.

Software / further information

Several Chromoflex modules can be connected together as a network (up to 30 should be no problem, but this might vary with the cable length and cable type).

For programming the software „Chromoflex Editor“ is free for download from our Internet site (address see end of manual). A COM-port (RS232) or a standard USB/RS232 converter is required.

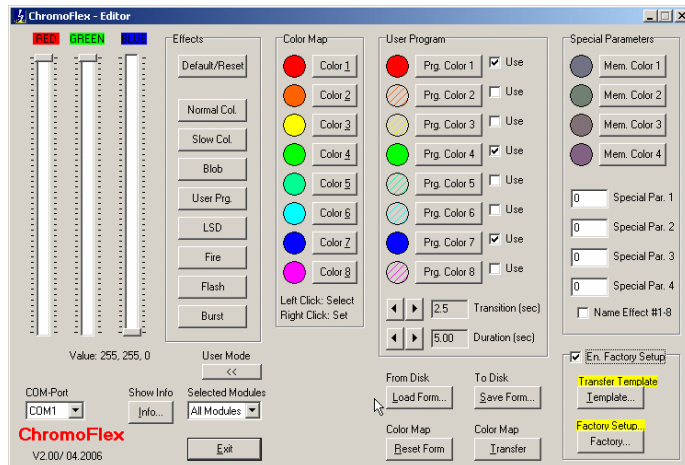

Connecting the LEDs / Power Supply

Important: The module must be operated with a power supply, that is matched to the used LEDs!

Important: Matched LED lamps, including power supplies are available from us. Also we supply complete kits, including plug-n-play connectors.

Important: Improper power supplies can lead to malfunctions, (unwanted) flickering effects or - as worst case - overheating. We strongly recommend to use high-quality (stabilised) switching power supplies!

Of course, one power supply can be used for several Chromoflex modules in parallel (if the maximum output power of the supply is regarded).

The minimum voltage for correct operation is 7 Volts, maximum voltage is 24 Volts (+ 5%).


Model „I350“

This model has 3 lines of 350 mA each. The power supply must be matched to the number of used LEDs in series: most high-power LEDs for 350mA constant current require around 3 - 3.7 Volts (depending on the colour, type and manufacturer). Normally green and blue need the highest voltages, the forward voltage of red is normally much lower. The „I350“ itself need additionally about 0.5 Volts to maintain line regulation.

Too high voltages will cause unnecessary heat in the module. For internal temperatures $\geq 80^{\circ}\text{C}$ the module will power off (reversible).

Constant current LEDs must be connected in series. Depending on the number we recommend as voltage for the power supply (guidance value, depending on the used LEDs):

1 RGB-Group	- abt. 7 - 7.5	Volt Power supply	(abt. 7 Volt is the minimum operating voltage of the electronics)
2 RGB-Groups	- abt. 7.5 - 9	Volt Power supply	
3 RGB-Groups	- abt. 10 - 13	Volt Power supply	
4 RGB-Groups	- abt. 12 - 15	Volt Power supply	
5 RGB-Groups	- abt. 15 - 18	Volt Power supply	
6 RGB-Groups	- abt. 18 - 24	Volt Power supply	

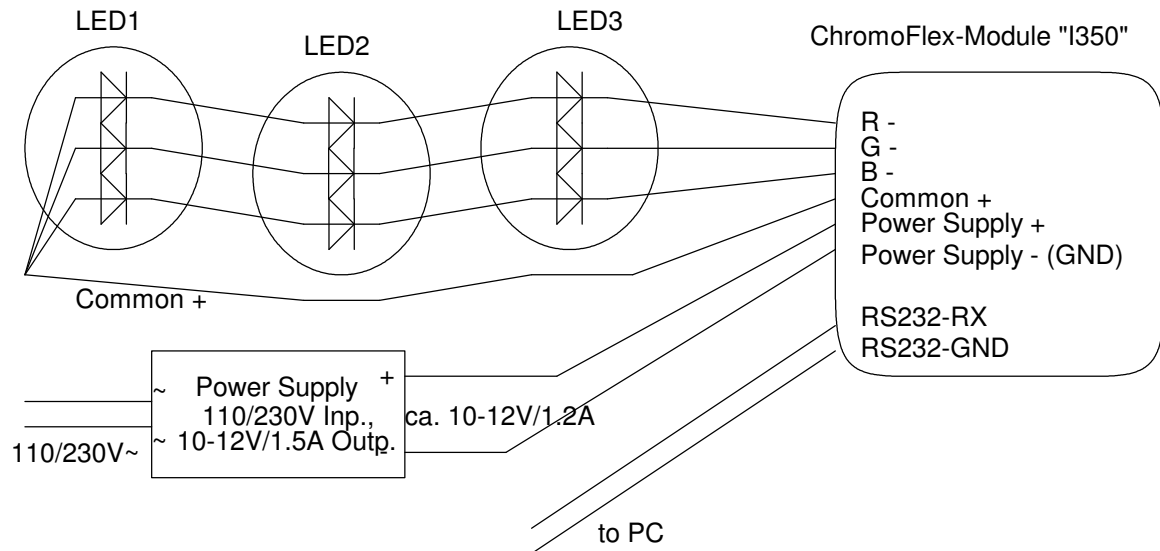

The example above uses 3 LEDs. A 4 wire cable is used, where 1 wire is a simple pass-through for the common +.

chromoflex modules will not emit high frequency signals, even for longer lines. Hence even cable lengths of 10 Mtr. are no problem at all, if the above calculations are considered (like in contrast to many electronic transformer for halogen lamps).

Hint: Copper has a resistance around 0.02 Ohms per Mtr. for a 1mm² conductor.

Important: If the selected supply voltage is much to low, the LEDs might not operate with maximum brightness or some flickering can be noticed. If the supply voltage is to high, unnecessary heat must be dissipated. Complete sets supplied by us, are already matched. If using other switching supplies, often there is a small potentiometer on the supply, where the output voltage can be adjusted within several percent.


We recommend to select the lowest voltage, where all the LEDs work at full brightness without disturbance.

Each „I350“ module will draw 1.2 Ampere as maximum from the supply (all channel full on).

Important note: The optimal operating voltage of the „I350“ module is 12 Volts and using 3 industrial standard 3*1 Watt RGB-LEDs, serial connection. For the design the following assumptions have been made:

- At least 2 channels drive LEDs with higher forward voltage (green, blue)
- The total continuous power dissipation in the module is ≤ 2.5 Watt, the module is not designed to run continuously at full load (even mixed „white“ normally requires only 66% full load).
- Good air ventilation is needed, environment air temperature should be ≤ 30 °C

If these limits are exceeded for longer periods (especially if using more than 3 LEDs in serial connection), we recommend to reduce the dissipated heat in the module, by using external power resistor to catch a good deal of the possible heat:

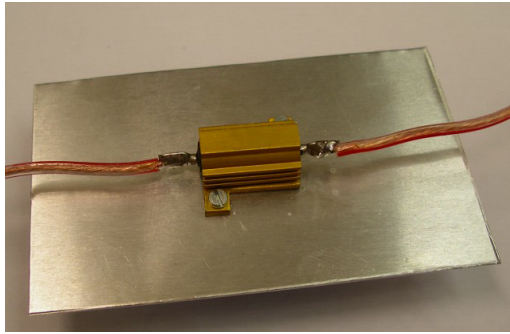

In the picture a low cost 5 Watts power resistor, mounted on an aluminium plate was used. Its value can be calculated with the formula:

$$R = U / 0,35 \quad \text{and} \quad P = U * 0,35$$

(U is the surplus Voltage in Volts, R the resistance, P the load the resistor will take). An example: If using 6 red LEDs in series with a forward voltage of $6 * 2.8$ Volts and operating the module with 24 Volts, the resistor shall catch 6 volts so that the electronics has about 2 volts headroom for regulation. Hence the resistor should have 18 Ohms and 5 Watt maximum load.

Model „STRIPE“


This model does not have any internal current regulator. So the supply voltage is passed through and the voltage of the power supply must match the voltage of the LED stripe.

Regarding any possible voltage drop, please see the previous paragraph. Cable lengths up to 5 Mtr. are allowed.

Note: We found LED stripes of 10 Volts, 12 Volts and 24 Volts.

Note: We also deliver (flexible) LED stripes (on wheels) with a length of up to 4 Mtrs. Each colour will draw up to 2 Amperes at 12 Volts.

The model „STRIPE“ is designed for currents up to 2.5 Ampere per channel (7.5 Ampere in total) at an operating Voltage of 12 Volts. For 24 Volts maximum is 1.25 Ampere per channel.

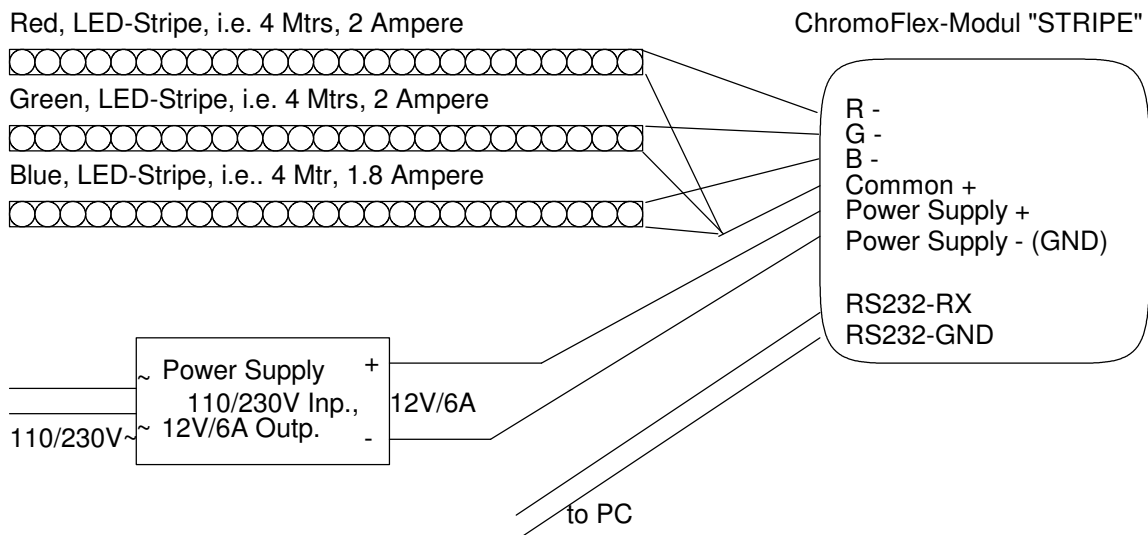

First Test


By using the enclosed connectors installation is very easy.

As first test the module will perform a standard colour change (this is the factory default). This effect consists of 8 colours, each hold for 5 seconds, colour transition time is 2.5 seconds.

Diagnostic LED: The modules are equipped with a small LED. For regular operation this led will change all 2 seconds and it will flicker if data is transmitted (over the Bus).

Manual Buttons

Each Chromoflex module is equipped with 4 inputs for buttons to select the effects:

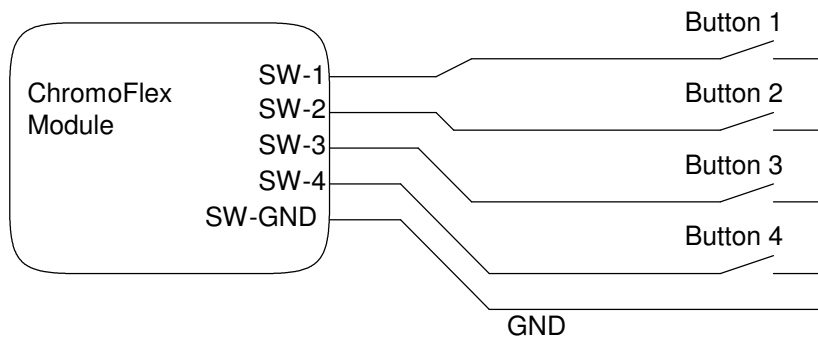

Cable length for the buttons may be up to 10 Mtrs. We recommend to use shielded cables for distances over 1 Mtr, if operated in a (electrically) noisy environment. The shield should be connected to SW-GND.

Remark: It is also possible to use remote controls or relay switches instead of manual buttons...

Networking


Many Chromoflex modules might be operated in a network. This means each module can either send or receive data! For this the connectors RS232-RX and RS232-GND are required.

The precondition for network operation is, that all modules of the network have a common GND of the power supplies.

As factory default, if a button is pressed on any module, it will pass this command to all other connected modules over the network.

Remark: the data transmission protocol is based on a mathematical algorithms, that is very robust against transmission errors.

Important: For correct operation is required to add a resistor of around 10 kOhms (Low Cost) to the bus. This resistor is included in the PC adapter kits, available from us. Shielded low frequency cable is very well suited for the network lines. For short networks (< 5 Mtrs.) Also unshielded cable is OK. The 10 kOhms resistor should be connected between RS232-RX and RS232-GND somewhere in the network, from where also is the cable to the PC. The connection from module to module requires only RS232-RX and the common GND.

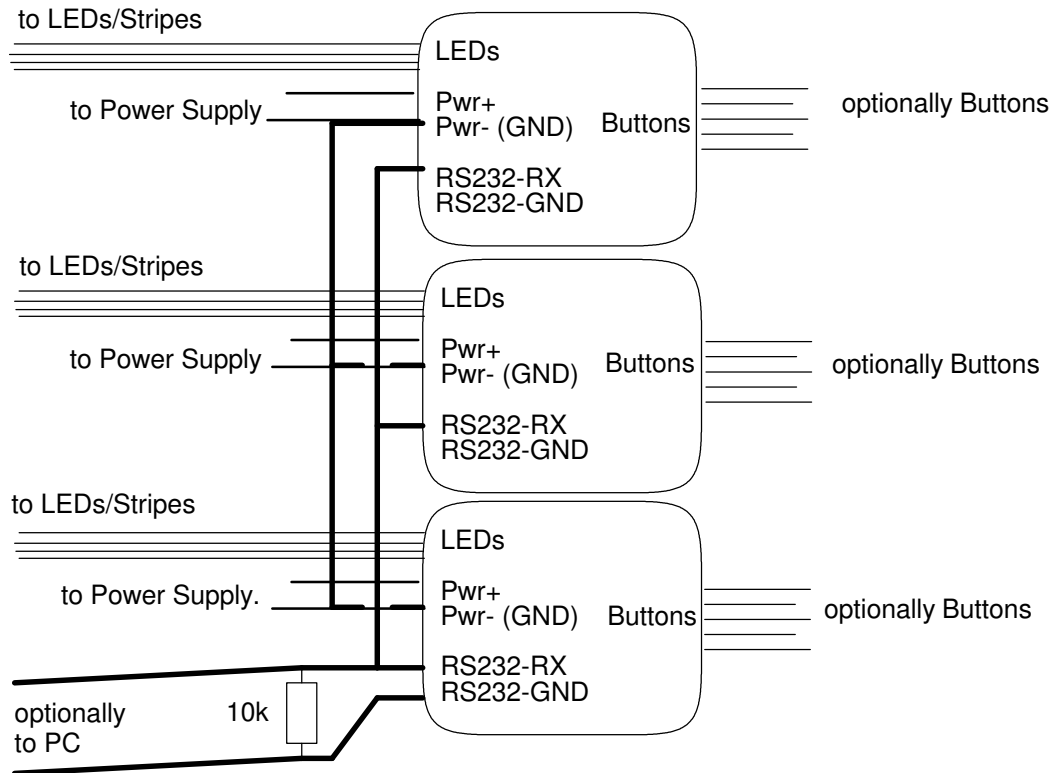

In the examples above 3 modules build a network. Please note: the module interconnection are 2 lines: GND and RS232-RX.

Factory preprogrammed Effects

Each module is shipped with 8 factory preprogrammed effects:

- Effect 1: Standard colour change, colour change each 5-60 seconds (depending on the internal DIP switches). Colour transition time: 2.5 seconds
- Effect 2: Slow (very soft) colour change each 30-180 seconds (depending on the internal DIP switches). Colour transition time: 10 seconds
- Effect 3: Randomly faded colours „Blob“
- Effect 4: User defined-colour change (can be changed by the „Chromoflex Editor“ software for PC, default is red-green-blue)
- Effect 5: Randomly changed colours „LSD“
- Effect 6: Simulation of a fire „Fire“
- Effect 7: Simulation of a thunderstorm with lightnings („Flash“)
- Effect 8: Randomly coloured flashes („Burst“)

If you would like to edit a own colour change, this can be done very easily with our free software of PC „Chromoflex Editor“. This software can be downloaded for free from our Internet site (see end of this manual).

Note: The Chromoflex-Modules are based on a programmable microprocessor, that is also capable of performing other complex tasks. We will be happy to realise your ideas for professional products. Don't hesitate to send us on email.

The 8 effects can be selected by the 4 buttons. Each button selects two effects:

- Button 1: 1. pressed: effect 1 (normal colour change)
 2. pressed: effect 5: „LSD“
- Button 2: 1. pressed: effect 2 (Soft colour change)
 2. pressed: effect 6: Fire „Fire“
- Button 3: 1. pressed: effect 3: „Blob“
 2. pressed: effect 7: Lightnings „Flash“
- Button 4: 1. pressed: effect 4: User colour change
 2. pressed: effect 8: „Burst“

Important: Shutdown: if any button is pressed longer than abt. 3 seconds, all modules are switched of, any further button will start its assigned effects,

The DIP-Switches - Default-Effects

Some settings (i.e. the default effect after reset or power on) can be preset with the internal DIP switches. For this the case of the module must be opened (see attachment).

Important: Please do not touch any of the electronic components, because off the risk of damage by electrostatic discharge. We recommend to use a small non-conductive tool to change the DIP switches.

The switches are separated in 3 groups (as imprinted):

DIP 1,2: These two switches control hold time for effects 1 and 2 (colour changes):

DIP 1	DIP 2	Effect 1	Effect 2	
Off	Off	5 sec.	30 sec.	(default)
On	Off	10 sec.	60 sec.	
Off	On	30 sec.	120 sec.	
On	On	90 sec.	180 sec.	

DIP 3,4,5: These switches are for the default effect after reset or power on.

DIP 3	DIP 4	DIP 5	Effect
Off	Off	Off	Effect 1: Standard colour change, colour transition time 2.5 seconds (default)
On	Off	Off	Effect 2: Slow colour change, colour transition time 10 seconds (default)
Off	On	Off	Effect 3: Randomly faded colours „Blob“
On	On	Off	Effect 4: User defined colour change (can be changed by PC software)
Off	Off	On	Effect 5: Randomly changed colours „LSD“
On	Off	On	Effect 6: Simulation Fire „Fire“
Off	On	On	Effect 7: Simulation Lightnings („Flash“)
On	On	On	Effect 8: Randomly coloured flashes („Burst“)

DIP 6,7,8 determine the „Group“ of a module. Because the modules can be connected as a network, it should be possible to send command only to a part of the network too. This is what we call a „Group“. In example if several modules are used for a pool illumination (ceiling, walls under-water), these modules could be separated into three groups. Now it possible to send command i.e. only to modules on the ceiling. More information can be found in the following paragraph „A Pool Scenario“..

Another important use of the Groups is the starting colour for the preprogrammed colour changes after power on or reset: To achieve impressive effects - even without using a network or PC software - the Groups can be used. Seven different starting colours are available:

DIP 6	DIP 7	DIP 8	Group	Starting colour	Index of starting colours
Off	Off	Off	(none)	Red	1 (Default)
On	Off	Off	Group 1	Green	4
Off	On	Off	Group 2	Blue	7

On	On	Off	Group 3	Magenta	8
Off	Off	On	Group 4	Orange	2
On	Off	On	Group 5	Light Blue	6
Off	On	On	Group 6	Yellow	3
On	On	On	Group 7	Red	1

Remark: The colour „indigo“ with index 5 is not available by design.

Important: All changes of the DIP switches are recognised only after reset or power on!

Colour Tables - „Cold- and Warm Colours“

Remark about the indices of the starting colours: The Chromoflex modules synthesise the colours by look-up tables. These tables can be changed by the PC software „XeroFlex Editor“. So it is no problem to i.e. remove all „cold“ colours from the colour maps (or vice versa). Or it is easy to remove unwanted colours (keyword „corporate colours“).

These effects use the colour tables (2 are available):


Effect 1:	Standard colour change (table 1)
Effect 2:	Slow (soft) colour change each 30-180 Seconds (table 1)
Effect 3:	Randomly faded colours „Blob“ (table 1)
Effect 4:	User colour change (default is red-green-blue, table 2)
Effect 5:	Randomly changed colours „LSD“ (table 1)
Effect 8:	Randomly coloured flashes („Burst“) (table 1)

Infrared-Remote-Control - Installation


For controlling one or more modules (connected as a network) also the infrared control can be used. Only one single module within a network should be equipped with an infrared receiver. The receiving module will forward any received commands to the network.

Important: If more than one infrared receiver is used, communication problems may occur. It is only acceptable to use more than one receiver, if the receivers are totally independent (i.e. If located in different rooms).

Important: In some rare cases it is possible, that other devices (TV, Video, ...) might react to the Chromoflex infrared control (or vice versa). In such cases please separate the optical paths.

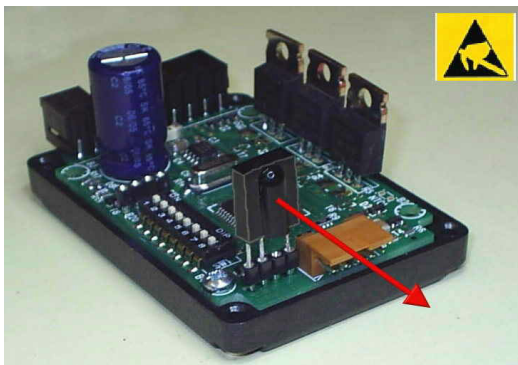

Chromoflex module with (plugged) receiver

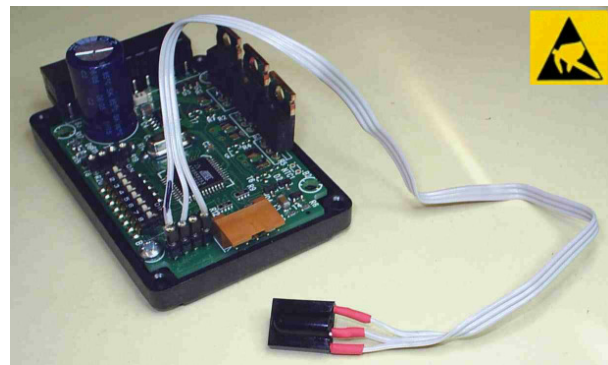

Module with extended cable (abt. 20 cm)

If required the cable for the infrared receiver can be extended up to 20-100 cm. For lengths longer than 20 cm a shielded cable is recommended. The shield can be connected to the free pin of the receiver's socket. If touching electronic parts, please regard the common known handling instructions for electrostatic sensitive devices (ESD). Please discharge yourself.


Important: If polarity of the infrared receiver is reversed, receiver and Chromoflex module can be damaged!

Infrared-Remote-Control - Operating

In general most universal remote control can be used, whereas only 6 keys are used. The small „Zapper“ from OFA is a popular model and can be used without any further settings. Other models like the „Promo 8“ require a setting as Philips device (for Promo 8 this is code 0060):



No Code required
1-8: Effects
PRG: Color sel.
Others: see manual

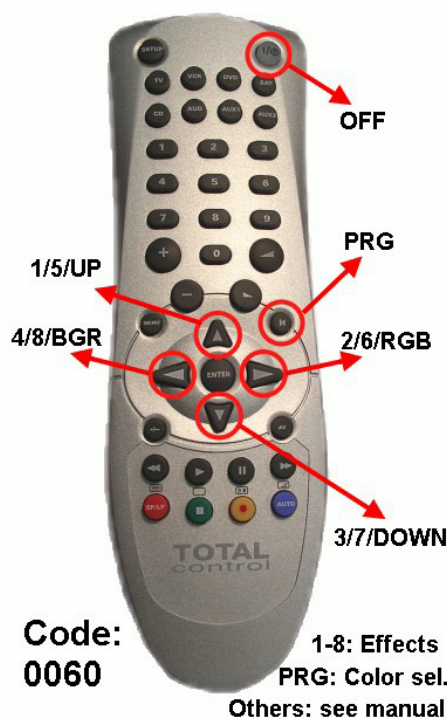

Code: 0060
1-8: Effects
PRG: Color sel.
Others: see manual

The 4 large buttons on the remote control are equivalent to the 4 „standard“ buttons (see first page, („+“ is button 1, „Right“ is button 2, „-“ is button 3, „Left“ is button 4).

Additionally the „Off“-button can be used to switch off all Chromoflex modules.

By pressing the small button in the middle („PRG“ or „Mute“), the programming mode is entered. At first all modules are stopped, so the current colour will remain. With buttons 2 and 4 („Right“ and „Left“) the active colour can be set (the active colour will blink while button 2 or 4 is pressed). Now the active colour (as component) can be changed in 8 steps. The colour of the receiving module will be transmitted to all other modules in the network, hence giving a homogenous colour for all modules.

The programming mode can only be left by pressing the „Off“-button!

Hint: Try to set up the colour „white“: White consists of 100% green and about 30-50% of Red and Blue (depending on the used LEDs).

A Pool-Scenario

In this last paragraph we will describe a small „real world“ example:

Let's assume you would like to illuminate a pool with several Chromoflex modules, but without using any PC software or network:

The lamps are separated into 3 groups:

Group „Under-Water“: Start with „Blue“ as first colour.
Group „Walls“ Start with „Green“
Group „Ceiling“ Start with „Red“.

The colours should change slowly and each colour should be hold for 2 minutes. All modules should transit to the next colour simultaneously.

This task is easy to solve:

1.) Because each Chromoflex contains a precise „Quartz crystal oscillator“, all modules are running quite synchronously after reset or power on, the deviation between the modules is only a few seconds per day. Normally a pool illumination does not run continuously, hence the power-on is sufficient for synchronisation.

2.) All modules are set to effect 2 (slow color change) with a holding time of 120 secs. Per colour.

3.) The starting colour is determined by the group:

As a result this are the settings for the DIP switches:

DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	DIP 6	DIP 7	DIP 8	Goup
Off	On	On	Off	Off	Off	On	Off	„Under-Water“
Off	On	On	Off	Off	On	Off	Off	„Walls“
Off	On	On	Off	Off	On	On	On	„Ceiling“

That's really all to do!

Software 1 - 2 - 3

1.) We offer the „Chromoflex Editor“ for free download from our Internet site. The software does contain additional documentation, not covered by this manual.

2.) We are planning to publish drivers for all common PC programming languages, so that any interested user is able to integrate the Chromoflex in own software.

3.) For interested professional users, we can help in implementing access to the Chromoflex from own „embedded controls“. Our development team has large experience in all kind of embedded developments.

Random Effects

Each Chromoflex module can generate individual random effects. Because the random coincidence is based on a mathematical calculation, only modules with different serial numbers appear truely different. Depending on the production lot of the modules this might require that the user once initialises each modules with an individual serial number (else all modules run the same „random sequence“). Generating an individual serial number is described in the manual for the PC-software „Chromoflex Editor“.

Technical Data

Operating Voltage: 7 - 24 Volt (+ 5%), stabilised.

Important: The used power supply must be able to bear pulsed loads. Unstabilised or too weak power supplies can cause unwanted flickering effects, especially during colour changes!

Module current (without LED lamps): ca. 20 mA

Operating temperature: 0°C - max. +50°C (recommended: ≤ 30°C) (Use only in dry places with sufficient air ventilation)

Modulation system: The Chromoflex modules are based on a digital System, named „Vector-Fractal-Modulation“ or „VFM“. This modulation system was optimised for minimising load on power supplies and has considerable advantages compared to traditional systems. The modulation frequency is in the range from 120 Hz up to (max.) 240 Hz. Patent pending.

Maximum cable inductance can be calculated as $L_{\text{max}} = 40\mu\text{H}/(\text{maximum current})$. Note: Standard control cable normally has an inductance of around 0.4-0.8 $\mu\text{H}/\text{Mtr}$.

Model „I350“

Pulsed constant current abt. 350 mA (+ 5%, -20%) per channel (3 channels).

Model „Stripe“

Pulsed constant voltage, maximum current 2.5 Ampere per channel (3 channels) at 12 Volts, and 1.25 Ampere per channel at 24 Volts.


Contact / Internet

Download of PC-Software, data sheets , technical support:

www.chromoflex.com , www.barthelme.de

Contact (technical support only by Internet / Email):

www.barthelme.de

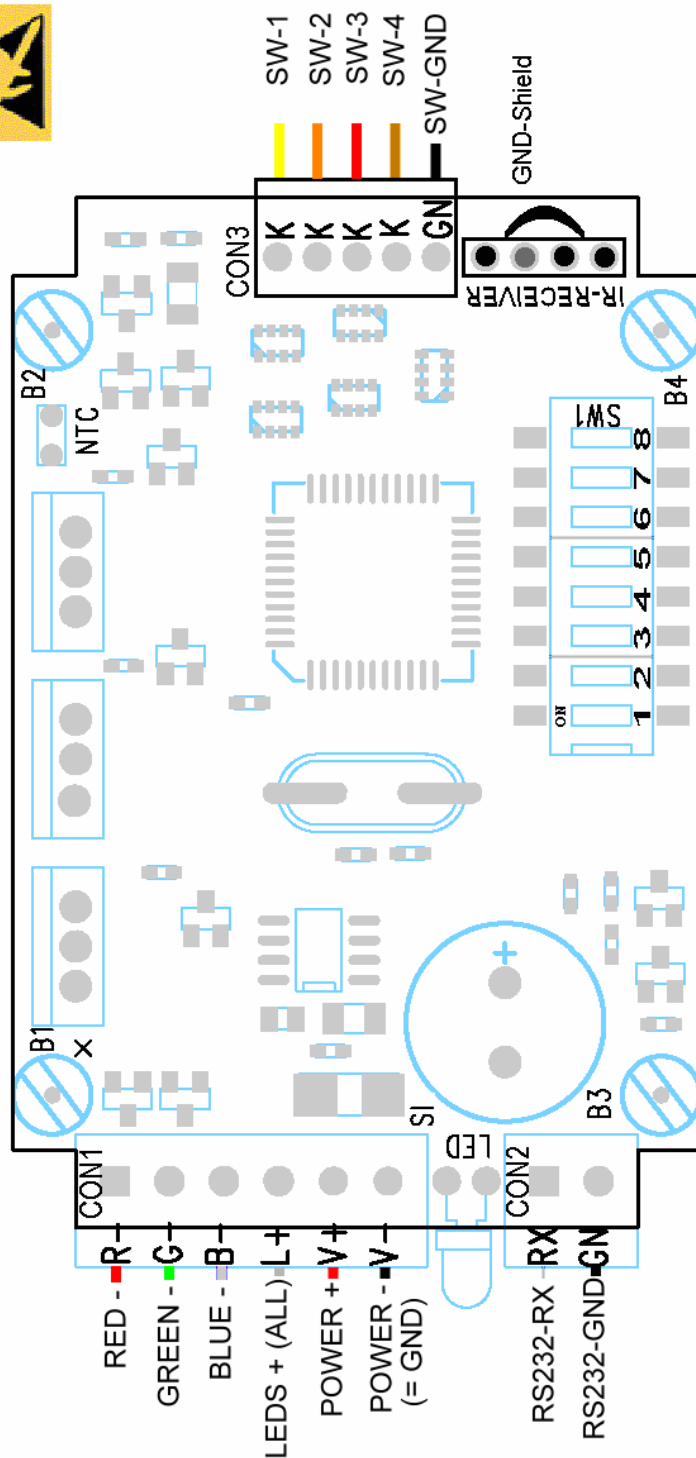Attachment - Module Pinout:**ChromoFlex - Models "I350" (3x0-350 mA) and "Stripe" (for LED Stripes)**

DIPSWITCH				DIPSWITCH				DIPSWITCH				DIPSWITCH			
1	2	Eff1	Eff2	3	4	5	(Factory Default)	6	7	8	Group	Start Color for Eff1/2			
-	-	5	30	-	-	-	Eff1 (Standard Transition, Trans. Time see left)	-	-	-	No Group	1	1 (Default: Red)		
ON	-	10	60	ON	-	-	Eff2 (Slow Transition, Trans. Time see left)	ON	-	-	Group 1	4	4 (Default: Green)		
-	ON	30	120	-	ON	-	Eff3 ("Blobs", Random Colors)	-	ON	-	Group 2	7	7 (Default: Blue)		
ON	ON	60	180	ON	ON	-	Eff4 (User Sequence, PC programmable with XD.EXE)	ON	ON	-	Group 3	8	8 (Default: Magenta)		
-	-	-	-	-	-	ON	Eff5 ("LSD", Random Color Change)	ON	-	ON	Group 4	2	2 (Default: Orange)		
-	-	-	-	ON	-	ON	Eff6 ("FIRE")	ON	-	ON	Group 5	6	6 (Default: Light Blue)		
-	-	-	-	-	ON	ON	Eff7 ("FLASH")	-	ON	ON	Group 6	3	3 (Default: Yellow)		
-	-	-	-	ON	ON	ON	Eff8 ("BURSTS", Random Color Bursts)	ON	ON	ON	Group 7	1	1 (Default: Red)		
SPEED for Eff1/Eff2				Default Effect after Reset/Power On				Group and Start Color for Eff1/2							