


#### **FEATURES AND BENEFITS**

- $\pm 2.5$  A, 35 V output rating
- Low  $R_{DS(on)}$  outputs, 0.28  $\Omega$  source, 0.22  $\Omega$  sink typical
- Automatic current decay mode detection/selection
- 3.0 to 5.5 V logic supply voltage range
- Mixed, fast, and slow current decay modes
- · Home output
- Synchronous rectification for low power dissipation
- Internal UVLO and thermal shutdown circuitry
- Crossover-current protection

# Package: 28-pin TSSOP (suffix LP) with Exposed Thermal Pad

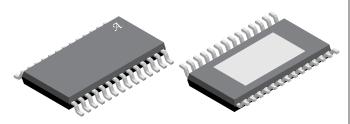

Not to scale

#### **DESCRIPTION**


The A3977 is a complete microstepping motor driver, with built-in translator. It is designed to operate bipolar stepper motors in full-, half-, quarter-, and eighth-step modes, with output drive capability of 35 V and ±2.5 A. The A3977 includes a fixed off-time current regulator that has the ability to operate in slow-, fast-, or mixed-decay modes. This current-decay control scheme results in reduced audible motor noise, increased step accuracy, and reduced power dissipation.

The translator is the key to the easy implementation of the A3977. Simply inputting one pulse on the STEP input drives the motor one step (two logic inputs determine if it is a full-, half-, quarter-, or eighth-step). There are no phase-sequence tables, high-frequency control lines, or complex interfaces to program. The A3977 interface is an ideal fit for applications where a complex microprocessor is unavailable or over-burdened.

Internal synchronous-rectification control circuitry is provided to improve power dissipation during PWM operation.

Internal circuit protection includes thermal shutdown with hysteresis, undervoltage lockout (UVLO) and crossover-current protection. Special power-up sequencing is not required.

The A3977 is supplied in a thin (<1.2 mm), 28-pin TSSOP with an exposed thermal pad (suffix LP). The A3977 is a lead (Pb) free, with 100% matter tin leadframe plating.

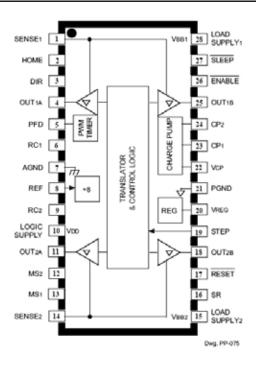

**Pin-out Diagram** 

## Microstepping DMOS Driver with Translator

### **SPECIFICATIONS**

#### **Selection Guide**

Part Number	Part Number Packing		Ambient Temperature, T <sub>A</sub> (°C)
A3977SLPTR-T	4000 per reel	28-pin TSSOP	-20 to 85

#### **Absolute Maximum Ratings**


Characteristic Symbol Notes		Rating	Units	
Load Supply Voltage	V <sub>BB</sub>		35	V
Logic Supply Voltage	V <sub>DD</sub>		7.0	V
Lasia Ingut Valtaga Danga	.,,	Pulsed, t <sub>w</sub> > 30 ns	-0.3 to V <sub>DD</sub> + 0.3	V
Logic Input Voltage Range	V <sub>IN</sub>	V <sub>IN</sub> Pulsed, t <sub>w</sub> < 30 ns		V
Reference Voltage	Reference Voltage V <sub>REF</sub>		$V_{DD}$	V
Sense Voltage (DC)	V <sub>SENSE</sub>		0.5	V
Output Current  Output Current  Output Current  Output Current rating may be limited by duty cycle, ambient temperature, and heat sinking. Under any set of conditions, do not exceed the specified current rating or a junction temperature of 150°C.		±2.5	А	
On anoting Ameliant Tananaustura	_	Range K	-40 to 125	°C
Operating Ambient Temperature	I <sub>A</sub>	T <sub>A</sub> Range S		°C
Maximum Junction Temperature	T <sub>J</sub> (max)		150	°C
Storage Temperature	T <sub>stg</sub>		-55 to 150	°C

#### **Thermal Characteristics**

Characteristic	Symbol	Test Conditions*	Value	Units
Package Thermal Resistance	$R_{\theta JA}$	Package LP, on 4-layer PCB based on JEDEC standard	28	°C/W

<sup>\*</sup>Additional thermal information available on the Allegro website.



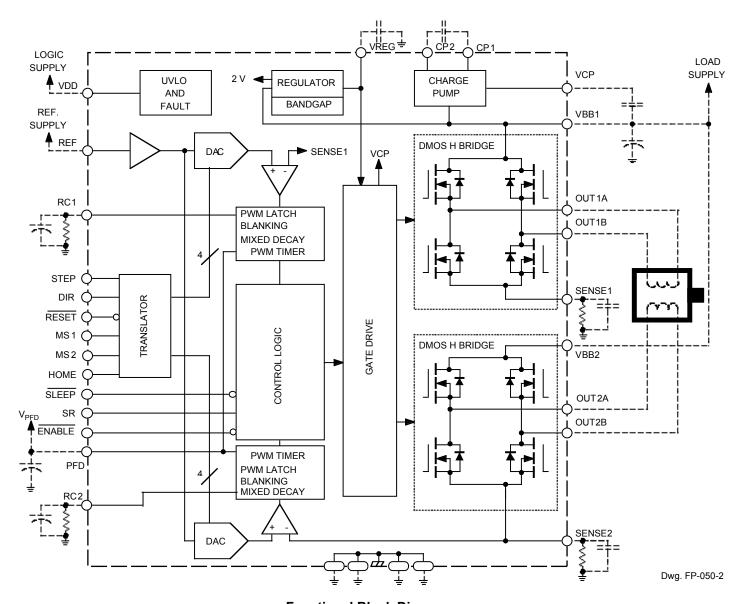


**Functional Block Diagram** 



3

## **Pin-out Diagram and Terminal List Table**

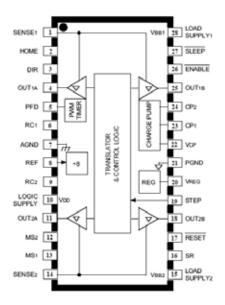

LP Package, 28-Pin TSSOP Pin-out Digram

#### **Terminal List Table**


Terminal Name	Terminal Number	Terminal Description
GND	_	Analog and Power Ground
SENSE1	1	Sense Resistor for Bridge 1
HOME	2	Logic Output
DIR	3	Logic Input
OUT1A	4	DMOS H Bridge 1 Output A
NC	_	No (internal) Connection
PFD	5	Mixed Decay Setting
RC1	6	Analog Input for Fixed Offtime  – Bridge 1
GND	_	Analog and Power Ground
AGND	7*	Analog Ground
REF	8	Gm Reference Input
RC2	9	Analog Input for Fixed Offtime  – Bridge 2
LOGIC SUPPLYNC	10	VDD, the Logic Supply Voltage
NC	_	No (internal) Connection
OUT2A	11	DMOS H Bridge 2 Output A
MS2	12	Logic Input
MS1	13	Logic Input
SENSE2	14	Sense Resistor for Bridge 2
GND	_	Analog and Power Ground

Terminal Name	Terminal Number	Terminal Description			
LOAD SUPPLY2	15	VBB2, the Load Supply for Bridge 2			
SR	16	Logic Input			
RESET	17	Logic Input			
OUT2B	18	DMOS H Bridge 2 Output B			
NC	_	No (internal) Connection			
STEP	19	Logic Input			
VREG	20	Regulator Decoupling			
PGND	21*	Power Ground			
GND	_	Analog and Power Ground			
VCP	22	Reservoir Capacitor			
CP1	23	Charge Pump Capacitor			
CP2	24	Charge Pump Capacitor			
NC	_	No (internal) Connection			
OUT1B	25	DMOS H Bridge 1 Output B			
ENABLE	26	Logic Input			
SLEEP	27	Logic Input			
LOAD SUPPLY1	28	VBB1, the Load Supply for Bridge 1			
*AGND and PGND on the TSSOP package must be connected together exter-					

<sup>\*</sup>AGND and PGND on the TSSOP package must be connected together externally





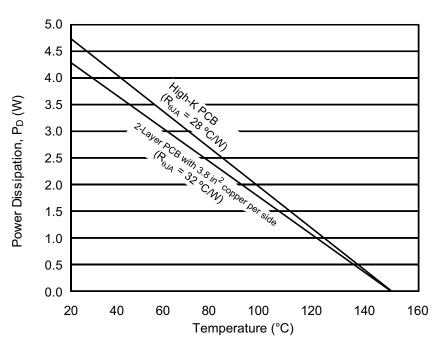

**Table 1: Microstep Resolution Truth Table** 

MS <sub>1</sub>	MS <sub>2</sub>	Resolution	
L	L	Full Step (2 Phase)	
H L		Half Step	
L H		Quarter Step	
Н Н		Eighth Step	

## Microstepping DMOS Driver with Translator

## ELECTRICAL CHARACTERISTICS at $T_A$ = +25°C, $V_{BB}$ = 35 V, $V_{DD}$ = 3.0 V to 5.5V (unless otherwise noted)

Characteristic	Symbol	Test Conditions	Min.	Тур.	Max.	Units
Output Drivers	•	•	•	•		
Land Owner Welfare Barre	.,	Operating	8.0	_	35	V
Load Supply Voltage Range	$V_{BB}$	During sleep mode	0	_	35	V
Outside Selection Outside		V <sub>OUT</sub> = V <sub>BB</sub>	_	<1.0	20	μΑ
Output Leakage Current	I <sub>DSS</sub>	V <sub>OUT</sub> = 0 V	_	<1.0	-20	μΑ
Output On Besistance		Source driver, I <sub>OUT</sub> = -2.5 A	_	0.28	0.335	Ω
Output On Resistance	R <sub>DS(on)</sub>	Sink driver, I <sub>OUT</sub> = 2.5 A	_	0.22	0.265	Ω
Dady Diada Farryand Valtage		Source diode, I <sub>F</sub> = -2.5 A	_	_	1.4	V
Body Diode Forward Voltage	$V_{F}$	Sink diode, I <sub>F</sub> = 2.5 A	_	-	1.4	V
		f <sub>PWM</sub> < 50 kHz	_	-	8.0	mA
Motor Supply Current	I <sub>BB</sub>	Operating, outputs disabled	_	-	6.0	mA
		Sleep mode	_	-	20	μA
Control Logic	•		-			
Logic Supply Voltage Range	$V_{DD}$	Operating	3.0	5.0	5.5	V
	V <sub>IN(1)</sub>		0.7V <sub>DD</sub>	-	-	V
Logic Input Voltage	V <sub>IN(0)</sub>		_	-	0.3V <sub>DD</sub>	V
	I <sub>IN(1)</sub>	$V_{IN} = 0.7V_{DD}$	-20	<1.0	20	μA
Logic Input Current	I <sub>IN(0)</sub>	$V_{IN} = 0.3V_{DD}$	-20	<1.0	20	μA
Maximum STEP Frequency	f <sub>STEP</sub>		500*	-	-	kHz
HOME O	V <sub>OH</sub>	Ι <sub>ΟΗ</sub> = -200 μΑ	0.7V <sub>DD</sub>	-	-	V
HOME Output Voltage	V <sub>OL</sub>	I <sub>OL</sub> = 200 μA	_	-	0.3V <sub>DD</sub>	V
Blank Time	t <sub>BLANK</sub>	$R_t = 56 \text{ k}\Omega, C_t = 680 \text{ pF}$	700	950	1200	ns
Fixed Off Time	t <sub>off</sub>	$R_t = 56 \text{ k}\Omega, C_t = 680 \text{ pF}$	30	38	46	μs
	PFDH		_	0.6V <sub>DD</sub>	-	V
Mixed Decay Trip Point	PFDL		_	0.21V <sub>DD</sub>	-	V
Ref. Input Voltage Range	V <sub>REF</sub>	Operating	0	-	$V_{DD}$	V
Reference Input Current	I <sub>REF</sub>		_	0	±3.0	μA
		V <sub>REF</sub> = 2 V, Phase Current = 38.27%	_	-	±10	%
Gain (G <sub>m</sub> ) Error (note 3)	EG	V <sub>REF</sub> = 2 V, Phase Current = 70.71%	_	-	±5.0	%
		V <sub>REF</sub> = 2 V, Phase Current = 100.00%	_	-	±5.0	%
Crossover Dead Time	t <sub>DT</sub>	SR enabled	100	475	800	ns
Thermal Shutdown Temp.	TJ		_	165	-	°C
Thermal Shutdown Hysteresis	ΔΤυ		-	15	-	°C
UVLO Enable Threshold	VUVLO	Increasing V <sub>DD</sub>	2.45	2.7	2.95	V
UVLO Hysteresis	ΔVUVLO		0.05	0.10	-	V
		f <sub>PWM</sub> < 50 kHz	_	-	12	mA
Logic Supply Current	I <sub>DD</sub>	Outputs off	-	_	10	mA
		Sleep mode	_	_	20	μA

<sup>\*</sup> Operation at a step frequency greater than the specified minimum value is possible but not warranteed. NOTES:



<sup>1.</sup> Typical Data is for design information only.

<sup>2.</sup> Negative current is defined as coming out of (sourcing) the specified device terminal.

<sup>3.</sup>  $E_G = ([V_{REF}/8] - V_{SENSE})/(V_{REF}/8)$ 

#### **FUNCTIONAL DESCRIPTION**

### **Device Operation**

The A3977 is a complete microstepping motor driver with built in translator for easy operation with minimal control lines. It is designed to operate bipolar stepper motors in full-, half-, quarter- and eighth-step modes. The current in each of the two output full-bridges, all N-channel DMOS, is regulated with fixed off-time pulse-width modulated (PWM) control circuitry. The full-bridge current at each step is set by the value of an external current sense resistor ( $R_{\rm S}$ ), a reference voltage ( $V_{\rm REF}$ ), and the DACs output voltage controlled by the output of the translator.

At power up, or reset, the translator sets the DACs and phase current polarity to initial home state (see figures for home-state conditions), and sets the current regulator for both phases to mixed-decay mode. When a step command signal occurs on the STEP input the translator automatically sequences the DACs to the next level (see table 2 for the current level sequence and current polarity). The microstep resolution is set by inputs  $MS_1$  and  $MS_2$  as shown in table 1. If the new DAC output level is lower than the previous level the decay mode for that full-bridge will be set by the PFD input (fast, slow, or mixed decay). If the new DAC level is higher or equal to the previous level then the decay mode for that full-bridge will be slow decay. This automatic current-decay selection will improve microstepping performance by reducing the distortion of the current waveform due to the motor BEMF.

## Reset Input (RESET)

The RESET input (active low) sets the translator to a predefined home state (see figures for home state conditions) and turns off all of the DMOS outputs. The HOME output goes low and all STEP inputs are ignored until the RESET input goes high.

### **Home Output (HOME)**

The HOME output is a logic output indicator of the initial state of the translator. At power up the translator is reset to the home state (see figures for home state conditions).

### Step Input (STEP)

A low-to-high transition on the STEP input sequences the translator and advances the motor one increment. The translator controls the input to the DACs and the direction of current flow in each winding. The size of the increment is determined by the state of inputs MS<sub>1</sub> and MS<sub>2</sub> (see table 1).

### Microstep Select (MS<sub>1</sub> and MS<sub>2</sub>)

Input terminals MS1 and MS<sub>2</sub> select the microstepping format per table 1. Changes to these inputs do not take effect until the STEP command (see figure).

### **Direction Input (DIR)**

The state of the DIRECTION input will determine the direction of rotation of the motor.

#### Internal PWM Current Control

Each full-bridge is controlled by a fixed off-time PWM current-control circuit that limits the load current to a desired value ( $I_{TRIP}$ ). Initially, a diagonal pair of source and sink DMOS outputs are enabled and current flows through the motor winding and  $R_{\rm S}$ . When the voltage across the current-sense resistor equals the DAC output voltage, the current-sense comparator resets the PWM latch, which turns off the source driver (slow-decay mode) or the sink and source drivers (fast- or mixed-decay modes).

The maximum value of current limiting is set by the selection of  $R_S$  and the voltage at the  $V_{REF}$  input with a transconductance function approximated by:

$$I_{TRIP}max = V_{REF}/8R_S$$

The DAC output reduces the  $V_{REF}$  output to the current-sense comparator in precise steps (see table 2 for %  $I_{TRIP}$ max at each step).

$$I_{TRIP} = (\% I_{TRIP} max/100) x I_{TRIP} max$$

It is critical to ensure that the maximum rating (0.5 V) on the SENSE terminal is not exceeded. For full-step mode,  $V_{REF}$  can be applied up to the maximum rating of  $V_{DD}$ , because the peak sense value is 0.707 x  $V_{REF}/8$ . In all other modes  $V_{REF}$  should not exceed 4 V.



1.508.853.5000; www.allegromicro.com

#### **Fixed Off-Time**

The internal PWM current-control circuitry uses a one shot to control the time the drivers remain off. The one shot off-time,  $t_{\rm off}$ , is determined by the selection of an external resistor ( $R_T$ ) and capacitor ( $C_T$ ) connected from the RC timing terminal to ground. The off-time, over a range of values of  $C_T$  = 470 pF to 1500 pF and  $R_T$  = 12 k $\Omega$  to 100 k $\Omega$  is approximated by:

$$t_{off} = R_T C_T$$

### **RC Blanking**

In addition to the fixed off-time of the PWM control circuit, the  $C_T$  component sets the comparator blanking time. This function blanks the output of the current-sense comparator when the outputs are switched by the internal current-control circuitry. The comparator output is blanked to prevent false over-current detection due to reverse recovery currents of the clamp diodes, and/or switching transients related to the capacitance of the load. The blank time  $t_{\rm BLANK}$  can be approximated by:

$$t_{BLANK} = 1400C_T$$

## Charge Pump. (CP<sub>1</sub> and CP<sub>2</sub>)

The charge pump is used to generate a gate supply greater than  $V_{BB}$  to drive the source-side DMOS gates. A 0.22  $\mu F$  ceramic capacitor should be connected between  $CP_1$  and  $CP_2$  for pumping purposes. A 0.22  $\mu F$  ceramic capacitor is required between  $V_{CP}$  and  $V_{BB}$  to act as a reservoir to operate the high-side DMOS devices.

#### $V_{RFG}$

This internally generated voltage is used to operate the sink-side DMOS outputs. The  $V_{REG}$  terminal should be decoupled with a 0.22  $\mu F$  capacitor to ground.  $V_{REG}$  is internally monitored and in the case of a fault condition, the outputs of the device are disabled.

## **Enable Input (ENABLE)**

This active-low input enables all of the DMOS outputs. When logic high the outputs are disabled. Inputs to the translator (STEP, DIRECTION,  $MS_1$ ,  $MS_2$ ) are all active independent of the ENABLE input state.

#### Shutdown

In the event of a fault (excessive junction temperature, or low voltage on  $V_{CP}$ ) the outputs of the device are disabled until the fault condition is removed. At power up, and in the event of low  $V_{DD}$ , the undervoltage lockout (UVLO) circuit disables the drivers and resets the translator to the HOME state.

## Sleep Mode (SLEEP)

An active-low control input used to minimize power consumption when not in use. This disables much of the internal circuitry including the output DMOS, regulator, and charge pump. A logic high allows normal operation and startup of the device in the home position. When coming out of sleep mode, wait 1 ms before issuing a STEP command to allow the charge pump (gate drive) to stabilize.

### Percent Fast Decay Input (PFD)

When a STEP input signal commands a lower output current from the previous step, it switches the output current decay to either slow-, fast-, or mixed-decay depending on the voltage level at the PFD input. If the voltage at the PFD input is greater than 0.6  $V_{\rm DD}$  then slow-decay mode is selected. If the voltage on the PFD input is less than 0.21  $V_{\rm DD}$  then fast-decay mode is selected. Mixed decay is between these two levels. This terminal should be decoupled with a 0.1  $\mu F$  capacitor.

### **Mixed Decay Operation**

If the voltage on the PFD input is between  $0.6V_{DD}$  and  $0.21V_{DD}$ , the bridge will operate in mixed-decay mode depending on the step sequence (see figures). As the trip point is reached, the device will go into fast-decay mode until the voltage on the RC terminal decays to the voltage applied to the PFD terminal. The time that the device operates in fast decay is approximated by:

$$t_{FD} = R_T C_T In (0.6 V_{DD} / V_{PFD})$$

After this fast decay portion,  $t_{\rm FD}$ , the device will switch to slow-decay mode for the remainder of the fixed off-time period.



8

### **Synchronous Rectification**

When a PWM off-cycle is triggered by an internal fixed off-time cycle, load current will recirculate according to the decay mode selected by the control logic. The A3977 synchronous rectification feature will turn on the appropriate MOSFETs during the current decay and effectively short out the body diodes with the low  $R_{\rm DS(on)}$  driver. This will reduce power dissipation significantly and eliminate the need for external Schottky diodes for most applications.

The synchronous rectification can be set in either active mode or disabled mode.

#### **Active Mode**

When the SR input is logic low, active mode is enabled and synchronous rectification will occur. This mode prevents reversal of the load current by turning off synchronous rectification when a zero current level is detected. This prevents the motor winding from conducting in the reverse direction.

#### **Disabled Mode**

When the SR input is logic high, synchronous rectification is disabled. This mode is typically used when external diodes are required to transfer power dissipation from the A3977 package to the external diodes.

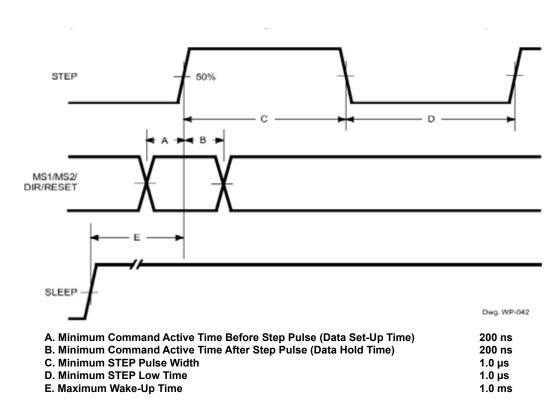


Figure 1: Timing Requirements  $(T_A = +25^{\circ}C, V_{DD} = 5 \text{ V}, \text{Logic Levels are } V_{DD} \text{ and Ground})$ 



#### APPLICATIONS INFORMATION

### Layout.

The printed wiring board should use a heavy ground plane.

For optimum electrical and thermal performance, the driver should be soldered directly onto the board.

The load supply terminal,  $V_{\rm BB}$ , should be decoupled with an electrolytic capacitor (>47  $\mu F$  is recommended) placed as close to the device as possible.

To avoid problems due to capacitive coupling of the high dv/dt switching transients, route the bridge-output traces away from the sensitive logic-input traces. Always drive the logic inputs with a low source impedance to increase noise immunity.

### Grounding

A star ground system located close to the driver is recommended.

The 44-lead PLCC has the analog ground and the power ground internally bonded to the power tabs of the package (leads 44, 1, 2, 11 - 13, 22 - 24, and 33 - 35).

On the 28-lead TSSOP package, the analog ground (lead 7) and the power ground (lead 21) must be connected together externally. The copper ground plane located under the exposed thermal pad is typically used as the star ground.

### **Current Sensing**

To minimize inaccuracies caused by ground-trace IR drops in sensing the output current level, the current-sense resistor ( $R_S$ ) should have an independent ground return to the star ground of the device. This path should be as short as possible. For low-value sense resistors the IR drops in the printed wiring board sense resistor's traces can be significant and should be taken into account. The use of sockets should be avoided as they can introduce variation in  $R_S$  due to their contact resistance.

Allegro MicroSystems recommends a value of R<sub>S</sub> given by

$$R_S = 0.5/I_{TRIP} max$$

#### **Thermal Protection**

Circuitry turns off all drivers when the junction temperature reaches 165°C, typically. It is intended only to protect the device from failures due to excessive junction temperatures and should not imply that output short circuits are permitted. Thermal shutdown has a hysteresis of approximately 15°C.



## Microstepping DMOS Driver with Translator

Table 2: Step Sequencing (DIR = H)

Full Step #	Half Step #	Quarter Step #	Eighth Step #	Phase 1 Current [%I <sub>trip</sub> max]	Phase 2 Current [%I <sub>trip</sub> max]	Step Angle (°)
	1	1	1	100.00	0.00	0
			2	98.08	19.51	11.25
		2	3	92.39	38.27	22.50
			4	83.15	55.56	33.75
1*	2*	3*	5*	70.71*	70.71*	45*
			6	55.56	83.15	56.25
		4	7	38.27	92.39	67
			8	19.51	98.08	78.75
	3	5	9	0.00	100.00	90
			10	-19.51	98.08	101.25
		6	11	-38.27	92.39	112.50
			12	-55.56	83.15	123.75
2	4	7	13	-70.71	70.71	135
			14	-83.15	55.56	146.25
		8	15	-92.39	38.27	157.50
			16	-98.08	19.51	168.75
	5	9	17	-100.00	0.00	180
			18	-98.08	-19.51	191.25
		10	19	-92.39	-38.27	202.50
			20	-83.15	-55.56	213.75
3	6	11	21	-70.71	-70.71	225
			22	-55.56	-83.15	236.25
		12	23	-38.27	-92.39	247.50
			24	-19.51	-98.08	258.75
	7	13	25	0.00	-100.00	270
			26	19.51	-98.08	281.25
		14	27	38.27	-92.39	292.50
			28	55.56	-83.15	303.75
4	8	15	29	70.71	-70.71	315
			30	83.15	-55.56	326.25
		16	31	92.39	-38.27	337.50
			32	98.08	-19.51	348.75

<sup>\*</sup>Home state; HOME output low.



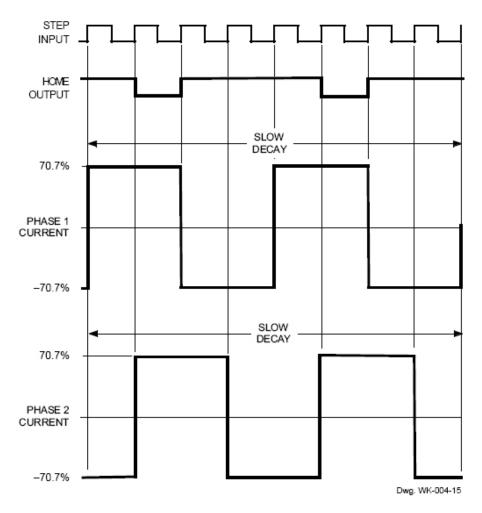


Figure 2: Full-Step Operation MS<sub>1</sub> = MS<sub>2</sub> = L, DIR = H

The vector addition of the output currents at any step is 100%.



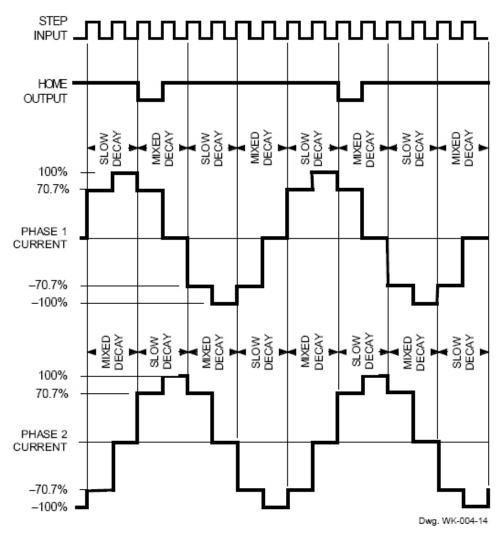


Figure 3: Half-Step Operation MS<sub>1</sub> = H, MS<sub>2</sub> = L, DIR = H

The mixed-decay mode is controlled by the percent fast decay voltage ( $V_{PFD}$ ). If the voltage at the PFD input is greater than 0.6 $V_{DD}$  then slow-decay mode is selected. If the voltage on the PFD input is less than 0.21 $V_{DD}$  then fast-decay mode is selected. Mixed decay is between these two levels.



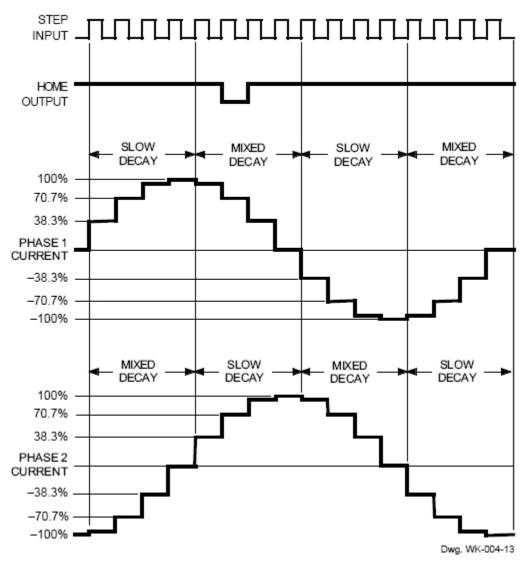


Figure 4: Quarter-Step Operation  $MS_1 = L$ ,  $MS_2 = H$ , DIR = H

The mixed-decay mode is controlled by the percent fast decay voltage ( $V_{PFD}$ ). If the voltage at the PFD input is greater than 0.6 $V_{DD}$  then slow-decay mode is selected. If the voltage on the PFD input is less than 0.21 $V_{DD}$  then fast-decay mode is selected. Mixed decay is between these two levels.



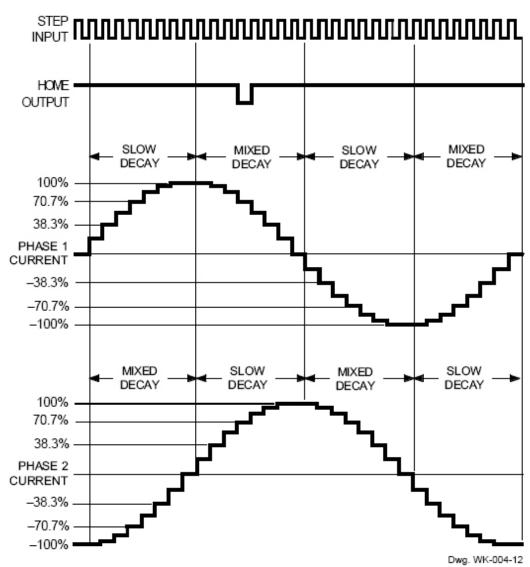


Figure 5: 8 Microstep/Step Operation  $MS_1 = MS_2 = H$ , DIR = H

The mixed-decay mode is controlled by the percent fast decay voltage ( $V_{PFD}$ ). If the voltage at the PFD input is greater than 0.6 $V_{DD}$  then slow-decay mode is selected. If the voltage on the PFD input is less than 0.21 $V_{DD}$  then fast-decay mode is selected. Mixed decay is between these two levels.



#### **CUSTOMER PACKAGE DRAWINGS**

For Reference Only — Not for Tooling Use
(Reference MO-153 AET)
Dimensions in millimeters — NOT TO SCALE Dimensions exclusive of mold flash, gate burrs, and dambar protrusions Exact case and lead configuration at supplier discretion within limits shown

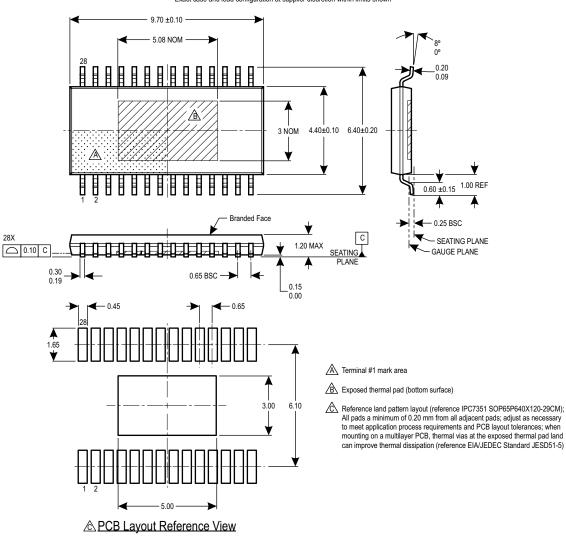


Figure 6: LP Package, 28-pin TSSOP



## Microstepping DMOS Driver with Translator

#### **Revision History**

Revision No. Revision Date		Description of Revision		
11	April 23, 2013	Update product selection and applications component recommendations		
12 October 30, 2014		Removed ED package, Revised Table 2 title, reformatted document		

Copyright ©2002-2014, Allegro MicroSystems, LLC

Allegro MicroSystems, LLC reserves the right to make, from time to time, such departures from the detail specifications as may be required to permit improvements in the performance, reliability, or manufacturability of its products. Before placing an order, the user is cautioned to verify that the information being relied upon is current.

Allegro's products are not to be used in any devices or systems, including but not limited to life support devices or systems, in which a failure of Allegro's product can reasonably be expected to cause bodily harm.

The information included herein is believed to be accurate and reliable. However, Allegro MicroSystems, LLC assumes no responsibility for its use; nor for any infringement of patents or other rights of third parties which may result from its use.

For the latest version of this document, visit our website:

www.allegromicro.com

