

500 MHz, Triple 16×5 Video Crosspoint Switch

AD8177

FEATURES

High channel count, triple 16×5 high speed, nonblocking switch array

Pin compatible with AD8175/AD8176 (16 × 9 switch arrays) and AD8178 (16 × 5 switch array)

Differential or single-ended operation

Supports sync-on common-mode and sync-on color operating modes

Decoded HV sync outputs available

G = +2 operation (differential input to differential output)

Flexible power supplies: +5 V or ± 2.5 V

Logic ground for convenient control interface

Serial or parallel programming of switch array

High impedance output disable allows connection of multiple devices with minimal loading on output bus

Adjustable output CM and black level through external pins Excellent ac performance (to support 1600 × 1200 @ 85 Hz)

Bandwidth: 500 MHz Slew rate: 1800 V/µs

Settling time: 4 ns to 1%

Low power of 2.3 W

Low all-hostile crosstalk

-88 dB @ 5 MHz

-46 dB @ 500 MHz

Wide input common-mode range of 4 V Reset pin allows disabling of all outputs

Fully populated 26 × 26 ball PBGA package

(27 mm × 27 mm, 1 mm ball pitch)

Convenient grouping of RGB signals for easy routing

APPLICATIONS

RGB video switching KVM

Professional video

GENERAL DESCRIPTION


The AD8177 is a high speed, triple 16×5 video crosspoint switch matrix. It supports 1600×1200 RGB displays @ 85 Hz refresh rate by offering a 500 MHz bandwidth and a slew rate of 1800 V/ μ s. With -88 dB of crosstalk and -94 dB isolation (@ 5 MHz), the AD8177 is useful in many high speed video applications.

The AD8177 supports two modes of operation: differential-in to differential-out mode with sync-on CM signaling passed through the switch and differential-in to differential-out mode

Rev. 0

Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties that may result from its use. Specifications subject to change without notice. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices. Trademarks and registered trademarks are the property of their respective owners.

FUNCTIONAL BLOCK DIAGRAM

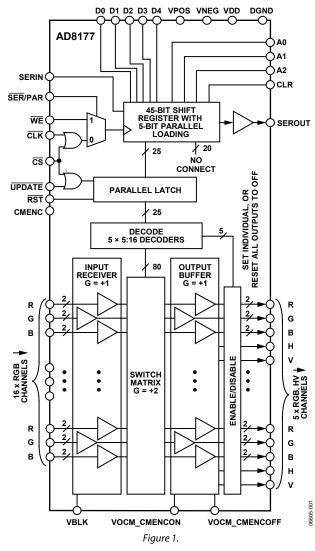

with CM signaling removed through the switch. The output CM and black level can be conveniently set via external pins.

The independent output buffers of the AD8177 can be placed into a high impedance state to create larger arrays by paralleling crosspoint outputs. Inputs can be paralleled as well. The AD8177 offers both serial and parallel programming modes.

The AD8177 is packaged in a fully populated 26×26 ball PBGA package and is available over the extended industrial temperature range of -40° C to $+85^{\circ}$ C.

AD8177* PRODUCT PAGE QUICK LINKS

Last Content Update: 02/23/2017

COMPARABLE PARTS 🖵

View a parametric search of comparable parts.

EVALUATION KITS

 Evaluation Board for the AD8175/AD8176/AD8177/ AD8178

DOCUMENTATION

Data Sheet

 AD8177: 500 MHz, Triple 16 x 5 Video Crosspoint Switch Data Sheet

User Guides

 UG-890: Evaluation Board for the AD8175/AD8176/ AD8177/AD8178 Triple Video Crosspoint Switches

DESIGN RESOURCES 🖵

- AD8177 Material Declaration
- PCN-PDN Information
- · Quality And Reliability
- Symbols and Footprints

DISCUSSIONS

View all AD8177 EngineerZone Discussions.

SAMPLE AND BUY 🖵

Visit the product page to see pricing options.

TECHNICAL SUPPORT

Submit a technical question or find your regional support number.

DOCUMENT FEEDBACK 🖳

Submit feedback for this data sheet.

TABLE OF CONTENTS

Features	1
Applications	
Functional Block Diagram	1
General Description	1
Revision History	2
Specifications	3
Timing Characteristics (Serial Mode)	5
Timing Characteristics (Parallel Mode)	6
Absolute Maximum Ratings	7
Thermal Resistance	7
Power Dissipation	7
FSD Caution	7

Pin Configuration and Function Descriptions	8.
Truth Table and Logic Diagram 1	7
Equivalent Circuits	9
Typical Performance Characteristics	1
Theory of Operation	6
Applications Information	7
Operating Modes2	7
Programming2	8
Differential and Single-Ended Operation 3	0
Outline Dimensions	9
Ordering Guide 3	9

REVISION HISTORY

7/07—Revision 0: Initial Version

SPECIFICATIONS

 $V_S = \pm 2.5 \text{ V}$ at $T_A = 25^{\circ}\text{C}$, G = +2, $R_L = 100 \ \Omega$ (each output), VBLK = 0 V, output CM voltage = 0 V, differential I/O mode, unless otherwise noted.

Table 1.

Parameter	Conditions	Min 7	ур I	Max l	Unit
DYNAMIC PERFORMANCE					
–3 dB Bandwidth	200 mV p-p	5	500	1	MHz
	2 V p-p	450			MHz
Gain Flatness	0.1 dB, 200 mV p-p	25			MHz
Propagation Delay	2 V p-p	1	.3	r	ns
Settling Time	1%, 2 V step	4	ŀ	r	ns
Slew Rate, Differential Output	2 V step	1	800	١	V/µs
	2 V step, 10% to 90%	1	500	١	V/µs
Slew Rate, RGB Common Mode	1 V step, 10% to 90%	3	800	١	V/µs
Slew Rate, HV Outputs	Rail-to-rail, TTL load	4	100	\	V/µs
NOISE/DISTORTION PERFORMANCE					
Crosstalk, All Hostile	f = 5 MHz	-	-88	(dB
	f = 10 MHz	-	-82	(dB
	f = 100 MHz	-	-58	(dB
	f = 500 MHz	-	-46	(dB
Off Isolation, Input to Output	$f = 5$ MHz, $R_L = 100 \Omega$, one channel	-	-94	(dB
Input Voltage Noise	0.01 MHz to 100 MHz	4	10	1	nV/√Hz
DC PERFORMANCE					
Gain Error		1		C	%
Gain Matching	R, G, B same channel).5	C	%
Gain Temperature Coefficient		4	Ю		ppm/°C
OUTPUT CHARACTERISTICS					
Output Offset Voltage	CMENC on or off	1	0	1	mV
·	Temperature coefficient	3	31		μV/°C
Output Offset Voltage, RGB Common Mode	CMENC on or off	1	0	r	mV
	Temperature coefficient	-	-7.6		μV/°C
Output Impedance	Enabled, differential	1	.5	9	Ω
	Disabled, differential	2	2.7	l I	kΩ
Output Disable Capacitance	Disabled	2	2		pF
Output Leakage Current	Disabled	1			μΑ
Output Voltage Range	No load, differential	4		١	V p-p
Output Current	Short circuit	4	! 5	r	mA
INPUT CHARACTERISTICS					
Input Voltage Range, Differential Mode		2		\	V p-p
Input Voltage Range, Common Mode	V _{IN} = 1 V p-p, differential	=	-2.25	\	V
CMR, RGB Input	$\Delta V_{OUT, DM}/\Delta V_{IN, CM}$, $\Delta V_{IN, CM} = \pm 0.5 \text{ V}$, CMENC off	-	-62	(dB
•	$\Delta V_{\text{OUT, DM}}/\Delta V_{\text{IN, CM}}$, $\Delta V_{\text{IN, CM}} = \pm 0.5 \text{ V, CMENC on}$	-	-45	,	dB
CM Gain, RGB Input	$\Delta V_{\text{OUT, CM}}/\Delta V_{\text{IN, CM,}} \Delta V_{\text{IN, CM}} = \pm 0.5 \text{ V CMENC off}$		-70		dB
	$\Delta V_{\text{OUT, CM}}/\Delta V_{\text{IN, CM,}} \Delta V_{\text{IN, CM}} = \pm 0.5 \text{ V, CMENC on}$				dB
Input Capacitance	Any switch configuration				рF
Input Resistance	Differential		3.33		kΩ
Input Offset Current		1			μA

Parameter	Conditions	Min	Тур	Max	Unit
SWITCHING CHARACTERISTICS					
Enable On Time	50% UPDATE to 50% output		80		ns
Switching Time, 2 V Step	50% UPDATE to 50% output		70		ns
POWER SUPPLIES					
Supply Current	VPOS, outputs enabled, no load		460		mA
	Outputs disabled		290		mA
	VNEG, outputs enabled, no load		460		mA
	Outputs disabled		290		mA
	DVDD, outputs enabled, no load		4		mA
Supply Voltage Range	VPOS – VNEG	VPOS – VNEG 4.5 to 5.5			V
	VDD to DGND		3.3 to 5.5		V
PSR	$\Delta V_{OUT, DM}/\Delta V_{POS}$, $\Delta V_{POS} = \pm 0.5 \text{ V}$		-55		dB
	$\Delta V_{OUT, DM}/\Delta V_{NEG}$, $\Delta V_{NEG} = \pm 0.5 V$	-55			dB
OPERATING TEMPERATURE RANGE					
Temperature Range	Operating (still air)	-40 to +85			°C
$ heta_{JA}$	Operating (still air)		15		°C/W

TIMING CHARACTERISTICS (SERIAL MODE)

Table 2.

			Limit		
Parameter	Symbol	Min	Тур	Max	Unit
Serial Data Setup Time	t ₁	40			ns
CLK Pulse Width	t ₂	60			ns
Serial Data Hold Time	t ₃	50			ns
CLK Pulse Separation	t ₄	140			ns
CLK to UPDATE Delay	t ₅	10			ns
UPDATE Pulse Width	t ₆	90			ns
CLK to SEROUT Valid	t ₇	120			ns
Propagation Delay, UPDATE to Switch On			80		ns
Data Load Time, $\overline{\text{CLK}} = 5 \text{ MHz}$, Serial Mode		9			μs
RST Time			140	200	ns

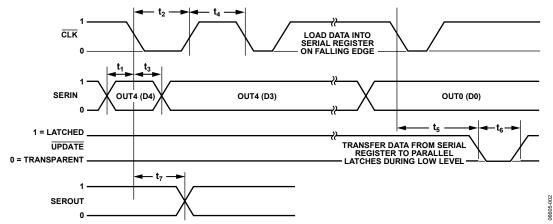


Figure 2. Timing Diagram, Serial Mode

Table 3. Logic Levels, $V_{\rm DD}$ = 3.3 V

V _{IH}	V _{IL}	V _{OH}	V _{OL}	I _{IH}	I _{IL}	I _{он}	I _{OL}
SER/PAR, CLK,	SER/PAR, CLK,	SEROUT	SEROUT	SER/PAR, CLK,	SER/PAR, CLK,	SEROUT	SEROUT
SERIN, UPDATE	SERIN, UPDATE			SERIN, UPDATE	SERIN, UPDATE		
2.0 V min	0.6 V max	2.8 V min	0.4 V max	20 μA max	–20 μA max	–1 mA min	1 mA min

Table 4. H and V Logic Levels, $V_{\text{\tiny DD}}$ = 3.3 V

V _{он}	Vol	Іон	loL
2.7 V min	0.5 V max	-3 mA max	3 mA max

Table 5. \overline{RST} Logic Levels, $V_{DD} = 3.3 \text{ V}$

V _{IH}	V _{IL}	In	Iı⊾
2.0 V min	0.6 V max	–60 μA max	–120 μA max

Table 6. $\overline{\text{CS}}$ Logic Levels, $V_{\text{DD}} = 3.3 \text{ V}$

V _{он}	V _{OL}	Ін	loL
2.0 V min	0.6 V max	100 μA max	40 μA max

TIMING CHARACTERISTICS (PARALLEL MODE)

Table 7.

			Limit		
Parameter	Symbol	Min	Тур	Max	Unit
Parallel Data Setup Time	t ₁	80			ns
WE Pulse Width	t ₂	110			ns
Parallel Hold Time	t ₃	150			ns
WE Pulse Separation	t ₄	90			ns
WE to UPDATE Delay	t ₅	10			ns
UPDATE Pulse Width	t 6	90			ns
Propagation Delay, UPDATE to Switch On			80		ns
RST Time			140	200	ns

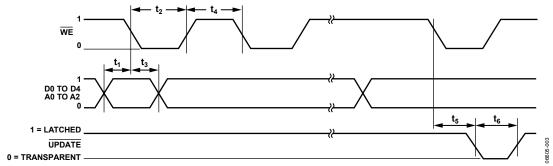


Figure 3. Timing Diagram, Parallel Mode

Table 8. Logic Levels, $V_{\rm DD} = 3.3 \text{ V}$

V _{IH}	V _{IL}	V _{OH}	V _{OL}	I _{IH}	IIL	I _{OH}	I _{OL}
SER/PAR, WE,	SER/PAR, WE,	SEROUT	SEROUT	SER/PAR, WE,	SER/PAR, WE,	SEROUT	SEROUT
D0, D1, D2, D3,	D0, D1, D2, D3,			D0, D1, D2, D3,	D0, D1, D2, D3,		
<u>D4, A0, A</u> 1, A2,	<u>D4, A0, A</u> 1, A2,			<u>D4, A0, A</u> 1, A2,	<u>D4, A0, A</u> 1, A2,		
UPDATE	UPDATE			UPDATE	UPDATE		
2.0 V min	0.6 V max	Disabled	Disabled	20 μA max	–20 μA max	Disabled	Disabled

Table 9. H and V Logic Levels, $V_{\rm DD}$ = 3.3 V

V _{он}	V _{OL}	Іон	loL
2.7 V min	0.5 V max	–3 mA max	3 mA max

Table 10. \overline{RST} Logic Levels, $V_{DD} = 3.3 \text{ V}$

V _{IH}	V _{IL}	I _{IH}	I _{IL}
2.0 V min	0.6 V max	–60 μA max	–120 μA max

Table 11. $\overline{\text{CS}}$ Logic Levels, $V_{DD} = 3.3 \text{ V}$

V _{он}	V _{OL}	Ін	loL
2.0 V min	0.6 V max	100 μA max	40 μA max

ABSOLUTE MAXIMUM RATINGS

Table 12

Table 12.	
Parameter	Rating
Analog Supply Voltage (V _{POS} – V _{NEG})	6 V
Digital Supply Voltage (V _{DD} – D _{GND})	6 V
Ground Potential Difference $(V_{NEG} - D_{GND})$	+0.5 V to −2.5 V
Maximum Potential Difference $(V_{DD} - V_{NEG})$	8 V
Common-Mode Analog Input Voltage	(V _{NEG} – 0.5 V)
	to $(V_{POS} + 0.5 V)$
Differential Analog Input Voltage	±2 V
Digital Input Voltage	V_{DD}
Output Voltage	$(V_{POS} - 1 V)$ to $(V_{NEG} + 1 V)$
(Disabled Analog Output)	
Output Short-Circuit Duration	Momentary
Storage Temperature Range	−65°C to +125°C
Operating Temperature Range	−40°C to +85°C
Lead Temperature (Soldering, 10 sec)	300°C
Junction Temperature	150°C

Stresses above those listed under Absolute Maximum Ratings may cause permanent damage to the device. This is a stress rating only; functional operation of the device at these or any other conditions above those indicated in the operational section of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

THERMAL RESISTANCE

 θ_{JA} is specified for the worst-case conditions, that is, a device soldered in a circuit board for surface-mount packages.

Table 13. Thermal Resistance

Package Type	θ _{JA}	Unit
PBGA	15	°C/W

POWER DISSIPATION

The AD8177 is operated with ± 2.5 V or +5 V supplies and can drive loads down to $100~\Omega$, resulting in a large range of possible power dissipations. For this reason, extra care must be taken derating the operating conditions based on ambient temperature.

Packaged in a 676-lead PBGA the AD8177 junction-to-ambient thermal impedance (θ_{IA}) is 15°C/W. For long-term reliability, the maximum allowed junction temperature of the die should not exceed 150°C. Temporarily exceeding this limit may cause a shift in parametric performance due to a change in stresses exerted on the die by the package. Exceeding a junction temperature of 175°C for an extended period can result in device failure. The following curve shows the range of allowed internal die power dissipations that meet these conditions over the -40°C to $+85^{\circ}\text{C}$ ambient temperature range. When using Table 13, do not include external load power in the maximum power calculation, but do include load current dropped on the die output transistors.

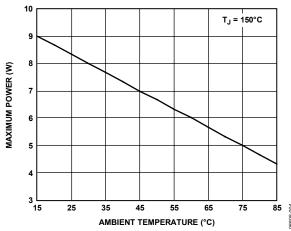


Figure 4. Maximum Die Power Dissipation vs. Ambient Temperature

ESD CAUTION



ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

PIN CONFIGURATION AND FUNCTION DESCRIPTIONS

	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
Α	VNEG	VNEG	VNEG	NC	NC	VNEG	OPR4	ONB4	VPOS	IPR8	INB8	VNEG	IPR9	INB9	VPOS	IPR10	INB10	VNEG	IPR11	INB11	VPOS	IPR12	INB12	VNEG	VNEG	VNEG	Α
В	VNEG	VNEG	VNEG	NC	NC	VNEG	ONR4	OPB4	VPOS	INR8	IPB8	VNEG	INR9	IPB9	VPOS	INR10	IPB10	VNEG	INR11	IPB11	VPOS	INR12	IPB12	VNEG	VNEG	VNEG	В
С	VNEG	VNEG	VNEG	NC	NC	VNEG	OPG4	ONG4	VPOS	IPG8	ING8	VNEG	IPG9	ING9	VPOS	IPG10	ING10	VNEG	IPG11	ING11	VPOS	IPG12	ING12	VNEG	VNEG	VNEG	С
D	VNEG	VNEG	VNEG	NC	NC	VPOS	Н4	V4	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	IPG13	INR13	IPR13	D
E	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VPOS	DGND	VDD	SEROUT	ĊŚ	CLK	SERIN	SER/PAR	A2	A1	Α0	CLR	VDD	DGND	VPOS	VPOS	ING13	IPB13	INB13	E
F	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	F										
G	ONB3	ОРВ3	ONG3	V3	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	G						
н	OPR3	ONR3	OPG3	нз	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	IPG14	INR14	IPR14	Н
J	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	ING14	IPB14	INB14	J
κ	NC	NC	NC	NC	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	ĸ
L	NC	NC	NC	NC	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	IPG15	INR15	IPR15	L
М	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	ING15	IPB15	INB15	М
N	ONB2	OPB2	ONG2	V2	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VOCM_ CMENCON	VPOS	VPOS	VPOS	VPOS	N
Р	OPR2	ONR2	OPG2	H2	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VBLK	VPOS	VPOS	VPOS	VPOS	P
R	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VOCM_ CMENCOFF	VPOS	IPG7	INR7	IPR7	R
т	NC	NC	NC	NC	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	ING7	IPB7	INB7	т
U	NC	NC	NC	NC	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	U
٧	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	IPG6	INR6	IPR6	v
w	ONB1	OPB1	ONG1	V1	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	ING6	IPB6	INB6	w
Υ	OPR1	ONR1	OPG1	H1	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	Υ						
AA	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	AA							
АВ	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VPOS	DGND	VDD	RST	UPDATE	WE	CMENC	D4	D3	D2	D1	D0	VDD	DGND	VPOS	VPOS	IPG5	INR5	IPR5	АВ
AC	VNEG	VNEG	VNEG	NC	NC	VPOS	V0	но	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	ING5	IPB5	INB5	AC
AD	VNEG	VNEG	VNEG	NC	NC	VPOS	ONG0	OPG0	VNEG	ING0	IPG0	VPOS	ING1	IPG1	VNEG	ING2	IPG2	VPOS	ING3	IPG3	VNEG	ING4	IPG4	VNEG	VNEG	VNEG	AD
ΑE	VNEG	VNEG	VNEG	NC	NC	VPOS	ОРВ0	ONR0	VNEG	IPB0	INR0	VPOS	IPB1	INR1	VNEG	IPB2	INR2	VPOS	IPB3	INR3	VNEG	IPB4	INR4	VNEG	VNEG	VNEG	AE
AF	VNEG	VNEG	VNEG	NC	NC	VPOS	ONB0	OPR0	VNEG	INB0	IPR0	VPOS	INB1	IPR1	VNEG	INB2	IPR2	VPOS	INB3	IPR3	VNEG	INB4	IPR4	VNEG	VNEG	VNEG	AF g
II.	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	AF 900-50990

Figure 5. Pin Configuration, Package Bottom View

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	
Α	VNEG	VNEG	VNEG	INB12	IPR12	VPOS	INB11	IPR11	VNEG	INB10	IPR10	VPOS	INB9	IPR9	VNEG	INB8	IPR8	VPOS	ONB4	OPR4	VNEG	NC	NC	VNEG	VNEG	VNEG	Α
В	VNEG	VNEG	VNEG	IPB12	INR12	VPOS	IPB11	INR11	VNEG	IPB10	INR10	VPOS	IPB9	INR9	VNEG	IPB8	INR8	VPOS	OPB4	ONR4	VNEG	NC	NC	VNEG	VNEG	VNEG	В
С	VNEG	VNEG	VNEG	ING12	IPG12	VPOS	ING11	IPG11	VNEG	ING10	IPG10	VPOS	ING9	IPG9	VNEG	ING8	IPG8	VPOS	ONG4	OPG4	VNEG	NC	NC	VNEG	VNEG	VNEG	С
D	IPR13	INR13	IPG13	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	V4	H4	VPOS	NC	NC	VNEG	VNEG	VNEG	D
E	INB13	IPB13	ING13	VPOS	VPOS	DGND	VDD	CLR	Α0	A1	A2	SER/PAR	SERIN	CLK	C S	SEROUT	VDD	DGND	VPOS	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	E
F	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	F
G	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	V3	ONG3	OPB3	ONB3	G
Н	IPR14	INR14	IPG14	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	нз	OPG3	ONR3	OPR3	н
J	INB14	IPB14	ING14	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	J
κ	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	NC	NC	NC	NC	ĸ
L	IPR15	INR15	IPG15	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	NC	NC	NC	NC	L
M	INB15	IPB15	ING15	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	М
N	VPOS	VPOS	VPOS	VPOS	VOCM_ CMENCON	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	V2	ONG2	OPB2	ONB2	N
Р	VPOS	VPOS	VPOS	VPOS	VBLK	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	H2	OPG2	ONR2	OPR2	Р
R	IPR7	INR7	IPG7	VPOS	VOCM_ CMENCOFF	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	R
Т	INB7	IPB7	ING7	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	NC	NC	NC	NC	т
U	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	NC	NC	NC	NC	U
٧	IPR6	INR6	IPG6	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	v
w	INB6	IPB6	ING6	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VNEG	VPOS	VPOS	V1	ONG1	OPB1	ONB1	w
Υ	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	Н1	OPG1	ONR1	OPR1	Υ
AA	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	AA
АВ	IPR5	INR5	IPG5	VPOS	VPOS	DGND	VDD	D0	D1	D2	D3	D4	CMENC	WE	UPDATE	RST	VDD	DGND	VPOS	VPOS	VPOS	VPOS	VPOS	VNEG	VNEG	VNEG	АВ
AC	INB5	IPB5	ING5	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	VPOS	но	V0	VPOS	NC	NC	VNEG	VNEG	VNEG	AC
AD	VNEG	VNEG	VNEG	IPG4	ING4	VNEG	IPG3	ING3	VPOS	IPG2	ING2	VNEG	IPG1	ING1	VPOS	IPG0	ING0	VNEG	OPG0	ONG0	VPOS	NC	NC	VNEG	VNEG	VNEG	AD
AE	VNEG	VNEG	VNEG	INR4	IPB4	VNEG	INR3	IPB3	VPOS	INR2	IPB2	VNEG	INR1	IPB1	VPOS	INR0	IPB0	VNEG	ONR0	ОРВ0	VPOS	NC	NC	VNEG	VNEG	VNEG	AE
AF	VNEG	VNEG	VNEG	IPR4	INB4	VNEG	IPR3	INB3	VPOS	IPR2	INB2	VNEG	IPR1	INB1	VPOS	IPR0	INB0	VNEG	OPR0	ONB0	VPOS	NC	NC	VNEG	VNEG	VNEG	AF
Į.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	

Figure 6. Pin Configuration, Package Top View

Table 14. Ball Grid Function Descriptions

Ball No.MnemonicDescriptionBall No.MnemonicDescriptionA1VNEGNegative Analog Power Supply.B26VNEGNegative Analog Power Analog Power Supply.A2VNEGNegative Analog Power Supply.C1VNEGNegative Analog Power Analog Power Supply.A3VNEGNegative Analog Power Supply.C2VNEGNegative Analog Power Supply.C3VNEGNegative Analog Power Supply.C5IPG12Input Number 12, Negative Phase.A6VPOSPositive Analog Power Supply.C6VPOSPositive Analog Power Ana	er Supply. er Supply. er Supply. ative Phase. tive Phase. supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. tive Phase. tive Phase. supply. tive Phase. er Supply. tive Phase. er Supply. tive Phase. er Supply. tive Phase. supply. tive Phase. ve Phase. supply. tive Phase. ve Phase. supply. tive Phase. supply. gative Phase. itive Phase.
A2VNEGNegative Analog Power Supply.C1VNEGNegative Analog PowerA3VNEGNegative Analog Power Supply.C2VNEGNegative Analog PowerA4INB12Input Number 12, Negative Phase.C3VNEGNegative Analog PowerA5IPR12Input Number 12, Positive Phase.C4ING12Input Number 12, Positive Phase.A6VPOSPositive Analog Power Supply.C5IPG12Input Number 12, Positive Analog Power Supply.A7INB11Input Number 11, Negative Phase.C6VPOSPositive Analog Power Supply.A8IPR11Input Number 11, Positive Phase.C7ING11Input Number 11, Positive Phase.A9VNEGNegative Analog Power Supply.C8IPG11Input Number 11, Positive Phase.A10INB10Input Number 10, Negative Phase.C9VNEGNegative Analog PowerA11IPR10Input Number 10, Positive Phase.C10ING10Input Number 10, Positive Analog Power Supply.A12VPOSPositive Analog Power Supply.C11IPG10Input Number 10, Positive Analog Power Analog Power Analog Power Supply.A14IPR9Input Number 9, Positive Phase.C12VPOSPositive Analog Power An	er Supply. er Supply. er Supply. ative Phase. tive Phase. supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. tive Phase. tive Phase. supply. tive Phase. er Supply. tive Phase. er Supply. tive Phase. er Supply. tive Phase. supply. tive Phase. ve Phase. supply. tive Phase. ve Phase. supply. tive Phase. supply. gative Phase. itive Phase.
A3VNEGNegative Analog Power Supply.C2VNEGNegative Analog PowerA4INB12Input Number 12, Negative Phase.C3VNEGNegative Analog PowerA5IPR12Input Number 12, Positive Phase.C4ING12Input Number 12, NegA6VPOSPositive Analog Power Supply.C5IPG12Input Number 12, Positive Analog PowerA7INB11Input Number 11, Positive Phase.C6VPOSPositive Analog PowerA8IPR11Input Number 11, Positive Phase.C7ING11Input Number 11, NegA9VNEGNegative Analog Power Supply.C8IPG11Input Number 11, PosiA10INB10Input Number 10, Negative Phase.C9VNEGNegative Analog PowerA11IPR10Input Number 10, Positive Phase.C10ING10Input Number 10, PosiA12VPOSPositive Analog Power Supply.C11IPG10Input Number 10, PosiA13INB9Input Number 9, Negative Phase.C12VPOSPositive Analog PowerA14IPR9Input Number 9, Positive Phase.C13ING9Input Number 9, Negative Analog PowerA15VNEGNegative Analog Power Supply.C14IPG9Input Number 9, Positive Analog PowerA16INB8Input Number 8, Negative Phase.C15VNEGNegative Analog PowerA17IPR8Input Number 8, Positive Phase.C16ING8Input Number 8, Negative Analog PowerA19ONB4Output Number	er Supply. er Supply. ative Phase. tive Phase. Supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. tive Phase. tive Phase. supply. tive Phase. er Supply. tive Phase. er Supply. tive Phase. er Supply. tive Phase. supply. tive Phase. ye Phase. ye Phase. supply. tive Phase.
A4INB12Input Number 12, Negative Phase.C3VNEGNegative Analog PowerA5IPR12Input Number 12, Positive Phase.C4ING12Input Number 12, NegA6VPOSPositive Analog Power Supply.C5IPG12Input Number 12, NegA7INB11Input Number 11, Negative Phase.C6VPOSPositive Analog PowerA8IPR11Input Number 11, Positive Phase.C7ING11Input Number 11, NegA9VNEGNegative Analog Power Supply.C8IPG11Input Number 11, PosiA10INB10Input Number 10, Negative Phase.C9VNEGNegative Analog PowerA11IPR10Input Number 10, Positive Phase.C10ING10Input Number 10, Positive Phase.A12VPOSPositive Analog Power Supply.C11IPG10Input Number 10, Positive Phase.A13INB9Input Number 9, Negative Phase.C12VPOSPositive Analog Power Supply.A14IPR9Input Number 9, Positive Phase.C13ING9Input Number 9, Positive Analog Power Supply.A16INB8Input Number 8, Negative Phase.C15VNEGNegative Analog Power Analog Power Supply.A17IPR8Input Number 8, Positive Phase.C16ING8Input Number 8, Positive Analog Power Supply.A19ONB4Output Number 4, Negative Phase.C18VPOSPositive Analog Power Analog Power Supply.C20OPG4Output Number 4, Negative Analog Power Supply.A22NCNo C	er Supply. ative Phase. tive Phase. Supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. tive Phase. tive Phase. supply. tive Phase. er Supply. tive Phase. er Supply. tive Phase. supply. tive Phase. ye Phase. ye Phase. supply. tive Phase. ye Phase. supply. tive Phase.
A5 IPR12 Input Number 12, Positive Phase. C4 ING12 Input Number 12, Neg A6 VPOS Positive Analog Power Supply. C5 IPG12 Input Number 12, Positive A7 INB11 Input Number 11, Negative Phase. C6 VPOS Positive Analog Power A8 IPR11 Input Number 11, Positive Phase. C7 ING11 Input Number 11, Neg A9 VNEG Negative Analog Power Supply. C8 IPG11 Input Number 11, Positive Phase. C9 VNEG Negative Analog Power A10 INB10 Input Number 10, Negative Phase. C9 VNEG Negative Analog Power A11 IPR10 Input Number 10, Positive Phase. C10 ING10 Input Number 10, Neg A12 VPOS Positive Analog Power Supply. C11 IPG10 Input Number 10, Positive Phase. C12 VPOS Positive Analog Power A14 IPR9 Input Number 9, Positive Phase. C13 ING9 Input Number 9, Negative Analog Power Supply. C14 IPG9 Input Number 9, Positive Analog Power Supply. C14 IPG9 Input Number 9, Positive Analog Power Supply. C15 VNEG Negative Analog Power A17 IPR8 Input Number 8, Negative Phase. C15 VNEG Negative Analog Power A18 VPOS Positive Analog Power Supply. C17 IPG8 Input Number 8, Negative Analog Power A19 ONB4 Output Number 4, Negative Phase. C18 VPOS Positive Analog Power A20 OPR4 Output Number 4, Negative Phase. C19 ONG4 Output Number 4, Negative Analog Power A21 VNEG Negative Analog Power Supply. C20 OPG4 Output Number 4, Negative Analog Power A22 NC No Connect. C21 VNEG Negative Analog Power A23 NC No Connect. C21 VNEG Negative Analog Power A24 VNEG Negative Analog Power Supply. C23 NC No Connect. NO Conne	ative Phase. tive Phase. Supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. tive Phase. tive Phase. supply. tive Phase. ve Phase. er Supply. tive Phase. supply. tive Phase. ye Phase. ye Phase. Supply. gative Phase. itive Phase.
A6VPOSPositive Analog Power Supply.C5IPG12Input Number 12, Positive Analog Power Analog Power Supply.A7INB11Input Number 11, Negative Phase.C6VPOSPositive Analog Power Analog Power Supply.A8IPR11Input Number 11, Positive Phase.C7ING11Input Number 11, Neg Input Number 11, Neg Input Number 11, Positive Phase.A9VNEGNegative Analog Power Supply.C8IPG11Input Number 11, Positive Phase.A10INB10Input Number 10, Negative Phase.C10ING10Input Number 10, Neg Input Number 10, Neg Input Number 10, Positive Phase.A12VPOSPositive Analog Power Supply.C11IPG10Input Number 10, Positive Phase.A13INB9Input Number 9, Negative Phase.C12VPOSPositive Analog Power Supply.A14IPR9Input Number 9, Positive Phase.C13ING9Input Number 9, Positive Phase.A15VNEGNegative Analog Power Supply.C14IPG9Input Number 9, Positive Phase.A17IPR8Input Number 8, Positive Phase.C15VNEGNegative Analog Power Analog Power Supply.A19ONB4Output Number 4, Negative Phase.C16ING8Input Number 8, Positive Analog Power Analog Power Analog Power Supply.A20OPR4Output Number 4, Positive Phase.C19ONG4Output Number 4, Positive Analog Power Supply.A21VNEGNegative Analog Power Supply.C20OPG4Output Number 4, Positive Analog Power Supply.A22NC <td< td=""><td>tive Phase. Supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. supply. tive Phase. ve Phase. Supply. tive Phase. ve Phase. ye Phase. supply. tive Phase.</td></td<>	tive Phase. Supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. supply. tive Phase. ve Phase. Supply. tive Phase. ve Phase. ye Phase. supply. tive Phase.
A7INB11Input Number 11, Negative Phase.C6VPOSPositive Analog PowerA8IPR11Input Number 11, Positive Phase.C7ING11Input Number 11, NegA9VNEGNegative Analog Power Supply.C8IPG11Input Number 11, PosiA10INB10Input Number 10, Negative Phase.C9VNEGNegative Analog PowerA11IPR10Input Number 10, Positive Phase.C10ING10Input Number 10, NegA12VPOSPositive Analog Power Supply.C11IPG10Input Number 10, PosiA13INB9Input Number 9, Negative Phase.C12VPOSPositive Analog PowerA14IPR9Input Number 9, Positive Phase.C13ING9Input Number 9, Negative Analog PowerA15VNEGNegative Analog Power Supply.C14IPG9Input Number 9, Positive Analog PowerA16INB8Input Number 8, Negative Phase.C15VNEGNegative Analog PowerA17IPR8Input Number 8, Positive Phase.C16ING8Input Number 8, Positive Analog PowerA19ONB4Output Number 4, Negative Phase.C18VPOSPositive Analog PowerA20OPR4Output Number 4, Positive Phase.C19ONG4Output Number 4, Negative Analog PowerA21VNEGNegative Analog Power Supply.C20OPG4Output Number 4, Positive Analog PowerA22NCNo Connect.C21VNEGNegative Analog PowerA23NCNo Connect. <td>Supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. supply. tive Phase. ve Phase. ve Phase. supply. tive Phase. ve Phase. supply. gative Phase. itive Phase.</td>	Supply. ative Phase. tive Phase. er Supply. ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. supply. tive Phase. ve Phase. ve Phase. supply. tive Phase. ve Phase. supply. gative Phase. itive Phase.
A8IPR11Input Number 11, Positive Phase.C7ING11Input Number 11, NegA9VNEGNegative Analog Power Supply.C8IPG11Input Number 11, Positive Phase.A10INB10Input Number 10, Negative Phase.C9VNEGNegative Analog Power Analog Power Supply.A11IPR10Input Number 10, Positive Phase.C10ING10Input Number 10, NegA12VPOSPositive Analog Power Supply.C11IPG10Input Number 10, Positive Phose.A13INB9Input Number 9, Negative Phase.C12VPOSPositive Analog Power Supply.A14IPR9Input Number 9, Positive Phase.C13ING9Input Number 9, Negative Analog Power Supply.A15VNEGNegative Analog Power Supply.C14IPG9Input Number 9, Positive Analog Power Supply.A16INB8Input Number 8, Positive Phase.C15VNEGNegative Analog Power Supply.A17IPR8Input Number 8, Positive Phase.C16ING8Input Number 8, Positive Analog Power Supply.A19ONB4Output Number 4, Negative Phase.C18VPOSPositive Analog Power Analog Power Supply.A20OPR4Output Number 4, Positive Phase.C19ONG4Output Number 4, Negative Analog Power Analog Power Supply.A21VNEGNegative Analog Power Supply.C20OPG4Output Number 4, Positive Analog Power Supply.C23NCNo Connect.A24 <td>ative Phase. tive Phase. er Supply. ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. supply. tive Phase. ve Phase. ve Phase. supply. tive Phase. supply. gative Phase. itive Phase.</td>	ative Phase. tive Phase. er Supply. ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. supply. tive Phase. ve Phase. ve Phase. supply. tive Phase. supply. gative Phase. itive Phase.
A9VNEGNegative Analog Power Supply.C8IPG11Input Number 11, Positive Phase.A10INB10Input Number 10, Negative Phase.C9VNEGNegative Analog Power Analog Power Supply.A11IPR10Input Number 10, Positive Phase.C10ING10Input Number 10, Neg Input Number 10, Positive Phase.A12VPOSPositive Analog Power Supply.C11IPG10Input Number 10, Positive Phase.A13INB9Input Number 9, Negative Phase.C12VPOSPositive Analog Power Supply.A14IPR9Input Number 9, Positive Phase.C13ING9Input Number 9, Negative Analog Power Supply.A15VNEGNegative Analog Power Supply.C14IPG9Input Number 9, Positive Analog Power Supply.A16INB8Input Number 8, Negative Phase.C15VNEGNegative Analog Power Supply.A17IPR8Input Number 8, Positive Phase.C16ING8Input Number 8, Negative Analog Power Supply.A19ONB4Output Number 4, Negative Phase.C18VPOSPositive Analog Power Analog Power Supply.A20OPR4Output Number 4, Positive Phase.C19ONG4Output Number 4, Negative Analog Power Supply.A21VNEGNegative Analog Power Supply.C20OPG4Output Number 4, Positive Analog Power Supply.A22NCNo Connect.C22NCNo Connect.A23NCNo Connect.C23NCNo Connect.A24VNEGNegative Analog Power Supply.<	tive Phase. er Supply. ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. ve Phase. Supply. tive Phase. ye Phase. Supply. gative Phase. itive Phase.
A10 INB10 Input Number 10, Negative Phase. A11 IPR10 Input Number 10, Positive Phase. A12 VPOS Positive Analog Power Supply. A13 INB9 Input Number 9, Negative Phase. A14 IPR9 Input Number 9, Positive Phase. A15 VNEG Negative Analog Power Supply. A16 INB8 Input Number 8, Negative Phase. A17 IPR8 Input Number 8, Positive Phase. A18 VPOS Positive Analog Power Supply. A19 ONB4 Output Number 4, Negative Phase. A20 OPR4 Output Number 4, Positive Phase. A21 VNEG Negative Analog Power Supply. A22 NC No Connect. A24 VNEG Negative Analog Power Supply. A25 VNEG Negative Analog Power Supply. A26 Negative Analog Power Supply. C27 VNEG Negative Analog Power Negative Phase. C28 NC No Connect. A26 VNEG Negative Analog Power Supply. C27 NOE No Connect. C28 NC No Connect. A27 NOE Negative Analog Power Supply. C28 NC No Connect. C29 NC No Connect. C20 No No Connect. C21 VNEG Negative Analog Power Supply. C23 NC No Connect. C24 VNEG Negative Analog Power Supply. C24 VNEG Negative Analog Power Supply. C25 No No Connect. C27 No No Connect. C28 NC No Connect. C29 No No Connect. C29 No No Connect. C20 No No Connect. C21 VNEG Negative Analog Power Supply. C22 NC No Connect. C23 NC No Connect. C24 VNEG Negative Analog Power Supply. C24 VNEG Negative Analog Power Supply.	er Supply. ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. ve Phase. Supply. gative Phase. itive Phase.
A11IPR10Input Number 10, Positive Phase.C10ING10Input Number 10, NegA12VPOSPositive Analog Power Supply.C11IPG10Input Number 10, Positive Phose.A13INB9Input Number 9, Negative Phase.C12VPOSPositive Analog Power Positive Phose.A14IPR9Input Number 9, Positive Phase.C13ING9Input Number 9, Negative Phose.A15VNEGNegative Analog Power Supply.C14IPG9Input Number 9, Positive Phose.A16INB8Input Number 8, Negative Phase.C15VNEGNegative Analog Power Supply.A17IPR8Input Number 8, Positive Phase.C16ING8Input Number 8, Negative Phose.A18VPOSPositive Analog Power Supply.C17IPG8Input Number 8, Positive Phose.A19ONB4Output Number 4, Negative Phase.C18VPOSPositive Analog Power Analog Power Supply.A20OPR4Output Number 4, Positive Phase.C19ONG4Output Number 4, Positive Phose.A21VNEGNegative Analog Power Supply.C20OPG4Output Number 4, Positive Phose.A22NCNo Connect.C21VNEGNegative Analog Power Supply.A23NCNo Connect.C22NCNo Connect.A24VNEGNegative Analog Power Supply.C23NCNo Connect.A25VNEGNegative Analog Power Supply.C24VNEGNegative Analog Power Supply.	ative Phase. tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. ve Phase. Supply. gative Phase. jative Phase.
A12 VPOS Positive Analog Power Supply. C11 IPG10 Input Number 10, Positive Analog Power Supply. C12 VPOS Positive Analog Power Supply. C13 ING9 Input Number 9, Negative Phase. C13 ING9 Input Number 9, Negative Analog Power Supply. C14 IPG9 Input Number 9, Positive Analog Power Supply. C14 IPG9 Input Number 9, Positive Analog Power Supply. C15 VNEG Negative Analog Power Supply. C16 ING8 Input Number 8, Negative Phase. C16 ING8 Input Number 8, Negative Analog Power Supply. C17 IPG8 Input Number 8, Positive Analog Power Supply. C17 IPG8 Input Number 8, Positive Analog Power Supply. C18 VPOS Positive Analog Power Supply. C19 ONG4 Output Number 4, Negative Phase. C19 ONG4 Output Number 4, Negative Phase. C19 ONG4 Output Number 4, Negative Analog Power Supply. C20 OPG4 Output Number 4, Positive Analog Power Supply. C20 OPG4 Output Number 4, Positive Analog Power Supply. C21 VNEG Negative Analog Power Supply. C22 NC No Connect. C22 NC No Connect. No Connect. No Connect. No Connect. No Connect. Negative Analog Power Supply. C23 NC No Connect. Negative Analog Power Supply. C24 VNEG Negative Analog Power Supply. Negative Analog Power Supply. C24 VNEG Negative Analog Power Supply. Negative Analog Power Supply. Negative Analog Power Supply. C24 VNEG Negative Analog Power Supply.	tive Phase. Supply. tive Phase. ve Phase. er Supply. tive Phase. ve Phase. Supply. gative Phase. itive Phase.
A13INB9Input Number 9, Negative Phase.C12VPOSPositive Analog PowerA14IPR9Input Number 9, Positive Phase.C13ING9Input Number 9, NegaA15VNEGNegative Analog Power Supply.C14IPG9Input Number 9, PositiveA16INB8Input Number 8, Negative Phase.C15VNEGNegative Analog PowerA17IPR8Input Number 8, Positive Phase.C16ING8Input Number 8, NegaA18VPOSPositive Analog Power Supply.C17IPG8Input Number 8, PositiveA19ONB4Output Number 4, Negative Phase.C18VPOSPositive Analog PowerA20OPR4Output Number 4, Positive Phase.C19ONG4Output Number 4, Negative Analog PowerA21VNEGNegative Analog Power Supply.C20OPG4Output Number 4, PosA22NCNo Connect.C21VNEGNegative Analog PowerA23NCNo Connect.C22NCNo Connect.A24VNEGNegative Analog Power Supply.C23NCNo Connect.A25VNEGNegative Analog Power Supply.C24VNEGNegative Analog Power	Supply. tive Phase. ve Phase. er Supply. tive Phase. ve Phase. Supply. gative Phase. itive Phase.
A14 IPR9 Input Number 9, Positive Phase. A15 VNEG Negative Analog Power Supply. A16 INB8 Input Number 8, Negative Phase. A17 IPR8 Input Number 8, Positive Phase. A18 VPOS Positive Analog Power Supply. A19 ONB4 Output Number 4, Negative Phase. A20 OPR4 Output Number 4, Positive Phase. A21 VNEG Negative Analog Power Supply. A22 NC No Connect. A23 NC No Connect. A24 VNEG Negative Analog Power Supply. C13 ING9 Input Number 9, Negative Analog Power Supply. C14 IPG9 Negative Analog Power Input Number 8, Negative Phase. C16 ING8 Input Number 8, Negative Analog Power Supply. C17 IPG8 Input Number 8, Positive Analog Power Positive Analog Power One	tive Phase. ve Phase. er Supply. tive Phase. ve Phase. Supply. gative Phase. itive Phase.
A15VNEGNegative Analog Power Supply.C14IPG9Input Number 9, PositiA16INB8Input Number 8, Negative Phase.C15VNEGNegative Analog PowerA17IPR8Input Number 8, Positive Phase.C16ING8Input Number 8, NegaA18VPOSPositive Analog Power Supply.C17IPG8Input Number 8, PositiveA19ONB4Output Number 4, Negative Phase.C18VPOSPositive Analog PowerA20OPR4Output Number 4, Positive Phase.C19ONG4Output Number 4, Negative Analog PowerA21VNEGNegative Analog Power Supply.C20OPG4Output Number 4, Positive Analog PowerA22NCNo Connect.C21VNEGNegative Analog PowerA23NCNo Connect.C22NCNo Connect.A24VNEGNegative Analog Power Supply.C23NCNo Connect.A25VNEGNegative Analog Power Supply.C24VNEGNegative Analog Power	ve Phase. er Supply. tive Phase. ve Phase. Supply. gative Phase. itive Phase.
A16 INB8 Input Number 8, Negative Phase. C15 VNEG Negative Analog Power Supply. C17 IPG8 Input Number 8, Positive Phase. C16 ING8 Input Number 8, Negative Analog Power Supply. C17 IPG8 Input Number 8, Positive Analog Power Supply. C18 VPOS Positive Analog Power A20 OPR4 Output Number 4, Negative Phase. C18 VPOS Positive Analog Power A21 VNEG Negative Analog Power Supply. C20 OPG4 Output Number 4, Positive A22 NC No Connect. C21 VNEG Negative Analog Power A23 NC No Connect. C22 NC No Connect. C24 VNEG Negative Analog Power Supply. C23 NC No Connect. No Connect. Negative Analog Power Supply. C24 VNEG Negative Analog Power Supply.	er Supply. tive Phase. ve Phase. Supply. gative Phase. itive Phase.
A17 IPR8 Input Number 8, Positive Phase. C16 ING8 Input Number 8, Nega A18 VPOS Positive Analog Power Supply. C17 IPG8 Input Number 8, Positive A19 ONB4 Output Number 4, Negative Phase. C18 VPOS Positive Analog Power A20 OPR4 Output Number 4, Positive Phase. C19 ONG4 Output Number 4, Negative A11 VNEG Negative Analog Power Supply. C20 OPG4 Output Number 4, Positive A121 VNEG No Connect. C21 VNEG Negative Analog Power A23 NC No Connect. C22 NC No Connect. A24 VNEG Negative Analog Power Supply. C23 NC No Connect. No Co	tive Phase. ve Phase. Supply. gative Phase. itive Phase.
A18 VPOS Positive Analog Power Supply. C17 IPG8 Input Number 8, Positive Analog Power Supply. C18 VPOS Positive Analog Power A20 OPR4 Output Number 4, Positive Phase. C19 ONG4 Output Number 4, Negative Phase. C19 OPG4 Output Number 4, Negative Analog Power Supply. C20 OPG4 Output Number 4, Positive Analog Power Supply. C21 VNEG Negative Analog Power A23 NC No Connect. C21 VNEG No Connect. No Connect. C22 NC No Connect. No	ve Phase. Supply. gative Phase. itive Phase.
A19 ONB4 Output Number 4, Negative Phase. C18 VPOS Positive Analog Power A20 OPR4 Output Number 4, Positive Phase. C19 ONG4 Output Number 4, Negative Analog Power Supply. C20 OPG4 Output Number 4, Positive Analog Power Supply. C20 OPG4 Output Number 4, Positive Analog Power A22 NC No Connect. C21 VNEG Negative Analog Power A23 NC No Connect. C22 NC No Connect. A24 VNEG Negative Analog Power Supply. C23 NC No Connect. No Co	Supply. gative Phase. itive Phase.
A20 OPR4 Output Number 4, Positive Phase. C19 ONG4 Output Number 4, Nec OPG4 Output Number 4, Nec OPG4 Output Number 4, Nec OPG4 Output Number 4, Positive Analog Power Supply. C20 OPG4 Output Number 4, Positive Analog Power A22 NC No Connect. C21 VNEG Negative Analog Power A23 NC No Connect. C22 NC No Connect. A24 VNEG Negative Analog Power Supply. C23 NC No Connect. No Connect. No Connect. No Connect. Negative Analog Power Supply. C24 VNEG Negative Analog Power Supply.	gative Phase. itive Phase.
A21VNEGNegative Analog Power Supply.C20OPG4Output Number 4, PosA22NCNo Connect.C21VNEGNegative Analog PowerA23NCNo Connect.C22NCNo Connect.A24VNEGNegative Analog Power Supply.C23NCNo Connect.A25VNEGNegative Analog Power Supply.C24VNEGNegative Analog Power	itive Phase.
A22 NC No Connect. C21 VNEG Negative Analog Power A23 NC No Connect. C22 NC No Connect. A24 VNEG Negative Analog Power Supply. C23 NC No Connect. A25 VNEG Negative Analog Power Supply. C24 VNEG Negative Analog Power Supply.	
A23 NC No Connect. C22 NC No Connect. A24 VNEG Negative Analog Power Supply. C23 NC No Connect. A25 VNEG Negative Analog Power Supply. C24 VNEG Negative Analog Power	r Supply
A24 VNEG Negative Analog Power Supply. C23 NC No Connect. A25 VNEG Negative Analog Power Supply. C24 VNEG Negative Analog Power	. 2444.3.
A25 VNEG Negative Analog Power Supply. C24 VNEG Negative Analog Power	
AGE TABLE THE STATE OF THE STAT	
A26 VNEG Negative Analog Power Supply. C25 VNEG Negative Analog Power	
B1 VNEG Negative Analog Power Supply. C26 VNEG Negative Analog Power	
B2 VNEG Negative Analog Power Supply. D1 IPR13 Input Number 13, Posi	
B3 VNEG Negative Analog Power Supply. D2 INR13 Input Number 13, Neg	
B4 IPB12 Input Number 12, Positive Phase. D3 IPG13 Input Number 13, Posi	tive Phase.
B5 INR12 Input Number 12, Negative Phase. D4 VPOS Positive Analog Power	Supply.
B6 VPOS Positive Analog Power Supply. D5 VPOS Positive Analog Power	Supply.
B7 IPB11 Input Number 11, Positive Phase. D6 VPOS Positive Analog Power	Supply.
B8 INR11 Input Number 11, Negative Phase. D7 VPOS Positive Analog Power	Supply.
B9 VNEG Negative Analog Power Supply. D8 VPOS Positive Analog Power	Supply.
B10 IPB10 Input Number 10, Positive Phase. D9 VPOS Positive Analog Power	Supply.
B11 INR10 Input Number 10, Negative Phase. D10 VPOS Positive Analog Power	Supply.
B12 VPOS Positive Analog Power Supply. D11 VPOS Positive Analog Power	Supply.
B13 IPB9 Input Number 9, Positive Phase. D12 VPOS Positive Analog Power	Supply.
B14 INR9 Input Number 9, Negative Phase. D13 VPOS Positive Analog Power	Supply.
B15 VNEG Negative Analog Power Supply. D14 VPOS Positive Analog Power	Supply.
B16 IPB8 Input Number 8, Positive Phase. D15 VPOS Positive Analog Power	Supply.
B17 INR8 Input Number 8, Negative Phase. D16 VPOS Positive Analog Power	Supply.
B18 VPOS Positive Analog Power Supply. D17 VPOS Positive Analog Power	Supply.
B19 OPB4 Output Number 4, Positive Phase. D18 VPOS Positive Analog Power	Supply.
B20 ONR4 Output Number 4, Negative Phase. D19 V4 Output Number 4, V Sy	/nc.
B21 VNEG Negative Analog Power Supply. D20 H4 Output Number 4, H S	
B22 NC No Connect. D21 VPOS Positive Analog Power	
B23 NC No Connect. D22 NC No Connect.	
B24 VNEG Negative Analog Power Supply. D23 NC No Connect.	
B25 VNEG Negative Analog Power Supply. D24 VNEG Negative Analog Power	er Supply.

Ball No.	Mnemonic	Description	Ball No.	Mnemonic	Description
D25	VNEG	Negative Analog Power Supply.	F25	VPOS	Positive Analog Power Supply.
026	VNEG	Negative Analog Power Supply.	F26	VPOS	Positive Analog Power Supply.
 1	INB13	Input Number 13, Negative Phase.	G1	VPOS	Positive Analog Power Supply.
E2	IPB13	Input Number 13, Positive Phase.	G2	VPOS	Positive Analog Power Supply.
E3	ING13	Input Number 13, Negative Phase.	G3	VPOS	Positive Analog Power Supply.
E4	VPOS	Positive Analog Power Supply.	G4	VPOS	Positive Analog Power Supply.
E5	VPOS	Positive Analog Power Supply.	G5	VPOS	Positive Analog Power Supply.
E6	DGND	Digital Power Supply.	G6	VPOS	Positive Analog Power Supply.
E7	VDD	Digital Power Supply.	G7	VPOS	Positive Analog Power Supply.
E8	CLR	Internal Register Clearing	G8	VPOS	Positive Analog Power Supply.
E9	A0	Control Pin 0, Output Address Bit 0.	G9	VPOS	Positive Analog Power Supply.
E10	A1	Control Pin 1, Output Address Bit 1.	G10	VPOS	Positive Analog Power Supply.
E11	A2	Control Pin 2, Output Address Bit 2.	G11	VPOS	Positive Analog Power Supply.
E12	SER/PAR	Control Pin: Serial Parallel Select Mode.	G12	VPOS	Positive Analog Power Supply.
E13	SERIN	Control Pin: Serial Data In.	G13	VPOS	Positive Analog Power Supply.
E14	CLK	Control Pin: Serial Data Clock.	G14	VPOS	Positive Analog Power Supply.
E15	CS	Control Pin: Chip Select.	G15	VPOS	Positive Analog Power Supply.
E16	SEROUT	Control Pin: Serial Data Out.	G16	VPOS	Positive Analog Power Supply.
E17	VDD		G17	VPOS	Positive Analog Power Supply.
		Digital Power Supply.	G18	VPOS	Positive Analog Power Supply.
E18	DGND VPOS	Digital Power Supply.	G19	VPOS	Positive Analog Power Supply.
E19		Positive Analog Power Supply.	G20	VPOS	Positive Analog Power Supply.
E20	VPOS	Positive Analog Power Supply.	G21	VPOS	Positive Analog Power Supply.
E21	VPOS	Positive Analog Power Supply.	G22	VPOS	Positive Analog Power Supply.
E22	VPOS	Positive Analog Power Supply.	G23	V3	Output Number 3, V Sync.
E23	VPOS	Positive Analog Power Supply.	G24	ONG3	Output Number 3, Negative Phase
E24	VNEG	Negative Analog Power Supply.	G25	OPB3	Output Number 3, Positive Phase.
E25	VNEG	Negative Analog Power Supply.	G26	ONB3	Output Number 3, Negative Phase
E26	VNEG	Negative Analog Power Supply.	H1	IPR14	Input Number 14, Positive Phase.
F1	VPOS	Positive Analog Power Supply.	H2	INR14	Input Number 14, Negative Phase.
F2	VPOS	Positive Analog Power Supply.	H3	IPG14	Input Number 14, Positive Phase.
F3	VPOS	Positive Analog Power Supply.	H4	VPOS	Positive Analog Power Supply.
F4	VPOS	Positive Analog Power Supply.	H5	VPOS	Positive Analog Power Supply. Positive Analog Power Supply.
F5	VPOS	Positive Analog Power Supply.	H6	VPOS	Positive Analog Power Supply. Positive Analog Power Supply.
F6	VPOS	Positive Analog Power Supply.	H7	VPOS	Positive Analog Power Supply. Positive Analog Power Supply.
F7	VPOS	Positive Analog Power Supply.	п <i>7</i> Н8	VNEG	,
F8	VPOS	Positive Analog Power Supply.	но Н9	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.
F9	VPOS	Positive Analog Power Supply.	п9 H10	VNEG	Negative Analog Power Supply.
F10	VPOS	Positive Analog Power Supply.			
F11	VPOS	Positive Analog Power Supply.	H11	VNEG	Negative Analog Power Supply.
F12	VPOS	Positive Analog Power Supply.	H12	VNEG	Negative Analog Power Supply.
F13	VPOS	Positive Analog Power Supply.	H13	VNEG	Negative Analog Power Supply
F14	VPOS	Positive Analog Power Supply.	H14	VNEG	Negative Analog Power Supply.
F15	VPOS	Positive Analog Power Supply.	H15	VNEG	Negative Analog Power Supply.
F16	VPOS	Positive Analog Power Supply.	H16	VNEG	Negative Analog Power Supply.
F17	VPOS	Positive Analog Power Supply.	H17	VNEG	Negative Analog Power Supply.
F18	VPOS	Positive Analog Power Supply.	H18	VNEG	Negative Analog Power Supply.
F19	VPOS	Positive Analog Power Supply.	H19	VNEG	Negative Analog Power Supply.
F20	VPOS	Positive Analog Power Supply.	H20	VNEG	Negative Analog Power Supply.
F21	VPOS	Positive Analog Power Supply.	H21	VPOS	Positive Analog Power Supply.
F22	VPOS	Positive Analog Power Supply.	H22	VPOS	Positive Analog Power Supply.
F23	VPOS	Positive Analog Power Supply.	H23	H3	Output Number 3, H Sync.
F24	VPOS	Positive Analog Power Supply.	H24	OPG3	Output Number 3, Positive Phase.

Ball No.	Mnemonic	Description	Ball No.	Mnemonic	Description
H25	ONR3	Output Number 3, Negative Phase.	K25	NC	No Connect.
H26	OPR3	Output Number 3, Positive Phase.	K26	NC	No Connect.
J1	INB14	Input Number 14, Negative Phase.	L1	IPR15	Input Number 15, Positive Phase.
J2	IPB14	Input Number 14, Positive Phase.	L2	INR15	Input Number 15, Negative Phase.
J3	ING14	Input Number 14, Negative Phase.	L3	IPG15	Input Number 15, Positive Phase.
J4	VPOS	Positive Analog Power Supply.	L4	VPOS	Positive Analog Power Supply.
J5	VPOS	Positive Analog Power Supply.	L5	VPOS	Positive Analog Power Supply.
J6	VPOS	Positive Analog Power Supply.	L6	VPOS	Positive Analog Power Supply.
J7	VPOS	Positive Analog Power Supply.	L7	VPOS	Positive Analog Power Supply.
J8	VNEG	Negative Analog Power Supply.	L8	VNEG	Negative Analog Power Supply.
J9	VNEG	Negative Analog Power Supply.	L9	VNEG	Negative Analog Power Supply.
J10	VNEG	Negative Analog Power Supply.	L10	VNEG	Negative Analog Power Supply.
J11	VNEG	Negative Analog Power Supply.	L11	VNEG	Negative Analog Power Supply.
J12	VNEG	Negative Analog Power Supply.	L12	VNEG	Negative Analog Power Supply.
J13	VNEG	Negative Analog Power Supply.	L13	VNEG	Negative Analog Power Supply.
J14	VNEG	Negative Analog Power Supply.	L14	VNEG	Negative Analog Power Supply.
J15	VNEG	Negative Analog Power Supply.	L15	VNEG	Negative Analog Power Supply.
J16	VNEG	Negative Analog Power Supply.	L16	VNEG	Negative Analog Power Supply.
J17	VNEG	Negative Analog Power Supply.	L17	VNEG	Negative Analog Power Supply.
J18	VNEG	Negative Analog Power Supply.	L18	VNEG	Negative Analog Power Supply.
J19	VNEG	Negative Analog Power Supply.	L19	VNEG	Negative Analog Power Supply.
J20	VNEG	Negative Analog Power Supply.	L20	VNEG	Negative Analog Power Supply.
J21	VPOS	Positive Analog Power Supply.	L21	VPOS	Positive Analog Power Supply.
J22	VPOS	Positive Analog Power Supply.	L22	VPOS	Positive Analog Power Supply.
J23	VPOS	Positive Analog Power Supply.	L23	NC	No Connect.
J24	VNEG	Negative Analog Power Supply.	L24	NC	No Connect.
J25	VNEG	Negative Analog Power Supply.	L25	NC	No Connect.
J26	VNEG	Negative Analog Power Supply.	L26	NC	No Connect.
K1	VNEG	Negative Analog Power Supply.	M1	INB15	Input Number 15, Negative Phase.
K2	VNEG	Negative Analog Power Supply.	M2	IPB15	Input Number 15, Positive Phase.
K3	VNEG	Negative Analog Power Supply.	M3	ING15	Input Number 15, Negative Phase.
K4	VPOS	Positive Analog Power Supply.	M4	VPOS	Positive Analog Power Supply.
K5	VPOS	Positive Analog Power Supply.	M5	VPOS	Positive Analog Power Supply.
K6	VPOS	Positive Analog Power Supply.	M6	VPOS	Positive Analog Power Supply.
K7	VPOS	Positive Analog Power Supply.	M7	VPOS	Positive Analog Power Supply.
K8	VNEG	Negative Analog Power Supply.	M8	VNEG	Negative Analog Power Supply.
K9	VNEG	Negative Analog Power Supply.	M9	VNEG	Negative Analog Power Supply.
K10	VNEG	Negative Analog Power Supply.	M10	VNEG	Negative Analog Power Supply.
K11	VNEG	Negative Analog Power Supply.	M11	VNEG	Negative Analog Power Supply.
K12	VNEG	Negative Analog Power Supply.	M12	VNEG	Negative Analog Power Supply.
K13	VNEG	Negative Analog Power Supply.	M13	VNEG	Negative Analog Power Supply.
K14	VNEG	Negative Analog Power Supply.	M14	VNEG	Negative Analog Power Supply.
K15	VNEG	Negative Analog Power Supply.	M15	VNEG	Negative Analog Power Supply.
K16	VNEG	Negative Analog Power Supply.	M16	VNEG	Negative Analog Power Supply.
K17	VNEG	Negative Analog Power Supply.	M17	VNEG	Negative Analog Power Supply.
K18	VNEG	Negative Analog Power Supply.	M18	VNEG	Negative Analog Power Supply.
K19	VNEG	Negative Analog Power Supply.	M19	VNEG	Negative Analog Power Supply.
K20	VNEG	Negative Analog Power Supply.	M20	VNEG	Negative Analog Power Supply.
K21	VPOS	Positive Analog Power Supply.	M21	VPOS	Positive Analog Power Supply.
K22	VPOS	Positive Analog Power Supply.	M22	VPOS	Positive Analog Power Supply.
K23	NC	No Connect.	M23	VPOS	Positive Analog Power Supply.
K24	NC	No Connect.	M24	VPOS	Positive Analog Power Supply.

Ball No.	Mnemonic	Description	Ball No.	Mnemonic	Description
M25	VPOS	Positive Analog Power Supply.	P25	ONR2	Output Number 2, Negative Phase
M26	VPOS	Positive Analog Power Supply.	P26	OPR2	Output Number 2, Positive Phase.
N1	VPOS	Positive Analog Power Supply.	R1	IPR7	Input Number 7, Positive Phase.
N2	VPOS	Positive Analog Power Supply.	R2	INR7	Input Number 7, Negative Phase.
N3	VPOS	Positive Analog Power Supply.	R3	IPG7	Input Number 7, Positive Phase.
N4	VPOS	Positive Analog Power Supply.	R4	VPOS	Positive Analog Power Supply.
N5	VOCM_ CMENCON	Output CM Reference with CM Encoding On.	R5	VOCM_ CMENCOFF	Output Reference with CM Encoding Off.
N6	VPOS	Positive Analog Power Supply.	R6	VPOS	Positive Analog Power Supply.
N7	VPOS	Positive Analog Power Supply.	R7	VPOS	Positive Analog Power Supply.
N8	VNEG	Negative Analog Power Supply.	R8	VNEG	Negative Analog Power Supply.
N9	VNEG	Negative Analog Power Supply.	R9	VNEG	Negative Analog Power Supply.
N10	VNEG	Negative Analog Power Supply.	R10	VNEG	Negative Analog Power Supply.
N11	VNEG	Negative Analog Power Supply.	R11	VNEG	Negative Analog Power Supply.
N12	VNEG	Negative Analog Power Supply.	R12	VNEG	Negative Analog Power Supply.
N13	VNEG	Negative Analog Power Supply.	R13	VNEG	Negative Analog Power Supply.
N14	VNEG	Negative Analog Power Supply.	R14	VNEG	Negative Analog Power Supply.
N15	VNEG	Negative Analog Power Supply.	R15	VNEG	Negative Analog Power Supply.
N16	VNEG	Negative Analog Power Supply.	R16	VNEG	Negative Analog Power Supply.
N17	VNEG	Negative Analog Power Supply.	R17	VNEG	Negative Analog Power Supply.
N18	VNEG	Negative Analog Power Supply.	R18	VNEG	Negative Analog Power Supply.
N19	VNEG	Negative Analog Power Supply.	R19	VNEG	Negative Analog Power Supply.
N20	VNEG	Negative Analog Power Supply.	R20	VNEG	Negative Analog Power Supply.
N21	VPOS	Positive Analog Power Supply.	R21	VPOS	Positive Analog Power Supply.
N22	VPOS	Positive Analog Power Supply.	R22	VPOS	Positive Analog Power Supply.
N23	V2	Output Number 2, V Sync.	R23	VPOS	Positive Analog Power Supply.
N24	ONG2	Output Number 2, Negative Phase.	R24	VNEG	Negative Analog Power Supply.
N25	OPB2	Output Number 2, Positive Phase.	R25	VNEG	Negative Analog Power Supply.
N26	ONB2	Output Number 2, Negative Phase.	R26	VNEG	Negative Analog Power Supply.
P1	VPOS	Positive Analog Power Supply.	T1	INB7	Input Number 7, Negative Phase.
P2	VPOS	Positive Analog Power Supply.	T2	IPB7	Input Number 7, Positive Phase.
P3	VPOS	Positive Analog Power Supply.	T3	ING7	Input Number 7, Negative Phase.
P4	VPOS	Positive Analog Power Supply.	T4	VPOS	Positive Analog Power Supply.
 P5	VBLK	Output Blank Level.	T5	VPOS	Positive Analog Power Supply.
P6	VPOS	Positive Analog Power Supply.	T6	VPOS	Positive Analog Power Supply.
. о Р7	VPOS	Positive Analog Power Supply.	T7	VPOS	Positive Analog Power Supply.
P8	VNEG	Negative Analog Power Supply.	T8	VNEG	Negative Analog Power Supply.
P9	VNEG	Negative Analog Power Supply.	T9	VNEG	Negative Analog Power Supply.
P10	VNEG	Negative Analog Power Supply.	T10	VNEG	Negative Analog Power Supply.
P11	VNEG	Negative Analog Power Supply.	T11	VNEG	Negative Analog Power Supply.
P12	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T12	VNEG	Negative Analog Power Supply.
P13	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T13	VNEG	Negative Analog Power Supply.
P14	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T14	VNEG	Negative Analog Power Supply.
P15	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T15	VNEG	Negative Analog Power Supply.
P16	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T16	VNEG	Negative Analog Power Supply.
P17	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T17	VNEG	Negative Analog Power Supply.
P18	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T18	VNEG	Negative Analog Power Supply.
P19	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T19	VNEG	Negative Analog Power Supply.
P19 P20	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.	T20	VNEG	Negative Analog Power Supply. Negative Analog Power Supply.
P20 P21	VPOS	Positive Analog Power Supply.	T21	VPOS	Positive Analog Power Supply.
P21 P22	VPOS	Positive Analog Power Supply. Positive Analog Power Supply.		VPOS	
P22 P23			T22		Positive Analog Power Supply.
F/3	H2	Output Number 2, H Sync.	T23	NC	No Connect.

Ball No.	Mnemonic	Description	Ball No.	Mnemonic	Description
T25	NC	No Connect.	V25	VPOS	Positive Analog Power Supply.
T26	NC	No Connect.	V26	VPOS	Positive Analog Power Supply.
U1	VNEG	Negative Analog Power Supply.	W1	INB6	Input Number 6, Negative Phase.
U2	VNEG	Negative Analog Power Supply.	W2	IPB6	Input Number 6, Positive Phase.
U3	VNEG	Negative Analog Power Supply.	W3	ING6	Input Number 6, Negative Phase.
U4	VPOS	Positive Analog Power Supply.	W4	VPOS	Positive Analog Power Supply.
U5	VPOS	Positive Analog Power Supply.	W5	VPOS	Positive Analog Power Supply.
U6	VPOS	Positive Analog Power Supply.	W6	VPOS	Positive Analog Power Supply.
U7	VPOS	Positive Analog Power Supply.	W7	VPOS	Positive Analog Power Supply.
U8	VNEG	Negative Analog Power Supply.	W8	VNEG	Negative Analog Power Supply.
U9	VNEG	Negative Analog Power Supply.	W9	VNEG	Negative Analog Power Supply.
U10	VNEG	Negative Analog Power Supply.	W10	VNEG	Negative Analog Power Supply.
U11	VNEG	Negative Analog Power Supply.	W11	VNEG	Negative Analog Power Supply.
U12	VNEG	Negative Analog Power Supply.	W12	VNEG	Negative Analog Power Supply.
U13	VNEG	Negative Analog Power Supply.	W13	VNEG	Negative Analog Power Supply.
U14	VNEG	Negative Analog Power Supply.	W14	VNEG	Negative Analog Power Supply.
U15	VNEG	Negative Analog Power Supply.	W15	VNEG	Negative Analog Power Supply.
U16	VNEG	Negative Analog Power Supply.	W16	VNEG	Negative Analog Power Supply.
U17	VNEG	Negative Analog Power Supply.	W17	VNEG	Negative Analog Power Supply.
U18	VNEG	Negative Analog Power Supply.	W18	VNEG	Negative Analog Power Supply.
U19	VNEG	Negative Analog Power Supply.	W19	VNEG	Negative Analog Power Supply.
U20	VNEG	Negative Analog Power Supply.	W20	VNEG	Negative Analog Power Supply.
U21	VPOS	Positive Analog Power Supply.	W21	VPOS	Positive Analog Power Supply.
U22	VPOS	Positive Analog Power Supply.	W22	VPOS	Positive Analog Power Supply.
U23	NC	No Connect.	W23	V1	Output Number 1, V Sync.
U24	NC	No Connect.	W24	ONG1	Output Number 1, Negative Phase.
U25	NC	No Connect.	W25	OPB1	Output Number 1, Positive Phase.
U26	NC	No Connect.	W26	ONB1	Output Number 1, Negative Phase.
V1	IPR6	Input Number 6, Positive Phase.	Y1	VPOS	Positive Analog Power Supply.
V2	INR6	Input Number 6, Negative Phase.	Y2	VPOS	Positive Analog Power Supply.
V3	IPG6	Input Number 6, Positive Phase.	Y3	VPOS	Positive Analog Power Supply.
V4	VPOS	Positive Analog Power Supply.	Y4	VPOS	Positive Analog Power Supply.
V5	VPOS	Positive Analog Power Supply.	Y5	VPOS	Positive Analog Power Supply.
V6	VPOS	Positive Analog Power Supply.	Y6	VPOS	Positive Analog Power Supply.
V7	VPOS	Positive Analog Power Supply.	Y7	VPOS	Positive Analog Power Supply.
V8	VNEG	Negative Analog Power Supply.	Y8	VPOS	Positive Analog Power Supply.
V9	VNEG	Negative Analog Power Supply.	Y9	VPOS	Positive Analog Power Supply.
V10	VNEG	Negative Analog Power Supply.	Y10	VPOS	Positive Analog Power Supply.
V11	VNEG	Negative Analog Power Supply.	Y11	VPOS	Positive Analog Power Supply.
V12	VNEG	Negative Analog Power Supply.	Y12	VPOS	Positive Analog Power Supply.
V13	VNEG	Negative Analog Power Supply.	Y13	VPOS	Positive Analog Power Supply.
V14	VNEG	Negative Analog Power Supply.	Y14	VPOS	Positive Analog Power Supply.
V15	VNEG	Negative Analog Power Supply.	Y15	VPOS	Positive Analog Power Supply.
V16	VNEG	Negative Analog Power Supply.	Y16	VPOS	Positive Analog Power Supply.
V17	VNEG	Negative Analog Power Supply.	Y17	VPOS	Positive Analog Power Supply.
V18	VNEG	Negative Analog Power Supply.	Y18	VPOS	Positive Analog Power Supply.
V19	VNEG	Negative Analog Power Supply.	Y19	VPOS	Positive Analog Power Supply.
V20	VNEG	Negative Analog Power Supply.	Y20	VPOS	Positive Analog Power Supply.
V21	VPOS	Positive Analog Power Supply.	Y21	VPOS	Positive Analog Power Supply.
V22	VPOS	Positive Analog Power Supply.	Y22	VPOS	Positive Analog Power Supply.
V23	VPOS	Positive Analog Power Supply.	Y23	H1	Output Number 1, H Sync.
V24	VPOS	Positive Analog Power Supply.	Y24	OPG1	Output Number 1, Positive Phase.

Ball No.	Mnemonic	Description	Ball No.	Mnemonic	Description
/ 25	ONR1	Output Number 1, Negative Phase.	AB25	VNEG	Negative Analog Power Supply.
′26	OPR1	Output Number 1, Positive Phase.	AB26	VNEG	Negative Analog Power Supply.
A1	VPOS	Positive Analog Power Supply.	AC1	INB5	Input Number 5, Negative Phase.
AA2	VPOS	Positive Analog Power Supply.	AC2	IPB5	Input Number 5, Positive Phase.
AA3	VPOS	Positive Analog Power Supply.	AC3	ING5	Input Number 5, Negative Phase.
AA4	VPOS	Positive Analog Power Supply.	AC4	VPOS	Positive Analog Power Supply.
4A5	VPOS	Positive Analog Power Supply.	AC5	VPOS	Positive Analog Power Supply.
AA6	VPOS	Positive Analog Power Supply.	AC6	VPOS	Positive Analog Power Supply.
4 A7	VPOS	Positive Analog Power Supply.	AC7	VPOS	Positive Analog Power Supply.
AA8	VPOS	Positive Analog Power Supply.	AC8	VPOS	Positive Analog Power Supply.
AA9	VPOS	Positive Analog Power Supply.	AC9	VPOS	Positive Analog Power Supply.
4A10	VPOS	Positive Analog Power Supply.	AC10	VPOS	Positive Analog Power Supply.
4A11	VPOS	Positive Analog Power Supply.	AC11	VPOS	Positive Analog Power Supply.
AA12	VPOS	Positive Analog Power Supply.	AC12	VPOS	Positive Analog Power Supply.
AA13	VPOS	Positive Analog Power Supply.	AC13	VPOS	Positive Analog Power Supply.
4A14	VPOS	Positive Analog Power Supply.	AC14	VPOS	Positive Analog Power Supply.
AA15	VPOS	Positive Analog Power Supply.	AC15	VPOS	Positive Analog Power Supply.
4A16	VPOS	Positive Analog Power Supply.	AC16	VPOS	Positive Analog Power Supply.
AA17	VPOS	Positive Analog Power Supply.	AC17	VPOS	Positive Analog Power Supply.
AA18	VPOS	Positive Analog Power Supply.	AC18	VPOS	Positive Analog Power Supply.
AA19	VPOS	Positive Analog Power Supply.	AC19	НО	Output Number 0, H Sync.
AA20	VPOS	Positive Analog Power Supply.	AC20	V0	Output Number 0, V Sync.
AA21	VPOS	Positive Analog Power Supply.	AC21	VPOS	Positive Analog Power Supply.
AA22	VPOS	Positive Analog Power Supply.	AC22	NC	No Connect.
AA23	VPOS	Positive Analog Power Supply.	AC23	NC	No Connect.
AA24	VNEG	Negative Analog Power Supply.	AC24	VNEG	Negative Analog Power Supply.
AA25	VNEG	Negative Analog Power Supply.	AC25	VNEG	Negative Analog Power Supply.
AA26	VNEG	Negative Analog Power Supply.	AC26	VNEG	Negative Analog Power Supply.
AB1	IPR5	Input Number 5, Positive Phase.	AD1	VNEG	Negative Analog Power Supply.
AB2	INR5	Input Number 5, Negative Phase.	AD2	VNEG	Negative Analog Power Supply.
AB3	IPG5	Input Number 5, Positive Phase.	AD3	VNEG	Negative Analog Power Supply.
AB4	VPOS	Positive Analog Power Supply.	AD4	IPG4	Input Number 4, Positive Phase.
AB5	VPOS	Positive Analog Power Supply.	AD5	ING4	Input Number 4, Negative Phase.
AB6	DGND	Digital Power Supply.	AD6	VNEG	Negative Analog Power Supply.
AB7	VDD	Digital Power Supply. Digital Power Supply.	AD7	IPG3	Input Number 3, Positive Phase.
AB8	D0	Control Pin, Input Address Bit 0.	AD8	ING3	Input Number 3, Negative Phase.
AB9	D1	Control Pin, Input Address Bit 1.	AD9	VPOS	Positive Analog Power Supply.
AB10	D2	Control Pin, Input Address Bit 2.	AD10	IPG2	Input Number 2, Positive Phase.
AB11	D3	Control Pin, Input Address Bit 3.	AD10	ING2	Input Number 2, Negative Phase.
AB12	D3	Control Pin, Input Address Bit 4.	AD11	VNEG	Negative Analog Power Supply.
AB13	CMENC	Control Pin, Pass/Stop CM Encoding.	AD12 AD13	IPG1	Input Number 1, Positive Phase.
AB14	WE	Control Pin, 1st Rank Write Strobe.	AD13 AD14	ING1	Input Number 1, Positive Phase.
			AD14 AD15	VPOS	Positive Analog Power Supply.
AB15	UPDATE	Control Pin, 2nd Rank Write Strobe.		IPG0	Input Number 0, Positive Phase.
AB16	RST	Control Pin, 2nd Rank Data Reset.	AD16		-
AB17	VDD	Digital Power Supply.	AD17	ING0	Input Number 0, Negative Phase.
AB18	DGND	Digital Power Supply.	AD18	VNEG	Negative Analog Power Supply.
AB19	VPOS	Positive Analog Power Supply.	AD19	OPG0	Output Number 0, Positive Phase.
AB20	VPOS	Positive Analog Power Supply.	AD20	ONG0	Output Number 0, Negative Phase
AB21	VPOS	Positive Analog Power Supply.	AD21	VPOS	Positive Analog Power Supply.
AB22	VPOS	Positive Analog Power Supply.	AD22	NC	No Connect.
AB23	VPOS	Positive Analog Power Supply.	AD23	NC	No Connect.
AB24	VNEG	Negative Analog Power Supply.	AD24	VNEG	Negative Analog Power Supply.


Ball No.	Mnemonic	Description	Ball No.	Mnemonic	Description
AD25	VNEG	Negative Analog Power Supply.	AE26	VNEG	Negative Analog Power Supply.
AD26	VNEG	Negative Analog Power Supply.	AF1	VNEG	Negative Analog Power Supply.
AE1	VNEG	Negative Analog Power Supply.	AF2	VNEG	Negative Analog Power Supply.
AE2	VNEG	Negative Analog Power Supply.	AF3	VNEG	Negative Analog Power Supply.
AE3	VNEG	Negative Analog Power Supply.	AF4	IPR4	Input Number 4, Positive Phase.
AE4	INR4	Input Number 4, Negative Phase.	AF5	INB4	Input Number 4, Negative Phase.
AE5	IPB4	Input Number 4, Positive Phase.	AF6	VNEG	Negative Analog Power Supply.
AE6	VNEG	Negative Analog Power Supply.	AF7	IPR3	Input Number 3, Positive Phase.
AE7	INR3	Input Number 3, Negative Phase.	AF8	INB3	Input Number 3, Negative Phase.
AE8	IPB3	Input Number 3, Positive Phase.	AF9	VPOS	Positive Analog Power Supply.
AE9	VPOS	Positive Analog Power Supply.	AF10	IPR2	Input Number 2, Positive Phase.
AE10	INR2	Input Number 2, Negative Phase.	AF11	INB2	Input Number 2, Negative Phase.
AE11	IPB2	Input Number 2, Positive Phase.	AF12	VNEG	Negative Analog Power Supply.
AE12	VNEG	Negative Analog Power Supply.	AF13	IPR1	Input Number 1, Positive Phase.
AE13	INR1	Input Number 1, Negative Phase.	AF14	INB1	Input Number 1, Negative Phase.
AE14	IPB1	Input Number 1, Positive Phase.	AF15	VPOS	Positive Analog Power Supply.
AE15	VPOS	Positive Analog Power Supply.	AF16	IPR0	Input Number 0, Positive Phase.
AE16	INR0	Input Number 0, Negative Phase.	AF17	INB0	Input Number 0, Negative Phase.
AE17	IPB0	Input Number 0, Positive Phase.	AF18	VNEG	Negative Analog Power Supply.
AE18	VNEG	Negative Analog Power Supply.	AF19	OPR0	Output Number 0, Positive Phase.
AE19	ONR0	Output Number 0, Negative Phase.	AF20	ONB0	Output Number 0, Negative Phase.
AE20	OPB0	Output Number 0, Positive Phase.	AF21	VPOS	Positive Analog Power Supply.
AE21	VPOS	Positive Analog Power Supply.	AF22	NC	No Connect.
AE22	NC	No Connect.	AF23	NC	No Connect.
AE23	NC	No Connect.	AF24	VNEG	Negative Analog Power Supply.
AE24	VNEG	Negative Analog Power Supply.	AF25	VNEG	Negative Analog Power Supply.
AE25	VNEG	Negative Analog Power Supply.	AF26	VNEG	Negative Analog Power Supply.

TRUTH TABLE AND LOGIC DIAGRAM

Table 15. Operation Truth Table

WE	UPDATE	CLK	SERIN	SEROUT	RST	SER/PAR	CS	CMENC	Operation/Comment
X ¹	X	Х	Х	Х	0	Х	X	Х	Asynchronous reset. All outputs are disabled. Contents of the 45-bit shift register are unchanged.
1	1	ł	SERIN _i	SERIN _{i-45}	1	0	0	X	Serial mode. The data on the SERIN line is loaded into the 45-bit shift register. The first bit clocked into the shift register appears at SEROUT 45 clock cycles later. Data is not applied to the switch array.
0	1	1	X	X	1	1	0	X	Parallel mode. The data on parallel lines D0 through D4 is loaded into the shift register location addressed by A0 through A2. Data is not applied to the switch array.
1	0	1	X	X	1	X	0	X	Switch array update. Data in the 45-bit shift register is transferred to the parallel latches and applied to the switch array.
1	Х	Χ	X	Χ	1	1	0	X	No change in logic.

 $^{^{1}}$ X = don't care.

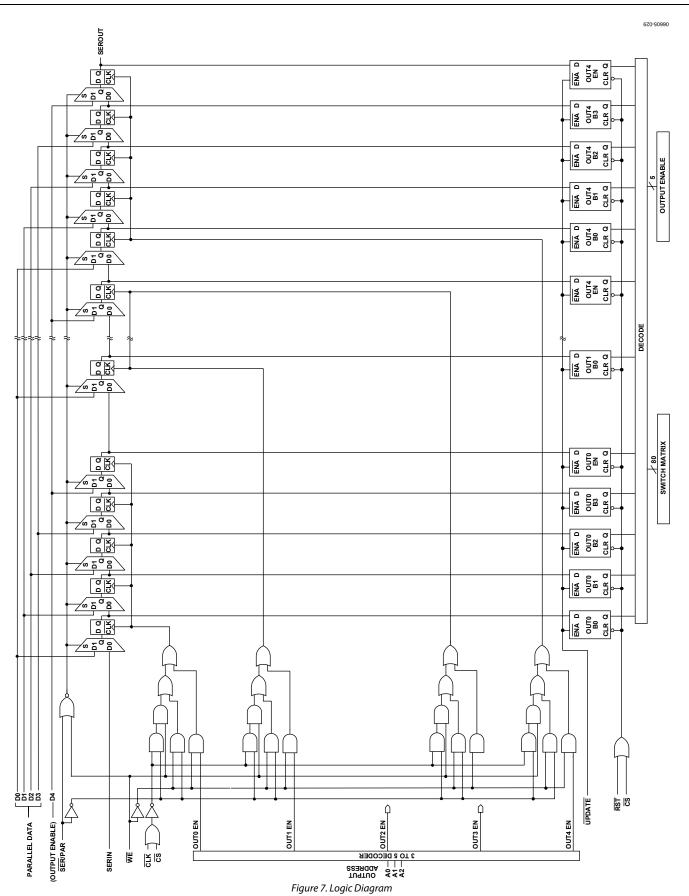

Rev. 0 | Page 18 of 40

EQUIVALENT CIRCUITS

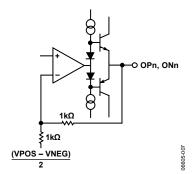


Figure 8. Enabled Output (see also ESD Protection Map, Figure 19)

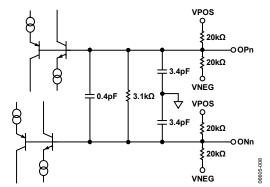


Figure 9. Disabled Output (see also ESD Protection Map, Figure 19)




Figure 10. Receiver, Differential (see also ESD Protection Map, Figure 19)




Figure 11. Receiver Simplified Equivalent Circuit When Driving Differentially




Figure 12. Receiver Simplified Equivalent Circuit When Driving Single-Ended

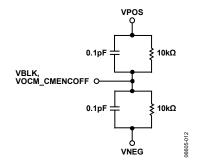


Figure 13. VBLK and VOCM_CMENCOFF Inputs (see also ESD Protection Map, Figure 19)

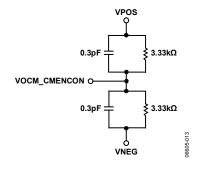


Figure 14. VOCM_CMENCON Input (see also ESD Protection Map, Figure 19)




Figure 15. RST Input (see also ESD Protection Map, Figure 19)




Figure 16. Logic Input (see also ESD Protection Map, Figure 19)



Figure 17. CS Input (see also ESD Protection Map, Figure 19)




Figure 18. SEROUT, H, V Logic Outputs (see also ESD Protection Map, Figure 19)

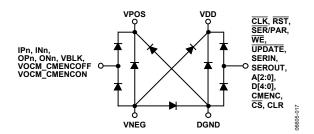


Figure 19. ESD Protection Map

TYPICAL PERFORMANCE CHARACTERISTICS

 $V_S = \pm 2.5 \text{ V}$ at $T_A = 25$ °C, G = +2, $R_L = 100 \Omega$ (each output), VBLK = 0 V, output CM voltage = 0 V, differential I/O mode, unless otherwise noted.

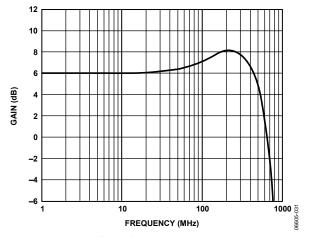


Figure 20. Small Signal Frequency Response, 200 mV p-p

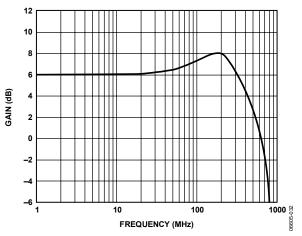


Figure 21. Large Signal Frequency Response, 2 V p-p

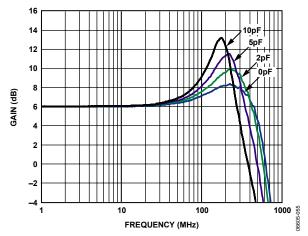


Figure 22. Small Signal Frequency Response with Capacitive Loads

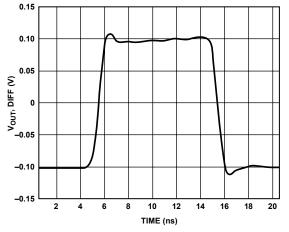


Figure 23. Small Signal Pulse Response, 200 mV p-p

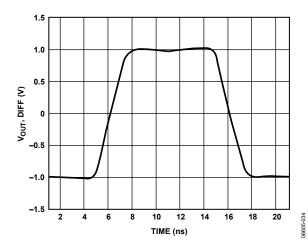


Figure 24. Large Signal Pulse Response, 2 V p-p

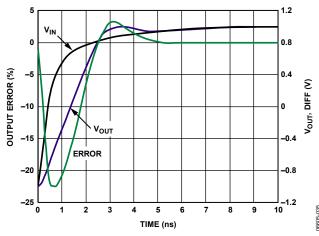


Figure 25. Settling Time

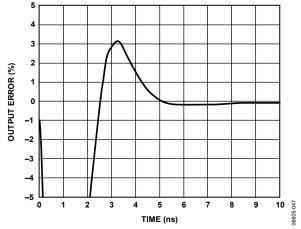


Figure 26. Settling Time, 1% Zoom

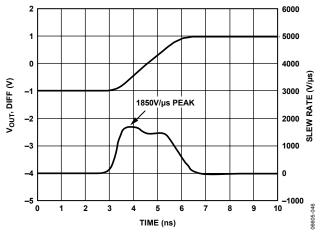


Figure 27. Large Signal Rising Edge Slew Rate

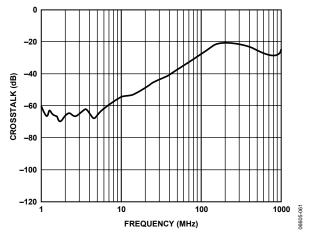


Figure 28. Crosstalk, All Hostile, Single-Ended

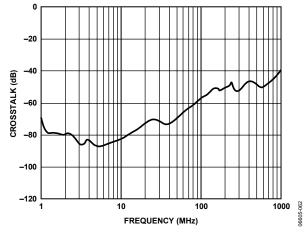


Figure 29. Crosstalk, All Hostile

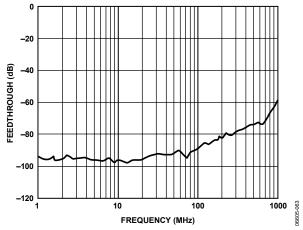


Figure 30. Crosstalk, Off Isolation

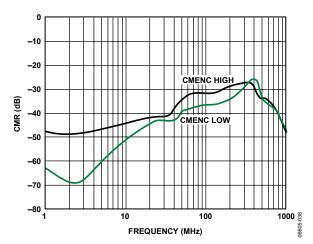


Figure 31. Common-Mode Rejection

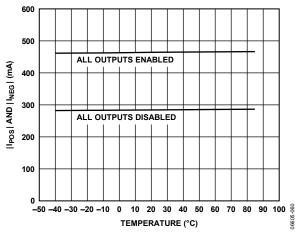


Figure 32. Quiescent Supply Currents vs. Temperature

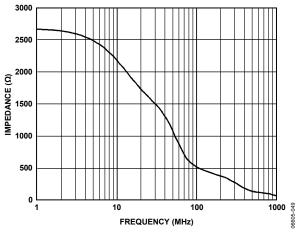


Figure 33. Output Impedance, Disabled

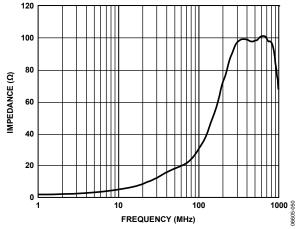


Figure 34. Output Impedance, Enabled

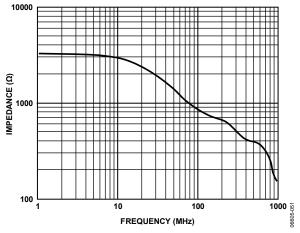


Figure 35. Input Impedance

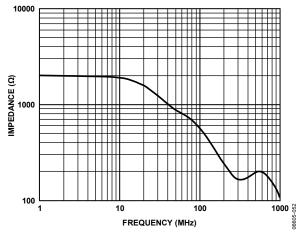


Figure 36. Input Impedance, Single-Ended

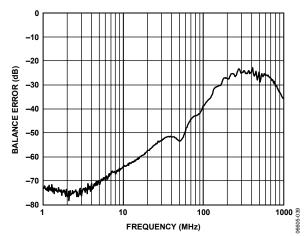


Figure 37. Output Balance Error

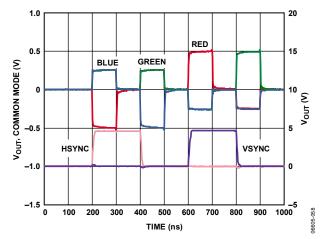


Figure 38. Common-Mode Pulse Response

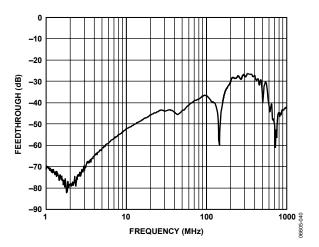


Figure 39. Common-Mode Isolation, CMENC Low

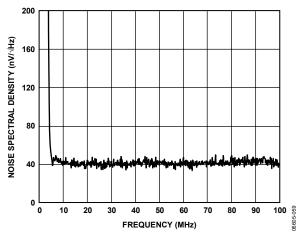


Figure 40. Noise Spectral Density

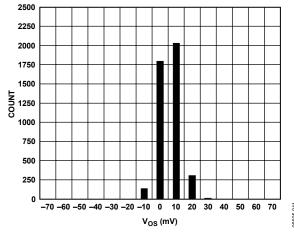


Figure 41. Vos Distribution

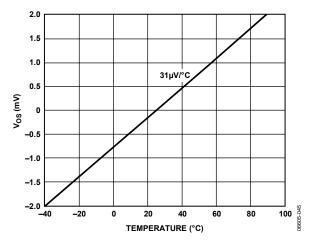


Figure 42. Vos Drift, RTO

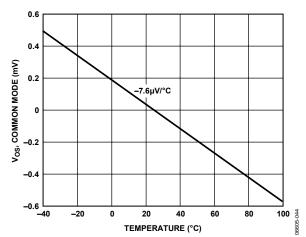
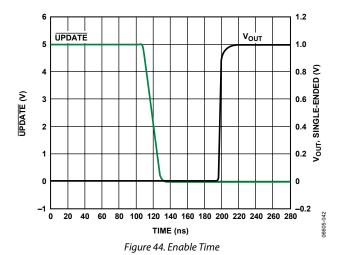


Figure 43. Vos Drift, Common Mode, RTO



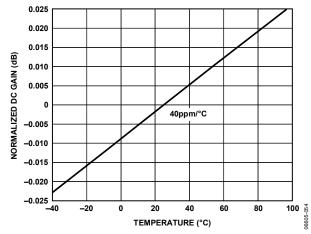


Figure 45. Normalized DC Gain vs. Temperature

THEORY OF OPERATION

The AD8177 is a nonblocking crosspoint with 16 differential RGB input channels and 5 differential RGB output channels. Although the AD8177 is primarily meant for differential-in, differential-out, middle-of-Cat-5-run applications, each differential RGB output channel is complemented by H and V syncs for use in end-of-Cat-5-run, single-ended output applications.

Processing of common-mode (CM) voltage levels is achieved by placing the AD8177 in either of its two operation modes. In the first operation mode (CMENC low), the input CM of each RGB differential pair (possibly present either in the form of sync-on CM signaling or noise) is removed through the switch, and the output CM is set to a global reference voltage via the VOCM_CMENCOFF analog input. Therefore, the AD8177 can behave as a differential-in, differential-out switch. If sync-on CM signaling is present at the differential RGB inputs, then the H and V outputs represent decoded syncs. In the second operation mode, input sync-on CM signaling is propagated through the switch. Note that in this mode, as in the previous one, the overall input CM is blocked through the switch. In this mode, the overall output CM is set to a global reference voltage via the VOCM_CMENCON analog input.

In either operation mode, input pin VBLK defines the black level of the positive output phase. The combination of VBLK and VOCM_CMENCOFF allows the user to position the positive and negative output phases anywhere in the allowable output voltage range.

The switch is organized into five 16:1 RGB multiplexers, with each being responsible for connecting an RGB input channel to its respective RGB output channel. Decoding logic selects a single input (or none) in each multiplexer and connects it to its respective output. Feedback around each multiplexer realizes a closed-loop differential-in, differential-out gain of +2. A second loop realizes a closed-loop common-mode-in gain of +1.

Each differential RGB input channel is buffered by a differential receiver, which is capable of accepting input CM voltages extending all the way to either supply rail. In addition to passing differential information, each receiver processes and routes input CM voltages. Excess closed-loop receiver bandwidth reduces the receiver's effect on the overall device bandwidth.

The output stage is designed for fast slew rate and settling time while driving a series-terminated Cat-5 cable. Unlike competing multiplexer designs, the small signal bandwidth closely approaches the large signal bandwidth.

The outputs of the AD8177 can be disabled to minimize onchip power dissipation. When disabled, there is a feedback network of approximately 2.7 k Ω between the differential outputs. This high impedance allows multiple ICs to be bussed together without additional buffering. Care must be taken to reduce output capacitance, which can result in overshoot and frequencydomain peaking. A series of internal amplifiers drive internal nodes such that wideband high impedance is presented at the disabled output, even while the output bus experiences fast signal swings. When the outputs are disabled and driven externally, the voltage applied to them should not exceed the valid output swing range for the AD8177 to keep these internal amplifiers in their linear range of operation. Applying excessive differential voltages to the disabled outputs can cause damage to the AD8177 and should be avoided (see the Absolute Maximum Ratings section of this data sheet for guidelines).

The connectivity of the AD8177 is controlled by a flexible TTL-compatible logic interface. Either parallel or serial loading into a first rank of latches preprograms each output. A global update signal moves the programming data into the second rank of latches, simultaneously updating all outputs. In serial mode, a serial-out pin allows devices to be daisy-chained together for single-pin programming of multiple ICs. A power-on reset pin is available to avoid bus conflicts by disabling all outputs. This power-on reset clears the second rank of latches but does not clear the first rank of latches. In serial mode, preprogramming individual inputs is not possible and the entire shift register needs to be flushed. A global chip-select pin gates the input clock and the global update signal to the second rank of buffers.

The AD8177 can operate on a single 5 V supply, powering both the signal path (with the VPOS/VNEG supply pins) and the control logic interface (with the VDD/DGND supply pins). Split supply operation is possible with ±2.5 V supplies to easily interface to ground-referenced video signals. In this case, a flexible logic interface allows the control logic supplies (VDD/DGND) to be run off 5 V/0 V to 3.3 V/0 V, and the analog core remains on split supplies. Additional flexibility in the analog output common-mode level (VOCM_CMENCOFF) and output black level (VBLK) facilitates operation with unequally split supplies. If +3 V/-2 V supplies to +2 V/-3 V supplies are desired, the output CM can still be set to 0 V for ground-referenced video signals.

APPLICATIONS INFORMATION OPERATING MODES

Depending on the state of the CMENC logic input, the AD8177 can be set in either of two differential-in, differential-out operating modes. An additional application is possible by tapping the outputs single-ended and making use of the decoded H and V outputs.

Middle-of-Cat-5-Run Application, CM Encoding Turned Off

In this application, the AD8177 is placed somewhere in the middle of a Cat-5 run. By tying CMENC low, the CM of each RGB differential pair is removed through the device (or turned off), while the overall CM at the output is defined by the reference value VOCM_CMENCOFF. In this mode of operation, CM noise is removed, while the intended differential RGB signals are buffered and passed to the outputs. The AD8177 is placed in this operation mode when used in a sync-on color scheme. Figure 46 shows the voltage levels and CM handling for a single input channel connected to a single output channel in a middle-of-Cat-5-run application with CM encoding turned off.

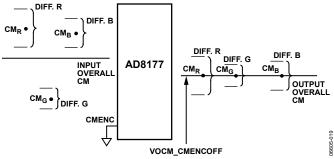


Figure 46. AD8177 in a Middle-of-Cat-5-Run Application, CM Encoding Off (Note that in this application, the H and V outputs, though asserted, are not used.)

Input VBLK and Input VOCM_CMENCOFF allow the user complete flexibility in defining the output CM level and the amount of overlap between the positive and negative phases, thus maximizing output headroom usage. Whenever VBLK differs from VOCM_CMENCOFF by more than approximately ± 100 mV, a differential voltage Δ_{diff} is added at the outputs according to the expression $\Delta_{diff} = VBLK - VOCM_CMENCOFF$. Conversely, whenever the difference between VBLK and VOCM_CMENCOFF is less than approximately ± 100 mV, no differential voltage is added at the outputs.

As a first example, refer to Figure 47. The positive phase of a differential output is shown by the solid line, while the negative phase is shown by the dashed line. The input to the crosspoint is a positive differential pulse with a low level of 0 V and a high level of 0.7 V.

The positive and negative outputs are shown with VOCM_CMENCOFF and VBLK both set to 0 V. (Note that both pulses have been slightly shifted off the 0 V line for clarity.)

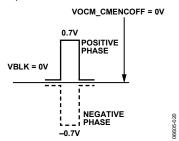


Figure 47. Output for 0 V to 0.7 V Input Differential Pulse, VBLK = 0 V, $VOCM \ CMENCOFF = 0 V$

As a second example, refer to Figure 48. VCOM_CMENCOFF is set to +0.35 V, and VBLK is set to -0.35 V. The input is still a differential pulse with a low level of 0 V and a high level of 0.7 V. Note how the positive phase and the negative phase are now shifted with respect to each other by an amount equal to VBLK - VOCM_CMENCOFF or -0.35 V - 0.35 V - 0.7 V. Because the negative output phase spans the same voltage range as the positive output phase, the usable voltage range for single-ended applications is effectively doubled over the previous example. (Note that the output pulses have been slightly shifted with respect to each other for clarity.)

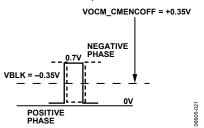


Figure 48. Output for 0 V to 0.7 V Input Differential Pulse, VBLK = -0.35 V, VOCM_CMENCOFF = +0.35 V

Middle-of-Cat-5-Run Application, CM Encoding Turned On

In this application, the AD8177 is also placed somewhere in the middle of a Cat-5 run, although the common-mode handling is different. By tying CMENC high, the CM of each RGB input is passed through the part, while at the same time, the overall output CM is stripped and set equal to the voltage applied at the VOCM_CMENCON pin. The AD8177 is placed in this operation mode when used with a sync-on CM scheme. Although asserted, the H and V outputs are not used in this application. Figure 49 shows the voltage levels and CM handling for a single input channel connected to a single output channel in a middle-of-Cat-5-run application with CM encoding turned on.

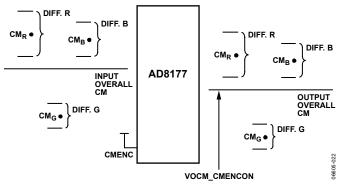


Figure 49. AD8177 in Middle-of-Cat-5-Run Application, CM Encoding On (Note that in this application, the H and V outputs, though asserted, are not used.)

In this operation mode, the difference Δ_{diff} = VBLK – VOCM_CMENCOFF still adds an output differential voltage, as described in the Middle-of-Cat-5-Run Application, CM Encoding Turned Off section.

End-of-Cat-5-Run, CM Encoding Turned Off

In this application, each AD8177 output is tapped single-ended at the positive phase and followed by a fast buffer to drive a monitor at the end of a Cat-5 run (a suitable choice is the AD8003 set up in a noninverting configuration with gain of +4). The H and V outputs can then be used to drive the monitor sync inputs directly. The relationship between the incoming sync-on CM signaling and the H and V syncs is defined according to Table 16.

Table 16. H and V Sync Truth Table $(V_{POS}/V_{NEG} = \pm 2.5 \text{ V})$

CM _R	CM _G	СМв	Н	٧
0.5	0	0	Low	High
0	0.5	-0.5	Low	Low
-0.5	0.5	0	High	Low
0	-0.5	0.5	High	High

The following two statements are equivalent to the truth table (see Table 16) in producing H and V for all allowable CM inputs:

- H sync is high when the CM of Blue is larger than the CM of Red
- V sync is high when the combined CM of Red and Blue is larger than the CM of Green.

PROGRAMMING

The AD8177 has two options for changing the programming of the crosspoint matrix. In the first option, a serial word of 45 bits can be provided that updates the entire matrix each time. The second option allows for changing the programming of a single output via a parallel interface. The serial option requires fewer signals, but more time (clock cycles) for changing the programming; the parallel programming technique requires more signals but allows for changing a single output at a time, therefore requiring fewer clock cycles.

Serial Programming Description

The serial programming mode uses the device pins \overline{CS} , \overline{CLK} , SERIN, \overline{UPDATE} , and \overline{SER}/PAR . The first step is to enable the \overline{CLK} by pulling \overline{CS} low. Next, \overline{SER}/PAR is pulled low to enable the serial programming mode. The parallel clock \overline{WE} should be held high during the entire serial programming operation.

The UPDATE signal should be high during the time that data is shifted into the serial port of the device. Although the data still shifts in when UPDATE is low, the transparent, asynchronous latches allow the shifting data to reach the matrix. This causes the matrix to try to update to every intermediate state as defined by the shifting data.

The data at SERIN is clocked in at every falling edge of CLK. A total of 45 bits must be shifted in to complete the programming. A total of five bits must be supplied for each of the five RGB output channels: an output enable bit (D4) and four bits (D3 to D0) that determine the input channel. If D4 is low (output disabled), the four associated bits (D3 to D0) do not matter because no input is switched to that output. A sequence of five bits at Logic 0 must be supplied in between each D4 to D0 group of bits for padding purposes. There are a total of four such sequences of zeros.

The most significant output-address data is shifted in first, with the enable bit (D4) shifted in first, followed by the input address (D3 to D0) entered sequentially with D3 first and D0 last. The first sequence of five bits at Logic 0 is shifted in next. Each remaining output is programmed sequentially in a similar fashion, until the least-significant-output-address data is shifted in. Note that the last D4 to D0 group is not followed by a corresponding group of five zeros. At this point, $\overline{\text{UPDATE}}$ can be taken low, which causes the programming of the device according to the data that was just shifted in. The $\overline{\text{UPDATE}}$ latches are asynchronous; and when $\overline{\text{UPDATE}}$ is low, they are transparent.

If more than one AD8177 device is to be serially programmed in a system, the SEROUT signal from one device can be connected to the SERIN of the next device to form a serial chain. All of the CLK, UPDATE, and SER/PAR pins should be connected in parallel and operated as described previously. The serial data is input to the SERIN pin of the first device of the chain, and it ripples through to the last. Therefore, the data for the last device in the chain should come at the beginning of the programming sequence. The length of the programming sequence is 45 bits times the number of devices in the chain. CS gates the CLK and UPDATE signals, so that when CS is held high, both CLK and UPDATE are held in their inactive high state. When CS is held low, both CLK and UPDATE function normally.

Parallel Programming Description

When using the parallel programming mode, it is not necessary to reprogram the entire device when making changes to the matrix. In fact, parallel programming allows modification of a single output or more at a time. Because this takes only one WE/UPDATE cycle, significant time savings can be realized by using parallel programming.

One important consideration in using parallel programming is that the \overline{RST} signal does not reset all registers in the AD8177. When taken low, the \overline{RST} signal only sets each output to the disabled state. This is helpful during power-up to ensure that two parallel outputs are not active at the same time.

After initial power-up, the internal registers in the device generally have random data, even though the \overline{RST} signal has been asserted. If parallel programming is used to program one output, then that output is properly programmed, but the rest of the device has a random program state, depending on the internal register content at power-up. Therefore, when using parallel programming, it is essential that the device be programmed to a desired state after power-up. This ensures that the programming matrix is always in a known state. From then on, parallel programming can be used to modify a single output or more at a time.

In similar fashion, if UPDATE is taken low after initial power-up, the random power-up data in the shift register is programmed into the matrix. Therefore, to prevent the crosspoint from being programmed into an unknown state, do not apply a logic level to UPDATE after power is initially applied. Programming the device into a known state after reset or power-up is a one-time event that is accomplished by the following two steps:

- 1. First, Output 4 to Output 0 are programmed to the off-state while holding the CLR input at a logic high.
- 2. Next, each output (Output 4 to Output 0) is programmed to its desired state while holding the CLR input at a logic low.

CLR is held at logic low thereafter.

To change the programming of an output via parallel programming, \overline{CS} should be taken low, while \overline{SER}/PAR and \overline{UPDATE} should be taken high. The serial programming clock, \overline{CLK} , should be left high during parallel programming. The parallel clock, \overline{WE} , should start in the high state. The 3-bit address of the output to be programmed should be put on A2 to A0. Data Bit D3 to Data Bit D0 should contain the information that identifies the input that gets programmed to the output that is addressed. Data Bit D4 determines the enabled state of the output. If D4 is low (output disabled), the data on D3 to D0 does not matter.

After the desired address and data signals have been established, they can be latched into the shift register by a high-to-low transition of the $\overline{\text{WE}}$ signal. The matrix is not programmed, however, until the $\overline{\text{UPDATE}}$ signal is taken low. It is thus possible to latch in new data for several or all of the outputs first via successive negative transitions of $\overline{\text{WE}}$ while $\overline{\text{UPDATE}}$ is held high, and then have all the new data take effect when $\overline{\text{UPDATE}}$ goes low. This is the technique that should be used when programming the device for the first time after power-up when using parallel programming.

Programming the device to a known state can be accomplished in serial programming mode by clocking in the entire 45-bit sequence immediately after reset or power-up.

Reset

When powering up the AD8177, it is usually desirable to have the outputs come up in the disabled state. The \overline{RST} pin, when taken low, causes all outputs to be in the disabled state. However, the \overline{RST} signal does not reset all registers in the AD8177. This is important when operating in the parallel programming mode. Refer to the Serial Programming Description section for information about programming internal registers after power-up. Serial programming programs the entire matrix each time, so no special considerations apply.

Because the data in the shift register is random after power-up, it should not be used to program the matrix, or the matrix can enter unknown states. To prevent this, do not apply a logic low signal to $\overline{\text{UPDATE}}$ initially after power-up. The shift register should first be loaded with the desired data, and only then can the $\overline{\text{UPDATE}}$ be taken low to program the device.

The \overline{RST} pin has a 20 k Ω pull-up resistor to VDD that can be used to create a simple power-up reset circuit. A capacitor from \overline{RST} to ground holds \overline{RST} low for some time while the rest of the device stabilizes. The low condition causes all the outputs to be disabled. The capacitor then charges through the pull-up resistor to the high state, thus allowing full programming capability of the device.

DIFFERENTIAL AND SINGLE-ENDED OPERATION

Although the AD8177 has fully differential inputs and outputs, it can also be operated in a single-ended fashion. Single-ended and differential configurations are discussed in the following sections, along with implications on gain, impedances, and terminations.

Differential Input

Each differential input to the AD8177 is applied to a differential receiver. These receivers allow the user to drive the inputs with an uncertain common-mode voltage, such as from a remote source over twisted pair. The receivers respond only to the differences in input voltages and restore an internal common-mode suitable for the internal signal path. Noise or crosstalk, which affect the inputs of each receiver equally, are rejected by the input stage, as specified by its common-mode rejection ratio (CMRR).

Furthermore, the overall common-mode voltage of all three differential pairs comprising an RGB channel is processed and rejected by a separate circuit block. For example, a static discharge or a resistive voltage drop in a middle-of-Cat-5-run with syncon CM signaling coupling into all three pairs in an RGB channel are rejected at the output of the AD8177, and the sync-on CM signals are allowed through the switch.

The circuit configuration used by the differential input receivers is similar to that of several Analog Devices general-purpose differential amplifiers, such as the AD8131. The topology is that of a voltage-feedback amplifier with internal gain resistors. The input differential impedance for each receiver is 5 k Ω in parallel with 10 k Ω or 3.33 k Ω , as shown in Figure 50.




Figure 50. Input Receiver Equivalent Circuit

This impedance creates a small differential termination error if the user does not account for the 3.33 k Ω parallel element. However, this error is less than 1% in most cases. Additionally, the source impedance driving the AD8177 appears in parallel with the internal gain-setting resistors, such that there may be a gain error for some values of source resistance. The AD8177 is adjusted such that its gain is correct when driven by a back-terminated Cat-5 cable (25 Ω effective impedance to ground at each input pin, or 100 Ω differential source impedance across pairs of input pins). If a different source impedance is presented, the differential gain of the AD8177 can be calculated as

$$G_{dm} = \frac{2.525 \,\mathrm{k}\Omega}{2.5 \,\mathrm{k}\Omega + Rs}$$

where R_S is the effective impedance to ground at each input pin.

When operating with a differential input, care must be taken to keep the common-mode, or average, of the input voltages within the linear operating range of the AD8177 receiver. For the AD8177 receiver, this common-mode range can extend rail-to-rail, provided the differential signal swing is small enough to avoid forward biasing the ESD diodes (it is safest to keep the common-mode plus differential signal excursions within the supply voltages of the part).

The input voltage of the AD8177 is linear for $\pm 1~\rm V$ of differential input voltage difference (this limitation is primarily due to ability of the output to swing close to the rails because the differential gain through the part is ± 2). Beyond this level, the signal path saturates and limits the signal swing. This is not a desired operation, because the supply current increases and the signal path is slow to recover from clipping. The absolute maximum allowed differential input signal is limited by long-term reliability of the input stage. The limits in the Absolute Maximum Ratings section of the data sheet should be observed to avoid degrading device performance permanently.

AC Coupling of Inputs

It is possible to ac-couple the inputs of the AD8177 receiver, so that bias current does not need to be supplied externally. A capacitor in series with the inputs to the AD8177 creates a high-pass filter with the input impedance of the device. This capacitor needs to be sized large enough so that the corner frequency includes all frequencies of interest.

Single-Ended Input

The AD8177 input receiver can be driven single-endedly (unbalanced). Single-ended inputs apply a component of common-mode signal to the receiver inputs, which is then rejected by the receiver (see the Specifications section for common-mode-to-differential-mode ratio of the part).

The single-ended input resistance, $R_{\rm IN}$, differs from the differential input impedance, and is equal to

$$R_{IN} = \frac{R_G}{1 - \frac{R_F}{2 \times (R_G + R_F)}}$$

with R_G and R_F, as shown in Figure 50.

Note that this value is smaller than the differential input resistance, but it is larger than $R_{\rm G}$. The difference is due to the component of common-mode level applied to the receiver by single-ended inputs. A second, smaller component of input resistance ($R_{\rm CM}$, also shown in Figure 50) is present across the inputs in both single-ended and differential operation.

In single-ended operation, an input is driven, and the undriven input is often tied to midsupply or ground. Because signal-frequency current flows at the undriven input, such input should be treated as a signal line in the board design.

For example, to achieve best dynamic performance, the undriven input should be terminated with an impedance matching that seen by the part at the driven input.

Differential Output

Benefits of Differential Operation

The AD8177 has a fully-differential switch core with differential outputs. The two output voltages move in opposite directions, with a differential feedback loop maintaining a fixed output stage differential gain of +2. This differential output stage provides improved crosstalk cancellation due to parasitic coupling from one output to another being equal and out of phase. Additionally, if the output of the device is utilized in a differential design, then noise, crosstalk, and offset voltages generated on-chip that are coupled equally into both outputs are reduced by the common-mode rejection ratio of the next device in the signal chain. By utilizing the AD8177 outputs in a differential application, the best possible noise and offset specifications can be realized.

Common-Mode Gain

The common mode, or average voltage of pairs of output signals, is set by the voltage on the VOCM_CMENCOFF pin when common-mode encoding is off (CMENC is logic low), or by the voltage on the VOCM_CMENCON pin when commonmode encoding is on (CMENC is logic high). Note that in the latter case, VCOM_CMENCON sets the overall common-mode of RGB triplets of differential outputs, while the individual common-mode of each RGB output is free to change. VCOM CMENCON and VCOM_CMENCOFF are typically set to midsupply (often ground), but can be moved approximately ±0.5 V to accommodate cases where the desired output commonmode voltage may not be midsupply (as in the case of unequal split supplies). Adjusting the output common-mode voltage beyond ±0.5 V can limit differential swing internally below the specifications on the data sheet. The overall common mode of the output voltages follows the voltage applied to VOCM_ CMENCON or VCOM_CMENCOFF, implying a gain of +1. Likewise, sync-on common-mode signaling is carried through the AD8177 (CMENC must be in its high state), implying a gain of +1 for this path, as well.

The common-mode reference pins are analog signal inputs, common to all output stages on the device. They require only small amounts of bias current, but noise appearing on these pins is buffered to all the output stages. As such, they should be connected to low noise, low impedance voltage references to avoid being sources of noise, offset, and crosstalk in the signal path.

Termination

The AD8177 is designed to drive 100 Ω terminated to ground on each output (or an effective 200 Ω differential) while meeting data sheet specifications over the specified operating temperature range, if care is taken to observe the maximum power derating curves.

Termination at the load end is recommended to shorten settling time and for best signal integrity. In differential signal paths, it is often desirable to series-terminate the outputs, with a resistor in series with each output. A side effect of termination is an attenuation of the output signal by a factor of two. In this case, gain is usually necessary somewhere else in the signal path to restore the signal level.

Whenever a differential output is used single-ended, it is desirable to terminate the used single-ended output with a series resistor, as well as to place a resistor on the unused output to match the load seen by the used output.

When disabled, the outputs float to midsupply. A small current is required to drive the outputs away from their midsupply state. This current is easily provided by an AD8177 output (in its enabled state) bussed together with the disabled output. Exceeding the allowed output voltage range may saturate internal nodes in the disabled output, and consequently, an increase in disabled output current may be observed.

Single-Ended Output

Usage

The AD8177 output pairs can be used single-ended, taking only one output and not using the second. This is often desired to reduce the routing complexity in the design, or because a single-ended load is being driven directly. This mode of operation produces good results, but has some shortcomings when compared to taking the output differentially. When observing the single-ended output, noise that is common to both outputs appears in the output signal.

When observing the output as single-ended, the distribution of offset voltages appears greater. In the differential case, the difference between the outputs, when the difference between the inputs is zero, is a small differential offset. This offset is created from mismatches in devices in the signal path. In the single-ended case, this differential offset is still observed, but an additional offset component is also relevant. This additional component is the common-mode offset, which is the difference between the average of the outputs and the output common-mode reference. This offset is created by mismatches that affect the signal path in a common-mode manner. A differential receiver rejects this common-mode offset voltage, but in the single-ended case, this offset is observed with respect to the signal ground. The single-ended output sums half the differential offset voltage and all of the common-mode offset voltage for a net increase in observed offset.

Single-Ended Gain

The AD8177 operates as a closed-loop differential amplifier. The primary control loop forces the difference between the output terminals to be a ratio of the difference between the input terminals. One output increases in voltage, while the other decreases an equal amount to make the total output voltage difference correct. The average of these output voltages is forced to the voltage on the common-mode reference terminal (VOCM_CMENCOFF or VOCM_CMENCON) by a second control loop. If only one output terminal is observed with respect to the common-mode reference terminal, only half of the difference voltage is observed. This implies that when using only one output of the device, half of the differential gain is observed. An AD8177 taken with single-ended output appears to have a gain of +1.

It is important to note that all considerations applying to the used output phase regarding output voltage headroom, apply unchanged to the complement output phase even if this is not actually used.

Termination

When operating the AD8177 with a single-ended output, the preferred output termination scheme is to refer the load to the output common mode. A series-termination can be used, at an additional cost of one half the signal gain.

In single-ended output operation, the complementary phase of the output is not used and may or may not be terminated locally. Although the unused output can be floated to reduce power dissipation, there are several reasons for terminating the unused output with a load resistance matched to the load on the signal output.

One component of crosstalk is magnetic coupling by mutual inductance between output package traces and bond wires that carry load current. In a differential design, there is coupling from one pair of outputs to other adjacent pairs of outputs. The differential nature of the output signal simultaneously drives the coupling field in one direction for one phase of the output and in an opposite direction for the other phase of the output. These magnetic fields do not couple equally into adjacent output pairs due to different proximities, but they do destructively cancel the crosstalk to some extent. If the load current in each output is equal, this cancellation is greater, and less adjacent crosstalk is observed (regardless of whether the second output is actually being used).

A second benefit of balancing the output loads in a differential pair is the reduction of fluctuations in current requirements from the power supply. In single-ended loads, the load currents alternate from the positive supply to the negative supply. This creates a parasitic signal voltage in the supply pins due to the finite resistance and inductance of the supplies.

This supply fluctuation appears as crosstalk in all outputs, attenuated by the power supply rejection ratio (PSRR) of the device. At low frequencies, this is a negligible component of crosstalk, but PSRR falls off as frequency increases. With the use of differential, balanced loads, as one output draws current from the positive supply, the other output draws current from the negative supply. When the phase alternates, the first output draws current from the negative supply and the second from the positive supply. The effect is that a more constant current is drawn from each supply, such that the crosstalk-inducing supply fluctuation is minimized.

A third benefit of driving balanced loads is that the output pulse response changes as load changes. The differential signal control loop in the AD8177 forces the difference of the outputs to be a fixed ratio to the difference of the inputs. If the two output responses are different due to loading, the control loop sees this difference as signal response error and attempts to correct this error. The output signal is distorted from the ideal response, compared to the case when the two outputs are balanced.

Decoupling

The signal path of the AD8177 is based on high open-loop gain amplifiers with negative feedback. Dominant-pole compensation is used on-chip to stabilize these amplifiers over the range of expected applied swing and load conditions. To guarantee this designed stability, proper supply decoupling is necessary with respect to both the differential control loops and the common-mode control loops of the signal path. Signal-generated currents must return to their sources through low impedance paths at all frequencies in which there is still loop gain (up to 700 MHz at a minimum).

The signal path compensation capacitors in the AD8177 are connected to the VNEG supply. At high frequencies, this limits the power supply rejection ratio (PSRR) from the VNEG supply to a lower value than that from the VPOS supply. When possible, an application board should be designed such that the VNEG power is supplied from a low inductance plane, subject to the least amount of noise.

VOCM_CMENCON and VOCM_CMENCOFF are high speed common-mode control loops of all output drivers. In the single-ended output sense, there is no rejection from noise on these inputs to the outputs. For this reason, care must be taken to produce low noise sources over the entire range of frequencies of interest. This is important not only to single-ended operation but to differential operation, as well, because there is a common-mode-to-differential gain conversion that becomes greater at higher frequencies.

VOCM_CMENCON and VOCM_CMENCOFF are internally buffered to prevent transient currents from flowing into or out of these inputs and becoming sources of crosstalk by acting on their respective source impedances.

Power Dissipation

Calculation of Power Dissipation

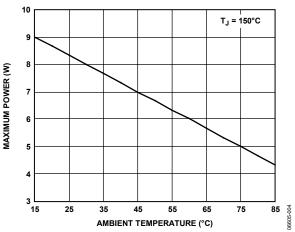


Figure 51. Maximum Die Power Dissipation vs. Ambient Temperature

The curve in Figure 51 was calculated from the following:

$$P_{D,MAX} = \frac{T_{JUNCTION,MAX} - T_{AMBIENT}}{\theta_{IA}}$$
 (1)

As an example, if the AD8177 is enclosed in an environment at 45° C (T_{A}), the total on-chip dissipation under all load and supply conditions must not be allowed to exceed 7.0 W.

When calculating on-chip power dissipation, it is necessary to include the power dissipated in the output devices due to current flowing in the loads. For a sinusoidal output about ground and symmetrical split supplies, the on-chip power dissipation due to the load can be approximated by

$$P_{D,OUTPUT} = (V_{POS} - V_{OUTPUT,RMS}) \times I_{OUTPUT,RMS}$$
 (2)

For nonsinusoidal output, the power dissipation should be calculated by integrating the on-chip voltage drop across the output devices multiplied by the load current over one period.

The user can subtract the quiescent current for the Class AB output stage when calculating the loaded power dissipation. For each output stage driving a load, subtract a quiescent power, according to

$$P_{DQ, OUTPUT} = (V_{POS} - V_{NEG}) \times I_{OUTPUT, QUIESCENT}$$
 (3)

where $I_{OUTPUT, QUIESCENT} = 1.65$ mA for each single-ended output pin of the AD8177.

For each disabled RGB output channel, the quiescent power supply current in VPOS and VNEG drops by approximately 34 mA.

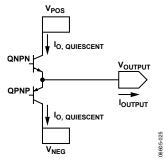


Figure 52. Simplified Output Stage

Example

With an ambient temperature of 85°C, all five RGB output channels driving 1 V_{rms} into 100 Ω loads, and power supplies at ± 2.5 V, follow these steps:

 Calculate power dissipation using data sheet quiescent currents. Neglect V_{DD} current because it is insignificant.

$$P_{D,QUIESCENT} = (V_{POS} \times I_{VPOS}) + (V_{NEG} \times I_{VNEG})$$
(4)

$$P_{D,QUIESCENT} = (2.5 \text{ V} \times 460 \text{ mA}) + (2.5 \text{ V} \times 460 \text{ mA}) = 2.3 \text{ W}$$

Calculate power dissipation from loads. For a differential output and ground-referenced load, the output power is symmetrical in each output phase.

$$P_{D,OUTPUT} = (V_{POS} - V_{OUTPUT,RMS}) \times I_{OUTPUT,RMS}$$
 (5)

$$P_{D, OUTPUT} = (2.5 \text{ V} - 1 \text{ V}) \times 1 \text{ V}/100 \Omega = 15 \text{ mW}$$

There are 15 output pairs, or 30 output currents.

$$nP_{D, OUTPUT} = 30 \times 15 \text{ mW} = 0.45 \text{ W}$$

3. Subtract quiescent output stage current for the number of loads (30 in this example). The output stage is either standing or driving a load, but the current needs to be counted only once (valid for output voltages > 0.5 V).

$$P_{DO, OUTPUT} = (V_{POS} - V_{NEG}) \times I_{OUTPUT, QUIESCENT}$$
 (6)

$$P_{DQ, OUTPUT} = (2.5 \text{ V} - (-2.5 \text{ V})) \times 1.65 \text{ mA} = 8.25 \text{ mW}$$

There are 15 output pairs, or 30 output currents.

$$nP_{DQ, OUTPUT} = 30 \times 8.25 \text{ mW} = 0.25 \text{ W}$$

 Verify that power dissipation does not exceed the maximum allowed value.

$$P_{D, ON-CHIP} = P_{D, QUIESCENT} + nP_{D, OUTPUT} - nP_{DQ, OUTPUT}$$
 (7)

$$P_{D, ON-CHIP} = 2.3 \text{ W} + 0.45 \text{ W} - 0.25 \text{ W} = 2.5 \text{ W}$$

From Figure 51 or Equation 1, this power dissipation is below the maximum allowed dissipation for all ambient temperatures up to, and including, 85°C.

In a general case, the power delivered by the digital supply and dissipated into the digital output devices has to be taken into account following a similar derivation. However, because the loads driven by the H and V outputs are high and because the voltage at these outputs typically sits close to either rail, the correction to the on-chip power estimate is small. Furthermore, the H and V outputs are active only briefly during sync generation and are returned to digital ground thereafter.

Short-Circuit Output Conditions

Although there is short-circuit current protection on the AD8177 outputs, the output current can reach values of 80 mA into a grounded output. Any sustained operation with too many shorted outputs can exceed the maximum die temperature and can result in device failure (see the Absolute Maximum Ratings section).

Crosstalk

Many systems (such as KVM switches) that handle numerous analog signal channels have strict requirements for keeping the various signals from influencing any of the other signals in the system. Crosstalk is the term used to describe the coupling of the signals of other nearby channels to a given channel.

When there are many signals in close proximity in a system, as is undoubtedly the case in a system that uses the AD8177, the crosstalk issues can be quite complex. A good understanding of the nature of crosstalk and some definition of terms is required to specify a system that uses one or more crosspoint devices.

Types of Crosstalk

Crosstalk can be propagated by means of any of three methods. These fall into the categories of electric field, magnetic field, and the sharing of common impedances. This section explains these effects.

Every conductor can be both a radiator of electric fields and a receiver of electric fields. The electric field crosstalk mechanism occurs when the electric field created by the transmitter propagates across a stray capacitance (for example, free space) and couples with the receiver and induces a voltage. This voltage is an unwanted crosstalk signal in any channel that receives it.

Currents flowing in conductors create magnetic fields that circulate around the currents. These magnetic fields then generate voltages in any other conductors whose paths they link. The undesired induced voltages in these other channels are crosstalk signals. The channels that crosstalk can be said to have a mutual inductance that couples signals from one channel to another.

The power supplies, grounds, and other signal return paths of a multichannel system are generally shared by the various channels. When a current from one channel flows in one of these paths, a voltage that is developed across the impedance becomes an input crosstalk signal for other channels that share the common impedance. All these sources of crosstalk are vector quantities, so the magnitudes cannot simply be added together to obtain the total crosstalk. In fact, there are conditions where driving additional circuits in parallel in a given configuration can actually reduce the crosstalk. The fact that the AD8177 is a fully differential design means that many sources of crosstalk either destructively cancel, or are common mode to, the signal and can be rejected by a differential receiver.

Areas of Crosstalk

A practical AD8177 circuit must be mounted to an actual circuit board to connect it to power supplies and measurement equipment. Great care has been taken to create an evaluation board (available upon request) that adds minimum crosstalk to the intrinsic device. This, however, raises the issue that system crosstalk is a combination of the intrinsic crosstalk of the devices, in addition to the circuit board to which they are mounted. It is important to try to separate these two areas when attempting to minimize the effect of crosstalk.

In addition, crosstalk can occur among the inputs to a crosspoint and among the outputs. It can also occur from input to output. The following sections discuss techniques to diagnose which part of a system is contributing to crosstalk.

Measuring Crosstalk

Crosstalk is measured by applying a signal to one or more channels and measuring the relative strength of that signal on a desired selected channel. The measurement is usually expressed as decibels (dB) down from the magnitude of the test signal. The crosstalk is expressed by

$$|XT| = 20 \log_{10} \left(\frac{A_{SEL}(s)}{A_{TEST}(s)} \right)$$
 (8)

where:

 $s = i\omega$, the Laplace transform variable.

 $A_{SEL}(s)$ is the amplitude of the crosstalk induced signal in the selected channel.

 $A_{TEST}(s)$ is the amplitude of the test signal.

It can be seen that crosstalk is a function of frequency but not a function of the magnitude of the test signal (to first order). In addition, the crosstalk signal has a phase relative to the test signal associated with it.

A network analyzer is most commonly used to measure crosstalk over a frequency range of interest. It can provide both magnitude and phase information about the crosstalk signal.

As a crosspoint system or device grows larger, the number of theoretical crosstalk combinations and permutations can become extremely large.

For example, in the case of the triple 16×5 matrix of the AD8177, we can look at the number of crosstalk terms that can be considered for a single channel, such as Input Channel INPUT0. INPUT0 is programmed to connect to one of the AD8177 outputs where the measurement can be made.

First, the crosstalk terms associated with driving a test signal into each of the other 15 input channels can be measured one at a time, while applying no signal to INPUT0. Then, the crosstalk terms associated with driving a parallel test signal into all 15 other inputs can be measured two at a time in all possible combinations, then three at a time, and so on, until, finally, there is only one way to drive a test signal into all 15 other input channels in parallel.

Each of these cases is legitimately different from the others and might yield a unique value, depending on the resolution of the measurement system; but it is hardly practical to measure all these terms and then specify them. In addition, this describes the crosstalk matrix for just one input channel. A similar crosstalk matrix can be proposed for every other input. In addition, if the possible combinations and permutations for connecting inputs to the other outputs (not used for measurement) are taken into consideration, the numbers rather quickly grow to astronomical proportions. If a larger crosspoint array of multiple AD8177s is constructed, the numbers grow larger still.

Obviously, some subset of all these cases must be selected to be used as a guide for a practical measure of crosstalk. One common method is to measure all hostile crosstalk; this means that the crosstalk to the selected channel is measured while all other system channels are driven in parallel. In general, this yields the worst crosstalk number, but this is not always the case, due to the vector nature of the crosstalk signal.

Other useful crosstalk measurements are those created by one nearest neighbor or by the two nearest neighbors on either side. These crosstalk measurements are generally higher than those of more distant channels, so they can serve as a worst-case measure for any other one-channel or two-channel crosstalk measurements.

Input and Output Crosstalk

Capacitive coupling is voltage-driven (dV/dt) but is generally a constant ratio. Capacitive crosstalk is proportional to input or output voltage, but this ratio is not reduced by simply reducing signal swings. Attenuation factors must be changed by changing impedances (lowering mutual capacitance), or destructive canceling must be utilized by summing equal and out-of-phase components. For high input impedance devices such as the AD8177, capacitances generally dominate input-generated crosstalk.

Inductive coupling is proportional to current (dI/dt) and often scales as a constant ratio with signal voltage, but it also shows a dependence on impedances (load current). Inductive coupling can also be reduced by constructive canceling of equal and outof-phase fields. In the case of driving low impedance video loads, output inductances contribute highly to output crosstalk.

The flexible programming capability of the AD8177 can be used to diagnose whether crosstalk is occurring more on the input side or the output side. Some examples are illustrative. A given input channel (INPUT7, roughly in the middle for this example) can be programmed to drive OUTPUT2 (exactly in the middle). The inputs to INPUT7 are just terminated to ground (via 50 Ω or 75 Ω), and no signal is applied.

All the other inputs are driven in parallel with the same test signal (practically provided by a distribution amplifier), with all other outputs except OUTPUT2 disabled. Because grounded INPUT7 is programmed to drive OUTPUT2, no signal should be present. Any signal that is present can be attributed to the other 15 hostile input signals because no other outputs are driven (they are all disabled). Thus, this method measures the all-hostile input contribution to crosstalk into INPUT7. Of course, the method can be used for other input channels and combinations of hostile inputs.

For output crosstalk measurement, a single input channel is driven (INPUT0, for example) and all outputs other than a given output (OUTPUT2 in the middle) are programmed to connect to INPUT0. OUTPUT2 is programmed to connect to INPUT15 (far away from INPUT0), which is terminated to ground. Thus, OUTPUT2 should not have a signal present because it is listening to a quiet input. Any signal measured at the OUTPUT2 can be attributed to the output crosstalk of the other four hostile outputs. Again, this method can be modified to measure other channels and other crosspoint matrix combinations.

Effect of Impedances on Crosstalk

The input side crosstalk can be influenced by the output impedance of the sources that drive the inputs. The lower the impedance of the drive source, the lower the magnitude of the crosstalk. The dominant crosstalk mechanism on the input side is capacitive coupling. The high impedance inputs do not have significant current flow to create magnetically induced crosstalk. However, significant current can flow through the input termination resistors and the loops that drive them. Thus, the PC board on the input side can contribute to magnetically coupled crosstalk.

From a circuit standpoint, the input crosstalk mechanism looks like a capacitor coupling to a resistive load. For low frequencies, the magnitude of the crosstalk is given by

$$|XT| = 20\log_{10}\left[(R_s C_M) \times s\right] \tag{9}$$

where

 R_S is the source resistance.

 C_M is the mutual capacitance between the test signal circuit and the selected circuit.

s is the Laplace transform variable.

From Equation 9, it can be observed that this crosstalk mechanism has a high-pass nature; it can also be minimized by reducing the coupling capacitance of the input circuits and lowering the output impedance of the drivers. If the input is driven from a 75 Ω terminated cable, the input crosstalk can be reduced by buffering this signal with a low output impedance buffer.

On the output side, the crosstalk can be reduced by driving a lighter load. Although the AD8177 is specified with excellent settling time when driving a properly terminated Cat-5, the crosstalk is higher than the minimum obtainable, due to the high output currents. These currents induce crosstalk via the mutual inductance of the output pins and bond wires of the AD8177.

From a circuit standpoint, this output crosstalk mechanism looks like a transformer with a mutual inductance between the windings that drives a load resistor. For low frequencies, the magnitude of the crosstalk is given by

$$|XT| = 20 \log_{10} \left(M_{XY} \times \frac{s}{R_L} \right) \tag{10}$$

where:

 M_{XY} is the mutual inductance of Output X to Output Y. R_L is the load resistance on the measured output.

This crosstalk mechanism can be minimized by keeping the mutual inductance low and increasing $R_{\rm L}$. The mutual inductance can be kept low by increasing the spacing of the conductors and minimizing their parallel length.

PCB Layout

Extreme care must be exercised to minimize additional crosstalk generated by the system circuit board(s). The areas that must be carefully detailed are grounding, shielding, signal routing, and supply bypassing.

Packaging of the AD8177 is designed to help keep crosstalk to a minimum. On the PBGA substrate, each pair is carefully routed to predominately couple to each other, with shielding traces separating adjacent signal pairs. The ball grid array is arranged such that similar board routing can be achieved. Input and output differential pairs are grouped by channel rather than by color to allow for easy, convenient board routing.

The input and output signals have minimum crosstalk if they are located between ground planes on layers above and below and separated by ground in between. Vias should be located as close to the IC as possible to carry the inputs and outputs to the inner layer. The input and output signals surface at the input termination resistors and the output series back-termination resistors. To the extent possible, these signals should also be separated as soon as they emerge from the IC package.

PCB Termination Layout

As frequencies of operation increase, the importance of proper transmission line signal routing becomes more important. The bandwidth of the AD8177 is large enough that using high impedance routing does not provide a flat in-band frequency response for practical signal trace lengths. It is necessary for the user to choose a characteristic impedance suitable for the application and properly terminate the input and output signals of the AD8177. Traditionally, video applications have used 75 Ω single-ended environments. RF applications are generally 50 Ω single-ended (and board manufacturers have the most experience with this application). Cat-5 cabling is usually driven as differential pairs of 100 Ω differential impedance.

For flexibility, the AD8177 does not contain on-chip termination resistors. This flexibility in application comes with some board layout challenges. The distance between the termination of the input transmission line and the AD8177 die is a high impedance stub and causes reflections of the input signal. With some simplification, it can be shown that these reflections cause peaking of the input at regular intervals in frequency, dependent on the propagation speed (VP) of the signal in the chosen board material and the distance (d) between the termination resistor and the AD8177. If the distance is great enough, these peaks can occur in-band. In fact, practical experience shows that these peaks are not high-Q, and should be pushed out to three or four times the desired bandwidth to not have an effect on the signal. For a board designer using FR4 ($V_P = 144 \times 10^6 \text{ m/s}$), this means the AD8177 should be no more than 1.5 cm after the termination resistors; preferably, it should be placed even closer. The BGA substrate routing inside the AD8177 is approximately 1 cm in length and adds to the stub length, so 1.5 cm PCB routing equates to $d = 2.5 \times 10^{-2}$ m in the calculations.

$$f_{PEAK} = \frac{(2n+1)V_p}{4d}$$
 (11)

where $n = \{0, 1, 2, 3, ...\}.$

In some cases, it is difficult to place the termination close to the AD8177 due to space constraints, differential routing, and large resistor footprints. A preferable solution in this case is to maintain a controlled transmission line past the AD8177 inputs and terminate the end of the line. This is known as fly-by termination. The input impedance of the AD8177 is large enough, and stub length inside the package is small enough that this works well in practice. Implementation of fly-by input termination often includes bringing the signal in on one routing layer, then passing through a filled via under the AD8177 input ball, then back out to termination on another signal layer. In this case, care must be taken to tie the reference ground planes together near the signal via if the signal layers are referenced to different ground planes.

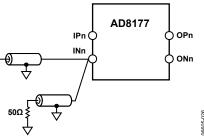


Figure 53. Fly-By Input Termination (Grounds for the two transmission lines shown must be tied together close to the INn pin.)

If multiple AD8177s are to be driven in parallel, a fly-by input termination scheme is very useful, but the distance from each AD8177 input to the driven input transmission line is a stub that should be minimized in length and parasitics using the discussed guidelines.

When driving the AD8177 single-endedly, the undriven input is often terminated with a resistance to balance the input stage. By terminating the undriven input with a resistor of one-half the characteristic impedance, the input stage is perfectly balanced (25 Ω , for example, to balance the two parallel 50 Ω terminations on the driven input). However, due to the feedback in the input receiver, there is high speed signal current leaving the undriven input. To terminate this high speed signal, proper transmission line techniques should be used.

One solution is to adjust the trace width to create a transmission line of half the characteristic impedance and terminate the far end with this resistance (25 Ω in a 50 Ω system). This is not often practical as trace widths become large. In most cases, the best practical solution is to place the half-characteristic impedance resistor as close as possible (preferably less than 1.5 cm away) and to reduce the parasitics of the stub (by removing the ground plane under the stub, for example). In either case, the designer must decide if the layout complexity created by a balanced, terminated solution is preferable to simply grounding the undriven input at the ball with no trace.

The examples discussed so far are for input termination, but the theory is similar for output back-termination. Taking the AD8177 as an ideal voltage source, any distance of routing between the AD8177 and a back-termination resistor is an impedance mismatch that potentially creates reflections. For this reason, back-termination resistors should also be placed close to the AD8177. In practice, because back-termination resistors are series elements, they can be placed close to the AD8177 outputs.

Finally, the AD8177 pinout allows the user to bring the outputs out as surface traces to the back-termination resistors. The designer can avoid creating stubs and reflections by keeping the AD8177 output signal path on the surface of the board. A stub is created when a top-to-bottom via connection is made on the output signal path that is perpendicular to the signal flow.


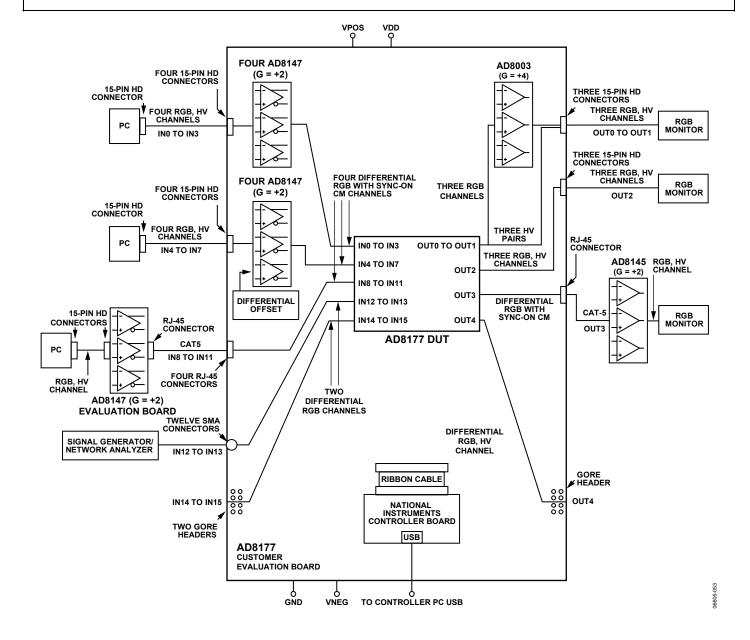


Figure 54. Evaluation Board Block Diagram

OUTLINE DIMENSIONS

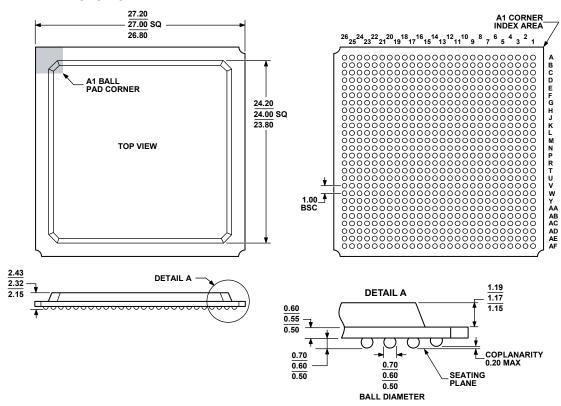

COMPLIANT TO JEDEC STANDARDS MS-034-AAL-1

Figure 55. 676-Ball Plastic Ball Grid Array [PBGA] (B-676) Dimensions shown in millimeters

ORDERING GUIDE

Model	Temperature Range	Package Description	Package Option
AD8177ABPZ ¹	−40°C to +85°C	676-Ball Plastic Ball Grid Array [PBGA]	B-676
AD8177-EVALZ ¹		Evaluation Board	

 $^{^{1}}$ Z = RoHS Compliant Part.

AD8177			
--------	--	--	--

NOTES