ALLIANCE M E M O R Y

AS4C32M16SA

512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

512Mbit Single-Data-Rate (SDR) SDRAM

AS4C32M16SA-7TCN & AS4C32M16SA-7TIN AS4C32M16SA-7BCN & AS4C32M16SA-7BIN 32Mx16 (8M x 16 x 4 Banks)

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

REVISION HISTORY

Rev. 1.0 March 2012 initial version

Rev. 1.1 April 2012 Revised Operating-; Standby- and Refresh Currents

Rev. 2.0 February 2014 Die Shrink – A revision

Rev. 3.0 April 2015 Add BGA option

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice

ALLIANCE M E M O R Y

AS4C32M16SA

512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Overview

This section gives an overview of the 512M SDRAM product and describes its main characteristics.

Features

- 4 banks x 8Mbit x 16 organization
- High speed data transfer rates up to 166 MHz
- Full Synchronous Dynamic RAM, with all signals referenced to clock rising edge
- Single Pulsed RAS Interface
- Data Mask for Read/Write Control
- Four Banks controlled by BA0 & BA1
- Programmable CAS Latency: 2, 3
- Programmable Wrap Sequence: Sequential or Interleave
- Programmable Burst Length:
- 1, 2, 4, 8 and full page for Sequential Type 1, 2, 4, 8 for Interleave Type
- Multiple Burst Read with Single Write Operation
- Automatic and Controlled Pre-charge Command
- Random Column Address every CLK (1-N Rule)
- Power Down Mode
- Auto Refresh and Self Refresh
- Refresh Interval: 8192 cycles/64 ms
- Available in 54 Pin TSOP II

Available in 54 Ball FBGA II

- LVTTL Interface
- Single +3.3 V ±0.3 V Power Supply
- ROHS Compliant*

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Table 1 - Performance Table

| | -7 |
|---|---------|
| System Frequency (fCK) | 143 MHz |
| Clock Cycle Time (tCK3) | 7 ns |
| Clock Access Time (t _{AC3}) CAS Latency = 3 | 5.4 ns |
| Clock Access Time (t _{AC2}) CAS Latency = 2 | 6 ns |

Description

The AS4C32M16SA is a four bank Synchronous DRAM organized as 4 banks x 8Mbit x 16. The AS4C32M16SA achieves high speed data transfer rates up to 166 MHz by employing a chip architecture that prefetches multiple bits and then synchronizes the output data to a system clock.

All of the control, address, data input and output circuits are synchronized with the positive edge of an externally supplied clock.

Operating the four memory banks in an inter-leaved fashion allows random access operation to occur at higher rate than is possible with standard <u>DRAMs</u>. A sequential and gapless data rate of up to 166 MHz is possible depending on burst length, CAS latency and speed grade of the device.

Table 2 – Ordering Information for ROHS Compliant Products

| Product part No | Org | Temperature | Max Clock (MHz) | Package |
|------------------|---------|-----------------------------|-----------------|---------------|
| AS4C32M16SA-7TCN | 32 x 16 | Commercial 0°C to 70°C | 143 | 54pin TSOP II |
| AS4C32M16SA-7TIN | 32 x 16 | Industrial -40°C to 85°C | 143 | 54pin TSOP II |
| AS4C32M16SA-7BCN | 32 x 16 | Commercial 0°C to 70°C | 143 | 54 Ball FBGA |
| AS4C32M16SA-7BIN | 32 x 16 | Industrial -40°C to 85°C | 143 | 54 Ball FBGA |


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211

Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

54 Pin Plastic TSOP-II x16 PIN CONFIGURATION Top View

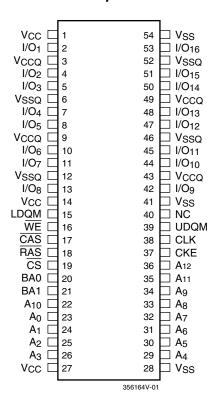

Pin Names

| CLK | Clock Input |
|-------------------------------------|------------------------------|
| CKE | Clock Enable |
| CS | Chip Select |
| RAS | Row Address Strobe |
| CAS | Column Address Strobe |
| WE | Write Enable |
| A ₀ -A ₁₂ | Address Inputs |
| BA0, BA1 | Bank Select |
| I/O ₁ –I/O ₁₆ | Data Input/Output |
| LDQM, UDQM | Data Mask |
| V _{CC} | Power (+3.0V~3.3V) |
| V _{SS} | Ground |
| V _{CCQ} | Power for I/O's (+3.0V~3.3V) |
| V _{SSQ} | Ground for I/O's |
| NC | Not connected |
| | |

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

54 BALL FBGA x16 PIN CONFIGURATION Top View

B C D

G

J

configuration for x 16 devices:

| 1 | 2 | | |
|------|------|--------|--|
| VSS | DQ15 | VS S Q | |
| DQ14 | DQ13 | VDDQ | |
| DQ12 | DQ11 | VS S Q | |
| DQ10 | DQ9 | VDDQ | |
| DQ8 | NC | VSS | |
| UDQM | CLK | CKE | |
| A12 | A11 | Α9 | |
| A8 | A7 | A6 | |
| VSS | A5 | A4 | |

| | 7 | 8 | |
|----|-----|------|-----|
| VE | DDQ | DQ0 | VDD |
| VS | SQ | DQ2 | DQ1 |
| VE | DDQ | DQ4 | DQ3 |
| VS | SQ | DQ6 | DQ5 |
| ٧ | DD | LDQM | DQ7 |
| C | AS | RAS | WE |
| В | A0 | BA1 | C S |
| | Α0 | A1 | A10 |
| | А3 | A2 | VDD |

Pin Names

| - | |
|-----------------------------------|------------------------------|
| CLK | Clock Input |
| CKE | Clock Enable |
| CS | Chip Select |
| RAS | Row Address Strobe |
| CAS | Column Address Strobe |
| WE | Write Enable |
| A ₀ -A ₁₂ | Address Inputs |
| BA0, BA1 | Bank Select |
| DQ ₀ –DQ ₁₅ | Data Input/Output |
| LDQM, UDQM | Data Mask |
| V _{CC} | Power (+3.0V~3.3V) |
| V _{SS} | Ground |
| V _{CCQ} | Power for I/O's (+3.0V~3.3V) |
| V_{SSQ} | Ground for I/O's |
| NC | Not connected |

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Capacitance*

(at Ta=0 to 25 °C, V_{CC} = V_{CCO} = 3.3 V ± 0.3 V)

| Parameter | Symbol | Min. | Max. | Unit |
|---|------------------|------|------|------|
| Input Capacitance: CLK | C _{CLK} | 4.5 | 6 | pF |
| Input Capacitance: All other input pins and balls | C _{IN} | 2.5 | 6 | pF |
| Input/output Capacitance: DQ | C _{IO} | 4 | 6 | pF |


^{*}Note:Capacitance is sampled and not 100% tested.

Absolute Maximum Ratings*

*Note: Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage of the device. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Block Diagram

x16 Configuration

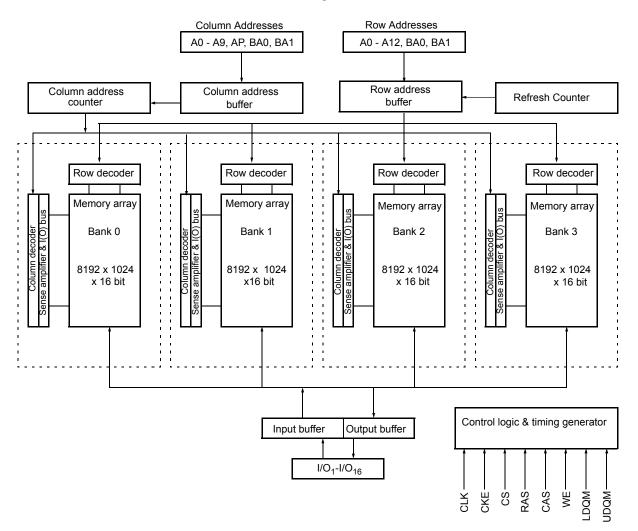

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Signal Pin Description

| Pin | Type | Signal | Polarity | Function |
|----------------|-----------------|--------|------------------|--|
| CLK | Input | Pulse | Positive Edge | The system clock input. All of the SDRAM inputs are sampled on the rising edge of the clock. |
| CKE | Input | Level | Active High | Activates the CLK signal when high and deactivates the CLK signal when low, thereby initiates either the Power Down mode or the Self Refresh mode. |
| CS | Input | Pulse | Active Low | $\overline{\text{CS}}$ enables the command decoder when low and disables the command decoder when high. When the command decoder is disabled, new commands are ignored but previous operations continue. |
| RAS, CAS WE | Input | Pulse | Active Low | When sampled at the positive rising edge of the clock, $\overline{\text{CAS}}$, $\overline{\text{RAS}}$, and $\overline{\text{WE}}$ define the command to be executed by the SDRAM. |
| A0 - A12 | Input | Level | | During a Bank Activate command cycle, A0-A12 defines the row address (RA0-RA12) when sampled at the rising clock edge. During a Read or Write command cycle, A0-An defines the column address (CA0-CAn) when sampled at the rising clock edge.CAn depends from the SDRAM organization: • 64M x 8 SDRAM CA0-CA9, CA11. • 32M x 16 SDRAM CA0-CA9. |
| | | | | In addition to the column address, A10(=AP) is used to invoke autoprecharge operation at the end of the burst read or write cycle. If A10 is high, autoprecharge is selected and BA0, BA1 defines the bank to be precharged. If A10 is low, autoprecharge is disabled. During a Precharge command cycle, A10(=AP) is used in conjunction with BA0 and BA1 to control which bank(s) to precharge. If A10 is high, all four banks will BA0 and BA1 are used to define which bank to precharge. |
| BA0, BA1 | Input | Level | _ | Selects which bank is to be active. |
| DQx | Input Output | Level | _ | Data Input/Output pins operate in the same manner as on conventional DRAMs. |
| LDQM UDQM | Input | Pulse | Active High | The Data Input/Output mask places the DQ buffers in a high impedance state when sampled high. In Read mode, DQM has a latency of two clock cycles and controls the output buffers like an output enable. In Write mode, DQM has a latency of zero and operates as a word mask by allowing input data to be written if it is low but blocks the write operation if DQM is high. |
| VCC, VSS | Supply | | | Power and ground for the input buffers and the core logic. |
| VCCQ VSSQ | Supply | _ | _ | Isolated power supply and ground for the output buffers to provide improved noise immunity. |

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211

Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Operation Definition

All of SDRAM operations are defined by states of control signals \overline{CS} , \overline{RAS} , \overline{CAS} , \overline{WE} , and DQM at the positive edge of the clock. The following list shows the thruth table for the operation commands.

| Operation | Device State | CKE n-1 | CKE n | cs | RAS | CAS | WE | DQM | A0-9, A11, A12 | A10 | BS0 BS1 |
|---------------------------|---------------------|------------|----------|----|-----|-----|----|-----|----------------------|-----|------------|
| Row Activate | Idle ³ | Н | Х | L | L | Н | Н | Х | V | V | V |
| Read | Active ³ | Н | Х | L | Н | L | Н | Х | V | L | V |
| Read w/Autoprecharge | Active ³ | Н | Х | L | Н | L | Н | Х | V | Н | V |
| Write | Active ³ | Н | Х | L | Н | L | L | Х | V | L | V |
| Write with Autoprecharge | Active ³ | Н | Х | L | Н | L | L | Х | V | Н | V |
| Row Precharge | Any | Н | Х | L | L | Н | L | Х | Х | L | V |
| Precharge All | Any | Н | Х | L | L | Н | L | Х | Х | Н | Х |
| Mode Register Set | Idle | Н | Х | L | L | L | L | Х | V | V | V |
| No Operation | Any | Н | Х | L | Н | Н | Н | Х | Х | Х | Х |
| Device Deselect | Any | Н | Х | Н | Х | Х | Х | Х | Х | Х | Х |
| Auto Refresh | Idle | Н | Н | L | L | L | Н | Х | Х | Х | Х |
| Self Refresh Entry | Idle | Н | L | L | L | L | Н | Х | Х | Х | Х |
| Self Refresh Exit | Idle | | | Н | Х | Х | Х | | | | |
| | (Self Refr.) | L | Н | L | Н | Н | Х | Х | Х | Х | Х |
| Power Down Entry | Idle | | | Н | Х | Х | Х | | | | |
| | Active ⁴ | Н | L | L | Н | Н | Х | Х | Х | Х | X |
| Power Down Exit | Any | | | Н | Х | Х | Х | | | | |
| | (Power Down) | L | Н | L | Н | Н | L | Х | Х | Х | Х |
| Data Write/Output Enable | Active | Н | Х | Х | Х | Х | Х | L | Х | Х | Х |
| Data Write/Output Disable | Active | Н | Х | Х | Х | Х | Х | Н | Х | Х | Х |

Notes:

- 1. V = Valid, x = Don't Care, L = Low Level, H = High Level
- 2. CKEn signal is input level when commands are provided, CKEn-1 signal is input level one clock before the commands are provided
- 3. These are state of bank designated by BS0, BS1 signals.
- 4. Power Down Mode can not entry in the burst cycle.

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211

Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Power On and Initialization

The default power on state of the mode register is supplier specific and may be undefined. The following power on and initialization sequence guarantees the device is preconditioned to each user's specific needs. Like a conventional DRAM, the Synchronous DRAM must be powered up and initialized in a predefined manner. During power on, all VCC and VCCQ pins must be built up simultaneously to the specified voltage when the input signals are held in the "NOP" state. The power on voltage must not exceed VCC+0.3V on any of the input pins or VCC supplies. The CLK signal must be started at the same time. After power on, an initial pause of 200 ms is required followed by a precharge of both banks using the precharge command. To prevent data contention on the DQ bus during power on, it is required that the DQM and CKE pins be held high during the initial pause period. Once all banks have been precharged, the Mode Register Set Command must be issued to initialize the Mode Register. A minimum of two Auto Refresh cycles (CBR) are also required. These may be done before or after programming the Mode Register. Failure to follow these steps may lead to unpredictable start-up modes.

Programming the Mode Register

The Mode register designates the operation mode at the read or write cycle. This register is divided into 4 fields. A Burst Length Field to set the length of the <u>burst</u>, an Addressing Selection bit to program the column access sequence in a burst cycle (interleaved or sequential), a CAS Latency Field to set the access time at clock cycle and a Operation mode field to differentiate between normal operation (Burst read and burst Write) and a special Burst Read and Single Write mode. The mode set operation must be done before any activate command after the initial power up. Any content of the mode register can be altered by re-executing the mode set command. All banks must be in pre-charged state and CKE must be high at least one clock before the mode set operation. After the mode register is set, a Standby or NOP command is required. Low signals of RAS, CAS, and WE at the positive edge of the clock activate the mode set operation. Address input data at this timing defines parameters to be set as shown in the previous table.

Read and Write Operation

When RAS is low and both CAS and WE are high at the positive edge of the clock, a RAS cycle starts. According to address data, a word line of the selected bank is activated and all of sense amplifiers associated to the wordline are set.

A $\overline{\text{CAS}}$ cycle is triggered by setting $\overline{\text{RAS}}$ high and $\overline{\text{CAS}}$ low at a clock timing after a necessary delay, t_{RCD} , from the $\overline{\text{RAS}}$ timing. $\overline{\text{WE}}$ is use d to define either a read $\overline{\text{(WE = H)}}$ or a write $\overline{\text{(WE = L)}}$ at this stage.

SDRAM provides a wide variety of fast access modes. In a single CAS cycle, serial data read or write operations are allowed at up to a 166 MHz data rate. The numbers of serial data bits are the burst length programmed at the mode set operation, i.e., one of 1, 2, 4, 8 and full page. Column addresses are segmented by the burst length and serial data accesses are done within this boundary. The first column address to be accessed is supplied at the CAS timing and the subsequent addresses are generated automatically by the programmed burst length and its sequence. For example, in a burst length of 8 with interleave sequence; if the first ad-dress is '2', then the rest of the burst sequence is 3, 0, 1, 6, 7, 4, and 5.

Full page burst operation is only possible using sequential burst type. Full Page burst operation does not terminate once the burst length has been reached. (At the end of the page, it will wrap to the start address and continue.) In other words, unlike burst length of 2, 4, and 8, full page burst continues until it is terminated using another command.


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211

Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Address Input for Mode Set (Mode Register Operation)

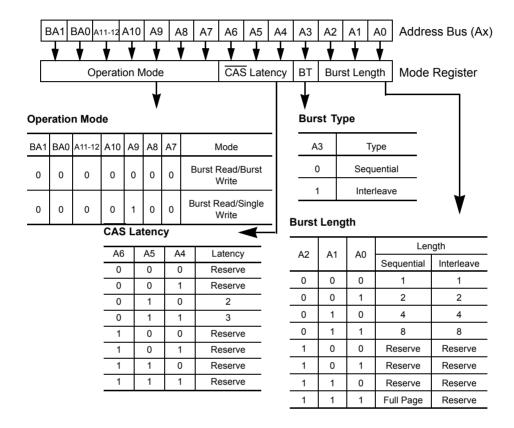

Similar to the page mode of conventional DRAM's, burst read or write accesses on any column address are possible once the \overline{RAS} cycle latches the sense amplifiers. The maximum t_{RAS} or the refresh interval time limits the number of random column accesses. A new burst access can be done even before the previous burst ends. The interrupt operation at every clock cycles is supported. When the previous burst is interrupted, the remaining addresses are overridden by the new address with the full burst length. An interrupt which accompanies with an operation change from a read to a write is possible by exploiting DQM to avoid bus contention.

When two or more banks are activated sequentially, interleaved bank read or write operations are possible. With the programmed burst length, alternate access and precharge operations on two or more banks can realize fast serial data access modes among many different pages. Once two or more banks are activated, column to column interleave operation can be done between different pages.

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Burst Length and Sequence:

| Burst Length | Starting Address (A2 A1 A0) | Sequential Burst Addressing (decimal) | | | | | Interleave Burst Addressing (decimal) | | | | | | | | | | |
|-----------------|---|---------------------------------------|--|--------------------------------------|--------------------------------------|--------------------------------------|---|--|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|---------------------------------|
| 2 | xx0 xx1 | | 0, 1 1, 0 | | | | | 0, 1 1, 0 | | | | | | | | | |
| 4 | x00 x01 x10 x11 | | 0, 1, 2, 3 1, 2, 3, 0 2, 3, 0, 1 3, 0, 1, 2 | | | | | 0, 1, 2, 3 1, 0, 3, 2 2, 3, 0, 1 3, 2, 1, 0 | | | | | | | | | |
| 8 | 000 001 010 011 100 101 110 | 0 1 2 3 4 5 6 7 | 1 2 3 4 5 6 7 0 | 2 3 4 5 6 7 0 1 | 3 4 5 6 7 0 1 2 | 4 5 6 7 0 1 2 3 | 5 6 7 0 1 2 3 4 | 6 7 0 1 2 3 4 5 | 7 0 1 2 3 4 5 6 | 0 1 2 3 4 5 6 7 | 1 0 3 2 5 4 7 6 | 2 3 0 1 6 7 4 5 | 3 2 1 0 7 6 5 4 | 4 5 6 7 0 1 2 3 | 5 4 7 6 1 0 3 2 | 6 7 4 5 2 3 0 1 | 7 6 5 4 3 2 1 |
| Full Page | nnn | | Cn, Cn+1, Cn+2 | | | | | | | not | sup | por | ted | | | | |

Refresh Mode

SDRAM has two refresh modes, Auto Refresh and Self Refresh. Auto Refresh is similar to the CAS -before-RAS refresh of conventional DRAMs. All of banks must be precharged before applying any refresh mode. An on-chip address counter increments the word and the bank addresses and no bank information is required for both refresh modes.

The chip enters the Auto Refresh mode, when \overline{RAS} and \overline{CAS} are held low and CKE and \overline{WE} are held high at a clock timing. The mode restores word line after the refresh and no external precharge command is necessary. A minimum tRC time is required between two automatic refreshes in a burst refresh mode. The same rule applies to any access command after the automatic refresh operation.

The chip has an on-chip timer and the Self Refresh mode is available. It enters the mode when \overline{RAS} , \overline{CAS} , and CKE are low and \overline{WE} is high at a clock timing. All of external control signals including the clock are disabled. Returning CKE to high enables the clock and initiates the refresh exit operation. After the exit command, at least one t_{RC} delay is required prior to any access command.

DQM Function

DQM has two functions for data I/O read and write operations. During reads, when it turns to "high" at a clock timing, data outputs are disabled and become high impedance after two clock delay (DQM Data Disable Latency t_{DQZ}). It also provides a data mask function for writes. When DQM is activated, the write operation at the next clock is prohibited (DQM Write Mask Latency t_{DQW} = zero clocks).

Power Down

In order to reduce standby power consumption, a power down mode is available. All banks must be precharged and the necessary Precharge delay (trp) must occur before the SDRAM can enter the Power Down mode. Once the Power Down mode is initiated by holding CKE low, all of the receiver circuits except CLK and CKE are gated off. The Power Down mode does not perform any refresh operations, therefore the device can't remain in Power Down mode longer than the Refresh period (tref) of the device. Exit from this mode is performed by taking CKE "high". One clock delay is required for mode entry and exit.

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Auto Precharge

Two methods are available to precharge SDRAMs. In an automatic precharge mode, the CAS timing accepts one extra address, CA10, to determine whether the chip restores or not after the operation. If CA10 is high when a Read Command is issued, the **Read with Auto-Precharge** function is initiated. The SDRAM automatically enters the precharge operation one clock before the last data out for $\overline{\text{CAS}}$ latencies 2, two clocks for $\overline{\text{CAS}}$ latencies 3 and three clocks for CAS latencies 4. If CA10 is high when a Write Command is issued, the **Write with Auto-Precharge** function is initiated. The SDRAM automatically enters the precharge operation a time delay equal to t_{WR} (Write recovery time) after the last data in. **Auto-Precharge** does not apply to full-page burst mode.

Precharge Command

There is also a separate precharge command available. When \overline{RAS} and \overline{WE} are low and \overline{CAS} is high at a clock timing, it triggers the precharge operation. Three address bits, BA0, BA1 and A10 are used to define banks as shown in the following list. The precharge command can be imposed one clock before the last data out for CAS latency = 2, two clocks before the last data out for CAS latency = 3. Writes require a time delay twr from the last data out to apply the precharge command. A full-page burst may be truncated with a Precharge command to the same bank.

Bank Selection by Address Bits:

| A10 | BA0 | BA1 | |
|-----|-----|-----|-----------|
| 0 | 0 | 0 | Bank 0 |
| 0 | 0 | 1 | Bank 1 |
| 0 | 1 | 0 | Bank 2 |
| 0 | 1 | 1 | Bank 3 |
| 1 | Х | Х | all Banks |

Burst Termination

Once a burst read or write operation has been initiated, there are several methods in which to terminate the burst operation prematurely. These methods include using another Read or Write Command to interrupt an existing burst operation, use a Precharge Command to interrupt a burst cycle and close the active bank, or using the Burst Stop Command to terminate the existing burst operation but leave the bank open for future Read or Write Commands to the same page of the active bank. When interrupting a burst with another Read or Write Command care must be taken to avoid I/O contention. The Burst Stop Command, however, has the fewest restrictions making it the easiest method to use when terminating a burst operation before it has been completed. If a Burst Stop command is issued during a burst write operation, then any residual data from the burst write cycle will be ignored. Data that is presented on the I/O pins before the Burst Stop Command is registered will be written to the memory. The full-page burst is used in conjunction with Burst Terminate Command to generate arbitrary burst lengths.

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Recommended Operation and Characteristics for LV-TTL

 $V_{SS} = 0 \text{ V}; V_{CC}, V_{CCQ} = 3.3 \text{ V} \pm 0.3 \text{ V}$

| | | Limit ' | | | |
|---|-----------|---------|---------|------|-------|
| Parameter | Symbol | min. | max. | Unit | Notes |
| Input high voltage | V | 2.0 | Vcc+0.3 | ٧ | 1, 2 |
| Input low voltage | V | - 0.3 | 0.8 | V | 1, 2 |
| Output high voltage (I _{OUT} = – 4.0 mA) | V OH | 2.4 | _ | ٧ | |
| Output low voltage (IOUT = 4.0 mA) | V OL | _ | 0.4 | V | |
| Input leakage current, any input (0 V < V _{IN} < 3.6 V, all other inputs = 0 V) | l I(L) | -2 | 2 | uA | |
| Output leakage current (DQ is disabled, 0 V < V _{OUT} < V _{CC}) | l O(L) | - 2 | 2 | uA | |

Note:

All voltages are referenced to V_{SS} . V_{IH} may overshoot to V_{CC} + 2.0 V for pulse width of < 4ns with 3.3V. V_{IL} may undershoot to -2.0 V for pulse width < 4.0 ns with 3.3V. Pulse width measured at 50% points with amplitude measured peak to DC reference.

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Operating Currents

 V_{CC} = 3.3 V ± 0.3 V (Recommended Operating Conditions unless otherwise noted)

| | | | Max. | | |
|--------|---|---|------|------|------|
| Symbol | Parameter & Test Condition | | -7 | Unit | Note |
| ICC1 | Operating Current RC RCMIN, RC CKMIN Active-precharge command cycling, without Burst Operation | 1 bank operation | 240 | mA | 1 |
| ICC2P | Precharge Standby Current | t _{CK} = min. | 7 | mA | 1 |
| ICC2PS | <u>in P</u> ower Down Mode CS =V _{IH} , CKE≤ V _{IL(max)} | t _{CK} = Infinity | 5 | mA | 1 |
| ICC2N | Precharge Standby Current | tCK = min. | 58 | mA | |
| ICC2NS | <u>in N</u> on-Power Down Mode CS =V _{IH} , CKE≥ V _{IL(max)} | t _{CK} = Infinity | 48 | mA | |
| ICC3N | No Operati <u>ng</u> Current | CKE≥V _{IH(MIN.)} | 75 | mA | |
| ICC3P | tCK = min, CS = VIH(min) bank ; active state (4 banks) | $CKE \le V_{IL(MAX.)}$ (Power down mode) | 35 | mA | |
| ICC4 | Burst Operating Current t _{CK} = min Read/Write command cycling | | 170 | mA | 1,2 |
| ICC5 | Auto Refresh Current t _{CK} = min Auto Refresh command cycling | | 160 | mA | 1 |
| ICC6 | Self Refresh Current Self Refresh Mode, CKE≤ 0.2V | | 6 | mA | |

Notes:

These parameters depend on the cycle rate and these values are measured by the cycle rate under the minimum value of t_{CK} and t_{RC} . Input signals are changed one time during t_{CK} .

These parameter depend on output loading. Specified values are obtained with output open.

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

AC Characteristics 1,2, 3

 $V_{SS} = 0 \text{ V}; V_{CC} = 3.3 \text{ V} \pm 0.3 \text{ V}, t_{T} = 1 \text{ ns}$

| vss = | 0 v; vCC = | 3.3 V ± 0.3 V, t _T = 1 ns | | | | | | | |
|-------|------------------------|--------------------------------------|--------------|------|------|------|--|--|--|
| | | | Limit Values | | | | | | |
| | | | -7 | | | | | | |
| # | Symbol | Parameter | Min. | Max. | Unit | Note | | | |
| Cloc | Clock and Clock Enable | | | | | | | | |
| 1 | CK | Clock Cycle Time | | | | | | | |
| | | CAS Latency = 3 | 7 | _ | ns | | | | |
| | | CAS Latency = 2 | 10 | - | ns | | | | |
| 2 | CK | Clock Frequency | | | | | | | |
| | | CAS Latency = 3 | _ | 143 | MHz | | | | |
| | | CAS Latency = 2 | _ | 100 | MHZ | | | | |
| 3 | AC | Access Time from Clock | | | | 2, 3 | | | |
| | | CAS Latency = 3 | _ | 5.4 | ns | | | | |
| | | CAS Latency = 2 | _ | 6 | ns | | | | |
| 4 | t CH | Clock High Pulse Width | 2.5 | _ | ns | | | | |
| 5 | CL | Clock Low Pulse Width | 2.5 | _ | ns | | | | |
| 6 | T T | Transition Time | 0.3 | 1.5 | ns | | | | |
| Setu | p and Hold | Times | | | | | | | |
| 7 | l IS | Input Setup Time | 1.5 | _ | ns | 4 | | | |
| 8 | Ĭ IH | Input Hold Time | 0.8 | _ | ns | 4 | | | |
| 9 | CKS | CKE Setup Time | 1.5 | _ | ns | 4 | | | |
| 10 | CKH | CKE Hold Time | 0.8 | | ns | 4 | | | |
| 11 | T MRD | Mode Register Set Command Cycle Time | 2 | _ | CLK | | | | |
| 12 | SB | Power Down Mode Entry Time | 0 | 7 | ns | | | | |
| 13 | l DS | Data-in Setup Time | 1.5 | | ns | | | | |
| 14 | T DH | Data-in Hold Time | 0.8 | _ | ns | | | | |

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Common Parameters

| 15 | t RCD | Row to Column Delay Time | 15 | _ | ns | 5 |
|----|----------|---|----|------|-----|---|
| 16 | Į RP | Row Precharge Time | 15 | _ | ns | 5 |
| 17 | T RAS | Row Active Time | 45 | 100K | ns | 5 |
| 18 | t RC | Row Cycle Time | 65 | _ | ns | 5 |
| 19 | T RRD | Activate(a) to Activate(b) Command Period | 15 | - | ns | 5 |
| 20 | CCD | CAS(a) to CAS(b) Command Period | 1 | _ | CLK | |
| 21 | t DPL | Data-in to Precharge Command for Manual precharge | 2 | _ | CLK | |

Refresh Cycle

| 22 | T REF | Refresh Period (8192 cycles) | _ | 64 | ms | |
|----|----------|------------------------------|---|----|-----|--|
| 23 | SREX | Self Refresh Exit Time | 1 | 1 | CLK | |

Read Cycle

| | | | Limit Values | | | | | | |
|-------|-------------|--|--------------|------|------|------|--|--|--|
| | | | -7 | | | | | | |
| # | Symbol | Parameter | Min. | Max. | Unit | Note | | | |
| 24 | t OH | Data Out Hold Time | 2.5 | _ | ns | 2 | | | |
| 25 | t LZ | Data Out to Low Impedance Time | 1 | - | ns | | | | |
| 26 | ι HZ | Data Out to High Impedance Time | 3 | 7 | ns | 6 | | | |
| 27 | t DQZ | DQM Data Out Disable Latency | _ | 2 | CLK | | | | |
| Write | Write Cycle | | | | | | | | |
| 28 | τ WR | Write Recovery Time for Auto precharge | 2 | - | CLK | | | | |
| 29 | t DQW | DQM Write Mask Latency | 0 | _ | CLK | | | | |

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Notes for AC Parameters:

- 1. For proper power-up see the operation section of this data sheet.
- 2. AC timing tests have V_{IL} = 0.4V and V_{IH} = 2.4V with the timing referenced to the 1.4 V crossover point. The transition time is measured between V_{IH} and V_{IL} . All AC measurements assume t_T = 1ns with the AC output load circuit shown in Figure 1.

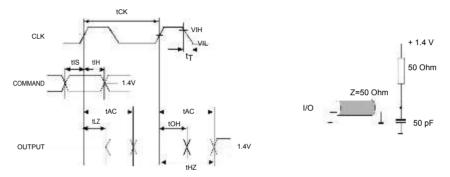


Figure 1.

- 3. If clock rising time is longer than 1 ns, a time $(t_{\text{T}}/2 0.5)$ ns has to be added to this parameter.
- 4. If t_T is longer than 1 ns, a time $(t_T 1)$ ns has to be added to this parameter.
- 5. These parameter account for the number of clock cycle and depend on the operating frequency of the clock, as follows:

the number of clock cycle = specified value of timing period (counted in fractions as a whole number)

Self Refresh Exit is a synchronous operation and begins on the 2nd positive clock edge after CKE returns high. Self Refresh Exit is not complete until a time period equal to tRC is satisfied once the Self Refresh Exit command is registered.

6. Referenced to the time which the output achieves the open circuit condition, not to output voltage levels.

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice

ALLIANCE M E M O R Y

AS4C32M16SA

512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Timing Diagrams

- 1. Bank Activate Command Cycle
- 2. Burst Read Operation
- 3. Read Interrupted by a Read
- 4. Read to Write Interval
 - 4.1 Read to Write Interval
 - 4.2 Minimum Read to Write Interval
 - 4.3 Non-Minimum Read to Write Interval
- 5. Burst Write Operation
- 6. Write and Read Interrupt
 - 6.1 Write Interrupted by a Write
 - 6.2 Write Interrupted by Read
- 7. Burst Write & Read with Auto-Precharge
 - 7.1 Burst Write with Auto-Precharge
 - 7.2 Burst Read with Auto-Precharge
- 8. Burst Termination
 - 8.1 Termination of a Burst Write Operation
 - 8.2 Termination of a Burst Write Operation
- 9. AC- Parameters
 - 9.1 AC Parameters for a Write Timing
 - 9.2 AC Parameters for a Read Timing
- 10. Mode Register Set
- 11. Power on Sequence and Auto Refresh (CBR)
- 12. Power Down Mode
- 13. Self Refresh (Entry and Exit)
- 14. Auto Refresh (CBR)

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Timing Diagrams (Cont'd)


- 15. Random Column Read (Page within same Bank)
 - 15.1 $\overline{\text{CAS}}$ Latency = 2
 - $15.2 \overline{CAS}$ Latency = 3
- 16. Random Column Write (Page within same Bank)
 - $16.1 \overline{\text{CAS}} \text{ Latency} = 2$
 - $16.2 \overline{CAS}$ Latency = 3
- 17. Random Row Read (Interleaving Banks) with Precharge
 - $17.1 \overline{\text{CAS}} \text{ Latency} = 2$
 - $17.2 \overline{\text{CAS}} \text{ Latency} = 3$
- 18. Random Row Write (Interleaving Banks) with Precharge
 - $18.1 \overline{\text{CAS}} \text{ Latency} = 2$
 - $18.2 \overline{CAS}$ Latency = 3
- 19. Precharge Termination of a Burst
 - 19.1 CAS Latency = 2
 - 19.2 $\overline{\text{CAS}}$ Latency = 3
- 20. Full Page Burst Operation
 - 20.1 Full Page Burst Read, CAS Latency = 2
 - 20.2 Full Page Burst Read, CAS Latency = 3
- 21. Full Page Burst Operation
 - 21.1 Full Page Burst Write, CAS Latency = 2
 - 21.2 Full Page Burst Write, \overline{CAS} Latency = 3



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)


1. Bank Activate Command Cycle

$\overline{(CAS | latency = 3)}$

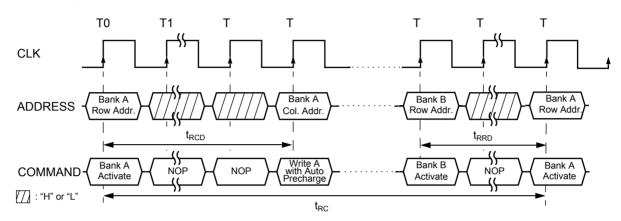

2. Burst Read Operation

(Burst Length = 4, \overline{CAS} latency = 2, 3)

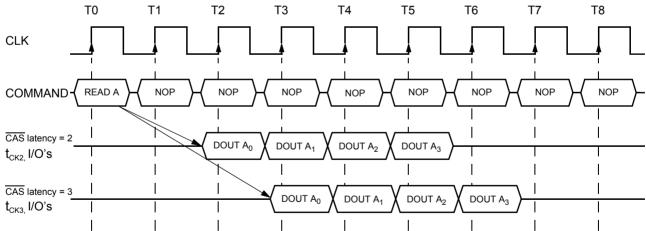


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)


3. Read Interrupted by a Read

(Burst Length = 4, \overline{CAS} latency = 2, 3)

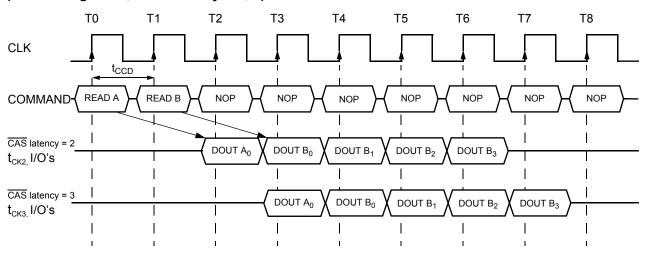

4.1 Read to Write Interval

(Burst Length = 4, \overline{CAS} latency = 3)

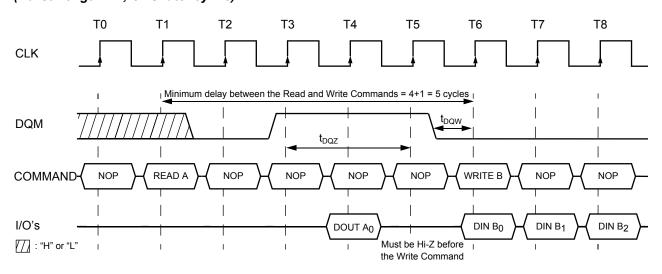


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)


4.2 Minimum Read to Write Interval

(Burst Length = 4, \overline{CAS} latency = 2)

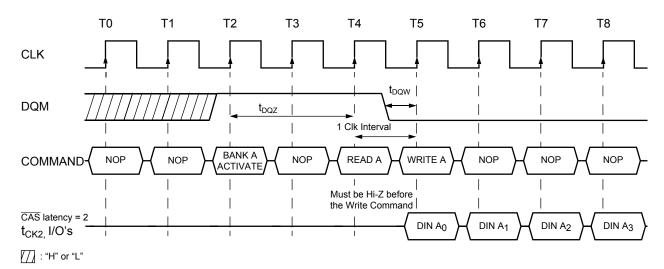

4.3 Non-Minimum Read to Write Interval

(Burst Length = 4, \overline{CAS} latency = 2, 3)

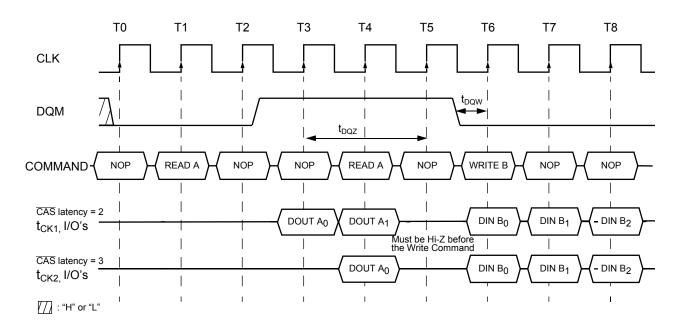


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)


5. Burst Write Operation

(Burst Length = 4, \overline{CAS} latency = 2, 3)

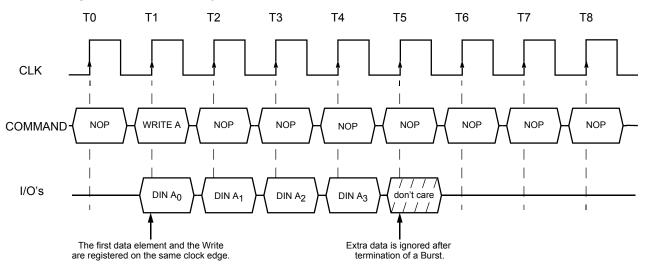

6.1 Write Interrupted by a Write

(Burst Length = 4, \overline{CAS} latency = 2, 3)

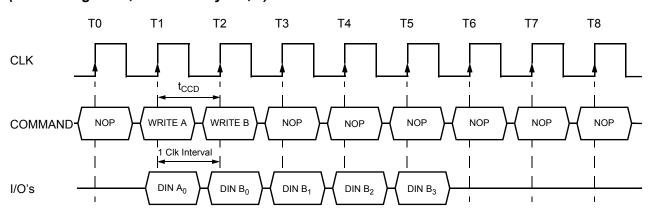


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)


6.2 Write Interrupted by a Read

(Burst Length = 4, \overline{CAS} latency = 2, 3)

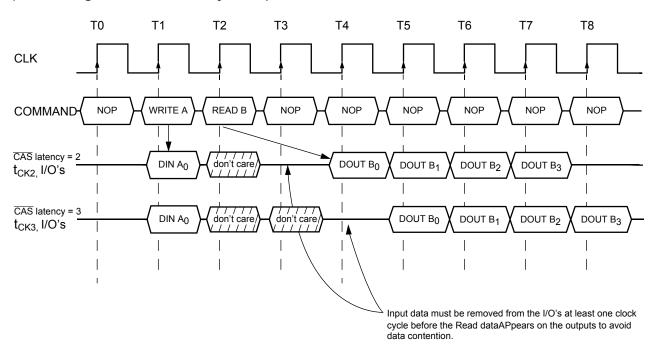

7.1 Burst Write with Auto-Precharge

Burst Length = 2, \overline{CAS} latency = 2, 3)

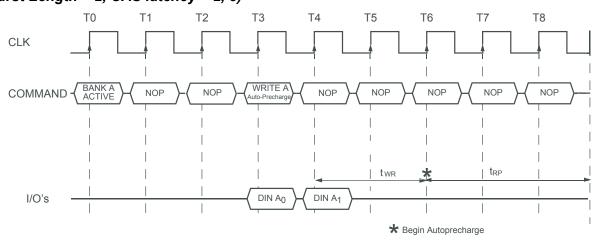

Bank can be reactivated after trp


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

7.2 Burst Read with Auto-Precharge

Burst Length = 4, \overline{CAS} latency = 2, 3)

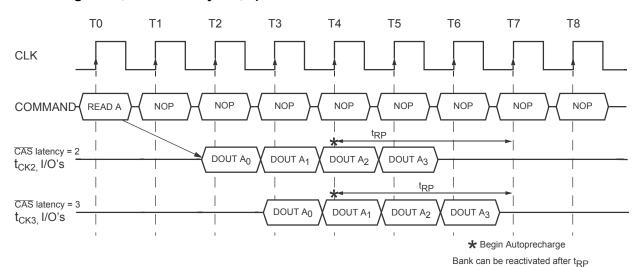




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)


8.1 Termination of a Burst Read Operation

$\overline{(CAS)}$ latency = 2, 3)

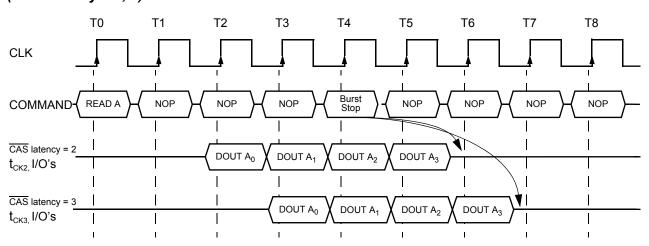

8.2 Termination of a Burst Write Operation


$\overline{(CAS\ latency = 2, 3)}$

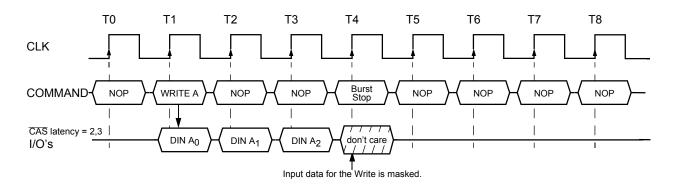

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

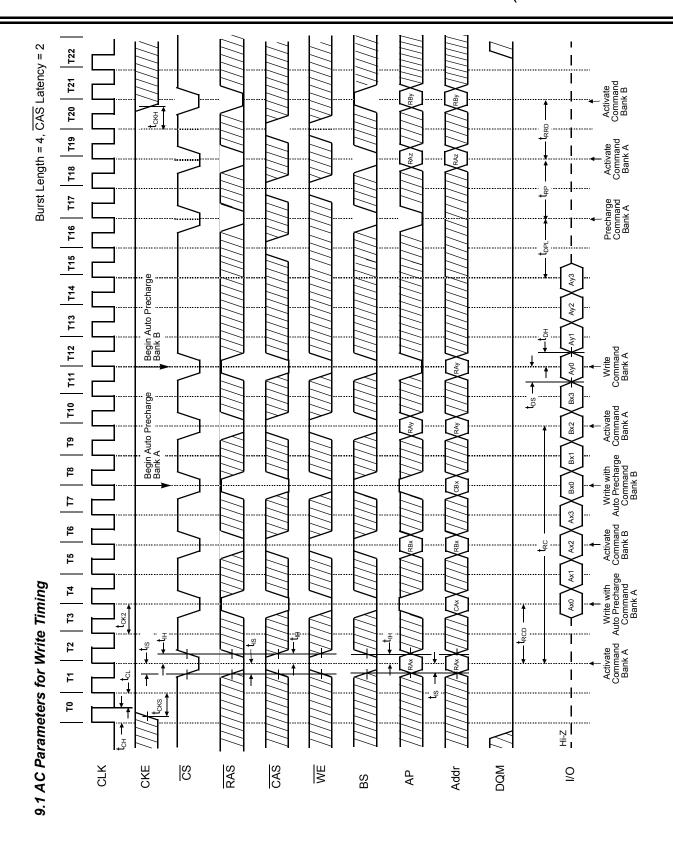

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

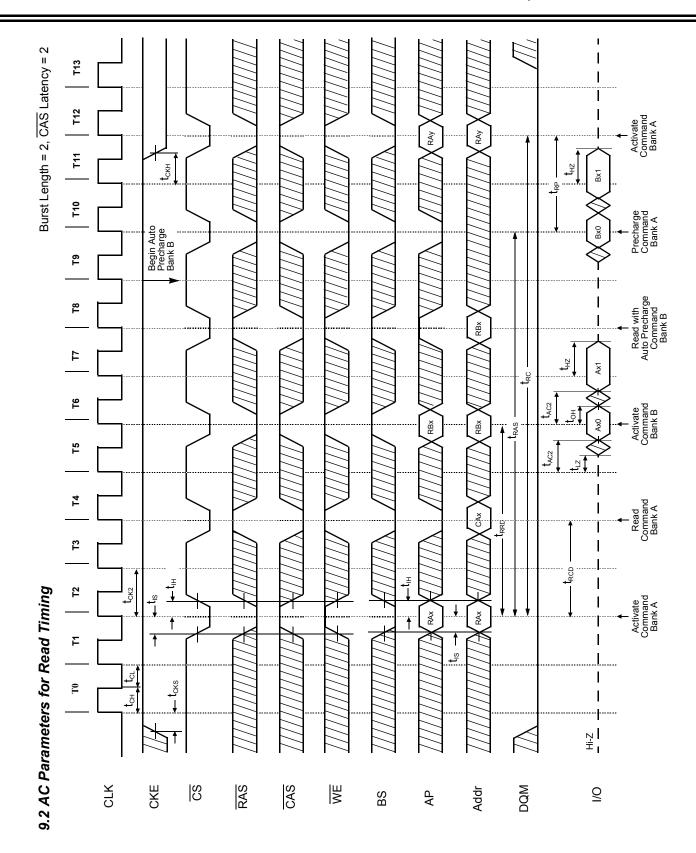




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

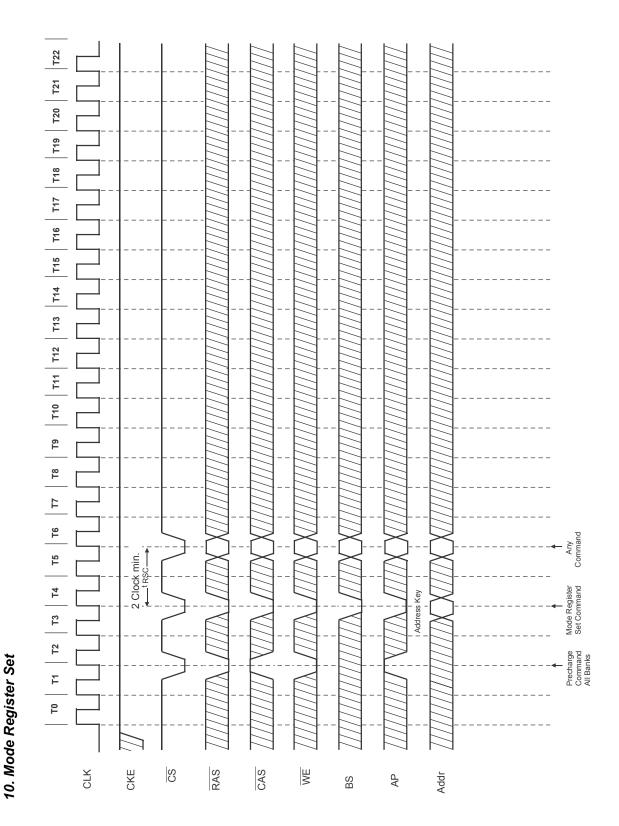




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

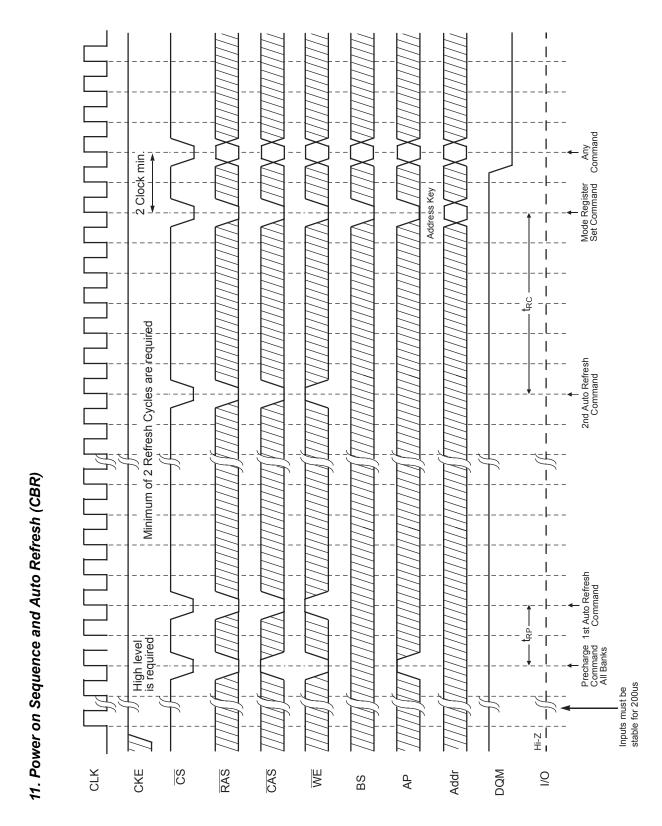




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

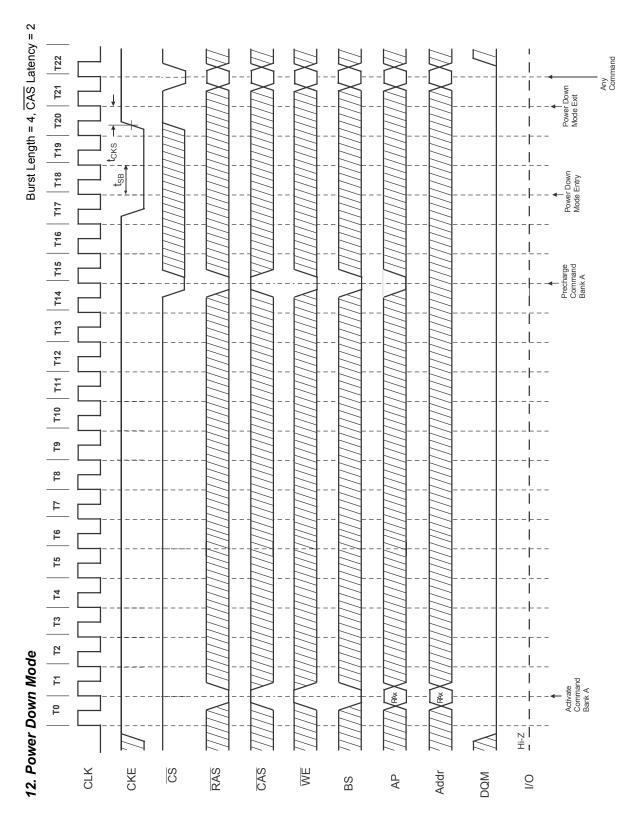

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

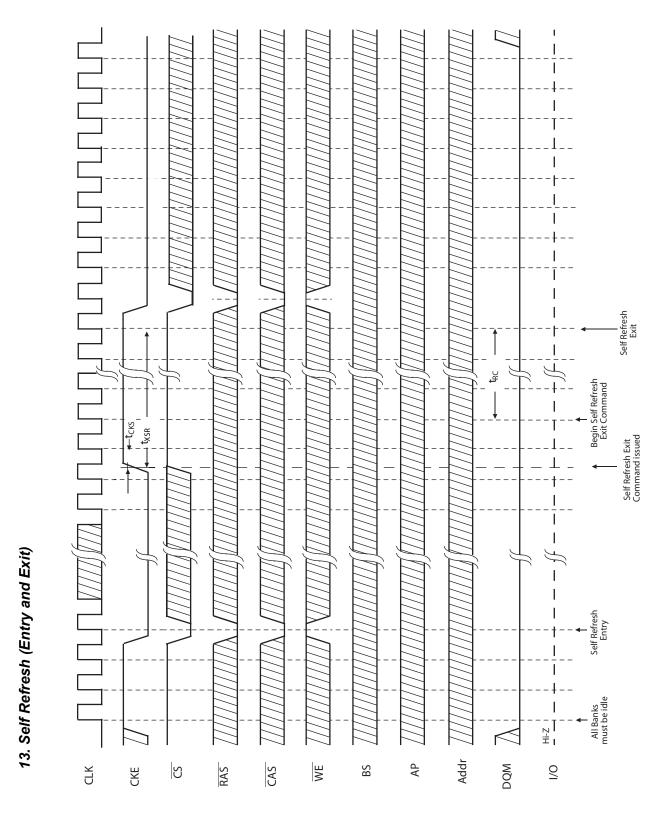




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

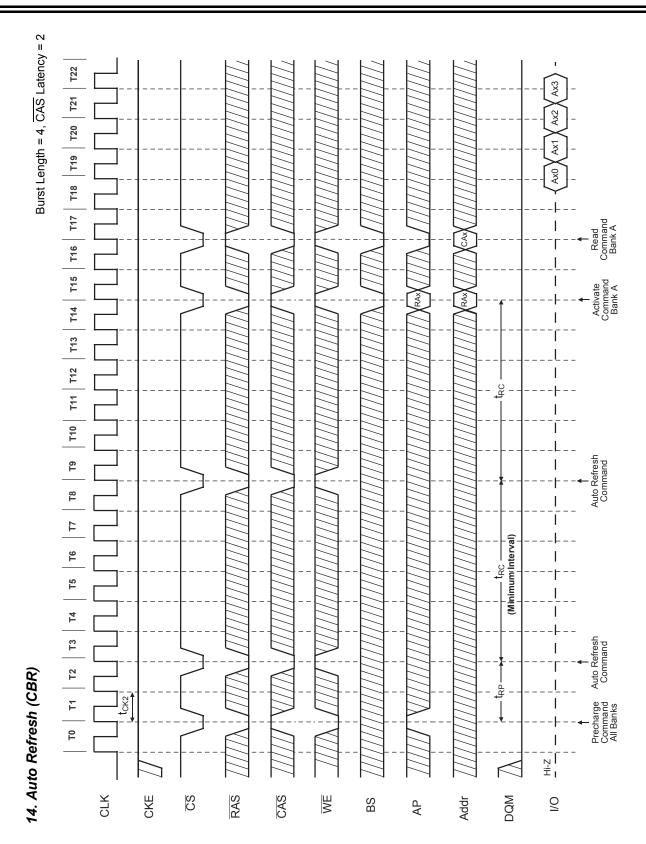




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

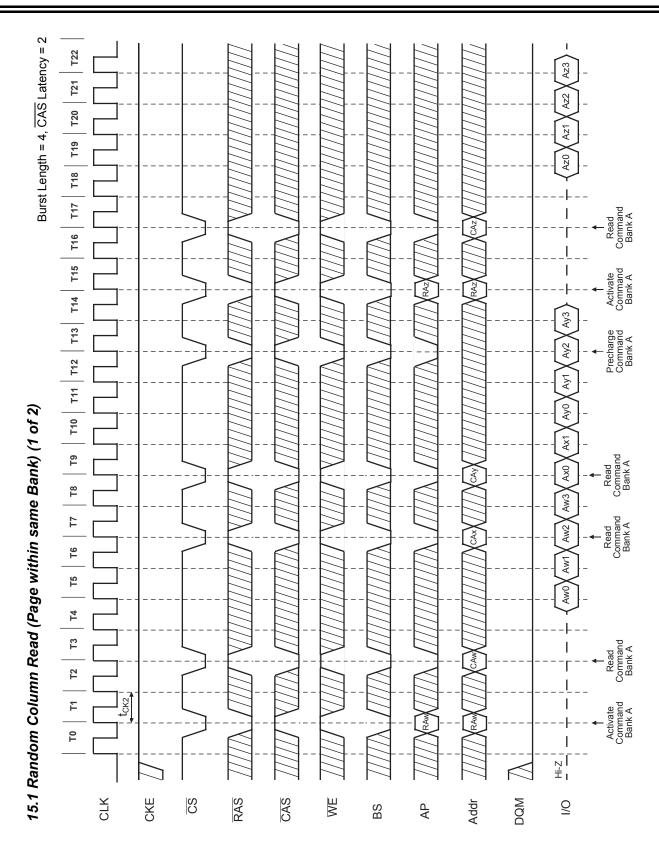

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

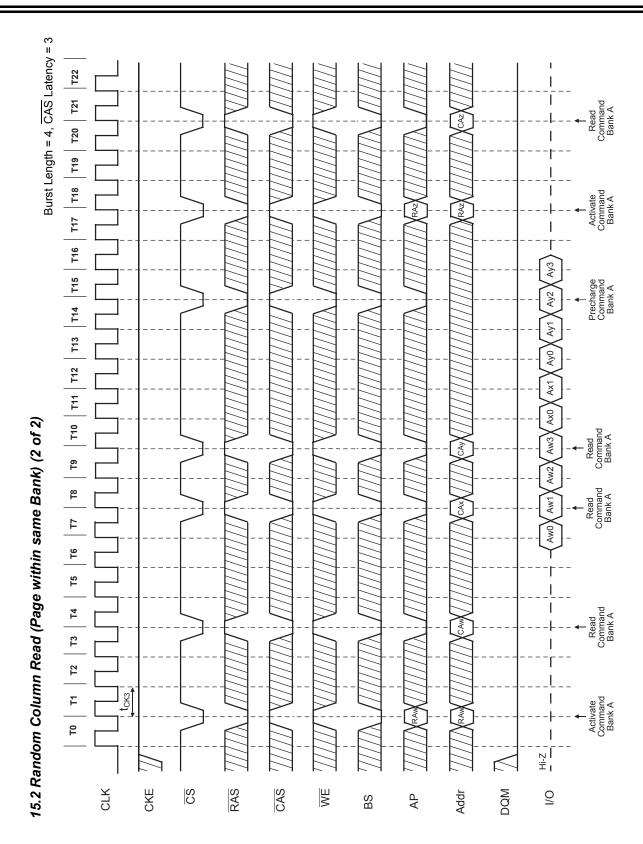

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

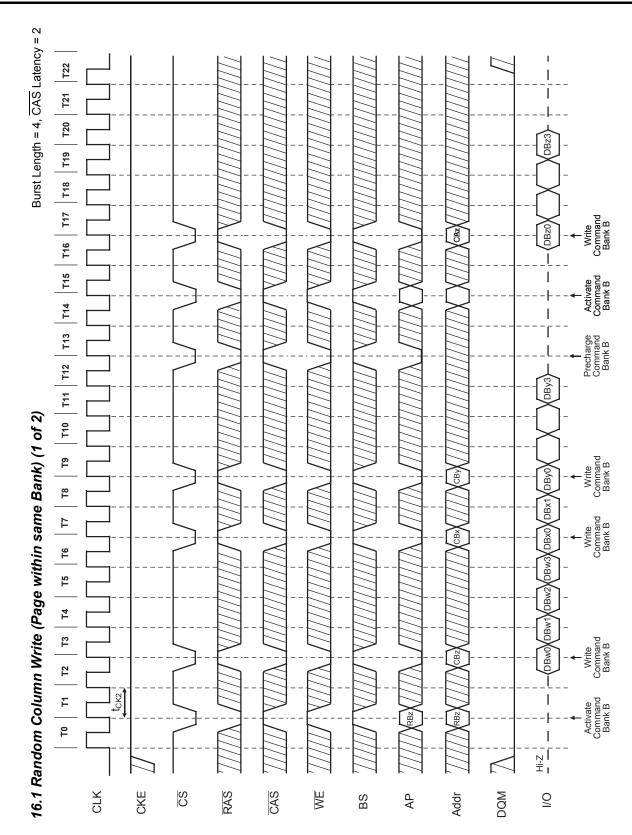

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

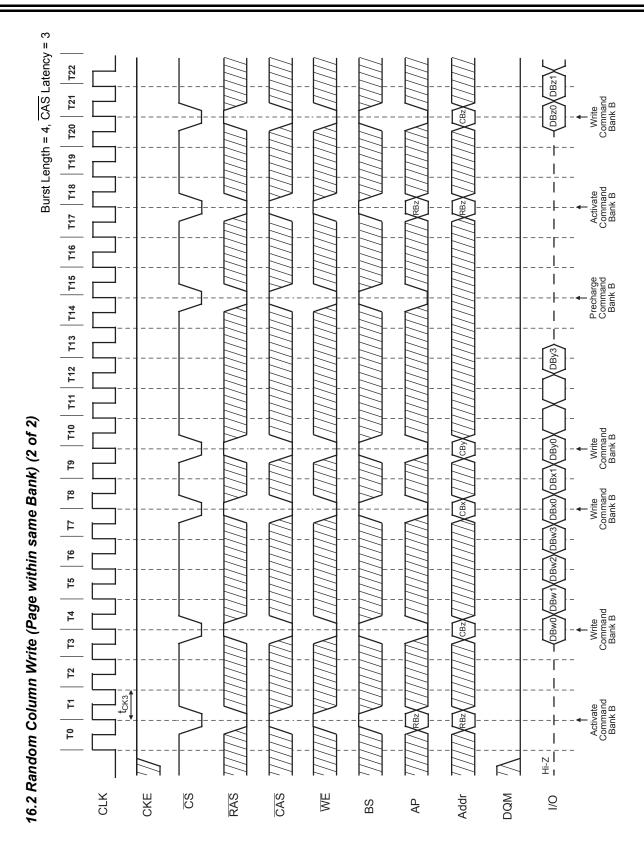

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

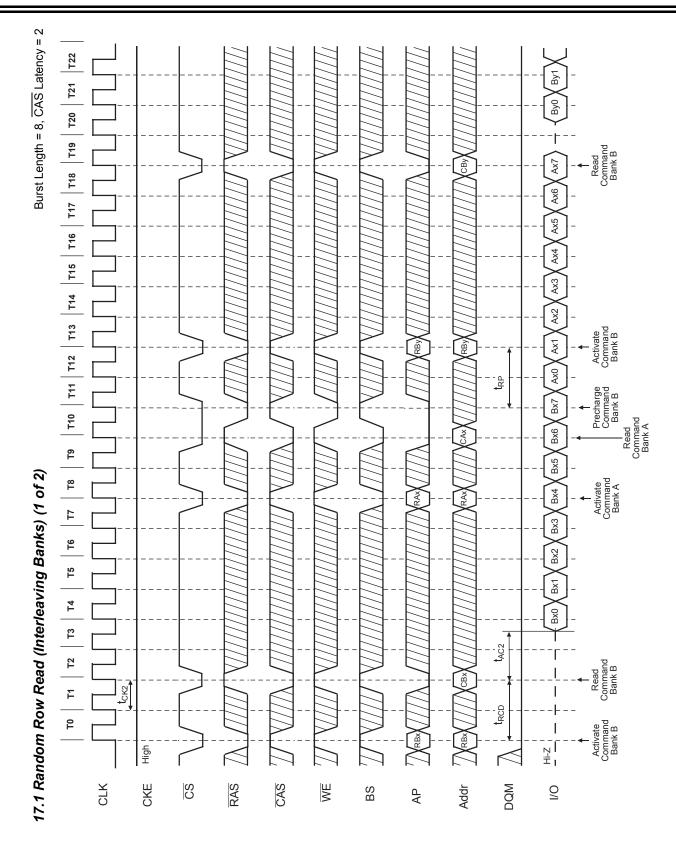

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

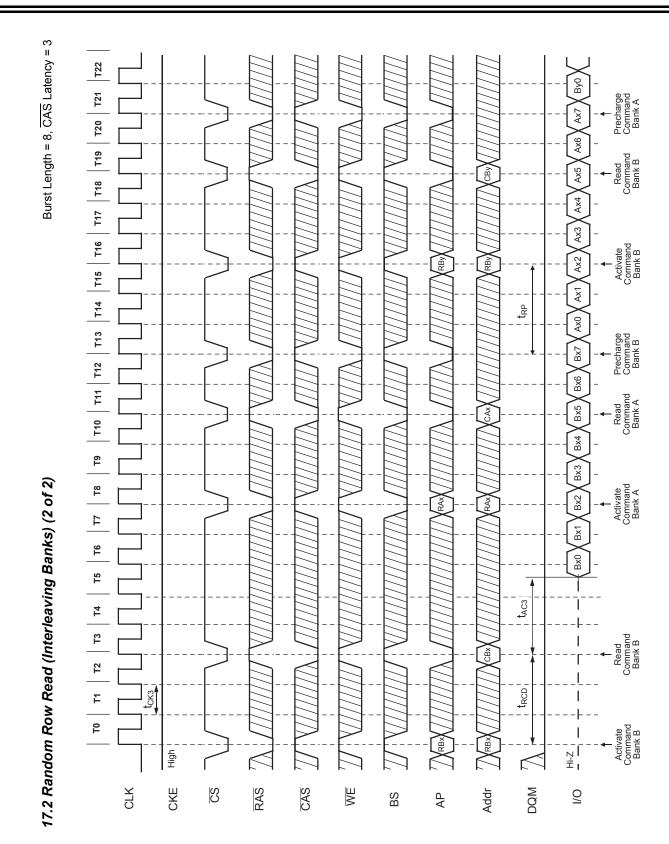




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

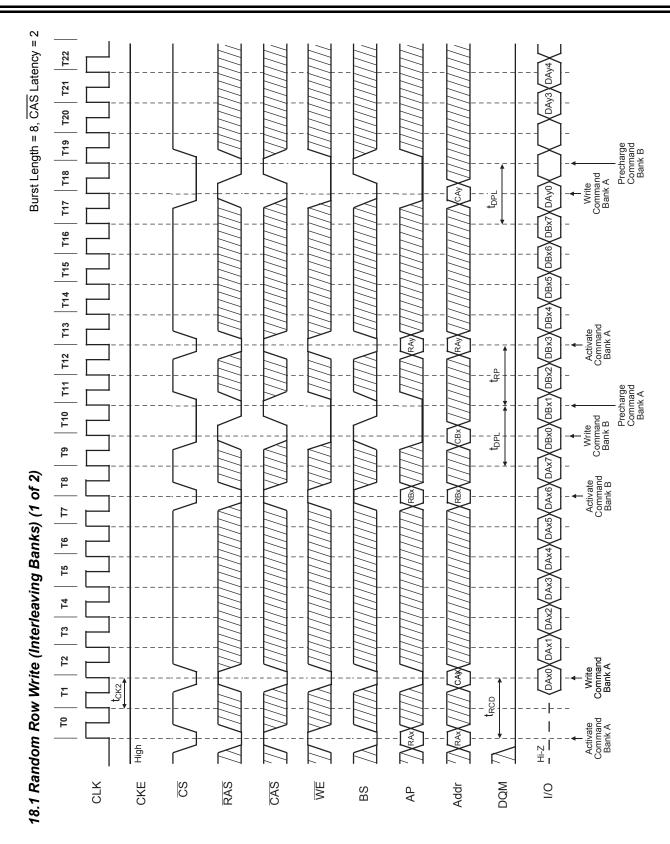




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

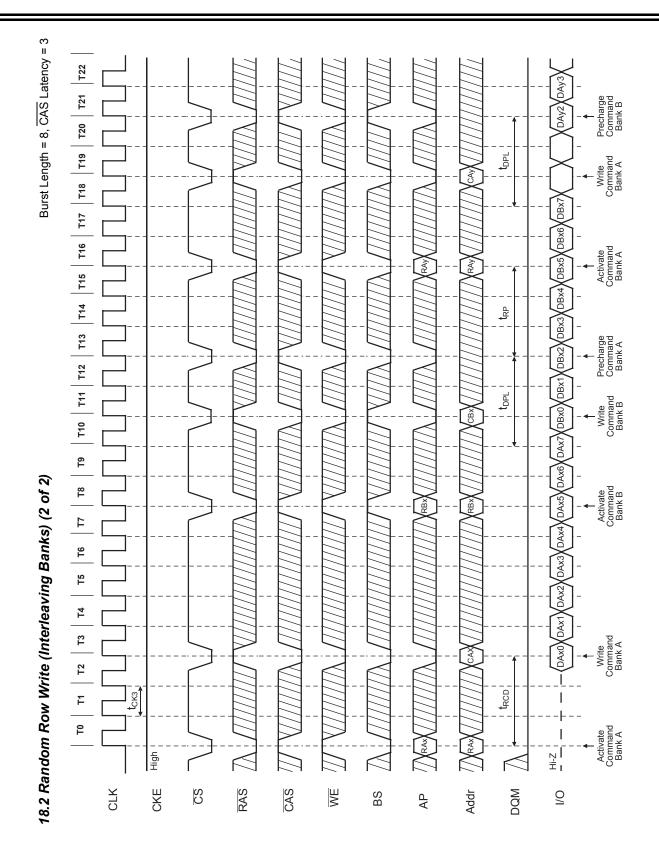




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

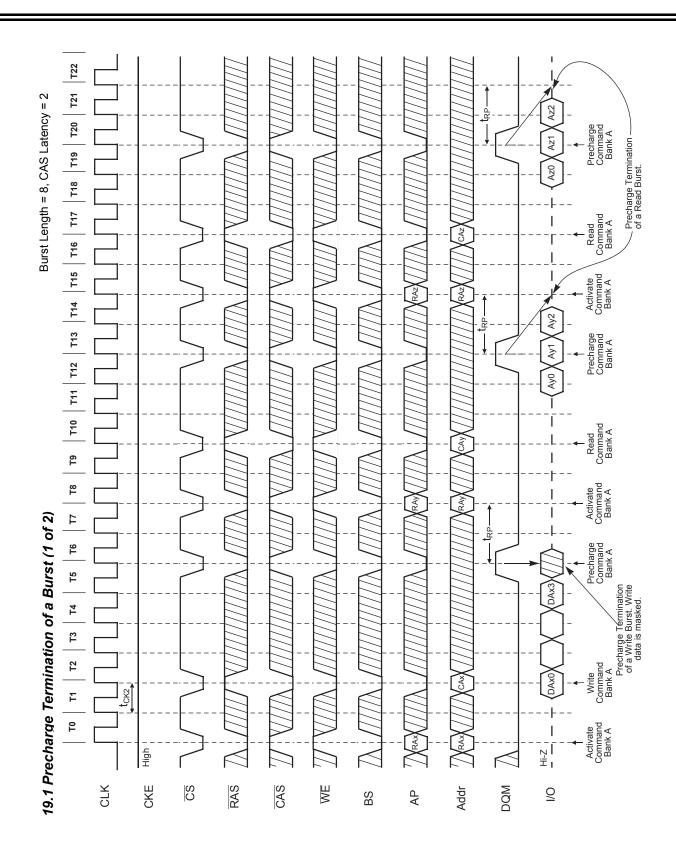

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

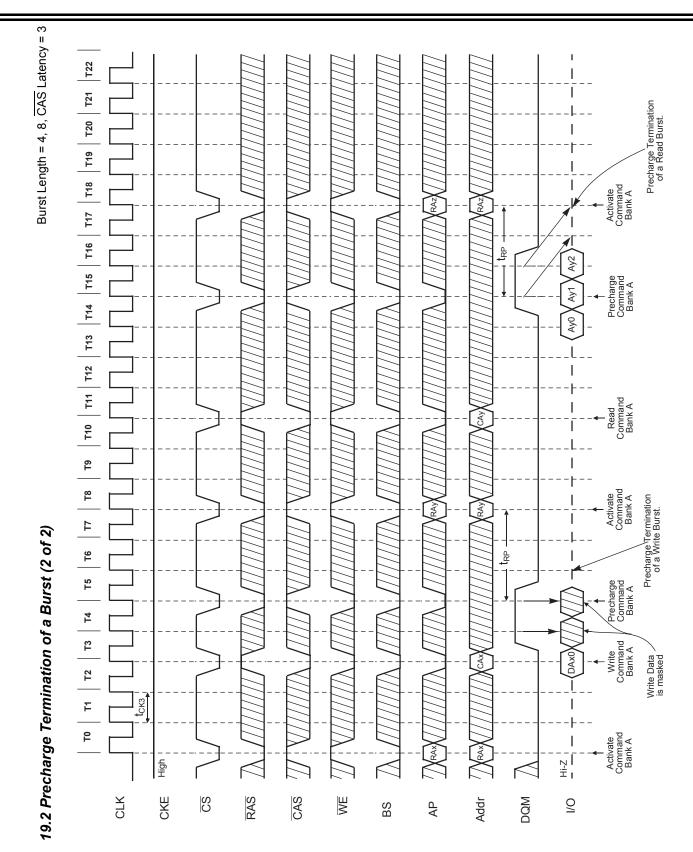




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

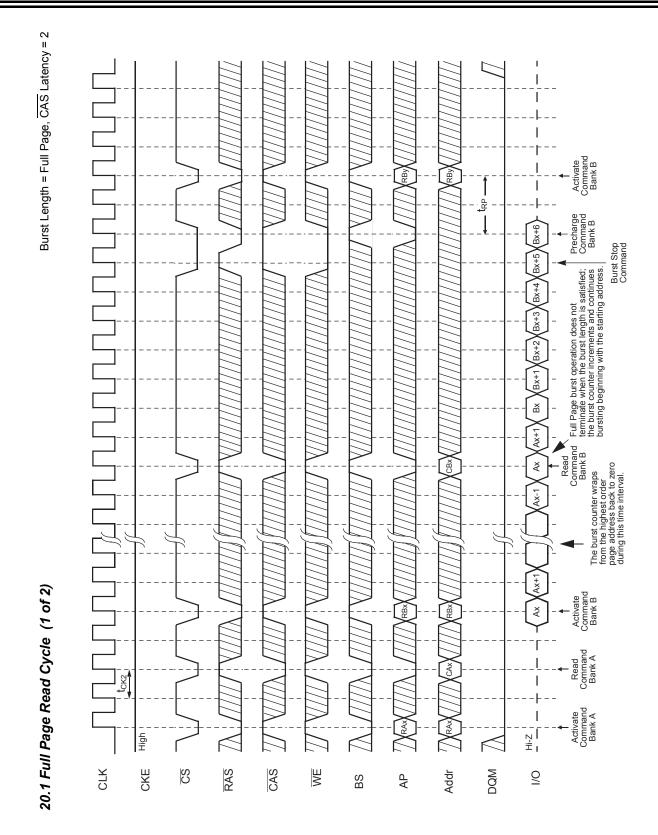




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

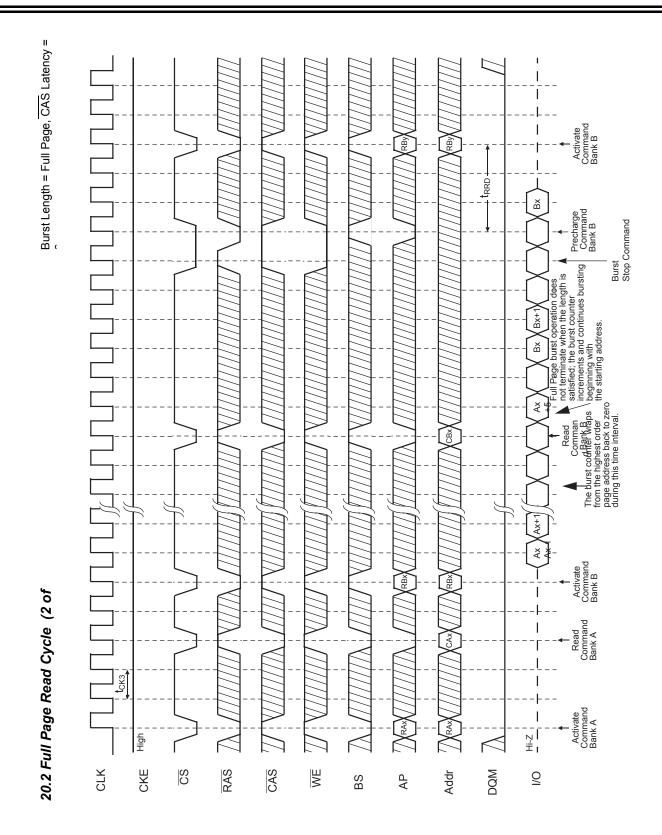




512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

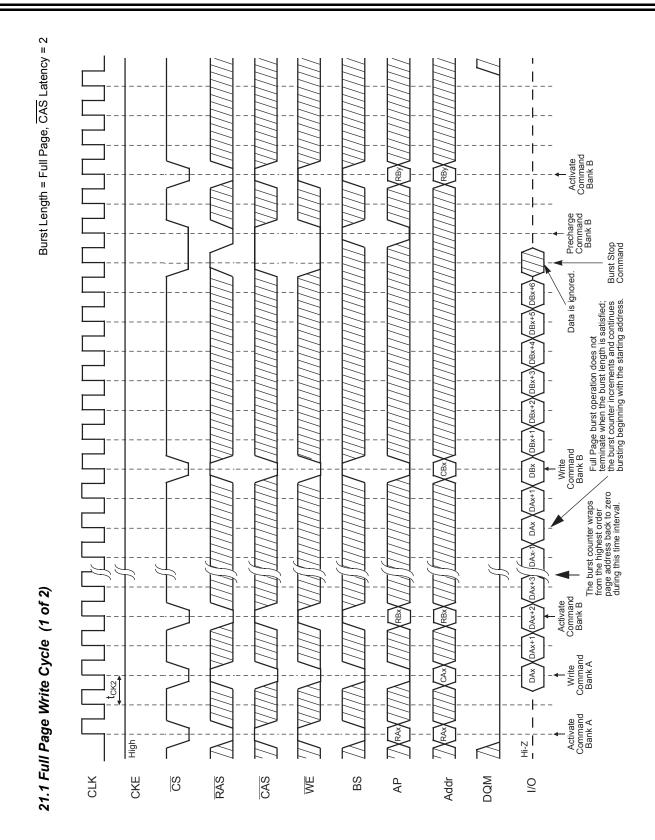



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

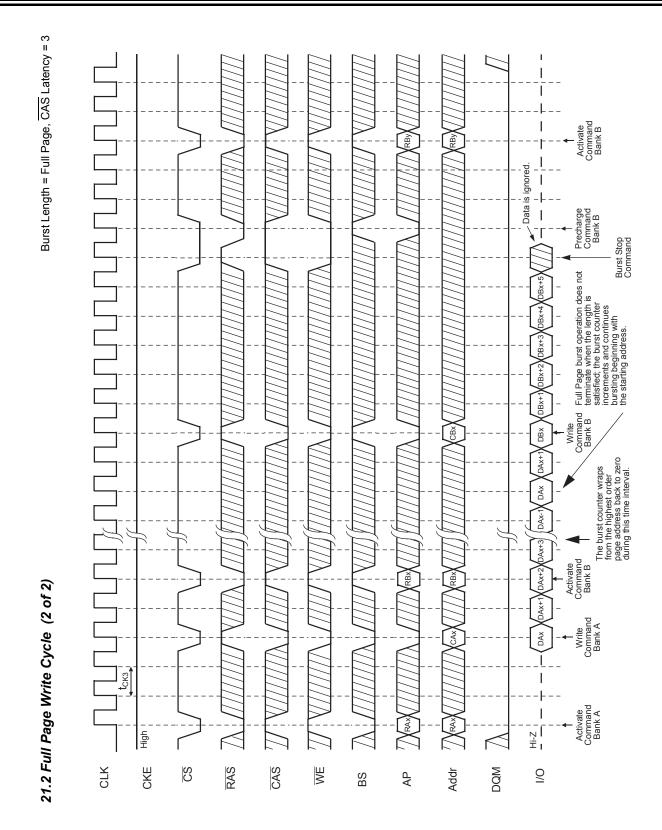



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Complete List of Operation Commands

SDRAM Function Truth Table

| CURRENT STATE ¹ | cs | RAS | CAS | WE | BS | Addr | ACTION |
|-----------------------------------|-----------------------|----------------------------|----------------------------|----------------------------|--------------------------------------|---|--|
| Idle | H L L L L | X H H L L | X H H L H | X H L X H L | X X BS BS BS BS X | X X X X RA AP X Code | NOP or Power Down NOP ILLEGAL ² ILLEGAL ² Row (&Bank) Active; Latch Row Address NOP ⁴ Auto-Refresh or Self-Refresh ⁵ Mode reg. Access ⁵ |
| Row Active | H L L L | X H H L L | X H L H H | X X H L H L | X X BS BS BS BS | X X CA,AP CA,AP X AP X | NOP NOP Begin Read; Latch CA; DetermineAP Begin Write; Latch CA; DetermineAP ILLEGAL ² Precharge ILLEGAL |
| Read | H L L L L | X H H H L L | X H H L H | X H L H L | X X BS BS BS BS BS | X X X CA,AP CA,AP X AP | NOP (Continue Burst to End;>Row Active) NOP (Continue Burst to End;>Row Active) Burst Stop Command > Row Active Term Burst, New Read, DetermineAP ³ Term Burst, Start Write, DetermineAP ³ ILLEGAL ² Term Burst, Precharge ILLEGAL |
| Write | H L L L L | X H H H L L | X H H L H H | X H L H L | X X BS BS BS BS BS | X X X CA,AP CA,AP X AP | NOP (Continue Burst to End;>Row Active) NOP (Continue Burst to End;>Row Active) Burst Stop Command > Row Active Term Burst, Start Read, DetermineAP ³ Term Burst, New Write, DetermineAP ³ ILLEGAL ² Term Burst, Precharge ³ ILLEGAL |
| Read with Auto Precharge | H L L L L | X H H H L L | X H H L H | X H L H L | X X BS BS X BS BS | X X X X X X AP | NOP (Continue Burst to End;> Precharge) NOP (Continue Burst to End;> Precharge) ILLEGAL ² ILLEGAL ILLEGAL ILLEGAL ILLEGAL ² ILLEGAL ILLEGAL |

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

SDRAM Function Truth Table (continued)

| CURRENT STATE ¹ | cs | RAS | CAS | WE | BS | Addr | ACTION | | |
|-------------------------------|--------|-----|-----|----|----|------|---|--|--|
| Write | Н | Х | Х | Х | Х | Х | NOP (Continue Burst to End;> Precharge) | | |
| with | L | Н | Н | Н | Х | Х | NOP (Continue Burst to End;> Precharge) | | |
| Auto | L | Н | Н | L | BS | Х | ILLEGAL ² | | |
| Precharge | L | Н | L | Н | BS | Х | ILLEGAL ² | | |
| | L | Н | L | L | Х | Х | ILLEGAL | | |
| | L | L | Н | Н | BS | Х | ILLEGAL ² | | |
| | L | L | Н | L | BS | AP | ILLEGAL ² | | |
| | L | L | L | Х | Х | Х | ILLEGAL | | |
| Precharging | Н | X | X | Х | Х | Х | NOP;> Idle after tRP | | |
| | L | Н | Н | Н | Х | Х | NOP;> Idle after tRP | | |
| | L | Н | Н | L | BS | Х | ILLEGAL ² | | |
| | L | Н | L | X | BS | Х | ILLEGAL ² | | |
| | L | L | Н | Н | BS | Х | ILLEGAL ² | | |
| | L | L | Н | L | BS | AP | NOP ⁴ | | |
| | L | L | L | Х | Х | Х | ILLEGAL | | |
| Row | Н | Х | X | X | Х | Х | NOP;> Row Active after tRCD | | |
| Activating | L | Н | Н | Н | Χ | Х | NOP;> Row Active after tRCD | | |
| | L | Н | Н | L | BS | Х | ILLEGAL ² | | |
| | L | Н | L | X | BS | Х | ILLEGAL ² | | |
| | L | L | Н | Н | BS | X | ILLEGAL ² | | |
| | L | L | Н | L | BS | AP | ILLEGAL ² | | |
| | L | L | L | Х | Х | Х | ILLEGAL | | |
| Write | Н | X | X | X | Х | Х | NOP | | |
| Recovering | L | Н | Н | Н | X | Х | NOP | | |
| | L | Н | Н | L | BS | X | ILLEGAL ² | | |
| | L | H | L | X | BS | X | ILLEGAL ² | | |
| | L | L | H | H | BS | X | ILLEGAL ² | | |
| | L | L | H | L | BS | AP | ILLEGAL ² | | |
| | L | L | L | Х | Х | Х | ILLEGAL | | |
| Refreshing | H | X | X | X | X | X | NOP;> Idle after tRC | | |
| | L | H | H | H | X | X | NOP;> Idle after tRC | | |
| | L | H | H | L | X | X | ILLEGAL | | |
| | L | H | L | X | X | X | ILLEGAL | | |
| | L L | L | H | X | X | X | ILLEGAL | | |
| | | L | L | | | | ILLEGAL | | |
| Mode | Н | Х | X | X | X | Х | NOP | | |
| Register | L | Н | Н | Н | X | X | NOP | | |
| | L | Н | Н | L | Х | Х | ILLEGAL | | |
| Accessing | L | H | L | X | X | X | ILLEGAL | | |
| | L | L | X | X | Х | Х | ILLEGAL | | |

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Clock Enable (CKE) Truth Table:

| STATE(n) | CKE n-1 | CKE n | cs | RAS | CAS | WE | Addr | ACTION | |
|---------------------------|------------|----------|----|-----|-----|----|------|-----------------------------------|--|
| Self-Refresh ⁶ | Н | Х | Х | Х | Х | Х | Х | INVALID | |
| | L | Н | Н | Х | Х | X | Х | EXIT Self-Refresh, Idle after tRC | |
| | L | Н | L | Н | Н | Н | Х | EXIT Self-Refresh, Idle after tRC | |
| | L | Н | L | Н | Н | L | Х | ILLEGAL | |
| | L | Н | L | Н | L | Χ | Х | ILLEGAL | |
| | L | Н | L | L | Х | X | Х | ILLEGAL | |
| | L | L | Х | Х | Х | X | Х | NOP (Maintain Self-Refresh) | |
| Power-Down | Н | Х | Х | Х | Х | Х | Х | INVALID | |
| | L | Н | Н | Х | X | X | Х | EXIT Power-Down, > Idle. | |
| | L | Н | L | Н | Н | Н | Х | EXIT Power-Down, > Idle. | |
| | L | Н | L | Н | Н | L | Х | ILLEGAL | |
| | L | Н | L | Н | L | X | Х | ILLEGAL | |
| | L | Н | L | L | Х | Х | Х | ILLEGAL | |
| | L | L | Х | Х | Х | X | Х | NOP (Maintain Low-Power Mode) | |
| All. Banks | Н | Н | Х | Х | Х | Х | Х | Refer to the function truth table | |
| Idle ⁷ | Н | L | Н | X | Х | Х | Х | Enter Power- Down | |
| | Н | L | L | Н | Н | Н | Х | Enter Power- Down | |
| | Н | L | L | Н | Н | L | Х | ILLEGAL | |
| | Н | L | L | Н | L | Х | Х | ILLEGAL | |
| | Н | L | L | L | Н | X | Х | ILLEGAL | |
| | Н | L | L | L | L | Н | Х | Enter Self-Refresh | |
| | Н | L | L | L | L | L | Х | ILLEGAL | |
| | L | L | Х | Х | Х | X | Х | NOP | |

Abbreviations:

Notes for SDRAM function truth table:

- 1. Current State is state of the bank determined by BS. All entries assume that CKE was active (HIGH) during the preceding clock cycle.
- 2. Illegal to bank in specified state; Function may be legal in the bank indicated by BS, depending on the state of that bank.
- 3. Must satisfy bus contention, bus turn around, and/or write recovery requirements.
- 4. NOP to bank precharging or in Idle state. May precharge bank(s) indicated by BS (andAP).
- 5. Illegal if any bank is not Idle.
- 6. CKE Low to High transition will re-enable CLK and other inputs asynchronously. A minimum setup time must be satisfied before any command other than EXIT.
- 7. Power-Down and Self-Refresh can be entered only from the All Banks Idle State.
- 8. Must be legal command as defined in the SDRAM function truth table.


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Package Diagram

54-Pin Plastic TSOP-II (400 mil)

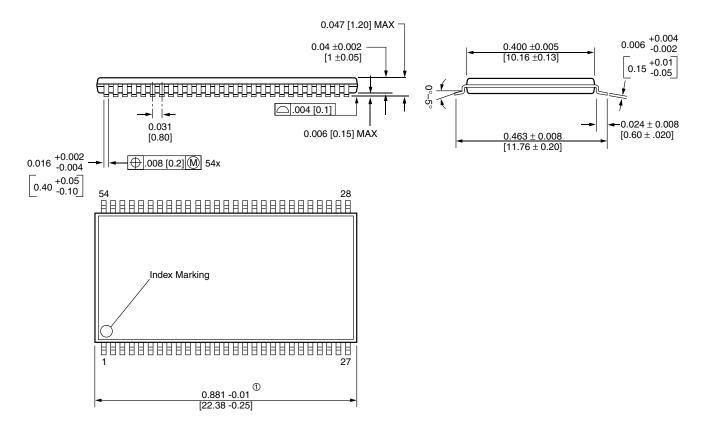

 $\textcircled{\scriptsize 1}$ Does not include plastic or metal protrusion of 0.15 max. per side

Unit in inches [mm]


Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

Package Diagram

54 Ball FBGA (x16)

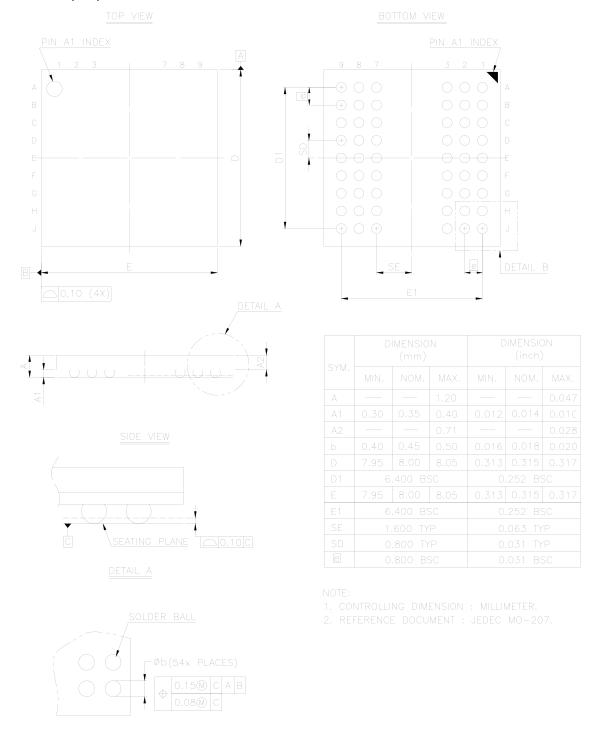

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211 Alliance Memory Inc. reserves the right to change products or specification without notice



512Mbit Single-Data-Rate (SDR) SDRAM 32Mx16(8M x 16 x 4 Banks)

PART NUMBERING SYSTEM

| AS4C | 32M16SA | 7 | T/B | C/I | N |
|------|---|----------|-------------------------|---|----------------------------------|
| DRAM | 32M16=32Mx16 SA=SDRAM (A version) | 7=143MHz | T = TSOP II B = FBGA | C=Commercial $(0^{\circ} \text{ C} \sim 70^{\circ} \text{ C})$ I=Industrial $(-40^{\circ} \text{ C} \sim 85^{\circ} \text{ C})$ | Indicates Pb and Halogen Free |



Alliance Memory, Inc. 511 Taylor Way, San Carlos, CA 94070 Tel: 650-610-6800 Fax: 650-620-9211

www.alliancememory.com

Copyright © Alliance Memory All Rights Reserved

© Copyright 2007 Alliance Memory, Inc. All rights reserved. Our three-point logo, our name and Intelliwatt are trademarks or registered trademarks of Alliance. All other brand and product names may be the trademarks of their respective companies. Alliance reserves the right to make changes to this document and its products at any time without notice. Alliance assumes no responsibility for any errors that may appear in this document. The data contained herein represents Alliance's best data and/or estimates at the time of issuance. Alliance reserves the right to change or correct this data at any time, without notice. If the product described herein is under development, significant changes to these specifications are possible. The information in this product data sheet is intended to be general descriptive information for potential customers and users, and is not intended to operate as, or provide, any guarantee or warrantee to any user or customer. Alliance does not assume any responsibility or liability arising out of the application or use of any product described herein, and disclaims any express or implied warranties related to the sale and/or use of Alliance products including liability or warranties related to fitness for a particular purpose, merchantability, or infringement of any intellectual property rights, except as express agreed to in Alliance's Terms and Conditions of Sale (which are available from Alliance). All sales of Alliance products are made exclusively according to Alliance's Terms and Conditions of Sale. The purchase of products from Alliance does not convey a license under any patent rights, copyrights; mask works rights, trademarks, or any other intellectual property rights of Alliance or third parties. Alliance does not authorize its products for use as critical components in life-supporting systems where a malfunction or failure may reasonably be expected to result in significant injury to the user, and the inclusion of Alliance products in such life-supporting systems implies that the manufacturer assumes all risk of such use and agrees to indemnify Alliance against all claims arising from such use.

Alliance Memory Inc. 511 Taylor Way, San Carlos, CA 94070 TEL: (650) 610-6800 FAX: (650) 620-9211

Alliance Memory Inc. reserves the right to change products or specification without notice