CSM\_H2C\_DS\_E\_2\_2

# DIN-sized 48 x 48 Motor Timer with Simple Operation for Switching Time Specifications

- Three Motor Timers cover the wide time range of 6 s to 30 h with easy operation from the operation panel.
- Five time specifications for each model with linked time display.
- DIN-standard size of 48 x 48 mm.
- Easily check operation with neon lamp.
- Models with sockets and models with top wiring are also available.
- Certified for UL and CSA safety standards.
- Conforms to EN 61812-1 (except models that end with "-F") and CE Marking.





# **Model Number Structure**

# **■** Model Number Legend



1. External Connection/Attachment

None: 11-pin socket 8: 8-pin socket F: Front screw

#### 2. Operation/Resetting System

None: Time-limit operation/self-resetting
R: Time-limit operation/electric resetting

3. Attachment

S: Time setting ring

# **Ordering Information**

### **■** List of Models

Operation/resetting system	Internal connection	Terminal	Time-limit contact	Instantaneous contact	Attachment	Model
Time-limit operation/ self-resetting	Parallel motor and clutch connection	8-pin socket	SPDT	SPDT		H2C-8
	and clutch connection	11-pin socket				H2C
					Y92A-Y1 Time Setting Ring	H2C-S
		Front screw				H2C-F
Time-limit operation/ electric resetting		8-pin socket	SPDT			H2C-8R
		11-pin socket		SPDT		H2C-R
					Y92A-Y1 Time Setting Ring	H2C-R-S
		Front screw				H2C-FR

Note: Specify both the supply voltage and time range code (A, B, or C) in addition to the model number when ordering.

Example: H2C-S 24 VAC B

Time range code

Supply voltage

# ■ Accessories (Order Separately)

Name/s	specifications	Models		
Flush Mounting Adapter		Y92F-30		
Time Setting Ring (See note 1.)		Y92A-Y1		
Mounting Track	50 cm (I) × 7.3 mm (t)	PFP-50N		
	1 m (l) $\times$ 7.3 mm (t)	PFP-100N		
	1 m (l) $\times$ 16 mm (t)	PFP-100N2		
End Plate		PFP-M		
Spacer		PFP-S		
Protective Cover		Y92A-48B		
Track Mounting/Front Connecting	8-pin	P2CF-08		
Socket	8-pin, finger safe type	P2CF-08-E		
	11-pin	P2CF-11		
	11-pin, finger safe type	P2CF-11-E		
Back Connecting Socket	8-pin, screw terminal	P3G-08		
	8-pin, finger safe type	P3G-08 with Y92A-48G (See note 2.)		
	11-pin	P3GA-11		
	11-pin, finger safe type	P3GA-11 with Y92A-48G (See note 2.)		
Hold-down Clip (See note 3.)	For PL08 and PL11 Sockets	Y92H-1		
	For PF085A Socket	Y92H-2		

Note: 1. Supplied with H2C-S/-R-S models.

- 2. Y92A-48G is a finger safe terminal cover which is attached to the P3G-08 or P3GA-11 Socket.
- 3. Hold-down Clips are sold in sets of two.

# **Specifications**

# **■** Time Ranges

Five time ranges are available for each timer by turning the time range selector every 60 degrees.

Note: Rated time is displayed on the window.

Time range code	Position of time range selector				
	(Q)				
Α	1.25 to 30 s	7.5 s to 3 min	1.25 to 30 min	7.5 min to 3 h	1.25 to 30 h
В	0.2 to 6 s	2 to 60 s	0.2 to 6 min	2 to 60 min	0.2 to 6 h
С	0.5 to 12 s	5 to 120 s	0.5 to 12 min	5 to 120 min	0.5 to 12 h

# **■** Ratings

Item	H2C
Rated supply voltage (motor and clutch)	24, 48, 100, 110, 115, 120, 200, 220, or 240 VAC (50/60 Hz) (see note)
Operating voltage range	85% to 110% of rated supply voltage
Power consumption	4.2 VA max. (3.96 W max.)
Reset voltage	10% max. of rated supply voltage
Reset time	Minimum power-opening time: 0.5 s Minimum pulse width: 0.5 s
Control outputs	6 A at 250 VAC, resistive load (cosφ = 1)
Mounting method	Flush mounting (except for H2C-F/-FR models), surface mounting, DIN track mounting

**Note:** The front panel of the timer is color coded to identify the following supply voltage classifications:

100 to 120 V: Blue 200 to 240 V: Red Other classes: Black

# **■** Characteristics


Accuracy of operating time	±0.5% FS max. <±1% max. at 0.2 to 6 s for the time range code B or at 0.5 to 12 s for the time range
	code C)
Setting error	±2% FS max.
Reset time	0.5 s max.
Influence of voltage	±1% FS max.
Influence of temperature	±2% FS max.
Insulation resistance	100 MΩ min. (at 500 VDC)
Dielectric strength	2,500 VAC, 50/60 Hz for 1 min (between current-carrying and non-current-carrying parts) 2,000 VAC, 50/60 Hz for 1 min (between contact and control circuit and between contacts of different polarities) 1,000 VAC, 50/60 Hz for 1 min (between non-continuous contacts)
Vibration resistance	Destruction: 10 to 55 Hz with 0.375-mm single amplitude for 1 h each in three directions Malfunction: 10 to 55 Hz with 0.25-mm single amplitude for 10 min each in three directions
Shock resistance	Destruction: 1,000 m/s <sup>2</sup> Malfunction: 150 m/s <sup>2</sup>
Ambient temperature	Operating: -10°C to 50°C Storage: -25°C to 65°C
Ambient humidity	Operating: 45% to 85%
Life expectancy	Mechanical: 10,000,000 operations min. (under no load at 1,800 operations/h)  Electrical: 200,000 operations min. (3 A at 250 VAC, resistive load at 1,800 operations/h)  See <i>Life-test Curve</i> for other details.
Motor life expectancy	20,000 h
Approved standards	UL917, CSA C22.2 No.14. Conforms to EN61812-1 and IEC60664-1 4 kV/1 (except for H2C-F□ models). Output category according to EN60947-5-1 (except for H2C-F□ models).
EMC (except for H2C-F□ models)	(EMI) EN61812-1 Emission Enclosure: EN55011 Group 1 class A Emission AC Mains: EN55011 Group 1 class A (EMS) EN61812-1 Immunity ESD: IEC61000-4-2: 6 kV contact discharge (level 3) 8 kV air discharge (level 3) Immunity RF-interference from AM Radio Waves: IEC61000-4-3: 10 V/m (80 MHz to 1 GHz) (level 3) Immunity Burst: IEC61000-4-4: 2 kV power-line (level 3) 2 kV I/O signal-line (level 4) Immunity Surge: IEC61000-4-5: 1 kV line to line (level 3) 2 kV line to ground (level 3)
Case color	Light gray (Munsell 5Y7/1)
Degree of protection	IP40 (panel surface)
Weight	H2C series: approx. 180 g H2C-F series: approx. 270 g

# **Connections**


# **■** Terminal Arrangement


Note: The connections diagrams are for when the clutch is in the excited, reset state.

### H2C-8

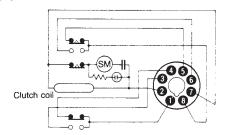


### H2C(-F)/H2C-S

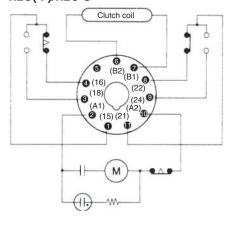





#### H2C-8R




### H2C-(F)R/H2C-R-S

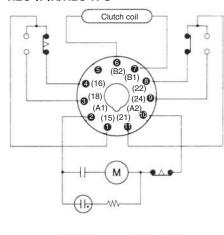




# **Operation**

# **■** Timing Chart

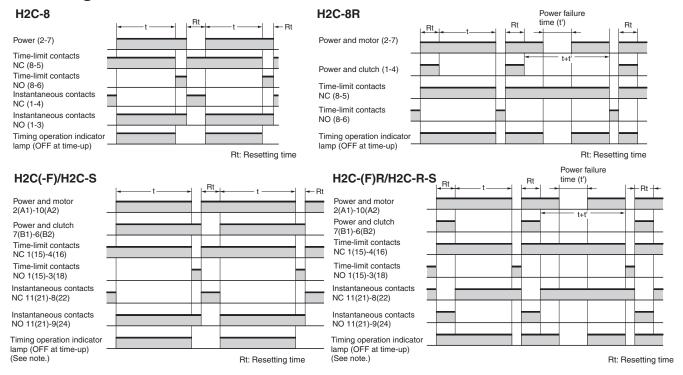

Note: For the types rated at 24 and 48 VAC, the timing operation indicator is not equipped.

# **Nomenclature**

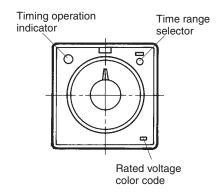



# **Dimensions**

Note: All units are in millimeters unless otherwise indicated.


#### H2C/H2C-S/H2C-R/H2C-R-S/H2C-8/H2C-8R





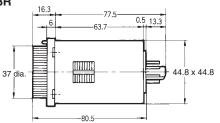


#### For Flush Mounting




For a load current of 3 A max., dimension L becomes 3 mm min. with an interval of 0 mm between timers. For a load current of 6 A max., dimension L becomes 8 mm min. with an interval of 5 mm between timers. When using in locations with high ambient temperatures, ensure that there is an interval of at least 5 mm between timers.

#### H2C-F/H2C-FR



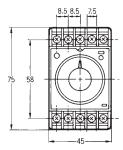


# 91 101.5 For a

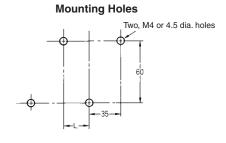


For a load current of 1 A max., dimension L becomes 10 mm min. with an interval of 0 mm between timers. For a load current of 3 A max., dimension L becomes 15 mm min. with an interval of 5 mm between timers. For a load current of 6 A max., dimension L becomes 20 mm min. with an interval of 10 mm between timers.


# Dimensions with Front Connecting Socket P2CF-08- $\square$ /P2CF-11- $\square$








# Dimensions with Back Connecting Socket P3G-08/P3GA-11

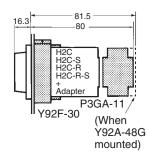

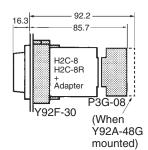


6

<sup>\*</sup>These dimensions vary with the kind of DIN track (reference value).

# ■ Accessories (Order Separately)


# **Adapter for Flush Mounting**

Y92F-30

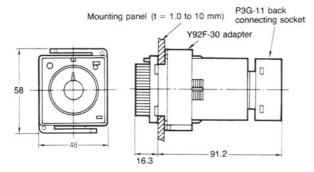


# **Track Mounting/Front Connecting Socket**


P2CF-08

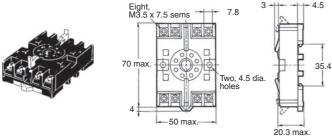

P2CF-08-E (Finger Safe Terminal Type) Conforming to VDE0106/P100

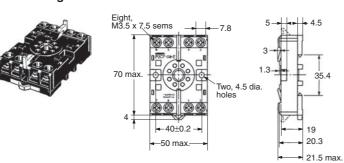

Terminal Arrangement/ Internal Connections (Top View)




#### **Surface Mounting Holes**

# **Track Mounting/Front Connecting Socket**

P2CF-11



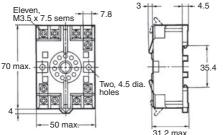


Two, 4.5 dia. holes

P2CF-11-E (Finger Safe Terminal Type) Conforming to VDE0106/P100

Eleven, M3.5 x 7,5 sems


70 max

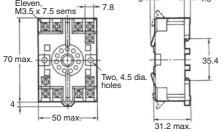

**Terminal Arrangement/ Internal Connections** (Top View)



#### **Surface Mounting Holes**



# **Back Connecting Socket**

P3G-08





40±0.2 --50 max.



31.2 max.


**Terminal Arrangement/ Internal Connections** (Bottom View)



P3GA-11







Terminal Arrangement/ **Internal Connections** (Bottom View)





# **Finger Safe Terminal Cover**

Conforming to VDE0106/P100

Y92A-48G (Attachment for P3G-08/ P3GA-11 Socket)









## **Mounting Track**

#### PFP-100N, PFP-50N

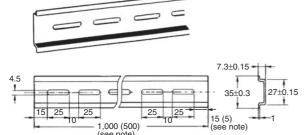

Note: The value shown in parentheses are for the

### PFP-100N2

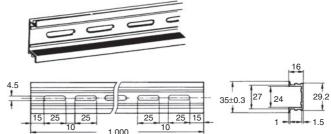

**End Plate** 

### <u>Spacer</u> PFP-M PFP-S 12 6.2 34.8 1.8 10 M4 x 8 pan head screw 4.8

### **Time Setting Ring** Y92A-Y1

The time setting ring locks the time setting knob to store the set time to facilitate its resetting. A maximum of two time setting rings are connectable per timer.

### **Protective Cover**


#### Y92A-48B

The protective cover shields the front panel, particularly the time setting section, from dust, dirt, and water, as well as prevents the set value from being altered due to accidental contact with the time setting knob.





# **Timer Hold-down Clips**

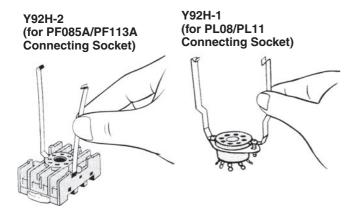

# **Safety Precautions**

Refer to Safety Precautions for All Timers.

#### /!\ CAUTION

This may occasionally cause electric shock, fire, or malfunction. Never disassemble, repair, or modify the H2C.

This may occasionally cause electric shock, fire, or malfunction. Do not allow metal fragments or lead wire scraps to fall inside the

### ■ Precautions for Safe Use


Observe the following items to ensure the safe use of this product.

### **Environmental Precautions**

- Store the H2C within the specified ratings. If the H2C has been stored at temperatures –10°C or lower, let it stand for 3 hours or longer at room temperature before turning ON the power supply.
- Use the H2C within the specified ratings for operating temperature and humidity.
- Do not operate the H2C in locations subject to sudden or extreme changes in temperature, or locations where high humidity may result in condensation.
- Do not use the H2C in locations subject to vibrations or shock.
   Extended use in such locations may result in damage due to stress.
- Do not use the H2C in locations subject to excessive dust, corrosive gas, or direct sunlight.
- Install the H2C well away from any sources of static electricity, such as pipes transporting molding materials, powders, or liquids.
- The H2C is not waterproof or oil resistant.
   Do not use it in locations subject to water or oil.
- The life expectancy of internal components may be reduced if the H2C is mounted side-by-side.
- Do not use organic solvents (such as paint thinner or benzine), strong alkaline, or strong acids because they will damage the external finish.

### <u>Usage Precautions</u>


- Install a switch or circuit breaker that allows the operator to immediately turn OFF the power, and label it to clearly indicate its function.
- Be sure to wire the terminals correctly.
- Do not install input lines in the same duct or conduit as power supply or other high-voltage lines. Doing so may result in malfunction due to noise. Separate the input lines from highvoltage lines.
- Internal elements may be destroyed if a voltage outside the rated voltage is applied.
- Maintain voltage fluctuations in the power supply within the specified range.
- Use a switch, relay, or other contact so that the rated power supply voltage will be reached within 0.1 s. If the power supply voltage is not reached quickly enough, the H2C may malfunction or outputs may be unstable.
- Leaving the H2C with outputs ON at a high temperature for a long time may hasten the degradation of internal parts (such as electrolytic capacitors). Therefore, use the H2C in combination with relays and avoid leaving the H2C for more than 1 month with an output turned ON.



### ■ Precautions for Correct Use

### **How to Change the Time Range**


Change the time range by turning the knob clockwise using a flatblade screwdriver or an Allen wrench. There are five possible settings. The selected time is displayed in the time range display window above the knob.

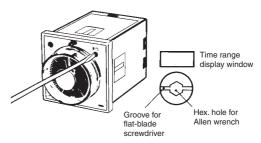

Do not change the time range while the timer is in operation.

### **How to Select Power Frequency**

Before using the timer, set the frequency selector located at the rear panel to the proper power frequency (50 to 60 Hz).

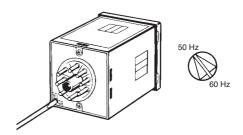


# How to Mount the Timer on Mounting Track

#### Mounting

First hook portion A of the timer to the mounting track, then press the timer in direction B.

#### Dismounting

Pull out portion C with a round-blade screwdriver and remove the timer from the mounting track.

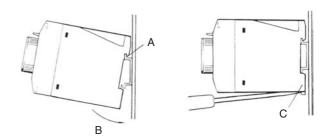

#### **Electrical Set**

The motor and clutch do not need to be reset simultaneously.

Use the voltage applied to the clutch for resetting with the  $H2C-\Box R$ . Do not allow power to be continuously applied to the motor and clutch for extended periods of time.

### **Others**

Do not turn the operation time setting knob beyond the range of the scale. To achieve higher accuracy in setting, measure the operation time while turning the operation time setting knob.

The deviation and setting error for the operation time shows the percent of FS. The absolute value of the deviation and setting error will not change even if the set time is changed. The time specifications should therefore be selected to use the operation time as close to FS as possible.

At high temperatures, the operation voltage will be 90% or less if voltage is applied continuously after timeout. Be sure to keep the voltage within the allowable voltage fluctuation range.

#### **Precautions for EN61812-1**

The H2C (except for H2C-F $\square$ ) as a built-in timer conforms to EN61812-1, provided that the following conditions are satisfied.

#### Handling

Before dismounting the H2C from the Socket, make sure that no voltage is imposed on any terminal of the H2C.

Applicable Sockets: P2CF-□□, P2CF-□□-E, PF085A, PL□□.

#### Wiring

Basic insulation is ensured between the motor circuit, clutch circuit, and control output circuit. (However, the H2C-8 motor circuit and clutch circuit use the same input.) Basic insulation is also ensured between the output circuits of models with instantaneous output.

Basic insulation: Overvoltage category III, pollution degree 1 (See note.)

Operating parts: Reinforced insulation (double insulation) (with a clearance of 5.5 mm and a creepage distance of 5.5 mm at 240 VAC)

Output parts: Basic insulation

(with a clearance of 3.0 mm and a creepage distance of 3.0 mm at 240 VAC)

Note: Overvoltage category II, pollution degree 1 if the Timer is mounted to the PL11 Socket.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.

#### Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

#### Warranty and Limitations of Liability

#### WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

#### **Application Considerations**

#### **SUITABILITY FOR USE**

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

#### **Disclaimers**

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

#### **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2009.9

In the interest of product improvement, specifications are subject to change without notice.



# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Omron: Y92H-2