

PE7/PE8 Series

Combination



Specifications:

Rated Voltage: 250VAC Maximum - 50/60 Hz

Rated Current: 115VAC 250VAC
3A 3A
6A 6A

Current Overload: 6X for 8 Seconds

Hi-Pot Test (1 min):

Line to Ground 1500VAC
Line to Line 1768VDC

Insulation Resistance: $9 \times 10^9 \Omega$ at 100VDC

Ambient Temperature: 40°C Max. at Rated Current

Humidity Range: 0% to 95% R.H.

Termination:

- IEC Receptacle
- Wire Wrap/Solder

Maximum Leakage Current:

Each Line to Ground **PE7, PE 8**
115VAC, 60Hz: 0.25mA
250VAC, 50Hz: 0.40mA

Voltage Select Card: Installed in 120VAC position unless otherwise specified

Agency Approvals:




Refer to Page 55 for Ordering Instructions

Features:

- RFI Filter Module Combines IEC Connector, Fusing, and Voltage Select Features in One Unit
- PE7 Series Filters Provide 20% More Differential Mode Attenuation Than Comparable Units
- Accepts Either U.S. or European Standard Fuse Sizes


PE7 Series Simplified Schematic

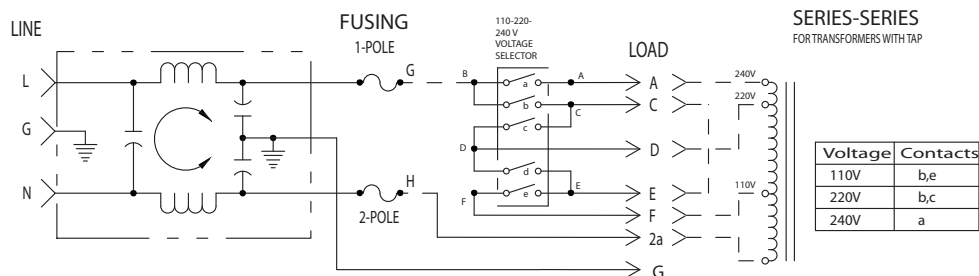


Nominal Current Rating	Part Number	Termination Line/Load	MINIMUM INSERTION LOSS - dB (50 ohm Circuit)						
			MODE	Frequency - MHz					
				.15	.50	1.0	5.0	10	30
3A	PE7XXX03	IEC/Solder Tabs	Common	18	24	30	45	45	50
	PE8XXX03		Differential	8	18	24	46	50	40
6A	PE7XXX06	IEC/Solder Tabs	Common	10	19	24	39	44	50
	PE8XXX06		Differential	8	18	24	39	40	40



PE7 Series Simplified Schematic

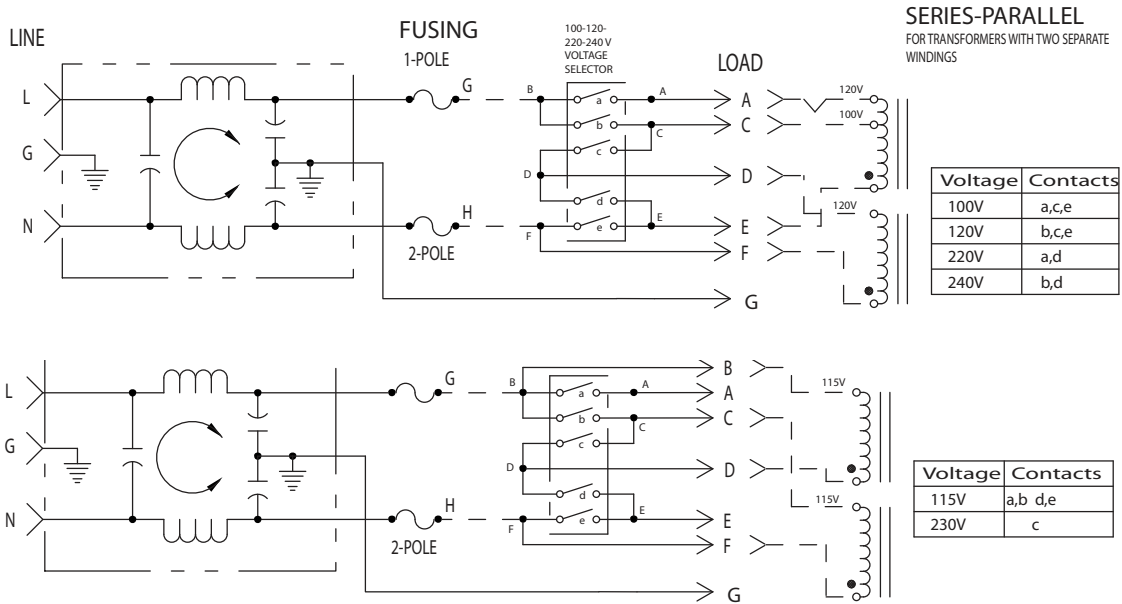

PE8 Series Simplified Schematic

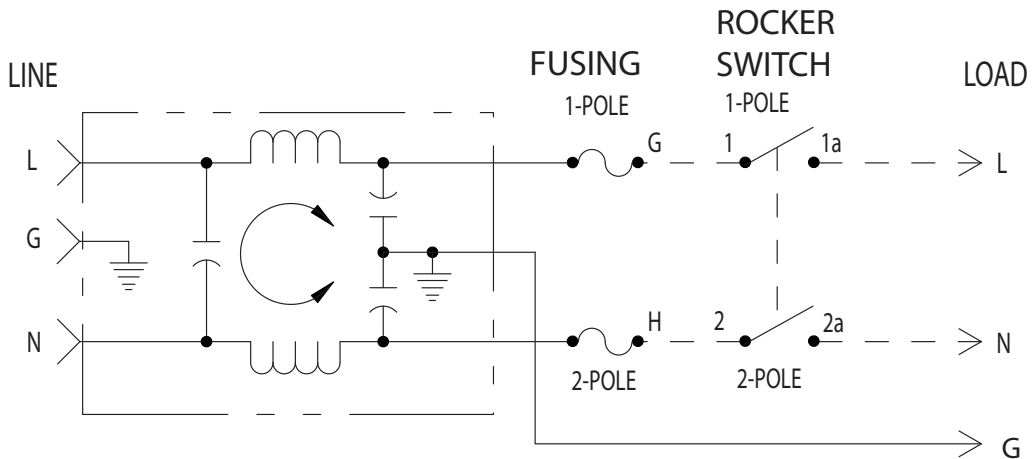


PE7/PE8 Series *(continued)*

PE7/PE8

Snap-Mount Series

(3 and 6Amp) Dimensions

Refer to Page 55
for Standard
Mounting Cutouts

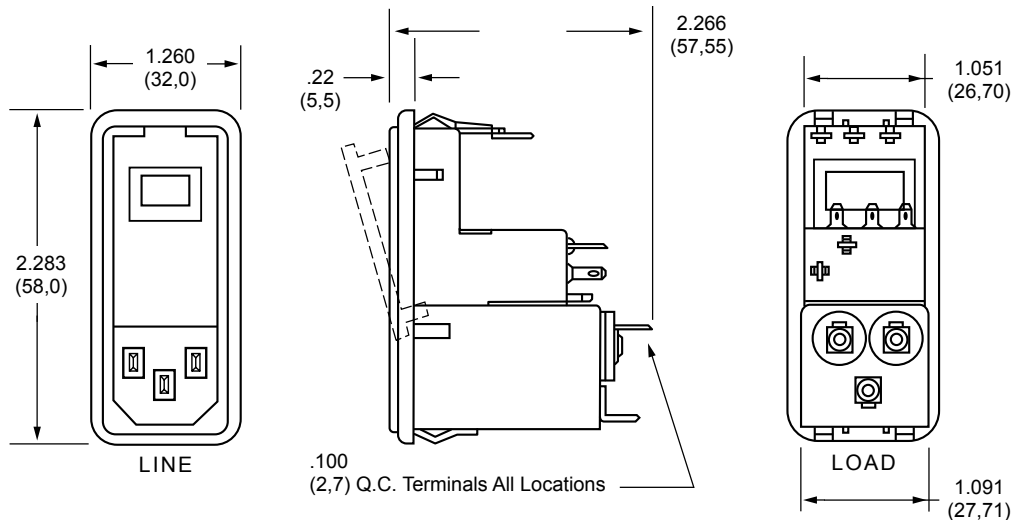


PE7/PE8


Screw-Mount Series

(3 and 6Amp) Dimensions

Refer to Page 55
for Standard
Mounting Cutouts

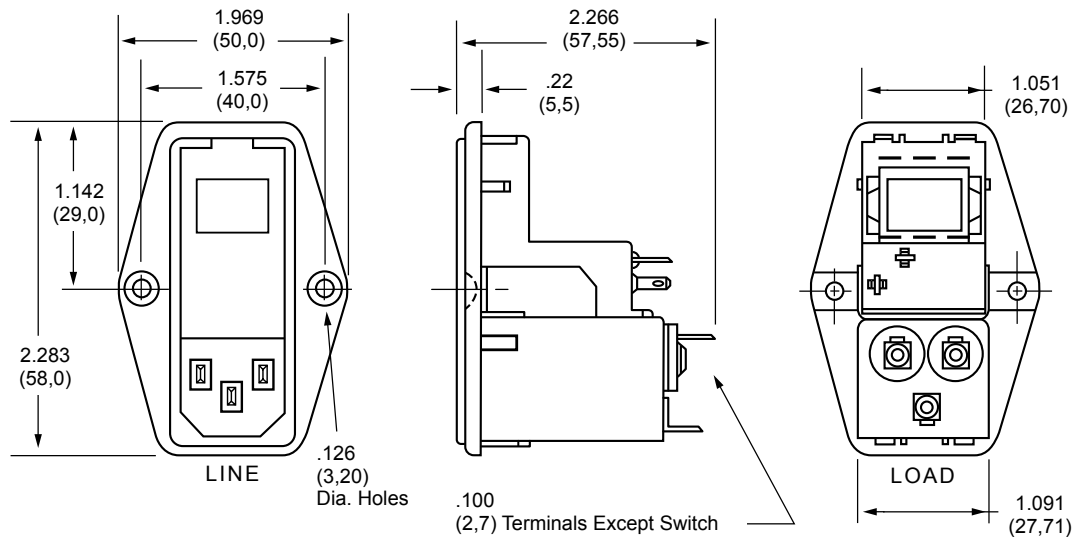

How to Order

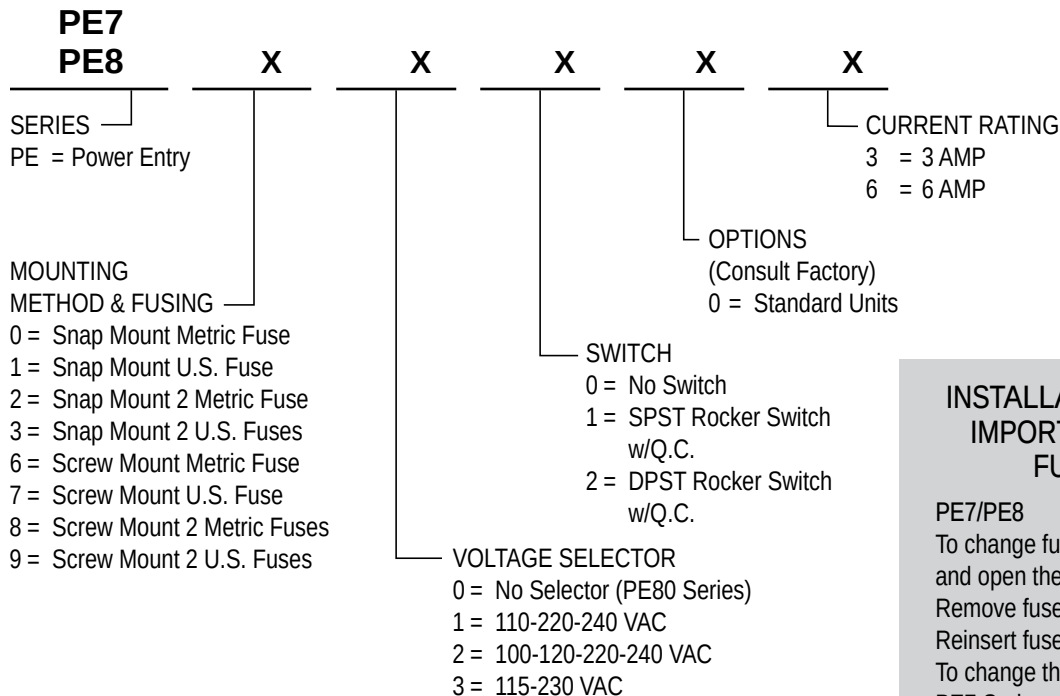

INSTALLATION INSTRUCTION IMPORTANT – CHANGING FUSE/VOLTAGE


PE7/PE8

To change fuse, remove power cord and open the front cover on the module. Remove fuse holder and replace fuse. Reinsert fuse holder and close cover. To change the operating voltage on the PE7 Series, remove the power cord and open front cover. Rotate voltage select wheel until desired voltage appears in window of cover.

- Filter shipped without fuse.

Always use caution when selecting and changing fuses and voltage requirements. Curtis Industries is not responsible for malfunction due to improper installation/selection of fuse and/or voltage select.

PE7/PE8 Snap-Mount Series

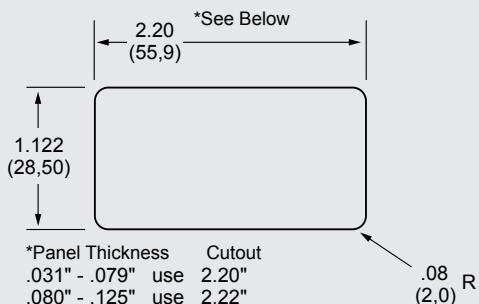

PE7/PE8 Screw Mount Series

