



*Digi Connect EM™ &
Digi Connect Wi-EM™
Hardware Reference*



Making
DEVICE NETWORKING
easy™

© Digi International Inc. 2006. All Rights Reserved.

The Digi logo is a registered trademark of Digi International, Inc.

Connectware and Digi Connect EM and Digi Connect Wi-EM are trademarks of Digi International, Inc.

NetSilicon, NET+Works, NET+OS, and NET+ are trademarks of NetSilicon, Inc.

All other trademarks mentioned in this document are the property of their respective owners.

Information in this document is subject to change without notice and does not represent a commitment on the part of Digi International.

Digi provides this document "as is," without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Digi may make improvements and/or changes in this manual or in the product(s) and/or the program(s) described in this manual at any time.

This product could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes may be incorporated in new editions of the publication.

Contents

About This Guide	7
Scope of Reference Manual	7
Kits Contents	7
Related Documentation	9
Support Information	9
 Chapter 1: About the Embedded Module.....	11
Overview	11
Types of Modules	12
Connectors: Power and Serial Interface	15
Connectors: Ethernet Interface	16
Connectors: Antenna	17
Reset Switch	18
Module LEDs	18
 Chapter 2: About the Development Board	23
Overview	23
Basic Description	23
Ports	25
Connectors and Blocks	27
Power Jack (P17)	31
Switches	32
Development Board LEDs	34
Test Points	36
 Chapter 3: Programming Considerations.....	39
GPIO	39

Embedded Module LEDs	43
Embedded Module Reset	44
Flash	45
Appendix A: Specifications	47
Network Interfaces	47
Serial Interface	48
Data Rates (bps)	48
Flow Control Options.....	48
Environmental	48
DC Characteristics	48
Mechanical	50
Layouts and Dimensions.....	51
Recommended PCB Layouts	63
Antenna Information	68
RF Exposure Statement.....	74
Safety Statements	74
Appendix B: Certifications	77
FCC Part 15 Class B	77
Industry Canada	78
Declaration of Conformity	79
International EMC Standards.....	80
Appendix C: Sample Application: TTL Signals to EIA-232.....	81
Revision G.....	83
Revision F	83
Revision E	83

About This Guide

Scope of Reference Manual

The scope of this guide is to enable developers to integrate the Digi Connect EM or Digi Connect Wi-EM modules into other devices. Graphics illustrate the placement and dimensions of components for both the modules and the development board. Information for both the Digi Connect EM and the Digi Connect Wi-EM are identical unless called out specifically in the manual.

Kits Contents

This manual is intended for customers who use either the Digi Connect EM/Digi Connect Wi-EM Integration Kit or the Digi Connect EM/Digi Connect Wi-EM Development Kit, which are described below.

About the Integration Kit

The integration kit is the ideal platform for product evaluation, rapid prototyping, and integration of the Digi Connect EM or Digi Connect Wi-EM embedded device server. Targeted specifically at customers who want to take advantage of the Digi Connect EM or Digi Connect Wi-EM embedded device server with Digi plug-and-play firmware functionality, both products enable integration of the Digi Connect EM or Digi Connect Wi-EM embedded module without any extensive embedded software development with all the additional flexibility and benefits of web user interface customization and application specific java applets. Included in the Digi Connect EM or Digi Connect Wi-EM Integration Kits are the following:

- Complete development board with EIA-232 serial ports, signal status indicators, logic analyzer connectors, test points, and a self-contained GPIO test bed.
- Cables
 - DB-9 to DB-9 Crossover cable
 - DB-9 to DB-9 Modem cable
 - RJ-45 Ethernet Crossover cable
- Loopback plug
- Power supply
- Wrist strap (for grounding)
- Digi Connect CD
 - sample code
 - tools and utilities with source code and libraries
 - Microsoft Windows RealPort drivers
- Full software and hardware documentation

About the Development Kit

The Digi Connect EM or Digi Connect Wi-EM Development Kit is an easy-to-use and royalty-free development platform that significantly reduces traditional design risk and accelerates the overall software development process. Both kits deliver the integrated building blocks to quickly and cost effectively create your own custom firmware for a Digi Connect EM or Digi Connect Wi-EM based high-performance networking solution that fits the specific requirements of your application.

Based on the NET+Works family of platform solutions, the Digi Connect EM or Digi Connect Wi-EM development kits enable you to integrate custom network connectivity into your products quickly by providing a full suite of development tools including:

- Development board
- Cables
- Power supply

- Hardware debugger
- Complete set of networking protocols and applications software

Related Documentation

See the *NS 7520 Hardware Reference* for information on the NS 7520 chip.

Support Information

To get help with a question or technical problem or make comments and recommendations about Digi products and documentation, use the following contact information.

General

Digi International
11001 Bren Road East
Minnetonka, MN 55343
U.S.A.

Customer Service and Support

United States: 1 877-912-3444
Other Locations: 1 952-912-3444
www.digi.com/support
www.digi.com

About the Embedded Module

C H A P T E R 1

Overview

Digi Connect EM and Digi Connect Wi-EM Overview

The embedded modules are part of the Digi Connect family of device servers that provide simple, reliable and cost-effective network connections for serial devices. They provide fully transparent serial device connectivity over industry-standard Ethernet connections and allow both equipment manufacturers and systems integrators to network-enable products at a fraction of the time and cost required to develop a custom solution. It is a highly flexible and compact single component solution with a robust on-board TCP/IP stack and 10/100 Base-T Ethernet or wireless support. Features include the following:

- 32-bit NS7520 processor with ARM7TDMI core
- 4MB Flash and 8MB RAM on board
- 2 High Speed Serial Ports
- SPI Master Mode Interface
- 9 General Purpose Input/Output Port Options
- Available with Digi plug-and-play firmware
- NetSilicon NET+Works platform for embedded software development

From medical systems to building control and industrial automation, in virtually any application where embedded serial connectivity over Ethernet is needed, the embedded module is the ideal choice, delivering high-performance functionality.

Cautions

To guard against damage to the module due to electrostatic discharge (ESD), do not remove it from its protective packaging until you have been properly grounded. To ground yourself, put the wrist strap on (included in the package) and then attach the clip to a metal surface.

- Input voltage for the module is 3.3 VDC.

Types of Modules




The following describes the three types of Digi Connect EM and three types of Digi Connect Wi-EM modules:


Choosing a Module for Your Product



Although any of the embedded modules can be designed into your product, a JTAG header would typically be used only for debugging during the development process. The Digi Connect EM module part number DC-EM-02T-S or DC-EM-02T-C is appropriate when its integrated LEDs and RJ-45 Ethernet connectors are accessible and visible to the end-users of your product. The Digi Connect EM module part number DC-EM-02T-NC or DC-EM-02T-JT is the right choice when you want more control over RJ-45 Ethernet connector and LED locations or when you will provide custom connectors or indicators.

The Digi Connect Wi-EM module part number DC-WEM-02T-C or DC-WEM-02T-S is appropriate when its integrated LEDs are accessible and visible to the end-users of your product. The Digi Connect Wi-EM module part number DC-WEM-02T-JT or DC-WEM-02T-NC is the right choice when you want more control over LED locations or when you will provide custom connectors or indicators.

Please refer to the Digi website www.digi.com for part number and ordering information for the modules

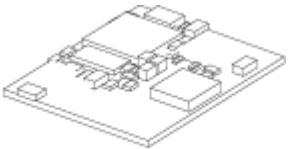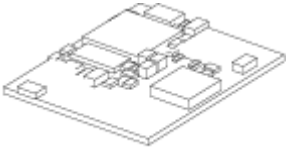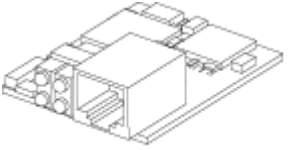Digi Connect EM Modules		
Model	Description	Figure
DC-EM-02T-JT	--- Used for development purposes only --- JTAG interface --- Pin headers for Ethernet and LED functionality.	
DC-EM-02T-NC	--- No JTAG interface --- Pin headers for Ethernet and LED functionality --- Ordered independently of development kit for use in your implementation	
DC-EM-02T-S DC-EM-02T-C	--- No JTAG interface --- RJ-45 Ethernet connector and LED array --- Ordered independently of either the development or integration kit for use in your implementation.	

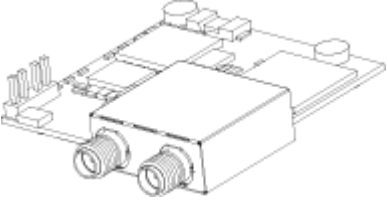Digi Connect Wi-EM Modules		
Model	Description	Figure
DC-WEM-02T-JT	--- Used for development purposes only --- JTAG interface --- Pin headers LED functionality --- Dual RP-SMA Antenna Connector.	

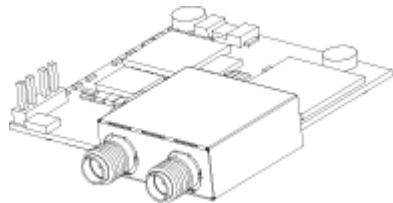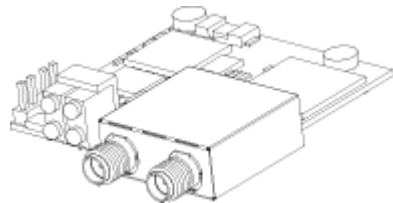Digi Connect Wi-EM Modules		
Model	Description	Figure
DC-WEM-02T-NC	<ul style="list-style-type: none"> --- No JTAG interface --- Pin headers LED functionality --- Dual RP-SMA Antenna Connector --- Ordered independently of development kit for use in your implementation 	
DC-WEM-02T-C DC-WEM-02T-S	<ul style="list-style-type: none"> --- No JTAG interface --- LED array --- Dual RP-SMA Antenna Connector --- Ordered independently of either development or integration kit for use in your implementation. 	

Note -S: No JTAG, w/ LED array, w/RJ-45/antenna connectors, for use with Digi Firmware
 -C: No JTAG, w/LED array, RJ-45 / antenna connectors, for use with Custom Firmware
 -NC: No JTAG, w/LED pin header, w/o RJ-45 connector (for Digi Connect EM), w/antenna connectors (for Digi Connect Wi-EM), for use with custom firmware (not shown)
 -JT: w/ JTAG, w/pin header, w/o RJ-45 connector (for Digi Connect EM), w/ antenna connectors (for Digi Connect Wi-EM), for use with custom firmware development

Digi Connect Wi-EM Antennae

The Digi Connect Wi-EM is available with dual-diversity antenna connectors. The right antenna (P2) is always used for transmit and receive. The left antenna is receive only. The antenna will choose the best signal (pin vs. socket). The Digi Connect Wi-EM always has two antenna connectors but using the second antenna is optional.

The antennae are connected to the module with reverse polarity SMA connectors (sub-miniature size A). The antennae fit the connectors on the module only one way to ensure a


proper connection. The antennae function best when placed perpendicular to each other (one straight, the other up or down) to prevent interference from each other.

Another option for both signal reception and design flexibility is to use an antenna extension cord (Digi part number DC-ANT-E-24DP) to separate the antenna from the module. This allows the module to fit inside your product but the antenna to be placed outside the device.

Connectors: Power and Serial Interface

This single 12-pin, serial interface port (labeled P4 for Digi Connect EM and P5 for Digi Connect Wi-EM) supports 2 TTL serial interfaces, data rates up to 230 Kbps and full-modem control (on port 1). See the figure for help locating pins and the table for pin assignments.

Power and Serial Interface

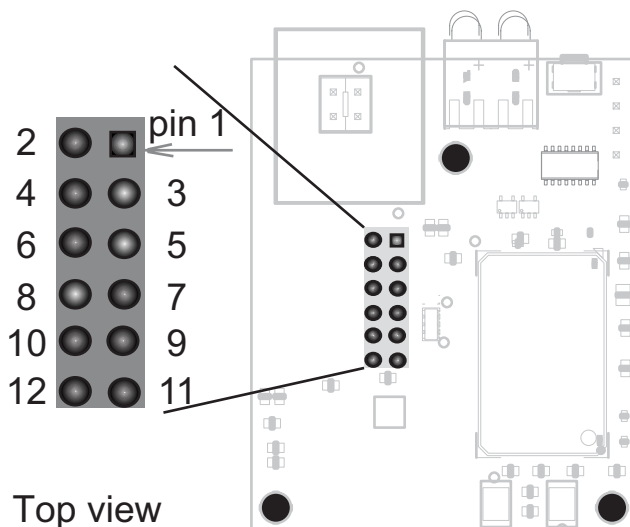

Power and Serial Interface Pin Assignments		
Pin	Signal Name	Description and Notes
1	VCC	+3.3 VDC (input only)
2	GND	Reference Ground for input power
3	RXD/GPIO-7	Port 1 RXD (input)/GPIO-7
4	TXD/GPIO-6	Port 1 TXD (output)/GPIO-6
5	RTS/GPIO-4/SPI_CLK	Port 1 RTS/GPIO-4/SPI clock
6	DTR/GPIO-5	Port 1 DTR (output)/GPIO-5
7	CTS/GPIO-2	Port 1 CTS (input)/GPIO-2
8	DCD/GPIO-1/SPI_EN	Port 1 DCD (input)/GPIO-1/SPI enable
9	DSR/GPIO-3	Port 1 DSR (input)/GPIO-3
10	/RST	Reset (input)
11	RXD/GPIO-9	Port 2 RXD (input)/GPIO-9
12	TXD/GPIO-8	Port 2 TXD (output)/GPIO-8

Connectors: Ethernet Interface

The following table shows the pinout of the RJ-45 connector..


RJ-45 Ethernet Interface								
Pin #	1	2	3	4	5	6	7	8
Signal	TXD+ (Transmit Data)	TXD- (Transmit Data)	RXD+ (Receive Data)	Not used	Not used	RXD- (Receive Data)	Not used	Not used

For a diagram of the Digi Connect Ethernet pin header location and assignments see "Digi Connect EM Pin Header Locations (Top view)" on page 20.

Connectors: Antenna

The Digi Connect Wi-EM has 2 RP-SMA antenna connectors labeled P2 and P3.

Wi-EM Antenna Connectors

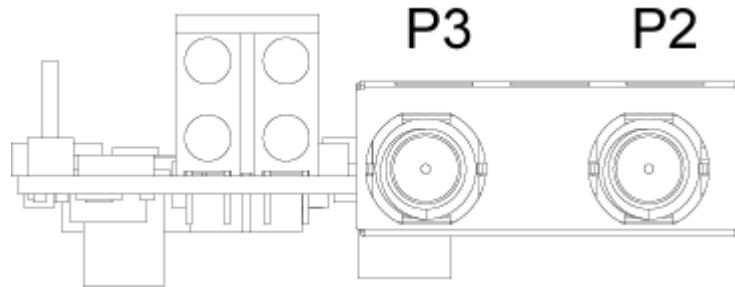

Caution: This Part 15 radio device operates on a non-interference basis with other devices operating at this frequency when using the antennae listed in the Antenna Specification table. Any changes or modification to the product not expressly approved by Digi International could void the user's authority to operate the device.

The antenna is connected to the module with a reverse polarity SMA connector (sub-miniature size A). The antenna only fits on the module one way to ensure a proper connection. Another option for both signal reception and design flexibility is to use an antenna extension cord (Digi part number DC-ANT-E-24DP) to separate the antenna from the module. This allows the module to fit inside your product but the antenna to be placed outside the device.


Antenna Description			
Type	Desktop	Dipole	30 cm Antenna Extension Cord
Part number	DC-ANT-24DT	DC-ANT-24DP	DC-ANT-E-24DP
Gain	1.8 dBi	2 dBi	-.5dB

Reset Switch

The behavior of the reset switch is determined by software, which means that it has a predefined behavior in the integration kit. In the development kit, its behavior is determined by your implementation. See the following table for details.

Reset Switch Behavior	
Kit	Behavior
Integration	<p>The reset switch does one of the following:</p> <ul style="list-style-type: none">■ If pressed and released immediately, the device is rebooted.■ If pressed and held down (for about 20 seconds) during power-up, the device is rebooted and restored to the default configuration.
Development	<ul style="list-style-type: none">■ The behavior of the switch is user-defined. <p>See "Embedded Module Reset" on page 44 for more information.</p>

Reset Switch Location

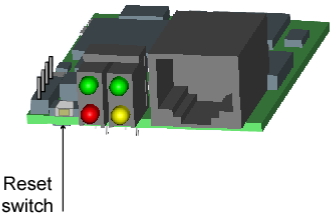

Note The reset switch is in same location for both wired and wireless modules.


Module LEDs

The modules provide two hardware options for LEDs, with or without on board LED array. The integration kit provides predefined LED behavior. With the development kit, some

LED behavior can be determined by your implementation. See the following table for more information..

LED Behaviors				
LED	Pin Header EM	Integration Kit Digi Connect EM	Integration Kit Digi Connect Wi-EM	Development Kit
Top left (green)	1 (+) 3 (-)	Serial port activity: Off - the serial channel is idle. Blinking - serial data is transmitted or received.		This LED is software programmable
Top right (green)	5 (+) 7 (-)	Network link status: Off - no link has been detected. On - a link has been detected.	Network link status: On - unit is associated with an access point Blinking slowly - unit is in ad hoc mode Blinking quickly - unit is scanning for a network	Same as Integration Kit (Network link status)
Bottom left (red)	2 (+) 4 (-)	Diagnostics: Blinking 1-1-1 - starting the operating system. Blinking 1-5-1 - configuration has been returned to factory defaults. Note: If other blinking patterns occur, contact Digi Technical Support.		This LED is software programmable
Bottom right (yellow)	6 (+) 8 (-)	Blinking - network data is transmitted or received		This LED is software programmable

Digi Connect EM Pin Header Locations (Top view)

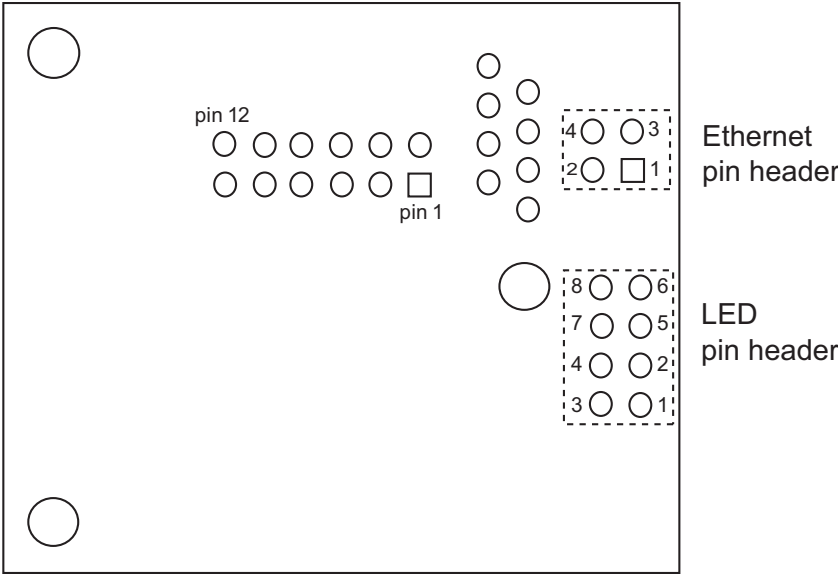

Ethernet pin header, P13


The pins in the Ethernet header are configured as shown:

Pin	Signal
1	Ethernet transmit +
2	Ethernet transmit -
3	Ethernet receive +
4	Ethernet receive -

Led pin header

LED pins and pin header configuration are described in the "LED Behaviors" table on page 19.

Digi Connect Wi-EM Pin Header Locations (Top view)

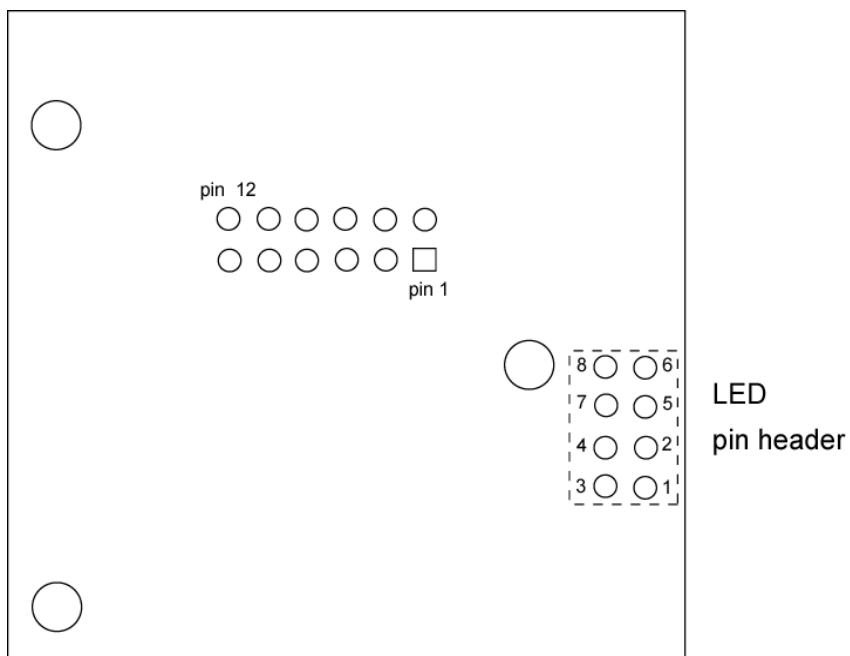

LED pin header

LED pins and pin header configuration are described in the "LED Behaviors" table on page 19.

About the Development Board

C H A P T E R 2


Overview

This chapter provides information on the development board, a hardware platform from which you can determine how to integrate the embedded module into your design. For additional information, see the schematic and mechanical drawings. If you have installed the development kit or integration kit, you can access the schematic from the Start menu.

Basic Description

The development board can be used by both module feature sets with the Integration Kit or the Development Kit. The following graphic is a layout of the development board.

Basic Description

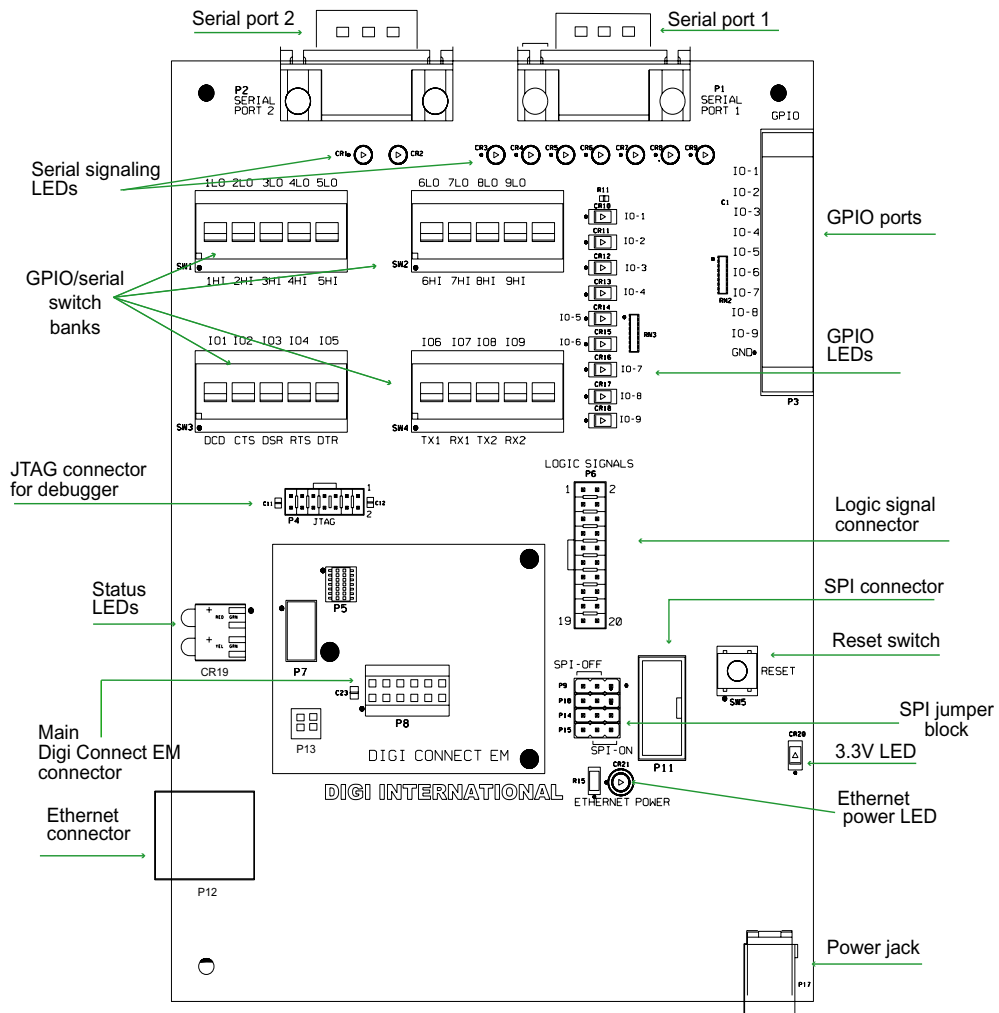

Ports


The development board provides the following ports:

- Serial Port 1 (P1) and Serial Port 2 (P2)
- Ethernet Port (P12)
- GPIO Port (P3)

Serial Port 1 (P1) and Serial Port 2 (P2)

Serial port 1 and port 2 are DB-9 male connectors labeled P1 and P2. Use the following figure and table for pin orientation and pin assignment information.


Serial Port Pin Orientation

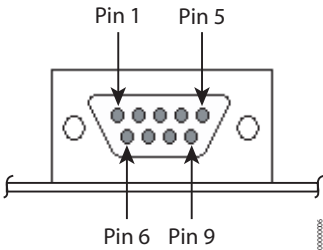

Serial Pin Assignment									
Port	Signal Pin 1	Signal Pin 2	Signal Pin 3	Signal Pin 4	Signal Pin 5	Signal Pin 6	Signal Pin 7	Signal Pin 8	Signal Pin 9
1	DCD	RXD	TXD	DTR	GND	DSR	RTS	CTS	Not Connected
2	Not Connected	RXD	TXD	Not Connected	GND	Not Connected	Not Connected	Not Connected	Not Connected

Ethernet Port (P12)

The Ethernet port of the Digi Connect EM embedded module (labeled P12) is an 8-pin RJ-45 jack meeting the requirements of ISO 8877 for 10/100Base-T. When two descriptions are shown for a pin, the second is for use with 802.3af powered Ethernet.

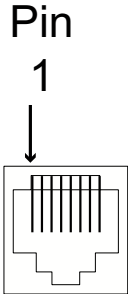Ethernet Pin Assignments		
Pin	Signal Name	Figure RJ-45 (P12)
1	TXD+ (Transmit Data)	
2	TXD- (Transmit Data)	
3	RXD+ (Receive Data)	
4	Not used / power (+)	
5	Not used / power (+)	
6	RXD- (Receive Data)	
7	Not used / power (-)	
8	Not used / power (-)	


For additional information about the 802.3af standard, refer to the corresponding IEEE specification.

Note The development board provides a reference design of a POE (Power Over Ethernet) power supply. A schematic for this reference design is installed by the setup program on the CD.

GPIO Port (P3)

The GPIO port is a 10-pin male right-angle connector (labeled P3). See the following figure and table for pin orientation and pin assignments.

GPIO Port Pin Orientation

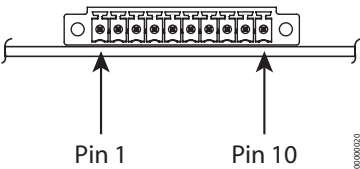

GPIO Port Pin Assignments	
Pin	Signal Name
1	GND
2	GPIO-9
3	GPIO-8
4	GPIO-7
5	GPIO-6
6	GPIO-5
7	GPIO-4
8	GPIO-3
9	GPIO-2
10	GPIO-1

Connectors and Blocks


The development board provides the following connectors and blocks:

- JTAG Debugger Connector (P4)
- SPI Connector (P11) and SPI Jumper Block
- Logic Signal Analyzer Header (P6)
- Main Connector (P8)

JTAG Debugger Connector (P4)

This 14-pin male vertical header labeled P4 mates with a JTAG debugger plug (for example, a Macraigor Raven). It is used with the development kit only. See the following figure and table for pin orientation and assignments.

JTAG Debugger Connector Pin Orientation

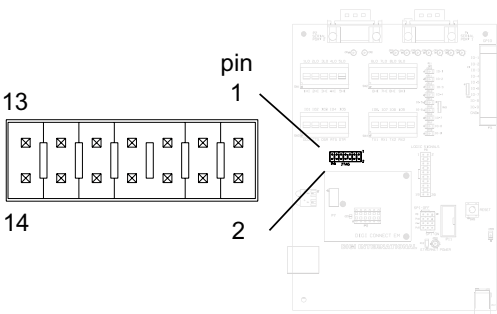


JTAG Debugger Connector Pin Assignments

	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9	Pin 10	Pin 11	Pin 12	Pin 13	Pin 14
Signal	VCC+	GND	/TRST	GND	TDI	GND	TMS	GND	TCK	GND	TDO	/SRST	VCC+	GND

SPI Connector (P11)

This connector is used for a Serial Peripheral Interface (SPI) connection. When enabled, signals are disconnected from serial port 1 and GPIO connectors. See the following figure and table for pin orientation and pin assignments.

SPI Connector Pin Orientation

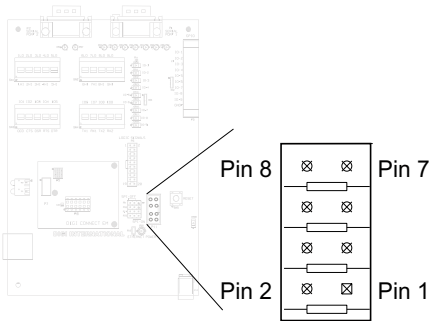


SPI Pin Assignments										
	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9	Pin 10
Signal	SPI-EN	GND	SPI-CLK	GND	SPI-TX	GND	SPI-RX	GND	Not connected	Not connected

SPI Jumper Block

The SPI jumper block determines whether the SPI connector is connected or not. If SPI is off (the default), serial and GPIO signals are routed to switch banks 1 through 4. (See "Serial/GPIO Switch Bank 3 (SW3) and Switch Bank 4 (SW4)" on page 33 and "GPIO Switch Bank 1 (SW1) and 2 (SW2)" on page 34.) If SPI is on, SPI signals are routed to the SPI connector (P11).

The following figures demonstrate how to set the SPI jumper block


SPI Jumper Settings

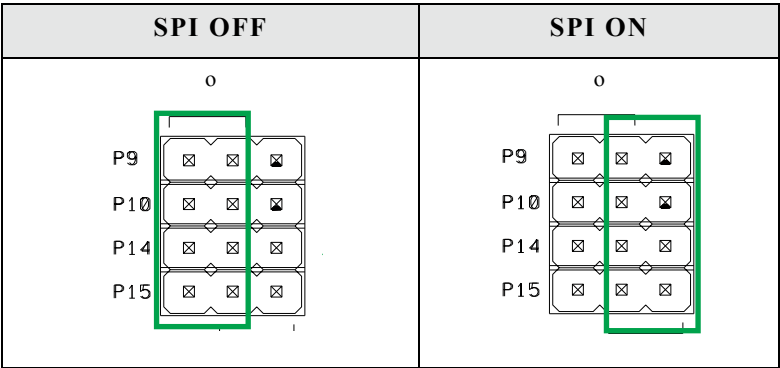

Logic Signal Analyzer Header (P6)

This 20-pin male vertical header (labeled P6) connects a digital signal analyzer (for example, a logic analyzer) to the development board. It is used with the development kit only. See the following figure and table for pin orientation and pin assignments.

Logic Analyzer Header Pin Orientation

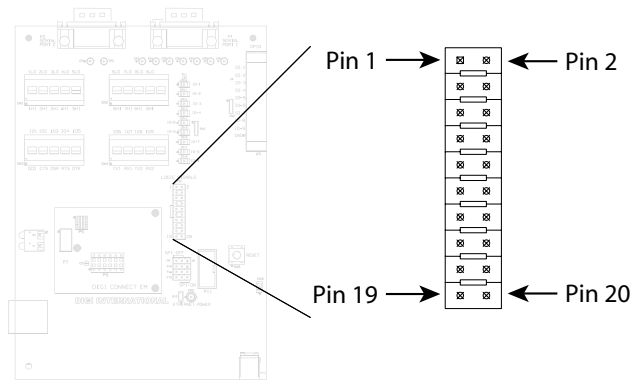


Logic Analyzer Header Pin Assignments	
Pin	Signal
1 - 8	Not connected
9	/RST
10	Not connected
11	DTR/GPIO-5
12	TXD-2/GPIO-8
13	CTS/GPIO-2
14	RXD-2/GPIO-9
15	DSR/GPIO-3
16	TXD-1/GPIO-6
17	RTS/GPIO-4/SPI_CLK
18	RXD-1/GPIO-7
19	DCD/GPIO-1/SPI_EN
20	GND

Main Connector (P8)

This 12-pin connector is used to interface with the embedded module. See the following figure for pin orientation.

Main Connector Pin Orientation

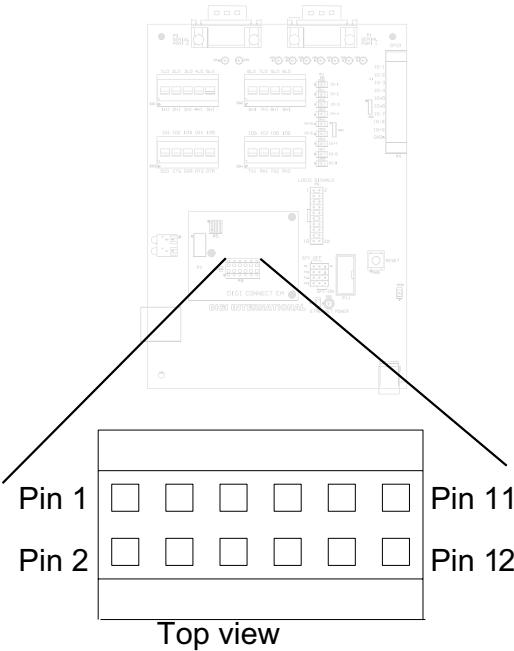


Power Jack (P17)

The Power Jack is a barrel connector that accepts 9 to 30 VDC +/- 5%. The jack is labeled P17. The following table shows the polarity of the power jack.

Power Jack Polarity	
Contact	Polarity
Center	+9 to +30 VDC
Outer	Ground

The following figure schematically represents the polarity of the power jack

Power Jack Polarity Schematic.

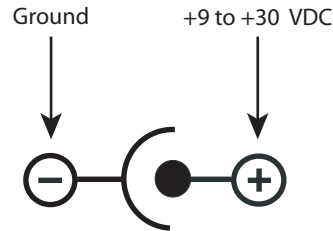

Switches

The development board provides the following switches:

- Reset Switch (SW5)
- Serial/GPIO Switch Bank 3 (SW3) and Switch Bank 4 (SW4)
- GPIO Switch Bank 1 (SW1) and 2 (SW2)

Reset Switch (SW5)

This push button switch is labeled SW5. Pressing it sets the module's /RST line low, holding the module in a hard reset until the switch is released.

Note: This is a "hard" reset using the /RST pin on the main connector, not a "soft" reset. The reset button on the embedded module performs a "soft" reset (see also "Main Connector (P8)" on page 31).

Serial/GPIO Switch Bank 3 (SW3) and Switch Bank 4 (SW4)

Each switch bank holds five slide switches that enable either serial or GPIO signaling between the development board and the module. When set for GPIO signaling, SW3 works in conjunction with SW1, and SW4 works with SW2. See "GPIO Switch Bank 1 (SW1) and 2 (SW2)" on page 34 for more information. See the following table for SW3 and SW4 switch definitions.

Note: These switches control where the development board routes a signal. They do not reconfigure the NS7520 processor. Software should be configured to track with switch settings. See "GPIO" on page 39 for more information.

GPIO Switch Banks 3 and 4 Settings			
Switch Bank	Switch Number	Left Position	Right Position
SW3	1	DCD	GPIO-1
	2	CTS	GPIO-2
	3	DSR	GPIO-3
	4	RTS	GPIO-4
	5	DTR	GPIO-5
SW4	6	TXD-1	GPIO-6
	7	RXD-1	GPIO-7
	8	TXD-2	GPIO-8
	9	RXD-2	GPIO-9
	10	Not connected	Not connected

GPIO Switch Bank 1 (SW1) and 2 (SW2)

GPIO Switch Bank 1 and Switch Bank 2, labeled SW1 and SW2, are two sets of five slide switches that set GPIO inputs to logic levels of high (switch to left) or low (switch to right).

If the GPIO port is configured as an output, then the switch should always be to the left. If there is an external device connected to P3, the switch should always be set to the left.

Each GPIO port can be used independently.

Notes:

- These switches do not determine whether the GPIO is an input or output. That is determined by the module software.
- If GPIO is set to an output by software, switches must be set to the left (high).
- These switches are used in conjunction with SW3 and SW4.

Development Board LEDs

The development board contains 21 LEDs labeled CR1 through CR21. The following table lists and describes the LEDs.

LED Descriptions			
Board Label	Description	Color or State	Indication
CR1	TXD-2	Flickering	Serial activity
		Green	Inactive
CR2	RXD-2	Flickering	Serial activity
		Green	Inactive
CR3	CTS	Yellow	Active
		Green	Inactive
		Off	Not connected or signal not being driven

LED Descriptions			
Board Label	Description	Color or State	Indication
CR4	DTR	Yellow	Active
		Green	Inactive
		Off	Not connected or signal not being driven
CR5	TXD-1	Flickering	Serial activity
		Green	Inactive
CR6	RXD-1	Flickering	Serial activity
		Green	Inactive
CR7	RTS	Yellow	Active
		Green	Inactive
		Off	Not connected or signal not being driven
CR8	DCD	Yellow	Active
		Green	Inactive
		Off	Not connected or signal not being driven
CR9	DSR	Yellow	Active
		Green	Inactive
		Off	Not connected or signal not being driven
CR10 -18	GPIO-1 through GPIO-9. (CR10=GPIO-1, CR11=GPIO-2, etc. All can be used for input or output.)	On	Logic high
		Off	Logic low
CR20	3.3V Indicator	On	Power on
		Off	Power off

LED Descriptions			
Board Label	Description	Color or State	Indication
CR21	EPWR, Powered Ethernet Enabled	On	Ethernet power present from external powered Ethernet connector (Ethernet hub or switch)
		Off	No powered Ethernet voltage

Test Points

The development board provides 25 test points that can be identified by board label or test point number. The board labels are adjacent to each test point on the board. The test point numbers are in the development board schematic drawings. The following table lists the test point number, board label, and a brief description of each test point.

Test Point Descriptions		
Test Point	Board Label	Description
TP2	TXD	TXD-2
TP3	RXD	RXD-2
TP4	CTS	CTS
TP5	DTR	DTR
TP6	TXD	TXD-1
TP7	RXD	RXD-1
TP8	RTS	RTS
TP9	DCD	DCD
TP10	DSR	DSR

Test Point Descriptions		
Test Point	Board Label	Description
TP11	IO-1	GPIO-1
TP12	IO-2	GPIO-2
TP13	IO-3	GPIO-3
TP14	IO-4	GPIO-4
TP15	IO-5	GPIO-5
TP17	3.3V	3.3V Supply
TP20	RESET	Reset (active low)
TP21	E+	Ethernet Power +
TP22	E-	Ethernet Power -
TP23	V-IN	9-30 VDC Input
TP24	GND	Ground
TP25	GND	Ground
TP26	IO-8	GPIO-8
TP27	IO-7	GPIO-7
TP28	IO-6	GPIO-6
TP29	IO-9	GPIO-9

Programming Considerations

C H A P T E R 3

This chapter addresses the embedded modules programming considerations.

Note This chapter applies only to development kit customers.

GPIO

General Information

The NS7520 processor supports 16 general purpose I/O (GPIO) lines, some of which are reserved for specific functions and some of which can be customized. These GPIO lines fall into three categories:

- Those labeled “Reserved” in the following table are reserved for a specific use and must not be reprogrammed, or the unit may not operate correctly. Often, these lines are not connected to external interfaces.
- Those labeled “Allocated” in the following table are exposed to an external interface and allocated to a specific use by the software, but they can be customized safely with code modifications.
- Those labeled “Available” are exposed to an external interface, not controlled directly by the software, and can be customized.

GPIO Registers

Two registers, PORTA and PORTC, govern the 16 GPIO pins. Each is responsible for eight GPIO pins, and each pin has four bits that completely describe its behavior. The four bits that describe the GPIO behavior are its mode (CMODE), direction (CDIR), special function (CSF--only applicable to PORTC), and data value. The first three bits describe the functionality of the GPIO pin. The "data" bit provides the current value of the pin when read and allows control of the value of an output pin when written. Use the following table for information on configuring a bit position in the appropriate register for GPIO input or output.

Configuring a GPIO Pin for Input and Output	
Input	Output
<ul style="list-style-type: none">■ CMODE = 0■ CDIR = 0■ CSF = 0	<ul style="list-style-type: none">■ CMODE = 0■ CDIR = 1■ CSF = 0

Since each register controls 8 GPIO lines, it is safest to read the full 32 bit register, modify the bits corresponding to the GPIO line of interest, and then write the full 32 bits back. In this way, the behavior of the other GPIO lines will be preserved.

For more information regarding the format and programming of the GPIO registers, see the *NS7520 Hardware Reference*.

GPIO Pin Use

GPIO Pin Use				
Name	Register Bit	Category	External Interface	Description
TXD/ GPIO-6	PORTA7	Allocated	Pin 4 on the main header	Used for port 1 serial transmit but can be reassigned as GPIO input or output. If used with the development board, this pin maps to GPIO-6.
DTR/ GPIO-5	PORTA6	Allocated	Pin 6 on the main header	Used for the port 1 serial DTR signal but can be reassigned as GPIO input or output. If used with the development board, this pin maps to GPIO-5.
See the description	PORTA5, PORTA4	Allocated	Pin 5 on the main header	<p>Since these two processor pins map to the same header pin, one <u>must</u> be configured as an input to avoid contention. Under normal serial conditions, PORTA5 is configured to deliver the port 1 RTS signal and PORTA4 for GPIO input. To use the port for SPI, configure PORTA5 for GPIO input and PORTA4 to deliver SPI clock.</p> <p>When used with the development board, header pin 5 maps to GPIO-4.</p>
RXD/ GPIO-7	PORTA3	Allocated	Pin 3 on the main header	Used for port 1 serial receive but can be reassigned as GPIO input or output. If used with the development board, this pin maps to GPIO-7.

GPIO Pin Use				
Name	Register Bit	Category	External Interface	Description
DSR/ GPIO-3	PORTA2	Allocated	Pin 9 on the main header	Used for the port1 serial DSR signal but can be reassigned as GPIO input or output. If used with the development board, this pin maps to GPIO-3.
CTS/ GPIO-2	PORTA1	Allocated	Pin 7 on the main header	Used for the port 1 serial CTS signal but can be reassigned as GPIO input or output. If used with the development board, this pin maps to GPIO-2.
DCD/ GPIO-1	PORTA0	Allocated	Pin 8 on the main header	Used for the port 1 serial DCD signal but can be reassigned as GPIO input or output. If used with the development board, this pin maps to GPIO-1.
TXD2/ GPIO-8	PORTC7	Allocated	Pin 12 on the main header	Used for port 2 serial transmit but can be reassigned as GPIO input or output. If used with the development board, this pin maps to GPIO-8.
Power indicator LED	PORTC6	Allocated	Connected to the red LED	Used as the power indicator (always on) but can be reassigned as a general purpose LED. It must remain a GPIO output for the LED to operate correctly. This LED is lit when the signal is low.
/INIT	PORTC5	Available	Connected to the button on the module	Should be configured as a GPIO input.

GPIO Pin Use				
Name	Register Bit	Category	External Interface	Description
Green LED	PORTC4	Allocated	Connected to the green LED (the one above the red LED)	Used as the NET+OS green LED but can be reassigned as a general purpose LED. It must remain a GPIO output for the LED to operate correctly. The LED is lit when the signal is low.
RXD2/ GPIO-9	PORTC3	Allocated	Pin 11 on the main header	Used for port 2 serial receive but can be reassigned as GPIO input or output. If used with the development board, this pin maps to GPIO-9.
Yellow LED	PORTC2	Allocated	Connected to the yellow LED	Used as the NET+OS yellow LED but can be reassigned as a general purpose LED. It must remain a GPIO output for the LED to operate correctly. The LED is lit when the signal is a low.
	PORTC1- PORTC0	Reserved	NA	NA

Embedded Module LEDs

General information

The embedded module has two types of LEDs:

- LEDs connected directly to GPIO pins on the processor and controlled directly in software
- LEDs connected to other hardware components (Ethernet/wireless hardware) and not directly programmable by the operating system

For information on LED control, see the *NET+Works BSP Porting Guide*.

About Embedded Module LEDs

Embedded Module LED Description	
LED	Description
Green (above yellow LED)	This LED is wired to the network hardware and provides an indication of link status.
Green (the one above the red LED)	This LED is software programmable and is wired to processor GPIO register bit PORTC4 and wired to be lit when low.
Yellow	This LED is software programmable, wired to processor GPIO register bit PORTC2, and wired to be lit when low.
Red	This LED is software programmable, wired to processor GPIO register bit PORTC6, and wired to be lit when low. The default is that this LED indicates power (and is therefore always on).

Embedded Module Reset

Hard Reset

The embedded modules support a hardware reset on pin 10 of the 12-pin header. The unit will be forced into a hard reset if this pin is pulled low. When used with the development board, this pin is wired to reset button SW5, which means it acts as a hard reset button.

Reset Characteristics	
Characteristic	Specification
Delay	200 milliseconds (typical)
Threshold	2.93 V
Minimum Hold Time	1 microsecond pulse

Soft Reset

NET+OS provides an internal facility to enact a soft reset, but it is the responsibility of a specific implementation to choose a reasonable trigger to invoke it. One choice is to use a GPIO pin as a signal to trigger a soft reset. The embedded modules have one GPIO pin (PORTC5) which is not normally assigned to any other task named "/INIT." It is an ideal candidate for use as a signal for soft reset. The signal is wired to the push button on the module (next to the LEDs), and is pulled high unless the button is pushed.

The "naresetapp" sample application demonstrates a simple mechanism for monitoring a GPIO pin and then initiating a soft reset when the pin achieves a particular value.

Flash

.....

General Information

The embedded modules have 4 MB of flash memory, which is controlled by chip select 0, located at 0x02000000.

Memory

Both modules have 8 MB of SDRAM memory, controlled by chip select 1, located at 0x00000000 in the processor address space and aliased at 0x04000000 and 0x08000000. The application program is loaded at address 0x08080000.

Specifications

A P P E N D I X A

Network Interfaces

Digi Connect Wi-EM Embedded Module

- Standard: IEEE 802.11b
- Data Rate: Up to 11 Mbps with automatic fallback
- Frequency: 2.4 GHz
- Modulation: CCK (11/5 Mbps), DQPSK (2 Mbps), DBPSK (1 Mbps)
- Transmit power: 16 dBm typical
- Receive sensitivity:
 - 1Mbps: -92 dBm
 - 2Mbps: -89 dBm
 - 5.5Mbps: -87 dBm
 - 11Mbps: -82 dBm
- Antenna connector: 2 x RP-SMA

Digi Connect EM Embedded Module

- Standard: IEEE 802.3
- Data rate: 10/100 Mbps (auto-sensing)
- Mode: Full or half duplex (auto-sensing)
- Connector: RJ-45 or pin header

Serial Interface

Two serial ports, one with full modem control signals and the other with TXD and RXD only.

Data Rates (bps)

50, 110, 134, 150, 200, 300, 600, 1200, 2400, 3600, 4800, 9600, 19200, 38400, 57600, 115200, 230400

Flow Control Options

RTS/CTS, XON/XOFF, None

Environmental

	Digi Connect EM	Digi Connect Wi-EM
Ambient Temperature	-40°F to 185°F (-40°C to 85°C)	-4°F to 185°F (-20°C to 85°C)
Storage Temperature	-40°F to 257°F (-40°C to 125°C)	
Humidity	5% to 90%	
Altitude	12000 feet (3657.60 meters)	

DC Characteristics

The following tables provide DC characteristics for operating conditions, inputs, and outputs.

Operating Conditions						
Symbol	Description	Min	Typ	Max		Unit
V _{CC}	Supply Voltage	3.14	3.3	3.45		V
n/a	Power Supply Ripple			40		mVpp
I _{CC}	Supply Current	—	—	Digi Connect EM	270	mA
				Digi Connect Wi-EM	400	
I _{IL}	Input Current as “0” (57K pull-up)	—	—	57		μA
I _{IH}	Input Current as “1” (57K pull-up)	-10	—	10		μA
I _{OZ}	HighZ Leakage Current	-10	—	10		μA
I _{OD}	Output Drive Strength	—	—	2		mA
C _{IO}	Pin Capacitance (V _O =0)	—	—	4		pF

Inputs					
Symbol	Description	Min	Typ	Max	Unit
V_{IH}	Input High Voltage	2	—	$V_{CC}+0.3$	V
V_{IL}	Input Low Voltage	$V_{SS}-0.3$	—	$0.2 \cdot V_{CC}$	V

Outputs					
Symbol	Description	Min	Typ	Max	Unit
V_{OH}	Output High Voltage	2.4	—	3.45	V
V_{OL}	Output Low Voltage	0	—	0.4	V

Note The embedded modules use a supervisory circuit with a 2.93V reset threshold. When V_{CC} falls to the threshold voltage, a reset pulse is issued, holding the

output in active state. When power rises above 2.93V, the reset remains for approximately 200 ms to allow the system clock and other circuits to stabilize.

Warning The rise time of the 3.3v power supply must be between 700 μ S and 140ms and the inrush current must be limited to less than 2 A. A rise time outside of these limits may cause the device to malfunction and give a 3-1-3 diagnostic error.

Mechanical

Module Dimensions			
Dimension	Digi Connect EM	Digi Connect Wi-EM	
Length:	Fully populated 2.135 in (54.229 mm) Pin header model 1.935 in (49.149 mm)	2.287 in (58.09 mm)	
Width:	1.575 in (40.005 mm)	1.885 in (47.879 mm)	
Height:	Fully populated 0.803 in (20.369 mm) Pin header model 0.670 in (17.018 mm)	Fully populated 0.785 in (19.939 mm) Pin header model 0.653in (16.586 mm)	
Weight	.416 oz. (11.793 g)	Antenna -.408 oz. (11.567 g)	.672 oz. (19.051 g)
		Total - 1.080 oz. (30.617 g)	

Layouts and Dimensions

The following dimensions and layouts are for both the Digi Connect Wi-EM and Digi Connect EM. It is strongly recommended that you consider using the Digi Connect Wi-EM footprint for future flexibility.


Note All dimensions are in inches. We recommend that you use the Recommended PCB layout (footprint) of the Digi Connect Wi-EM module regardless of which module you have. The benefit of using the wireless footprint will allow you to design your product to go wireless at any time (without difficulty) since the wireless module is slightly larger.

These are the tolerances for the drawings shown in this section:


Measure	Tolerance
.XX	$\pm .02$
.XXX	$\pm .010$
Angles	± 2 degrees

Digi Connect Wi-EM (w/LED Array)


Top

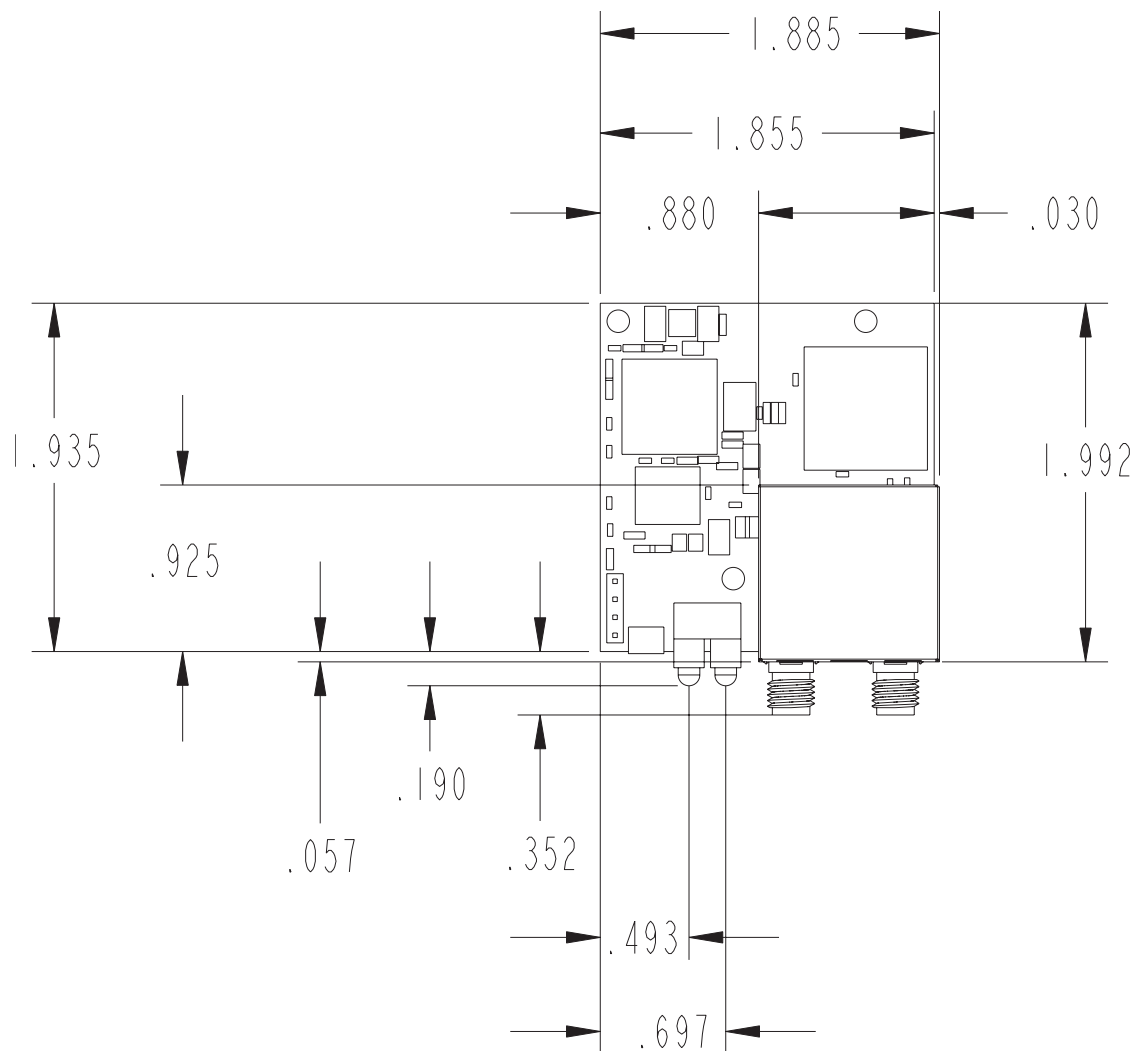

Front

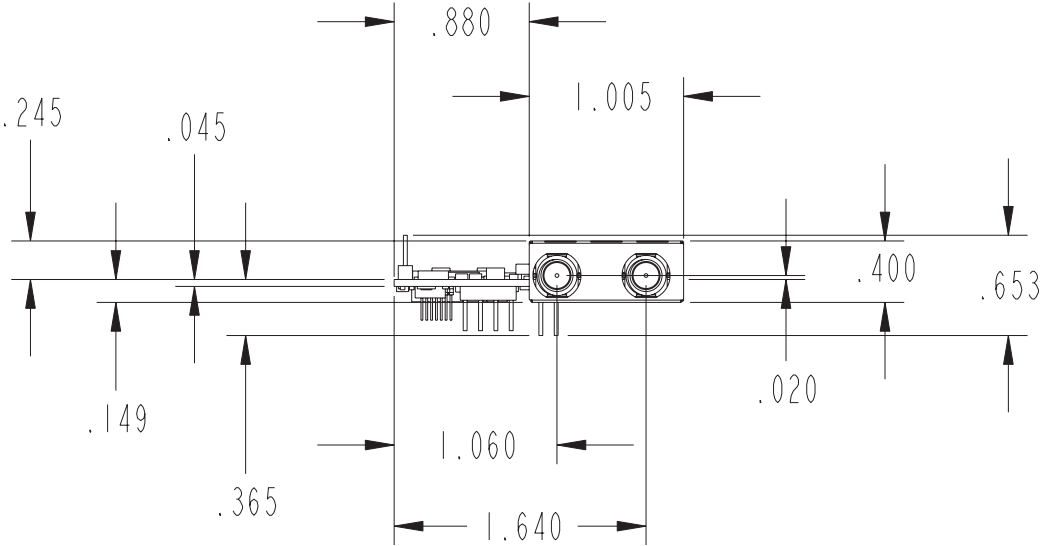


Bottom

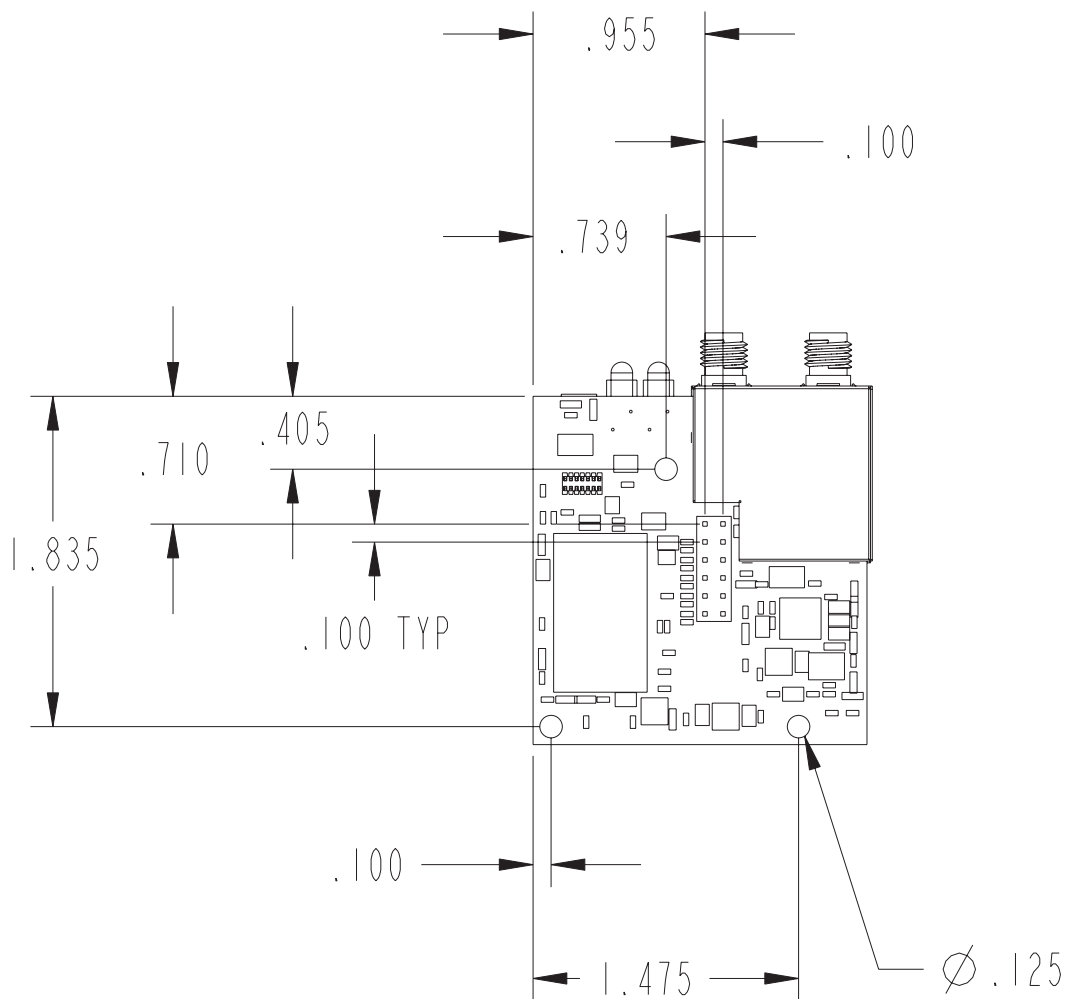


Digi Connect Wi-EM (w/LED Pin Headers)


Top

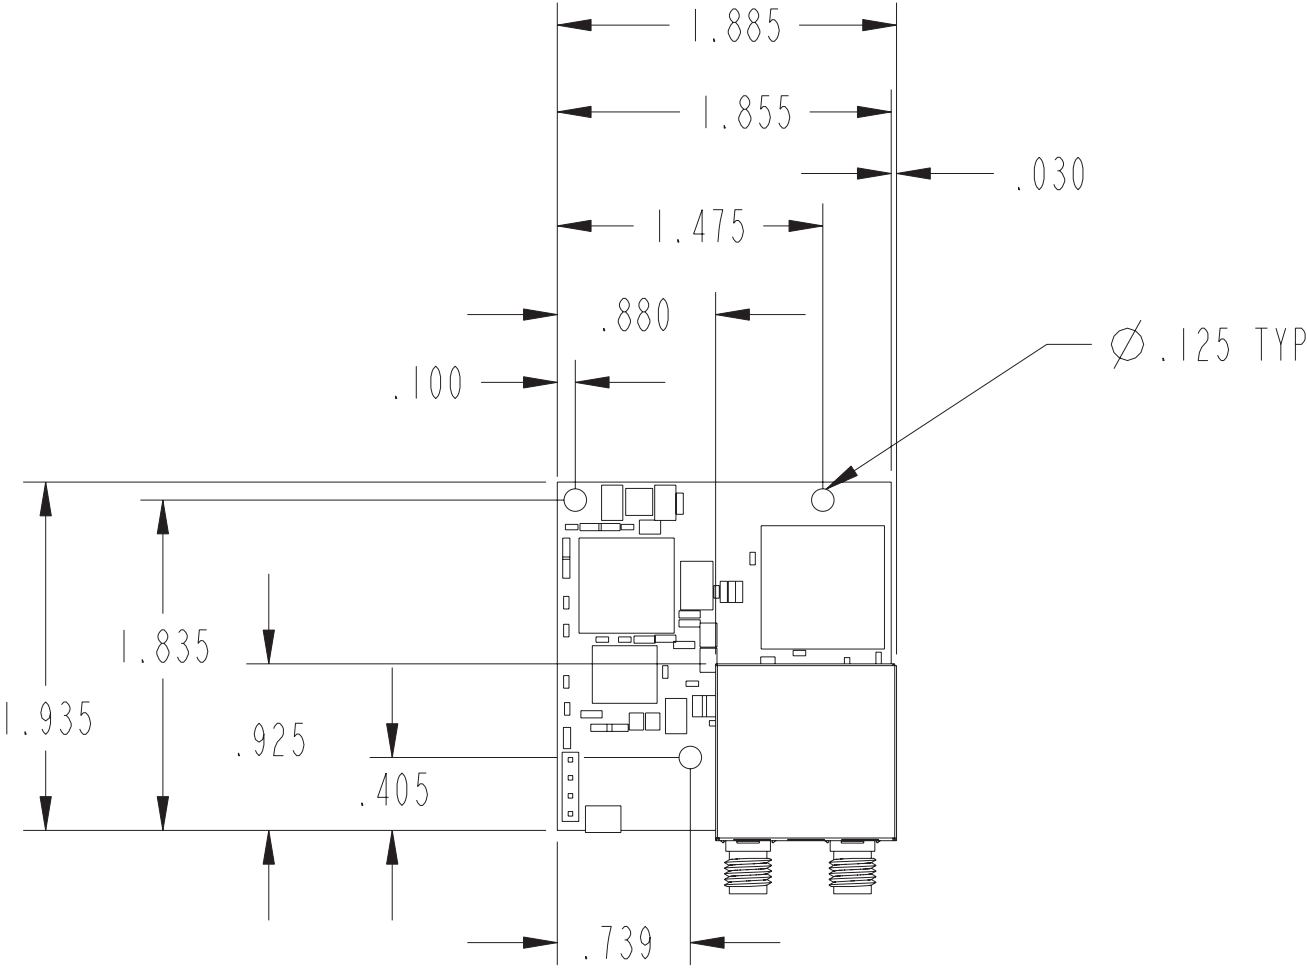

Front

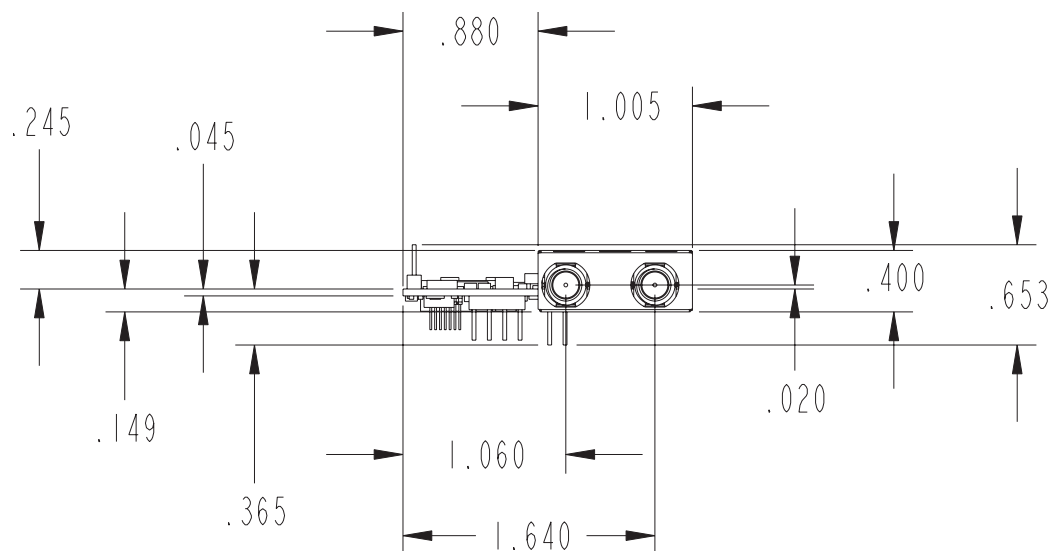


Bottom

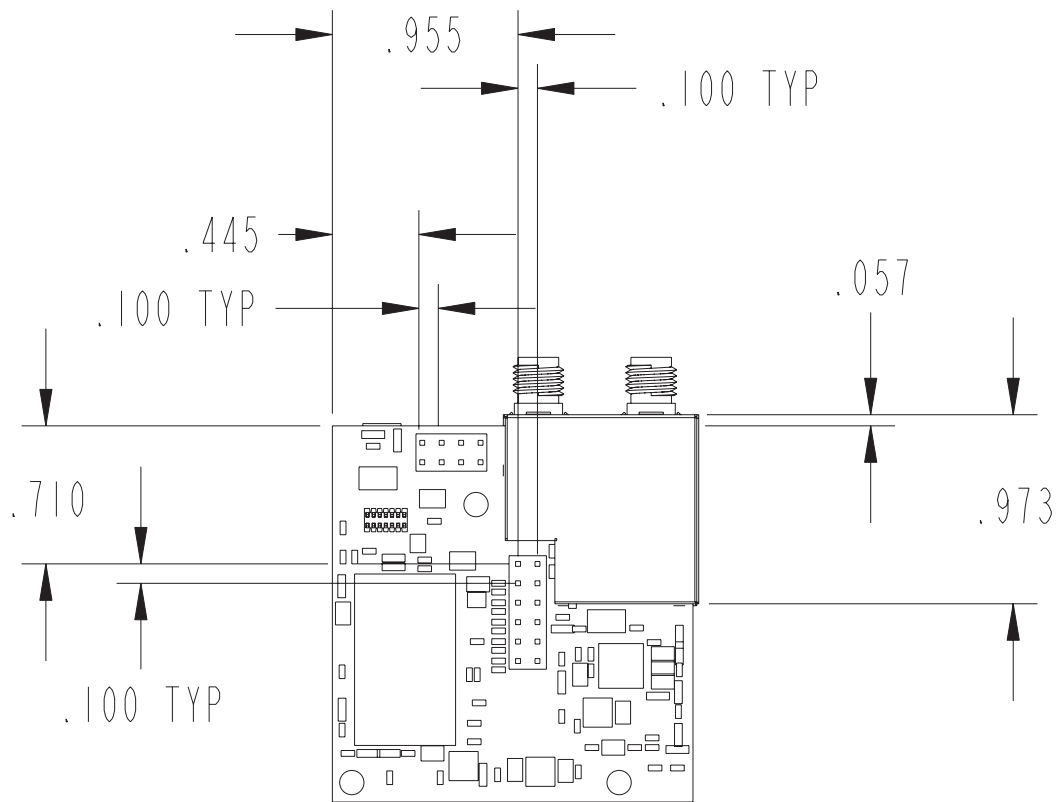


Digi Connect EM (w/RJ-45 and LED Array)


Top

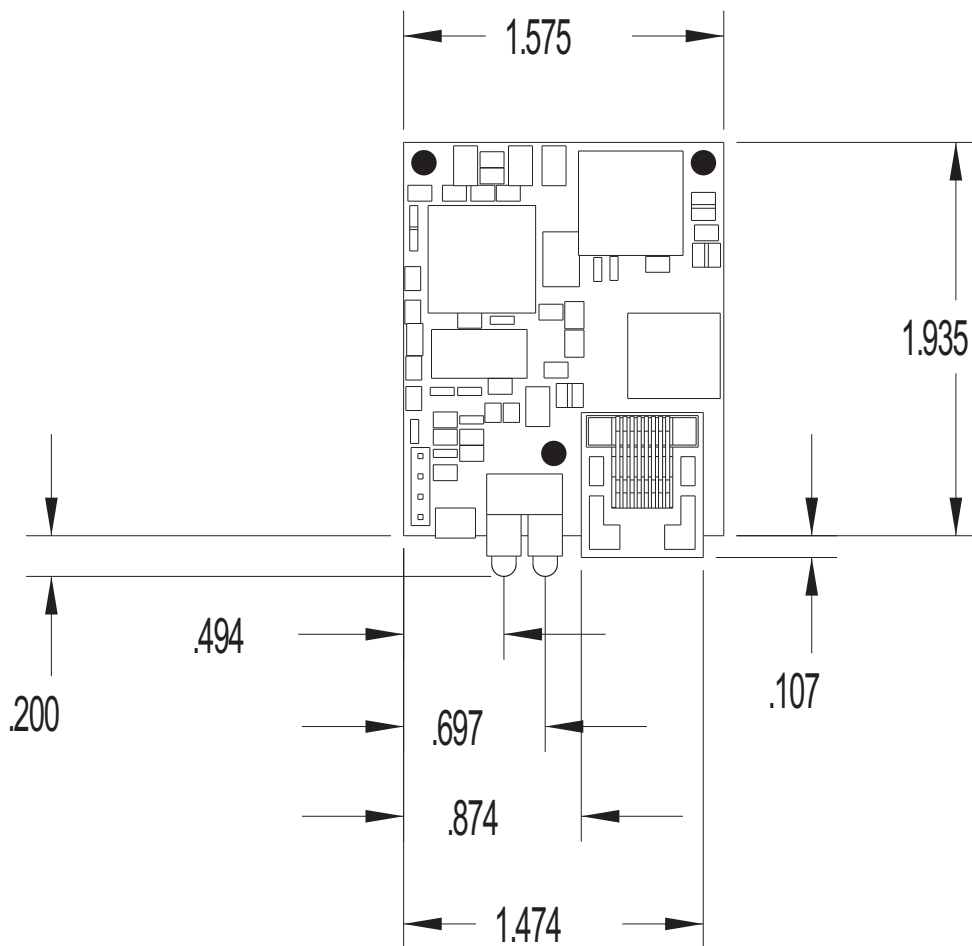


Front

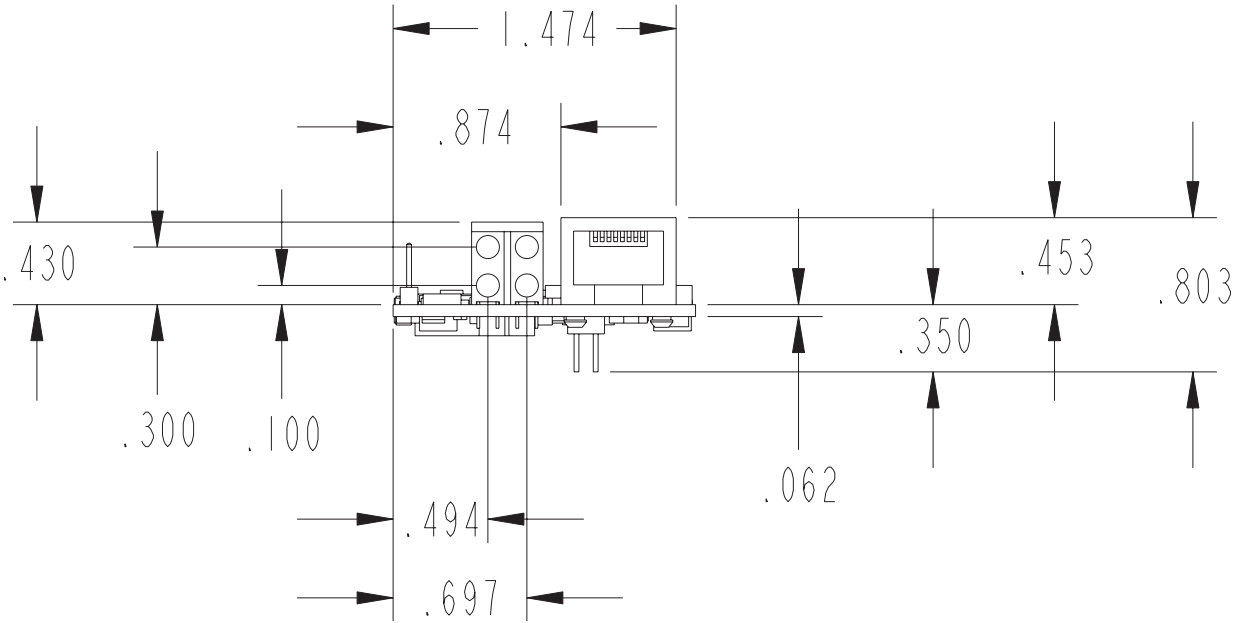



Bottom

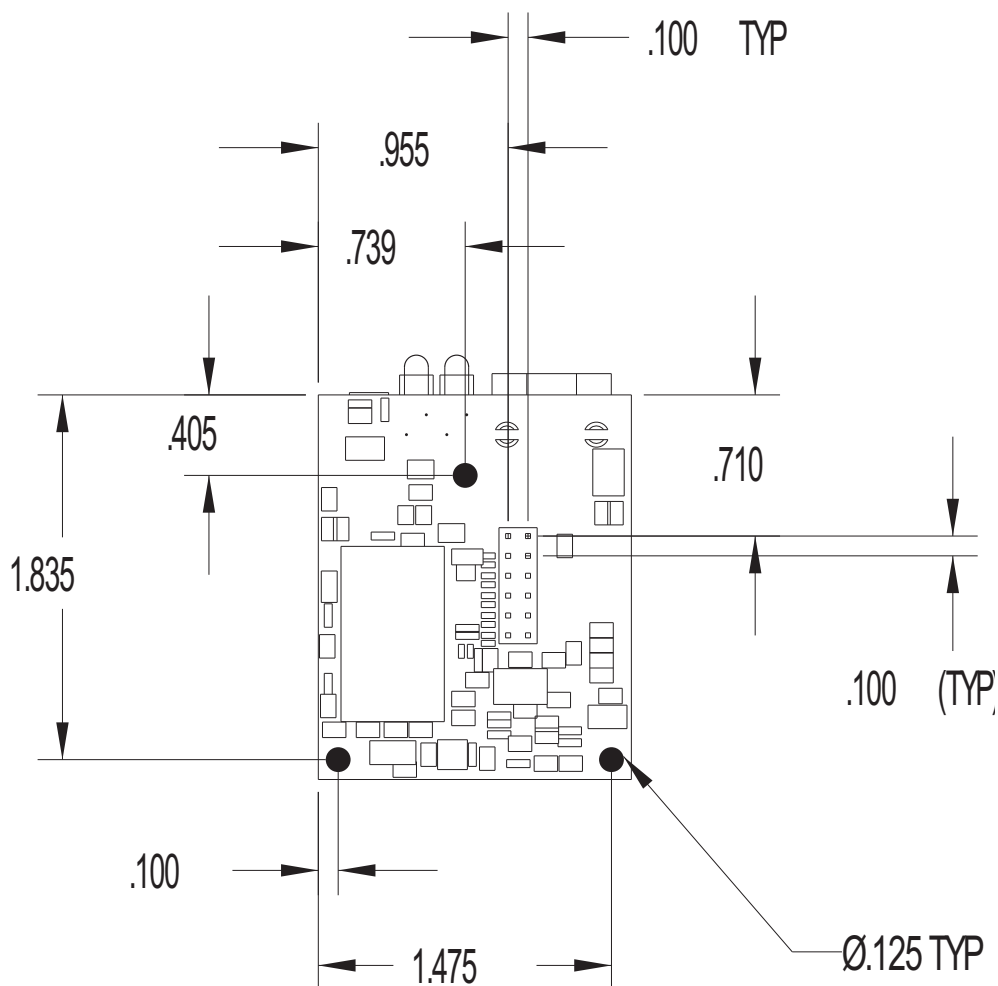

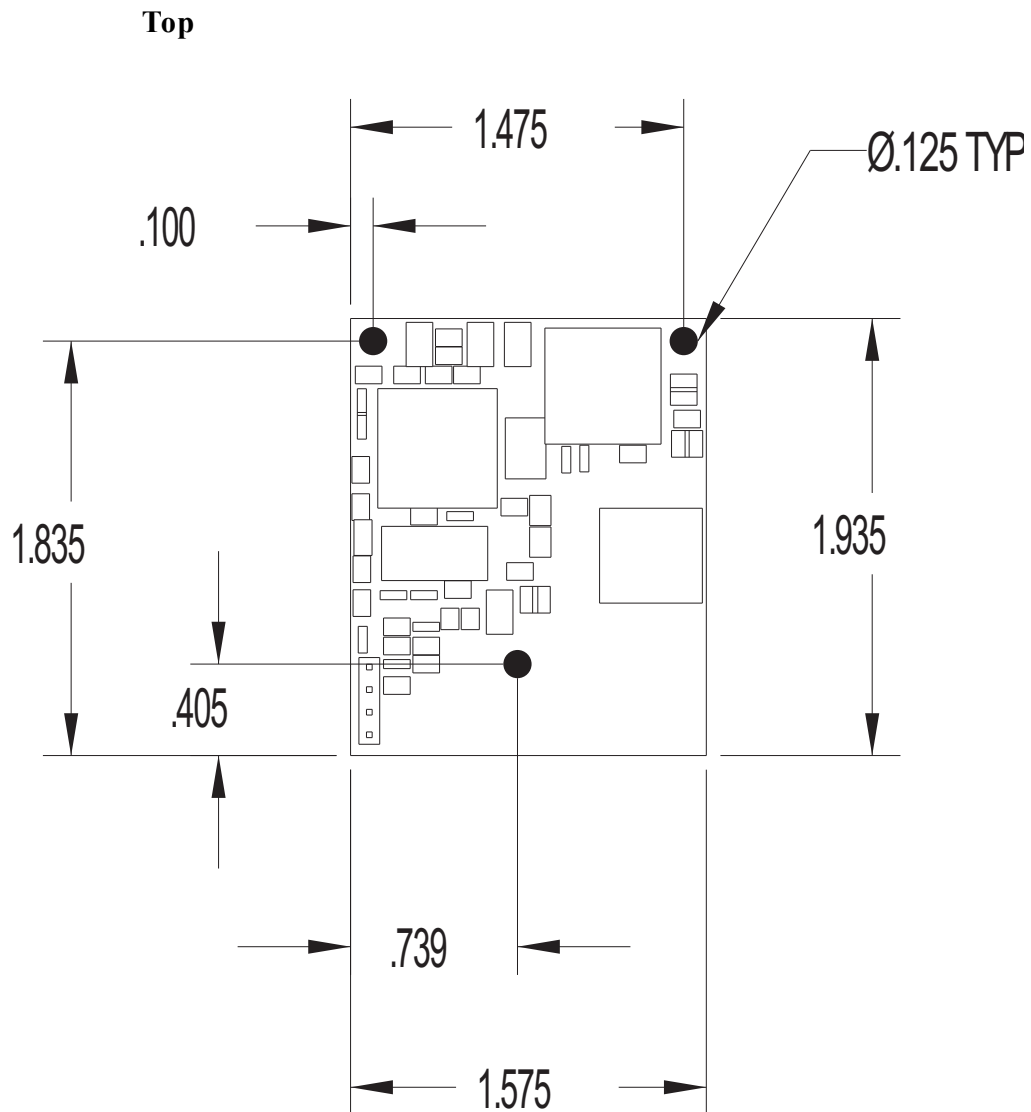Digi Connect EM (with Ethernet and LED Pin Headers)


Front

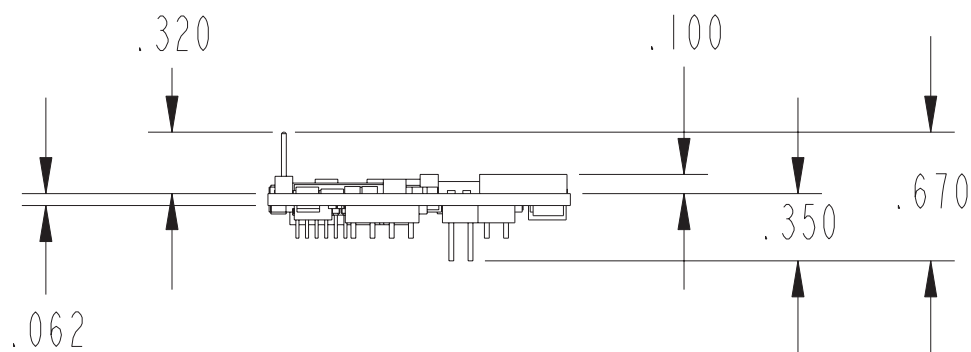


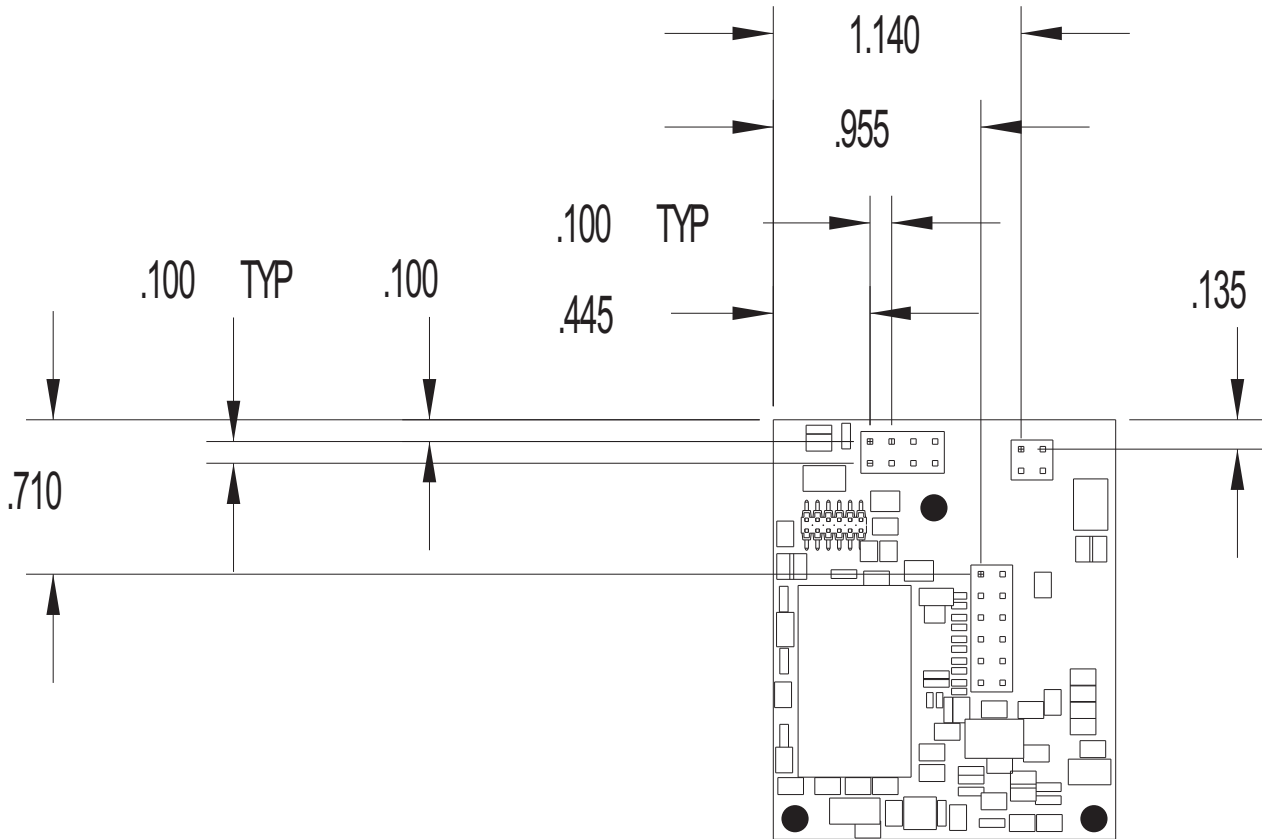Bottom**Recommended PCB Layouts**

The following graphics are the recommended PCB layouts for the Digi Connect Wi-EM and Digi Connect EM (both populated and unpopulated versions). It is recommended that you use the Digi Connect Wi-EM PCB layout for future flexibility since it is slightly wider than the Digi Connect EM.


Digi Connect Wi-EM (w/LED Array)

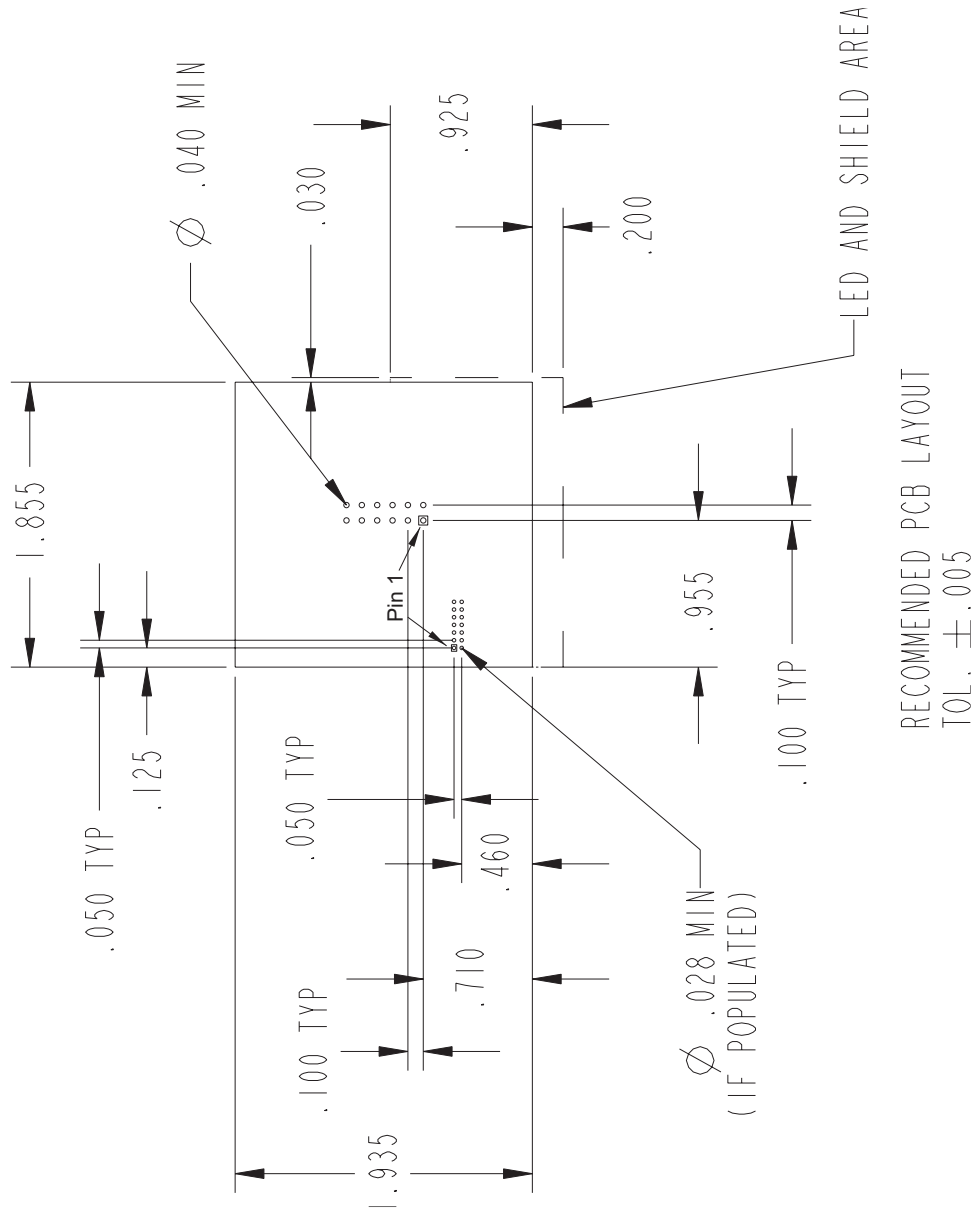

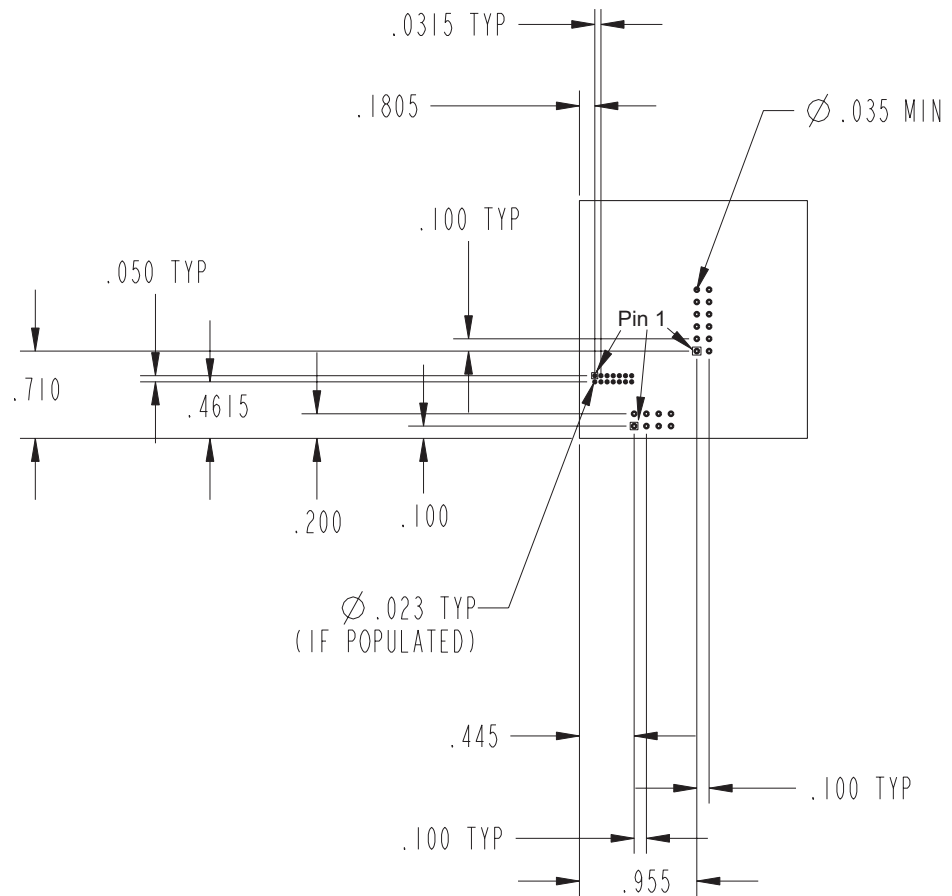
Digi Connect Wi-EM (w/LED Pin Headers)

Digi Connect EM (w/RJ-45 and LED Array)

RECOMMENDED PCB LAYOUT
TOL. $\pm .005$

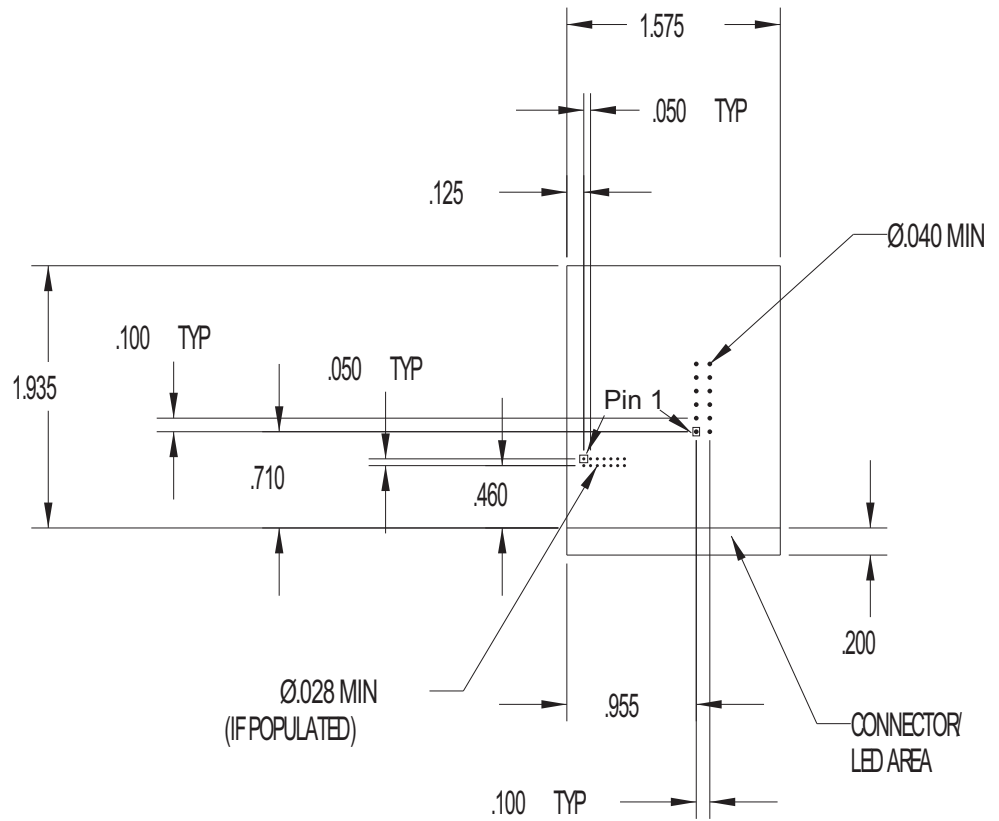

Digi Connect EM (with Ethernet and LED Pin Headers)

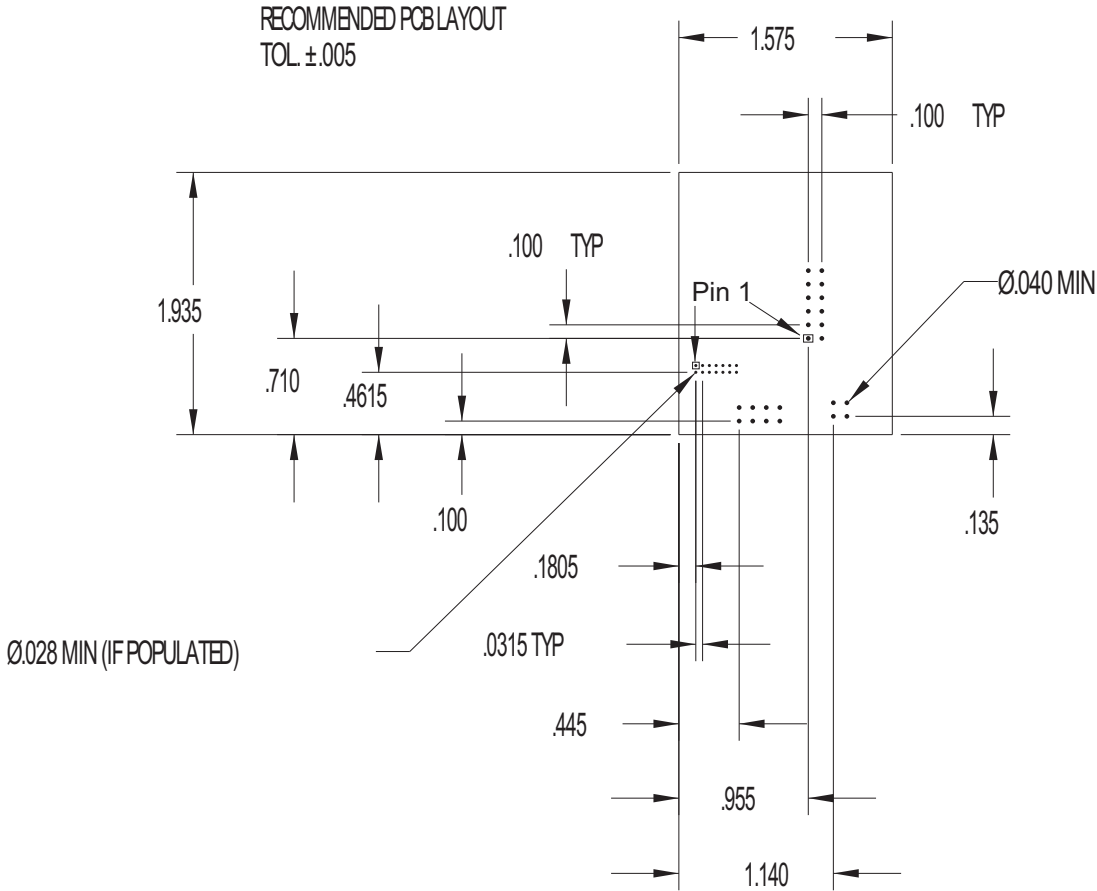


Antenna Information


Antenna Strength

The following diagram demonstrates the strength of the signal received by the antenna on both a horizontal and vertical plane. The diagram shows the magnetic field when the antenna is in a vertical position. The red line represents the horizontal plane and the dotted green line represents the vertical plane. You can see in the illustration that at 90degrees, the signal strength is (as expected) 0.

Radiation Patterns

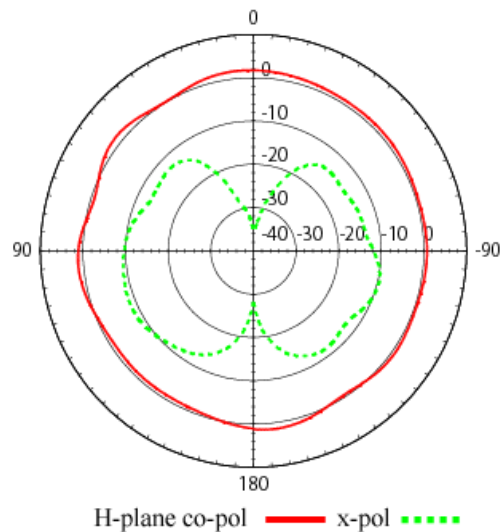

Radiation Patterns for PCB Mount Antenna

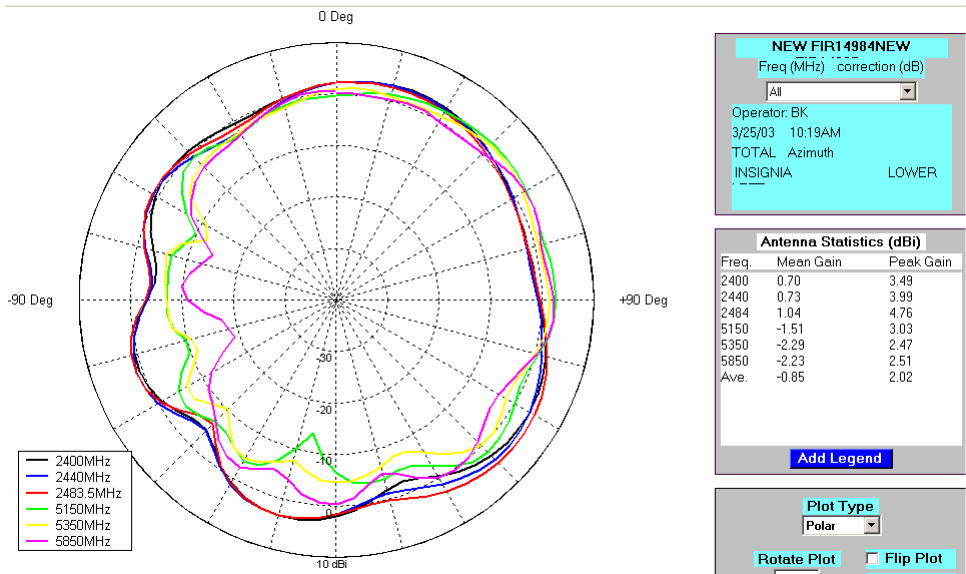


Antenna Specifications for North America


Antenna Description	Dipole	Desktop	*PCB Mount
Frequency	2.4~2.5GHz		2.4~2.5 GHz 4.9~5.9GHz
Power Output	2W	1W	10W
DB Gain	2dBi	1.8dBi	>2dBi
VSWR	< or = 2.0	1.92 max.	< 2.5
Dimension	108.5 mm x 10.0 mm	105 mm x 4.5 mm	24.13 x 10.67 mm
Weight	10.5g	11g	< 1g
Connector	RP-SMA		U.FL
Part Number	DC-ANT-24DP	DC-ANT-24DT	DC-ANT-24SM
* The PCB mount antenna requires a RP-SMA to U.FL adapter cable(s), or a customized version of the Digi Connect Wi-EM module with an integrated U.FL cable (single antenna). Please contact Digi sales for specific availability information.			

Any antenna matching the in-band and out-of-band signal patterns and strengths of the antenna, whose characteristics are given in the Antenna Description table and the Radiation pattern graphic, may be used with the Digi Connect Wi-EM.


Dipole Antenna Dimensions

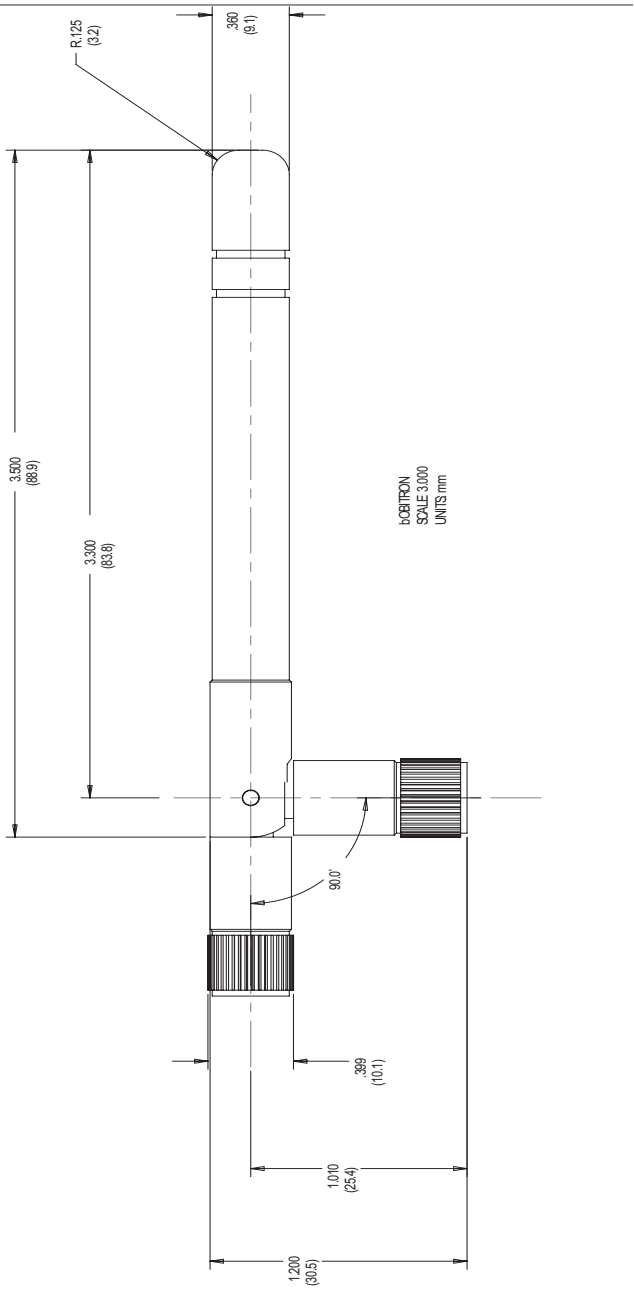

Desktop Antenna Dimensions

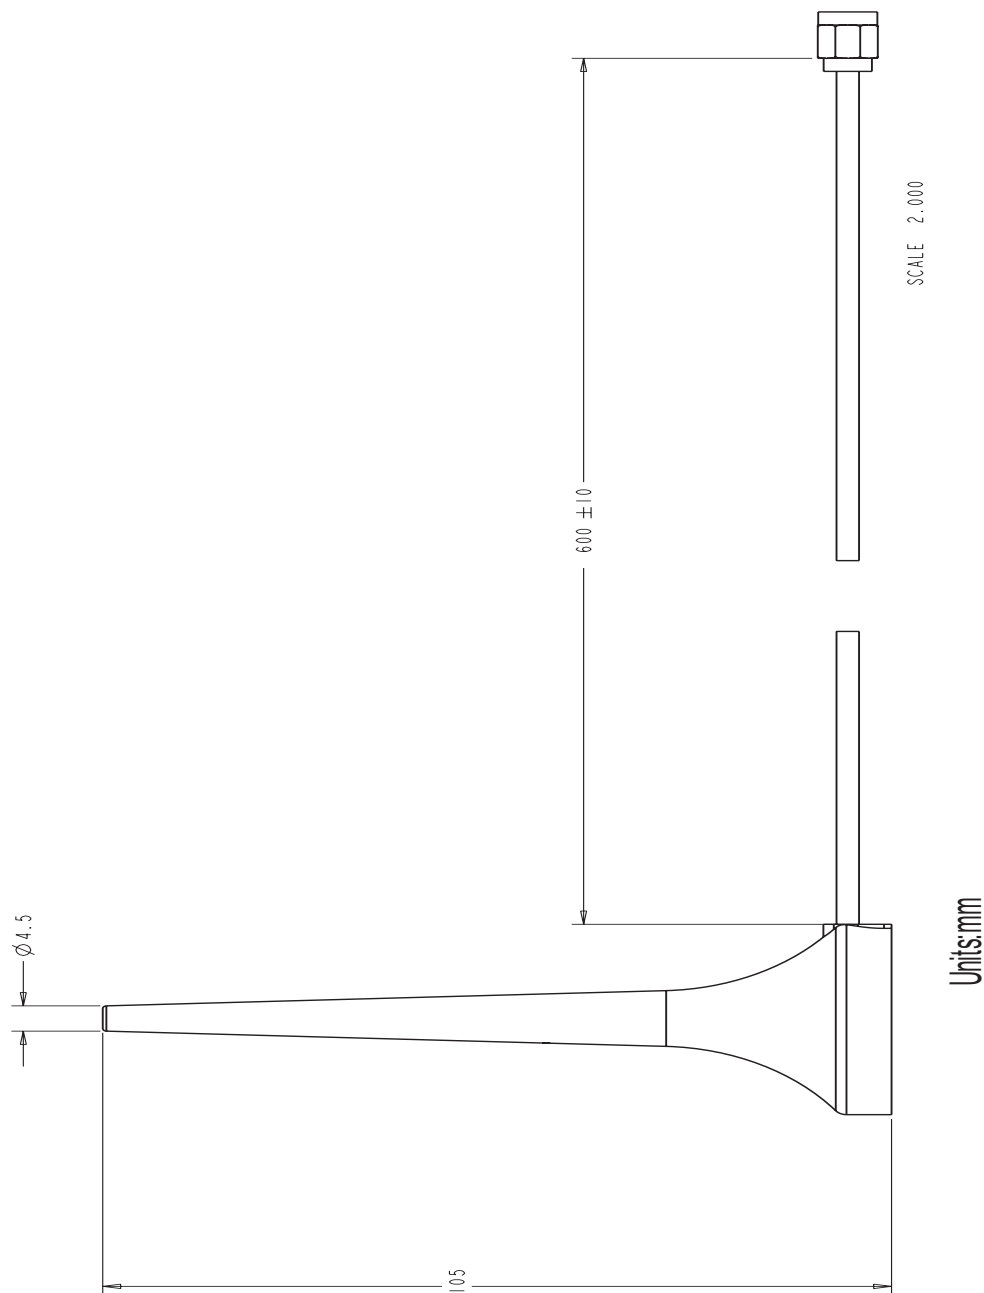

PCB Mount Antenna Dimensions

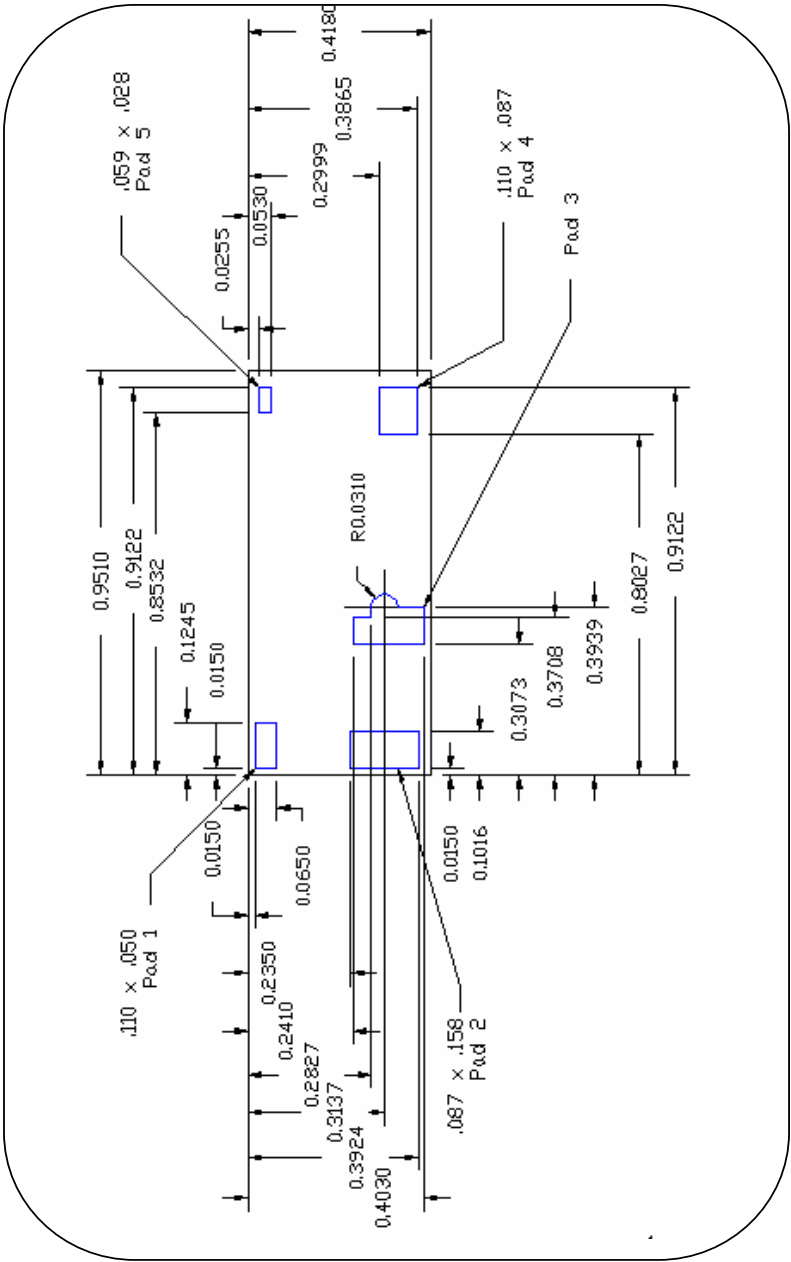

RF Exposure Statement

The Digi Connect Wi-EM module complies with the RF exposure limits for humans as called out in RSS-102. It is exempt from RF evaluation based on its operating frequency of 2.4 GHz, and effective radiated power less than the 3 watt requirement for a mobile device (>20 cm separation) operating at 2.4 GHz.

Safety Statements

To avoid contact with electrical current:

- Never install electrical wiring during an electrical storm.
- Never install an ethernet connection in wet locations unless that connector is specifically designed for wet locations.
- Use caution when installing or modifying ethernet lines.
- Use a screwdriver and other tools with insulated handles.
- You and those around you should wear safety glasses or goggles.
- Do not place ethernet wiring or connections in any conduit, outlet or junction box containing electrical wiring.
- Installation of inside wire may bring you close to electrical wire, conduit, terminals and other electrical facilities. Extreme caution must be used to avoid electrical shock from such facilities. You must avoid contact with all such facilities.
- Ethernet wiring must be at least 6 feet from bare power wiring or lightning rods and associated wires, and at least 6 inches from other wire (antenna wires, doorbell wires, wires from transformers to neon signs), steam or hot water pipes, and heating ducts.
- Do not place an ethernet connection where it would allow a person to use an ethernet device while in a bathtub, shower, swimming pool, or similar hazardous location.
- Protectors and grounding wire placed by the service provider must not be connected to, removed, or modified by the customer.

- Do not touch uninsulated ethernet wiring if lightning is likely!
- Do not touch or move the antenna(s) while the unit is transmitting or receiving.
- Do not hold any component containing a radio such that the antenna is very close to or touching any exposed parts of the body, especially the face or eyes, while transmitting.
- Do not operate a portable transmitter near unshielded blasting caps or in an explosive environment unless it is a type especially qualified for such use

Any *external* communications wiring you may install needs to be constructed to all relevant electrical codes. In the United States this is the National Electrical Code Article 800. Contact a licensed electrician for details.

Certifications

A P P E N D I X B

These products comply with the following standards.

FCC Part 15 Class B

Radio Frequency Interference (RFI)(FCC 15.105)

The Digi Connect EM and Digi Connect Wi-EM embedded modules have been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 Subpart B, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Labeling Requirements (FCC 15.19)

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If the FCC ID / IC ID is not visible when installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module FCC ID / IC ID. This exterior label can use wording such as the following: “Contains Transmitter Module FCC ID: MCQ-50M879” / IC: 1846A-50M879”.

Modifications (FCC 15.21)

Changes or modifications to this equipment not expressly approved by Digi may void the user's authority to operate this equipment.

Industry Canada

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

Declaration of Conformity

(In accordance with FCC Dockets 96-208 and 95-19)

Manufacturer's Name: Digi International

Corporate Headquarters: 11001 Bren Road East
Minnetonka MN 55343

Manufacturing Headquarters: 10000 West 76th Street
Eden Prairie MN 55344

Digi International declares, that the products:

Product Name: Digi Connect EM

Model Numbers: 50000873-xx

Product Name: Digi Connect Wi-EM

Model Numbers: 50000879-xx

to which this declaration relates, meet the requirements specified by the Federal Communications Commission as detailed in the following specifications:

- Part 15, Subpart B, for Class B Equipment
- FCC Docket 96-208 as it applies to Class B personal
- Computers and Peripherals

The products listed above have been tested at an External Test Laboratory certified per FCC rules and has been found to meet the FCC, Part 15, Class B, Emission Limits. Documentation is on file and available from the Digi International Homologation Department.

International EMC Standards

The Digi Connect EM and Digi Connect Wi-EM meet the following standards:

Standards	Digi Connect EM	Digi Connect Wi-EM
Emissions	AS/NZS 3548	AS/NZS 3548 CISPR 22
		Japan IOH 003NY04114 0000 003GZ0463 0000
		FCC Part 15 Subpart C (FCC ID: MCQ-50M879)
		IC RSS 210 (IC:1846A-50M879)
	FCC Part 15 Subpart B ICES-003 EN 55022 EN 61000-4-2 EN 61000-4-3 EN 61000-4-6 EN 301 489-3 EN 300 328 VCCI	
Immunity	EN 55024	
Safety	UL 60950-1 CSA 22.2 No. 60950--1 EN 60950	

Sample Application: TTL Signals to EIA-232

A P P E N D I X C

The following schematic is an example of how to convert the module's TTL signals to EIA-232.

Figure 1 is a block diagram of the RS-232C interface. It shows the connection between a DSI Connect EM Socket, a DSI Connect ME / WME Socket, and a DSI Connect connector. The diagram includes a voltage input section with a 0.1µF capacitor and a 1V source, and a powered Ethernet section with a 0.1µF capacitor and a 5V Ethernet source. The diagram also shows the RS-232C signals and the DSI Connect connector pins.

DSI CONNECT EM SOCKET / DSI ONE EM SOCKET

1. RESET SWITCH
2. IN
3. TXD, RXD, TIL
4. RXD, TIL
5. TXD, TIL
6. RXD, TIL
7. TXD, TIL
8. RXD, TIL
9. TXD, TIL
10. RXD, TIL
11. TXD, TIL
12. RXD, TIL
13. TXD, TIL
14. RXD, TIL
15. TXD, TIL
16. RXD, TIL
17. TXD, TIL
18. RXD, TIL
19. TXD, TIL
20. RXD, TIL
21. TXD, TIL
22. RXD, TIL
23. TXD, TIL
24. RXD, TIL
25. TXD, TIL
26. RXD, TIL
27. TXD, TIL
28. RXD, TIL
29. TXD, TIL
30. RXD, TIL
31. TXD, TIL
32. RXD, TIL
33. TXD, TIL
34. RXD, TIL
35. TXD, TIL
36. RXD, TIL
37. TXD, TIL
38. RXD, TIL
39. TXD, TIL
40. RXD, TIL
41. TXD, TIL
42. RXD, TIL
43. TXD, TIL
44. RXD, TIL
45. TXD, TIL
46. RXD, TIL
47. TXD, TIL
48. RXD, TIL
49. TXD, TIL
50. RXD, TIL
51. TXD, TIL
52. RXD, TIL
53. TXD, TIL
54. RXD, TIL
55. TXD, TIL
56. RXD, TIL
57. TXD, TIL
58. RXD, TIL
59. TXD, TIL
60. RXD, TIL
61. TXD, TIL
62. RXD, TIL
63. TXD, TIL
64. RXD, TIL
65. TXD, TIL
66. RXD, TIL
67. TXD, TIL
68. RXD, TIL
69. TXD, TIL
70. RXD, TIL
71. TXD, TIL
72. RXD, TIL
73. TXD, TIL
74. RXD, TIL
75. TXD, TIL
76. RXD, TIL
77. TXD, TIL
78. RXD, TIL
79. TXD, TIL
80. RXD, TIL
81. TXD, TIL
82. RXD, TIL
83. TXD, TIL
84. RXD, TIL
85. TXD, TIL
86. RXD, TIL
87. TXD, TIL
88. RXD, TIL
89. TXD, TIL
90. RXD, TIL
91. TXD, TIL
92. RXD, TIL
93. TXD, TIL
94. RXD, TIL
95. TXD, TIL
96. RXD, TIL
97. TXD, TIL
98. RXD, TIL
99. TXD, TIL
100. RXD, TIL
101. TXD, TIL
102. RXD, TIL
103. TXD, TIL
104. RXD, TIL
105. TXD, TIL
106. RXD, TIL
107. TXD, TIL
108. RXD, TIL
109. TXD, TIL
110. RXD, TIL
111. TXD, TIL
112. RXD, TIL
113. TXD, TIL
114. RXD, TIL
115. TXD, TIL
116. RXD, TIL
117. TXD, TIL
118. RXD, TIL
119. TXD, TIL
120. RXD, TIL
121. TXD, TIL
122. RXD, TIL
123. TXD, TIL
124. RXD, TIL
125. TXD, TIL
126. RXD, TIL
127. TXD, TIL
128. RXD, TIL
129. TXD, TIL
130. RXD, TIL
131. TXD, TIL
132. RXD, TIL
133. TXD, TIL
134. RXD, TIL
135. TXD, TIL
136. RXD, TIL
137. TXD, TIL
138. RXD, TIL
139. TXD, TIL
140. RXD, TIL
141. TXD, TIL
142. RXD, TIL
143. TXD, TIL
144. RXD, TIL
145. TXD, TIL
146. RXD, TIL
147. TXD, TIL
148. RXD, TIL
149. TXD, TIL
150. RXD, TIL
151. TXD, TIL
152. RXD, TIL
153. TXD, TIL
154. RXD, TIL
155. TXD, TIL
156. RXD, TIL
157. TXD, TIL
158. RXD, TIL
159. TXD, TIL
160. RXD, TIL
161. TXD, TIL
162. RXD, TIL
163. TXD, TIL
164. RXD, TIL
165. TXD, TIL
166. RXD, TIL
167. TXD, TIL
168. RXD, TIL
169. TXD, TIL
170. RXD, TIL
171. TXD, TIL
172. RXD, TIL
173. TXD, TIL
174. RXD, TIL
175. TXD, TIL
176. RXD, TIL
177. TXD, TIL
178. RXD, TIL
179. TXD, TIL
180. RXD, TIL
181. TXD, TIL
182. RXD, TIL
183. TXD, TIL
184. RXD, TIL
185. TXD, TIL
186. RXD, TIL
187. TXD, TIL
188. RXD, TIL
189. TXD, TIL
190. RXD, TIL
191. TXD, TIL
192. RXD, TIL
193. TXD, TIL
194. RXD, TIL
195. TXD, TIL
196. RXD, TIL
197. TXD, TIL
198. RXD, TIL
199. TXD, TIL
200. RXD, TIL
201. TXD, TIL
202. RXD, TIL
203. TXD, TIL
204. RXD, TIL
205. TXD, TIL
206. RXD, TIL
207. TXD, TIL
208. RXD, TIL
209. TXD, TIL
210. RXD, TIL
211. TXD, TIL
212. RXD, TIL
213. TXD, TIL
214. RXD, TIL
215. TXD, TIL
216. RXD, TIL
217. TXD, TIL
218. RXD, TIL
219. TXD, TIL
220. RXD, TIL
221. TXD, TIL
222. RXD, TIL
223. TXD, TIL
224. RXD, TIL
225. TXD, TIL
226. RXD, TIL
227. TXD, TIL
228. RXD, TIL
229. TXD, TIL
230. RXD, TIL
231. TXD, TIL
232. RXD, TIL
233. TXD, TIL
234. RXD, TIL
235. TXD, TIL
236. RXD, TIL
237. TXD, TIL
238. RXD, TIL
239. TXD, TIL
240. RXD, TIL
241. TXD, TIL
242. RXD, TIL
243. TXD, TIL
244. RXD, TIL
245. TXD, TIL
246. RXD, TIL
247. TXD, TIL
248. RXD, TIL
249. TXD, TIL
250. RXD, TIL
251. TXD, TIL
252. RXD, TIL
253. TXD, TIL
254. RXD, TIL
255. TXD, TIL
256. RXD, TIL
257. TXD, TIL
258. RXD, TIL
259. TXD, TIL
260. RXD, TIL
261. TXD, TIL
262. RXD, TIL
263. TXD, TIL
264. RXD, TIL
265. TXD, TIL
266. RXD, TIL
267. TXD, TIL
268. RXD, TIL
269. TXD, TIL
270. RXD, TIL
271. TXD, TIL
272. RXD, TIL
273. TXD, TIL
274. RXD, TIL
275. TXD, TIL
276. RXD, TIL
277. TXD, TIL
278. RXD, TIL
279. TXD, TIL
280. RXD, TIL
281. TXD, TIL
282. RXD, TIL
283. TXD, TIL
284. RXD, TIL
285. TXD, TIL
286. RXD, TIL
287. TXD, TIL
288. RXD, TIL
289. TXD, TIL
290. RXD, TIL
291. TXD, TIL
292. RXD, TIL
293. TXD, TIL
294. RXD, TIL
295. TXD, TIL
296. RXD, TIL
297. TXD, TIL
298. RXD, TIL
299. TXD, TIL
300. RXD, TIL
301. TXD, TIL
302. RXD, TIL
303. TXD, TIL
304. RXD, TIL
305. TXD, TIL
306. RXD, TIL
307. TXD, TIL
308. RXD, TIL
309. TXD, TIL
310. RXD, TIL
311. TXD, TIL
312. RXD, TIL
313. TXD, TIL
314. RXD, TIL
315. TXD, TIL
316. RXD, TIL
317. TXD, TIL
318. RXD, TIL
319. TXD, TIL
320. RXD, TIL
321. TXD, TIL
322. RXD, TIL
323. TXD, TIL
324. RXD, TIL
325. TXD, TIL
326. RXD, TIL
327. TXD, TIL
328. RXD, TIL
329. TXD, TIL
330. RXD, TIL
331. TXD, TIL
332. RXD, TIL
333. TXD, TIL
334. RXD, TIL
335. TXD, TIL
336. RXD, TIL
337. TXD, TIL
338. RXD, TIL
339. TXD, TIL
340. RXD, TIL
341. TXD, TIL
342. RXD, TIL
343. TXD, TIL
344. RXD, TIL
345. TXD, TIL
346. RXD, TIL
347. TXD, TIL
348. RXD, TIL
349. TXD, TIL
350. RXD, TIL
351. TXD, TIL
352. RXD, TIL
353. TXD, TIL
354. RXD, TIL
355. TXD, TIL
356. RXD, TIL
357. TXD, TIL
358. RXD, TIL
359. TXD, TIL
360. RX

Change Log

A P P E N D I X D

The following changes have been made since the last revision of this document.

Revision G

Added tolerances to dimension drawings

Updated Tyco Antenna Specifications

Revision F

Ethernet Pinouts added

Updated Antenna specification

Addressed Vantive 16410 hardware issues

Added product weights

Updated UL labeling description

Revision E

Added Japan certification

Added desktop antenna information

- Improve dipole antenna drawing
- Reformatted tables for easier reading
- Added antenna extension cord information
- Added more receive sensitivity information
- Added reset hold times
- Added VCC *absolute max* ratings
- Added power rise time information
- Combined PCB layouts with improvements



Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Digi International:](#)

[DC-ANT-E-24DP](#) [DC-WEM-02T-C-25](#) [DC-WEM-02T-S](#) [DC-WEM-02T-C](#) [DC-WEM-02T-NC](#) [DC-WEM-02T-NC-25](#)
[DC-WEM-02T-NS](#) [DC-WEM-02T-NS-25](#) [DC-WEM-02T-JT](#) [DC-WEM-02T-S-25](#)