

Switching Power Supply

S8VS (15/30/60/90/120/180/240-W Models)

Wide Range of DIN-Rail Mount Micro Power Supplies with LED Display

- 3-digit, 7-segment LED display shows status at a glance for output voltage, output current, peak current, lifetime years, and run time hours.
- Incorporates a maintenance forecast monitor that displays the remaining life of the power supply, displayed in years.
- Run-time monitor model displays how long the output has been on, displayed in thousands of hours.
- 15 and 30 W models have 22.5 mm width, which saves panel space.
- 60, 90, 120, 180 and 240 W models have LED Displays.
- 90, 120, 180 and 240 W LED models have two outputs; one for undervoltage output and one for either the lifetime monitor or run-time monitor.
- All models are Lead-free.

Approvals

- 15 and 30 W models
cULus, UL508 listed, Class 2 output, Class I Division 2
- 60 W model
cULus, UL508 listed, Class 2 output, SEMI F47
- 90, 120, 180 and 240 W models
cULus, UL508 listed
- All models are CE marked.

Warranty

- All models have a 3-year warranty.



Model Number Structure

Model Number Legend

S8VS-

--	--	--	--	--	--

 1 2 3

1. Power Ratings

015: 15 W
 030: 30 W
 060: 60 W
 090: 90 W
 120: 120 W
 180: 180 W
 240: 240 W

2. Output voltage

05: 5 V
 12: 12 V
 24: 24 V

3. Configuration

15-W, 30-W Models

None: Standard (No Display)

60-W Models

None: Standard (No Display)

A: With maintenance forecast monitor

B: With total run time monitor

90-W, 120-W, 180-W, 240-W Models

None: Standard (No Display)

A: With maintenance forecast monitor and undervoltage alarm (transistor (sinking))

B: With total run time monitor and undervoltage alarm (transistor (sinking))

AP: With maintenance forecast monitor and undervoltage alarm (transistor (sourcing))

BP: With total run time monitor and undervoltage alarm (transistor (sourcing))

Ordering Information

Stock Note: Shaded models are normally stocked.

Power ratings	Input voltage	Output voltage	Output current	Alarm output	Model number	
15 W	100 to 240 VAC	5 V	2.0 A	---	S8VS-01505 (See note 1.)	
		12 V	1.2 A		S8VS-01512	
		24 V	0.65 A		S8VS-01524	
30 W		5 V	4.0 A	---	S8VS-03005 (See note 2.)	
		12 V	2.5 A		S8VS-03012	
		24 V	1.3 A		S8VS-03024	
60 W		24 V	2.5 A	---	S8VS-06024	
					S8VS-06024A	
					S8VS-06024B	
90 W			3.75 A		---	S8VS-09024
					Sinking	S8VS-09024A
					Sourcing	S8VS-09024AP
					Sinking	S8VS-09024B
					Sourcing	S8VS-09024BP
120 W			5 A		---	S8VS-12024
					Sinking	S8VS-12024A
					Sourcing	S8VS-12024AP
					Sinking	S8VS-12024B
					Sourcing	S8VS-12024BP
180 W			7.5 A		---	S8VS-18024
					Sinking	S8VS-18024A
					Sourcing	S8VS-18024AP
					Sinking	S8VS-18024B
					Sourcing	S8VS-18024BP
240 W			10 A		---	S8VS-24024
					Sinking	S8VS-24024A
					Sourcing	S8VS-24024AP
					Sinking	S8VS-24024B
					Sourcing	S8VS-24024BP

Note: 1. The output capacity of the S8VS-01505 is 10 W.
 2. The output capacity of the S8VS-03005 is 20 W.
 3. Optional mounting brackets are shown on page 21.

Specifications

■ Ratings/Characteristics

Item		Power ratings	15 W	30 W
		Type	Standard	Standard
Efficiency (typical)		5-V models	72% min.	70% min.
		12-V models	74% min.	76% min.
		24-V models	77% min.	80% min.
Input	Voltage		100 to 240 VAC (85 to 264 VAC)	
	Frequency		50/60 Hz (47 to 450 Hz)	
	Current	100 V input	0.45 A max.	0.9 A max.
		200 V input	0.25 A max.	0.6 A max.
	Power factor		---	
	Harmonic current emissions		Conforms to EN61000-3-2	
	Leakage current	100 V input	0.5 mA max.	
		200 V input	1.0 mA max.	
	Inrush current (See note 1.)	100 V input	25 A max. (for a cold start at 25°C)	
200 V input		50 A max. (for a cold start at 25°C)		
Output	Voltage adjustment range (See note 2.)		-10% to 15% (with V.ADJ) (guaranteed)	
	Ripple		2.0% (p-p) max. (at rated input/output voltage)	
	Input variation influence		0.5% max. (at 85 to 264 VAC input, 100% load)	
	Load variation influence (rated input voltage)		2.0% max. (5 V), 1.5% max. (12 V, 24 V), (with rated input, 0 to 100% load)	
	Temperature variation influence		0.05%/°C max.	
	Start up time (See note 1.)		100 ms max. (at rated input/output voltage)	1,000 ms max. (at rated input/output voltage)
	Hold time (See note 1.)		20 ms min. (at rated input/output voltage)	
	Additional functions	Overload protection (See note 1.)		105% to 160% of rated load current, voltage drop, automatic reset
Overvoltage protection (See note 1.)		Yes (a zener diode clamp) (See note 3.)	Yes (See note 4.)	
Output voltage indication		No		
Output current indication		No		
Peak-hold current indication		No		
Maintenance forecast monitor indication		No		
Maintenance forecast monitor output		No		
Total run time monitor indication		No		
Total run time monitor output		No		
Undervoltage alarm indication		Yes (color: red)		
Undervoltage alarm output		No		
Parallel operation		No		
Series operation		Models with 24-V output: Possible for up to 2 Power Supplies (with external diode) Models with 5- or 12-V output: Not possible		
Other		Operating ambient temperature		Refer to the derating curve in <i>Engineering Data</i> . (with no icing or condensation)
	Storage temperature		-25 to 65°C	
	Operating ambient humidity		25% to 85% (Storage humidity: 25% to 90%)	
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)	
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/ PE terminals) at 500 VDC	
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions	
	Shock resistance		150 m/s ² , 3 times each in ±X, ±Y, and ±Z directions	
	Output indicator		Yes (color: green)	
	EMI	Conducted Emissions	Conforms to EN61204-3 EN55011 Class B and based on FCC Class A	
		Radiated Emissions	Conforms to EN61204-3 EN55011 Class B	
	EMS		Conforms to EN61204-3 Class B	
	Approved standards		UL: UL508 (Listing; Class 2: Per UL1310), UL60950-1, UL1604 (Class I/Division2) cUL: CSA C22.2 No.14 (Class 2), No.60950-1, No.213 (Class I/Division2) EN/VDE: EN50178 (=VDE0160), EN60950-1 (=VDE0805) SELV (EN60950/EN50178/UL60950-1) According to VDE0106/P100, IP20	
	Weight		160 g max.	180 g max.

- Note:**
1. Refer to the *Engineering Data* section on page 17 for details.
 2. If the V.ADJ adjuster is turned, the voltage will increase by more than +15% of the voltage adjustment range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that the load is not damaged.
 3. The overvoltage protection of the S8VS-015□□□ uses a zener diode clamp. If the internal feedback circuit is destroyed by any chance, the load may be destroyed by the clamped output voltage (approx. 140% to 190% of the rated output voltage).
 4. To reset the protection, turn OFF the power supply for three minutes or longer and then turn the power supply back ON.

Specifications

■ Ratings/Characteristics

Power ratings			60 W			90 W			
Item	Type		Standard	Maintenance forecast monitor	Total run time monitor	Standard	Maintenance forecast monitor	Total run time monitor	
Efficiency (typical)			78% min.			80% min.			
Input	Voltage		100 to 240 VAC (85 to 264 VAC)						
	Frequency		50/60 Hz (47 to 450 Hz)						
	Current	100 V input	1.7 A max.			2.3 A max.			
		200 V input	1.0 A max.			1.4 A max.			
	Power factor		---						
	Harmonic current emissions		Conforms to EN61000-3-2						
	Leakage current	100 V input	0.5 mA max.						
		200 V input	1.0 mA max.						
Output	Inrush current (See note 1.)	100 V input	25 A max. (for a cold start at 25°C)						
		200 V input	50 A max. (for a cold start at 25°C)						
	Voltage adjustment range (See note 2.)		−10% to 15% (with V.ADJ) (guaranteed)						
	Ripple		2.0% (p-p) max. (at rated input/output voltage)						
	Input variation influence		0.5% max. (at 85 to 264 VAC input, 100% load)						
	Load variation influence (rated input voltage)		1.5% max. (with rated input, 0 to 100% load)						
	Temperature variation influence		0.05%/°C max.						
	Start up time (See note 1.)		1,000 ms max. (at rated input/output voltage)						
Hold time (See note 1.)		20 ms min. (at rated input/output voltage)							
Additional functions	Overload protection (See note 1.)		105% to 160% of rated load current, voltage drop, intermittent, automatic reset						
	Overvoltage protection (See notes 1 and 3.)		Yes						
	Output voltage indication (See note 4.)		No	Yes (selectable) (See note 5.)			No	Yes (selectable) (See note 5.)	
	Output current indication (See note 4.)		No	Yes (selectable) (See note 6.)			No	Yes (selectable) (See note 6.)	
	Peak-hold current indication (See note 4.)		No	Yes (selectable) (See note 7.)			No	Yes (selectable) (See note 7.)	
	Maintenance forecast monitor indication (See note 4.)		No	Yes (selectable)	No	No	Yes (selectable)	No	
	Maintenance forecast monitor output		No				Yes (open collector output), 30 VDC max., 50 mA max. (See note 8.)	No	
	Total run time monitor indication (See note 4.)		No	Yes (selectable)		No	Yes (selectable)		
	Total run time monitor output		No				Yes (open collector output), 30 VDC max., 50 mA max. (See note 8.)		
	Undervoltage alarm indication (See note 4.)		No	Yes (selectable)			No	Yes (selectable)	
	Undervoltage alarm output terminals		No				Yes (open collector output) 30 VDC max., 50 mA max. (See note 8.)		
	Parallel operation		No						
	Series operation		Yes for up to 2 Power Supplies (with external diode)						
Other	Operating ambient temperature		Refer to the derating curve in <i>Engineering Data</i> . (with no icing or condensation)						
	Storage temperature		−25 to 65°C						
	Operating ambient humidity		25% to 85% (Storage humidity: 25% to 90%)						
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs/ alarm outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs/ alarm outputs and PE terminals; detection current: 20 mA) 500 VAC for 1 min. (between all outputs and alarm outputs; detection current: 20 mA)						
	Insulation resistance		100 MΩ min. (between all outputs/ alarm outputs and all inputs/ PE terminals) at 500 VDC						
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions						
	Shock resistance		150 m/s ² , 3 times each in ±X, ±Y, and ±Z directions						
	Output indicator		Yes (color: green)						
	EMI	Conducted Emissions	Conforms to EN61204-3 EN55011 Class A and based on FCC Class A Conforms to EN61204-3 EN55011 Class B (See note 9.)						
		Radiated Emissions	Conforms to EN61204-3 EN55011 Class A Conforms to EN61204-3 EN55011 Class B (See note 9.)						
	EMS		Conforms to EN61204-3 Class B						
	Approved standards		UL: UL508 (Listing; Class 2: Per UL1310); UL60950 cUL: CSA C22.2 No.14 (Class 2), No.60950 EN/VDE: EN50178 (=VDE0160), EN60950 (=VDE0805) SELV (EN60950/EN50178/UL60950-1) According to VDE0106/P100, IP20			UL: UL508 (Listing), UL60950 cUL: CSA C22.2 No.14, No.60950 EN/VDE: EN50178 (=VDE0160), EN60950 (=VDE0805) SELV (EN60950/EN50178/UL60950-1) According to VDE0106/P100, IP20			
	Weight		330 g max.			490 g max.			


- Note:**
1. Refer to the *Engineering Data* section on page 17 for details.
 2. If the V.ADJ adjuster is turned, the voltage will increase by more than +15% of the voltage adjustment range (by more than +10% for 240-W models). When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that the load is not damaged.
 3. To reset the protection, turn OFF the power supply for three minutes or longer and then turn the power supply back ON.
 4. Displayed on 7-segment LED. (character height: 8 mm)
 5. Resolution of output voltage indication: 0.1 V, Precision of output voltage indication: ±2% (percentage of output voltage value, ±1 digit)
 6. Resolution of output current indication: 0.1 A; Precision of output current indication: ±5% F.S. ±1 digit max. (specified by rated output voltage)
 7. Resolution of peak-hold current indication: 0.1 A; Precision of peak-hold current indication: ±5% F.S. ±1 digit max. (specified by rated output voltage);
Signal width required for peak-hold current: 20 ms
 8. A Type and B Type: Sinking, AP Type and P Type: Sourcing
 9. To ensure the emission rating, a ferrite ring core should be used in all cabling (TDK HF60T, HF70RH or equivalent model).

Power ratings Type		120 W			180 W			240 W				
		Standard	Maintenance forecast monitor	Total run time monitor	Standard	Maintenance forecast monitor	Total run time monitor	Standard	Maintenance forecast monitor	Total run time monitor		
Item												
Efficiency (typical)		80% min.										
Input	Voltage		100 to 240 VAC (85 to 264 VAC)									
	Frequency		50/60 Hz (47 to 63 Hz)									
	Current	100 V input	1.9 A max.			2.9 A max.		3.8 A max.				
		200 V input	1.1 A max.			1.6 A max.		2.0 A max.				
	Power factor		0.95 min.									
	Harmonic current emissions		Conforms to EN61000-3-2									
	Leakage current	100 V input	0.5 mA max.									
		200 V input	1.0 mA max.									
	Inrush current (See note 1.)	100 V input	25 A max. (for a cold start at 25°C)									
		200 V input	50 A max. (for a cold start at 25°C)									
Output	Voltage adjustment range (See note 2.)		-10% to 15% (with V.ADJ.) (guaranteed)					±10% (with V.ADJ.) (guaranteed)				
	Ripple		2.0% (p-p) max. (at rated input/output voltage)									
	Input variation influence		0.5% max. (at 85 to 264 VAC input, 100% load)									
	Load variation influence (rated input voltage)		1.5% max. (with rated input, 0 to 100% load)									
	Temperature variation influence		0.05%/°C max.									
	Start up time (See note 1.)		1,000 ms max. (at rated input/output voltage)									
	Hold time (See note 1.)		20 ms min. (at rated input/output voltage)									
	Overload protection (See note 1.)		105% to 160% of rated load current, voltage drop, intermittent, automatic reset						105% to 160% of rated load current, voltage drop, auto- matic reset			
Additional func- tions	Overvoltage protection (See notes 1 and 3.)		Yes									
	Output voltage indication (See note 4.)		No	Yes (selectable) (See note 5.)		No	Yes (selectable) (See note 5.)		No	Yes (selectable) (See note 5.)		
	Output current indication (See note 4.)		No	Yes (selectable) (See note 6.)		No	Yes (selectable) (See note 6.)		No	Yes (selectable) (See note 6.)		
	Peak-hold current indication (See note 4.)		No	Yes (selectable) (See note 7.)		No	Yes (selectable) (See note 7.)		No	Yes (selectable) (See note 7.)		
	Maintenance forecast monitor indica- tion (See note 4.)		No	Yes (select- able)	No	No	Yes (select- able)	No	No	Yes (selectable)	No	
	Maintenance forecast monitor output		No	Yes (open collector out- put), 30 VDC max., 50 mA max. (See note 8.)	No	No	Yes (open collector out- put), 30 VDC max., 50 mA max. (See note 8.)	No	No	Yes (open collector out- put), 30 VDC max., 50 mA max. (See note 8.)	No	
	Total run time monitor indication (See note 4.)		No	Yes (selectable)		No	Yes (selectable)		No	Yes (selectable)		
	Total run time monitor output		No	Yes (open collector out- put), 30 VDC max., 50 mA max. (See note 8.)		No	Yes (open collector out- put), 30 VDC max., 50 mA max. (See note 8.)		No	Yes (open collector out- put), 30 VDC max., 50 mA max. (See note 8.)		
	Undervoltage alarm indication (See note 4.)		No	Yes (selectable)		No	Yes (selectable)		No	Yes (selectable)		
	Undervoltage alarm output terminals		No	Yes (open collector output), 30 VDC max., 50 mA max. (See note 8.)		No	Yes (open collector output), 30 VDC max., 50 mA max. (See note 8.)		No	Yes (open collector output), 30 VDC max., 50 mA max. (See note 8.)		
	Parallel operation		No									
	Series operation		Yes for up to 2 Power Supplies (with external diode)									
	Other	Operating ambient temperature		Refer to the derating curve in <i>Engineering Data</i> . (with no icing or condensation)								
		Storage temperature		-25 to 65°C								
Operating ambient humidity		25% to 85% (Storage humidity: 25% to 90%)										
Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs/ alarm outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs/ alarm outputs and PE terminals; detection current: 20 mA) 500 VAC for 1 min. (between all outputs and alarm outputs; detection current: 20 mA)										
Insulation resistance		100 MΩ min. (between all outputs/ alarm outputs and all inputs/ PE terminals) at 500 VDC										
Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions										
Shock resistance		150 m/s², 3 times each in ±X, ±Y, and ±Z directions										
Output indicator		Yes (color: green)										
EMI		Conducted Emissions	Conforms to EN61204-3 EN55011 Class A and based on FCC Class A Conforms to EN61204-3 EN55011 Class B (See note 9.)									
		Radiated Emissions	Conforms to EN61204-3 EN55011 Class A Conforms to EN61204-3 EN55011 Class B (See note 9.)									
EMS		Conforms to EN61204-3 Class B										
Approved standards		UL: UL508 (Listing), UL60950 cUL: CSA C22.2 No.14, No.60950 EN/VDE: EN50178 (=VDE0160), EN60950 (=VDE0805) SELV (EN60950/UL50178/UL60950-1) According to VDE0106/P100, IP20										
Weight		550 g max.			850 g max.			1,150 g max.				


Connections

■ Block Diagrams


S8VS-015□□ (15-W)

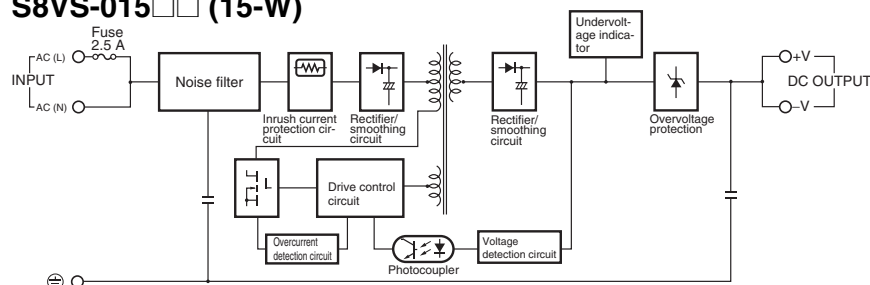


S8VS-030□□ (30-W)

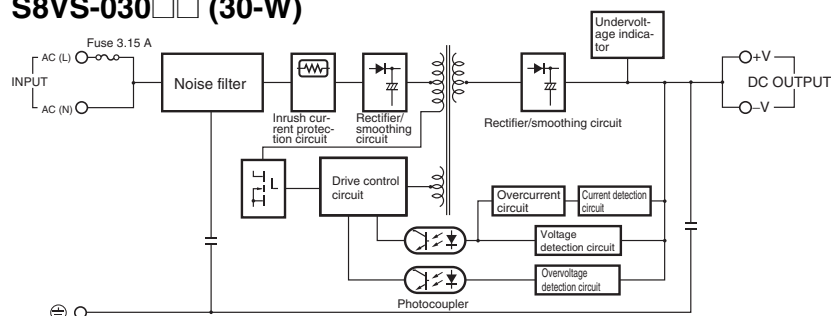


S8VS-06024 (60-W) S8VS-06024□ (60-W)

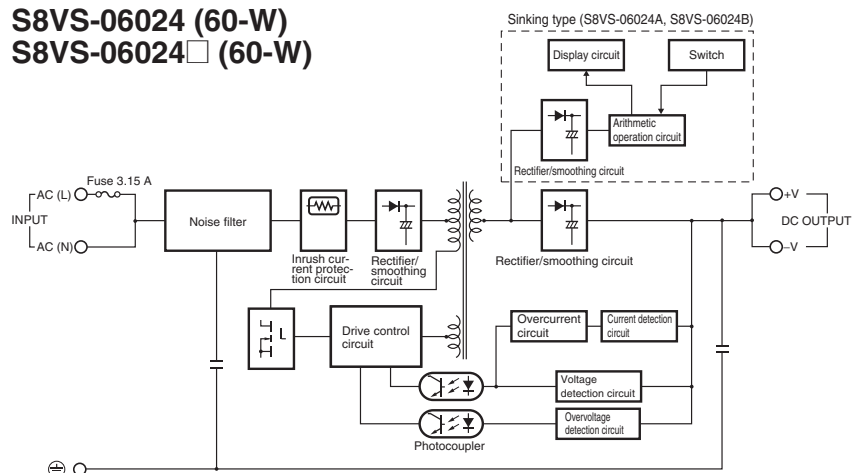


S8VS-09024 (90-W) S8VS-09024□□ (90-W)

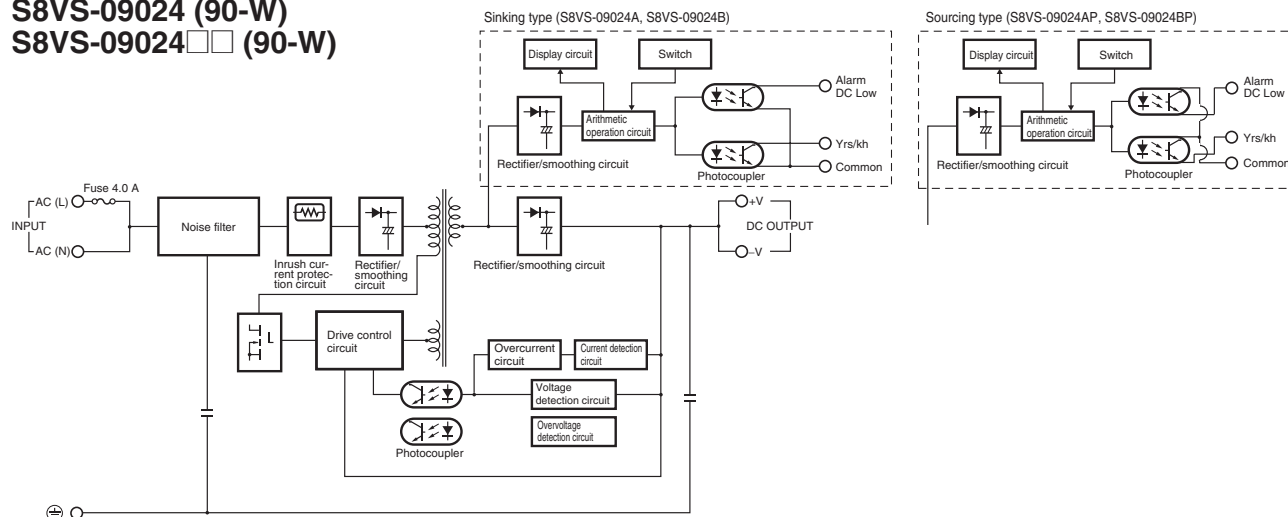


S8VS-12024 (120-W) **S8VS-12024□□ (120-W)**

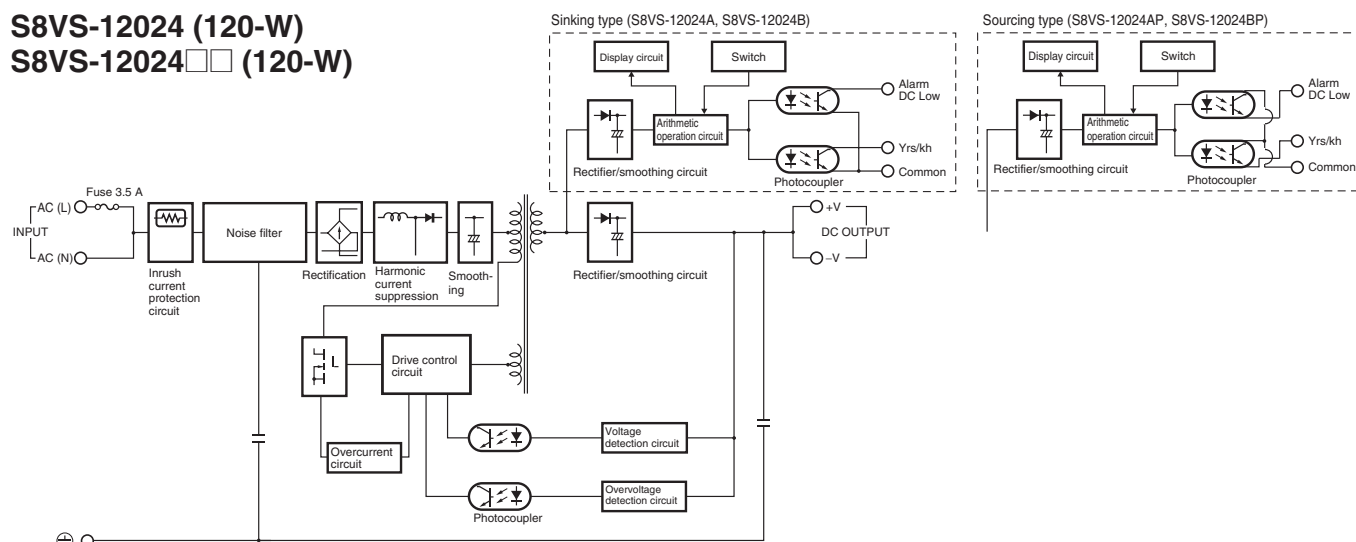

S8VS-18024 (180-W) **S8VS-18024□□ (180-W)**

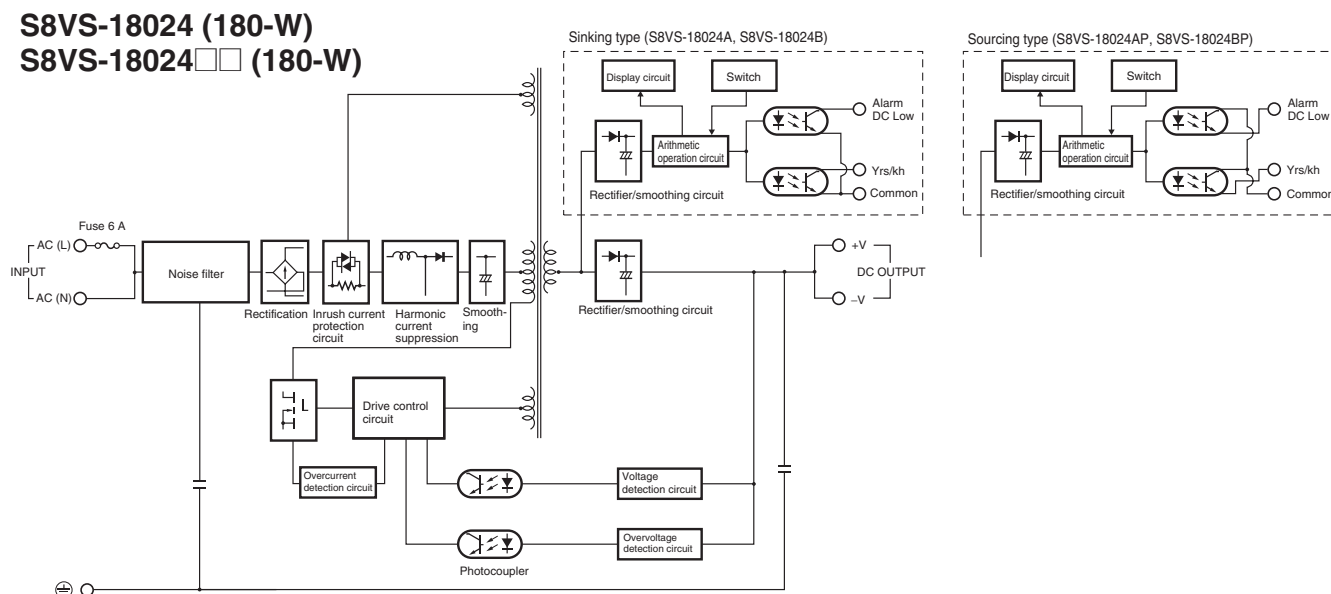

S8VS-24024 (240-W) **S8VS-24024□□ (240-W)**

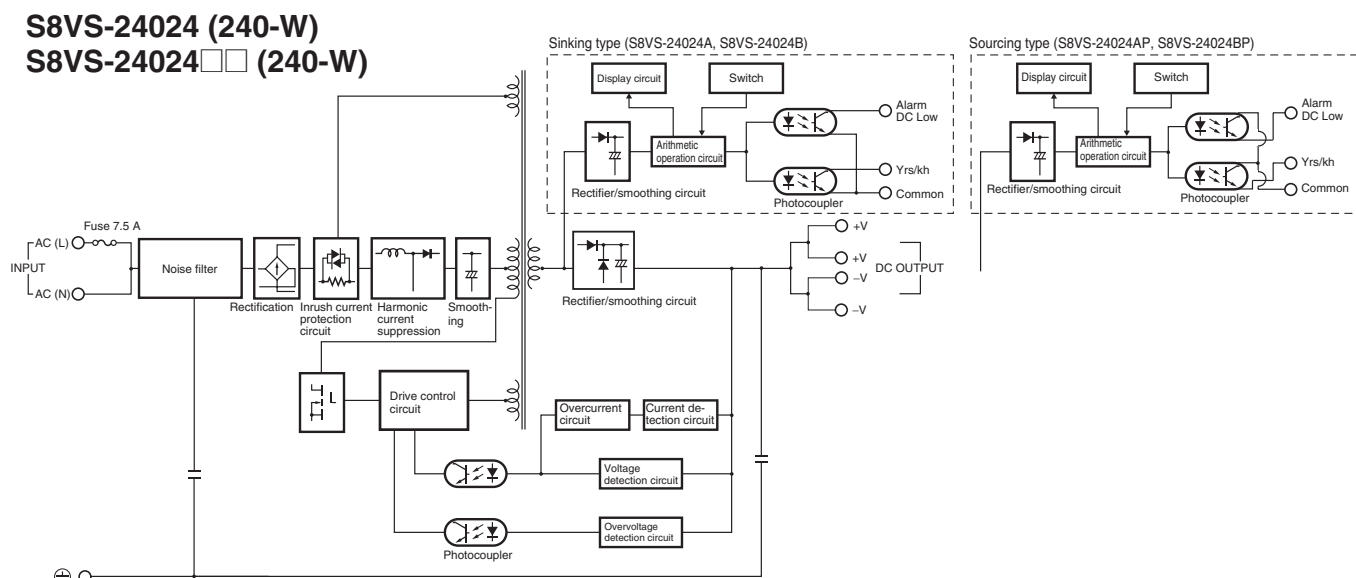


Construction and Nomenclature (15-W, 30-W Models)

Nomenclature

15-W, 30-W Models

S8VS-015□□/S8VS-030□□

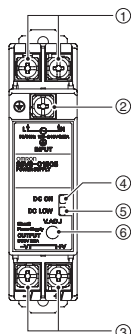

No.	Name	Function
1	AC Input terminals (L), (N)	Connect the input lines to these terminals. (See note 1.)
2	Protective Earth terminal (PE)	Connect the ground line to this terminal. (See note 2.)
3	DC Output terminals (-V), (+V)	Connect the load lines to these terminals.
4	Output indicator (DC ON: Green)	Lights while a direct current (DC) output is ON.
5	Undervoltage indicator (DC LOW: Red)	Lights when a drop is detected in the output voltage.
6	Output voltage adjuster (V.ADJ)	Use to adjust the voltage.

Note: 1. The fuse is located on the (L) side. It is NOT user-replaceable.


2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.

Note: The S8VS-01505 is shown above.

Engineering Data (15-W, 30-W Models)


Derating Curve

S8VS-015□□

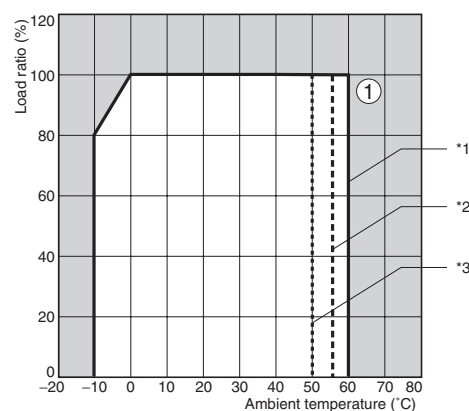

- 1* Standard mounting
- 2* Horizontal mounting
- 3* Mounting facing horizontally

S8VS-03024

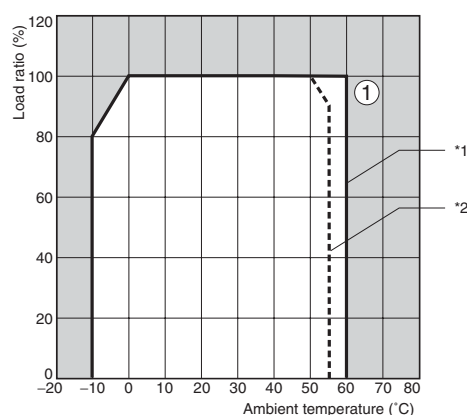


- 1* Standard mounting
- 2* Horizontal mounting/mounting facing horizontally

Note: 1. Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading A in the above graph).

2. If there is a derating problem, use forced air-cooling.


S8VS-03005/S8VS-03012

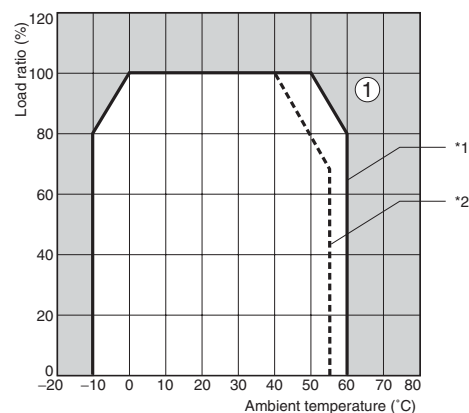


- 1* Standard mounting
- 2* Horizontal mounting/mounting facing horizontally

■ Mounting


Standard mounting with DIN rail

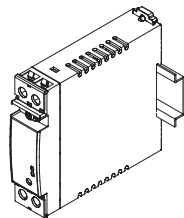


Horizontal mounting with DIN rail

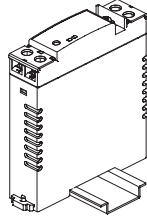


Standard mounting with S82Y-VS30P

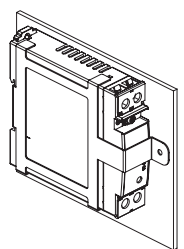

Horizontal mounting with S82Y-VS30P

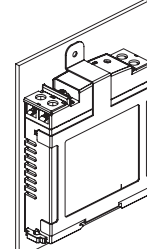

Mounting facing horizontally with S82Y-VS30P*

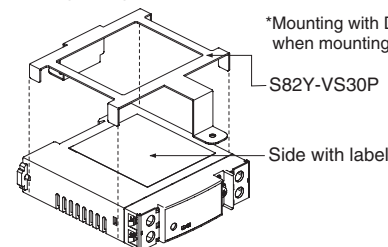


*Mounting with DIN rail is not possible when mounting facing horizontally.

- Note:** 1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the product within the derating curve for the mounting direction that is used. Do not use the Power Supply mounted in any way not shown above.
2. Use a mounting bracket (S82Y-VS30P, sold separately) when the Product is mounted facing horizontally.
3. Heat dissipation will be adversely affected. When the Product is mounted facing horizontally, always place the side with the label facing upward.

■ Overload Protection

The Power Supply is provided with an overload protection function that protects the power supply from possible damage by overcurrent. When the output current rises above 105% min. of the rated current, the protection function is triggered, decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.

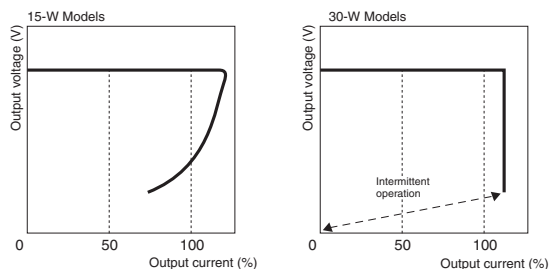


The values shown in the above diagrams are for reference only.

- Note:** 1. Internal parts may occasionally deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.
2. Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

■ Overvoltage Protection


Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the Power Supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF. Reset the Power Supply by turning it OFF for at least three minutes and then turning it back ON again.

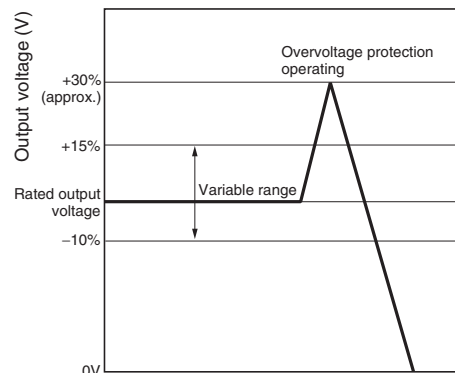

The values shown in the above diagram is for reference only.

- Note:** 1. Do not turn ON the power again until the cause of the overvoltage has been removed.
2. The overvoltage protection of the S8VS-015□□ uses a zener diode clamp. The output voltage will be clamped at approx. 140% or higher of the rated output voltage (approx. 140% to 190%). If the internal feedback circuit is destroyed by any chance, the load may be destroyed by the clamped output voltage (approx. 140% to 190% of the rated output voltage). The power Supply will not restart if the output is turned OFF by the overvoltage protection operation. If this occurs, replace the Power Supply.

■ Inrush Current, Start Up Time, Output Hold Time

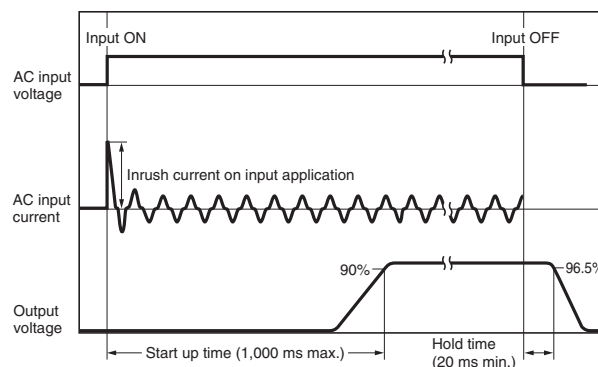

■ Undervoltage Alarm Indication

LED (DC LOW red) lights to warn of output voltage drop.

Detection voltage is set to approx. 80% (75 to 90%) of the rated output voltage.

- Note:** This function monitors the voltage at the power supply output terminals. To check actual voltage, measure voltage on the load side.


Construction and Nomenclature (60-W, 90-W, 120-W, 180-W, and 240-W Models)

Nomenclature

60-W Models


Standard Model

S8VS-06024

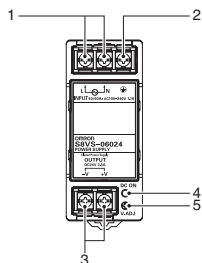

Models with Display Monitor

S8VS-06024□

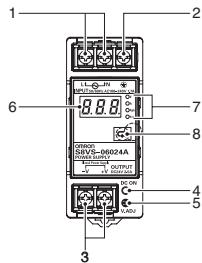


Note: The S8VS-06024A is shown above.

90-W/120-W Models


Standard Models

S8VS-09024/S8VS-12024

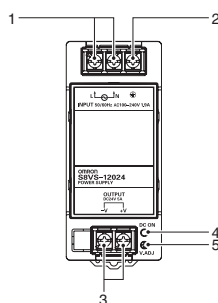

Models with Display Monitor

S8VS-09024□/S8VS-12024□

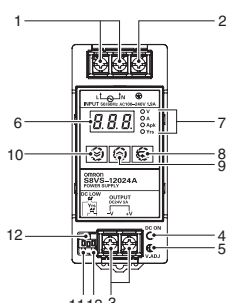


Note: The S8VS-12024A is shown above.

180-W Models


Standard Model

S8VS-18024

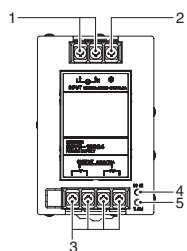

Models with Display Monitor

S8VS-18024□

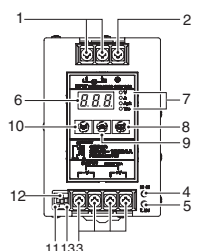


Note: The S8VS-18024A is shown above.

240-W Models


Standard Model

S8VS-24024

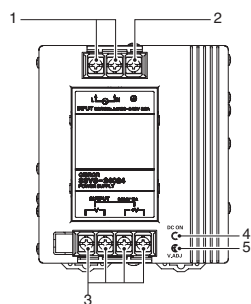

Models with Display Monitor

S8VS-24024□

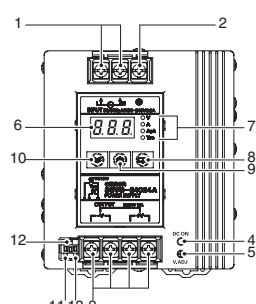

Note: The S8VS-24024A is shown above.

No.	Name	Function
1	AC Input terminals (L), (N)	Connect the input lines to these terminals. (See note 1.)
2	Protective Earth terminal (PE)	Connect the ground line to this terminal. (See note 2.)
3	DC Output terminals (-V), (+V)	Connect the load lines to these terminals.
4	Output indicator (DC ON: Green)	Lights while a direct current (DC) output is ON.
5	Output voltage adjuster (V.ADJ)	Use to adjust the voltage.
6	Main display (Red) (See note 3.)	Indicates the measurement or set value.
7	Operation indicator (Orange) (See note 3.)	V Lights up when the output voltage is indicated. Blinks during setup of undervoltage alarm value.
		A Lights up during indication of output current.
		Apk Lights up during indication of peak hold current.
		Yrs Lights up during indication of maintenance forecast monitor. Blinks during setup of maintenance forecast monitor setting. (S8VS-□□□24A□)
	kh	Lights up during indication of total run time monitor. Blinks during setup of total run time monitor. (S8VS-□□□24B□)
8	Mode Key (See note 3.)	Use the Mode Key to change the indicated parameter or reset the peak hold current value.
9	Up Key (See note 4.)	Use the Up Key to change to the setting mode or to increase the set value.
10	Down Key (See note 4.)	Use the Down Key to change to the setting mode or to decrease the set value.
11	Alarm outputs (See notes 4 and 5.)	Undervoltage output terminal (DC Low) Output when a drop is detected in the output voltage (voltage drop = transistor OFF).
12	Maintenance Forecast output terminal (Yrs) (See note 6.)	Output when the set value for maintenance is reached (transistor OFF).
		Total run time output terminal (kh) (See note 7.) Output when the set value for total run time is reached (transistor OFF).
13	Common terminal	Common terminal (emitter) for terminals 11 and 12.

Note: 1. The fuse is located on the (L) side. It is NOT user-replaceable.

2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.

3. S8VS-□□□24□ only.

4. S8VS-□□□24□ only (excluding S8VS-06024□).

5. Both sinking and sourcing outputs are available.


6. S8VS-□□□24A□ only (excluding S8VS-06024A).

7. S8VS-□□□24B□ only (excluding S8VS-06024B).

Engineering Data (S8VS-□□□24□□ Only)

Mode Change

S8VS-□□□24A□ Models (with display monitor) can display the output voltage, output current, peak hold current, or maintenance forecast monitor time. S8VS-□□□24B□ Models (with display monitor) can display the output voltage, output current, peak hold current, or total run time.

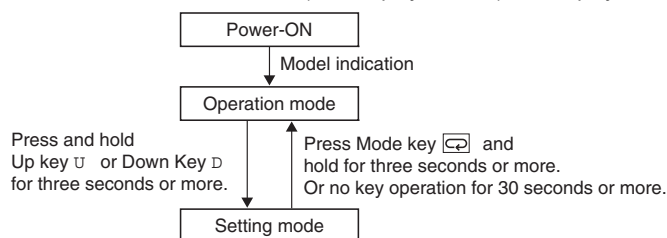


Note: No setting mode is provided for the S8VS-06024□.


Operation Mode

Various states of the Power Supply are indicated.

Models with Maintenance Forecast Monitor (S8VS-□□□24A□)

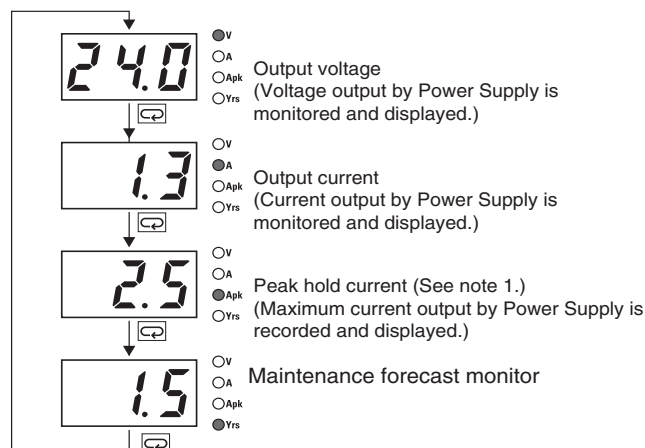

Models with Total Run Time Monitor (S8VS-□□□24B□)

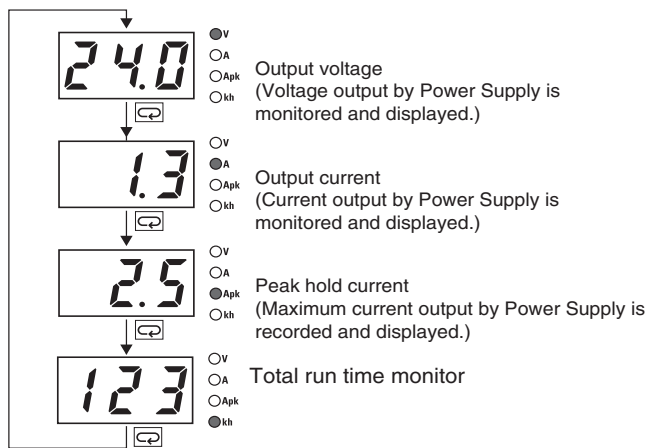


- Note:**
- The peak hold current starts measuring the current 3 seconds after the Power Supply is started. Inrush current is thus not measured.
 - For the factory setting, the output voltage will be displayed when the power supply is first turned ON. Thereafter, the output voltage will be indicated in the same display when shutting down.


Setting Mode (Except for S8VS-06024□)

Set various parameters of the Power Supply.

Models with Maintenance Forecast Monitor (S8VS-□□□24A□)

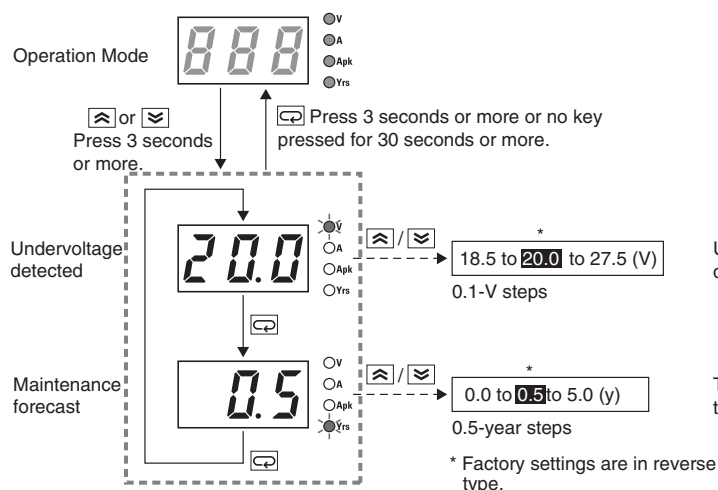


Models with Total Run Time Monitor (S8VS-□□□24B□)

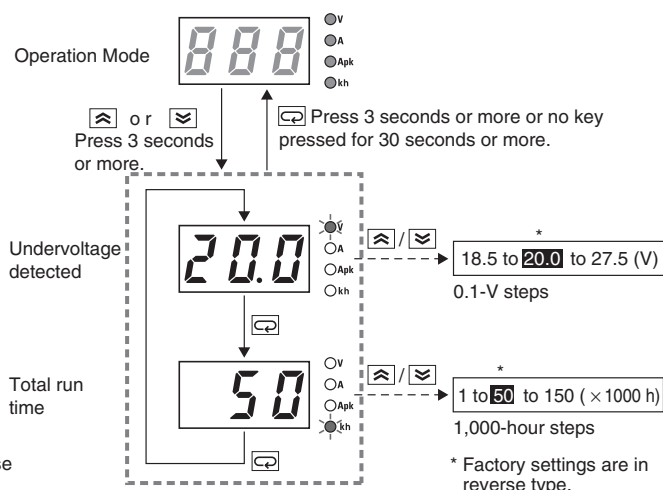

- Note:**
- Press and hold the (9) Up Key U or (10) Down Key D for two seconds or more to increase or decrease the value rapidly.
 - The S8VS-06024□ is not provided with the setting mode and its parameters are fixed at the shipment setting.

■ Peak Hold Current Reset


The peak value of the output current (i.e., the peak hold current) can be reset on the display.

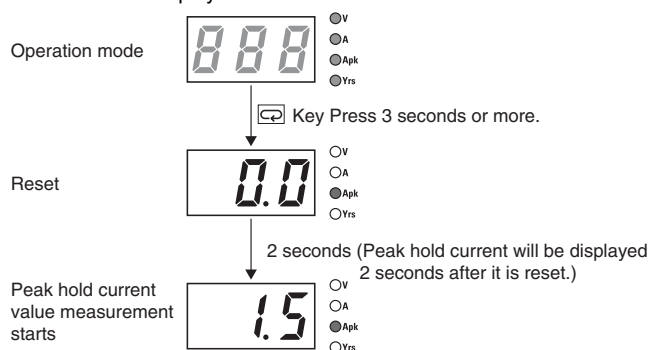

Note: The peak hold current value is not reset in the setting mode.

■ Undervoltage Alarm Indication

This indicator lights when the output voltage is insufficient.

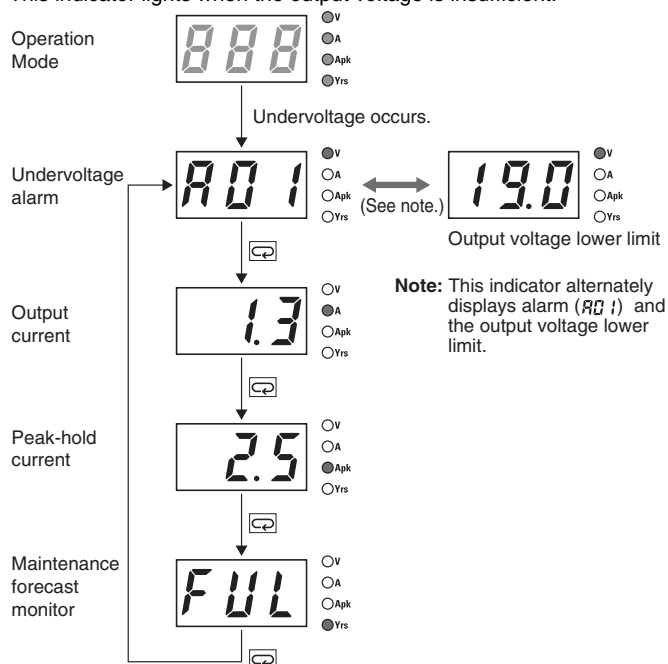


Note: 1. The display changes to the output voltage display when the voltage is restored to the set value or higher.

2. The above displays are for models with a maintenance forecast monitor (S8VS-□□□24A□).

■ Multiple Alarms

When two or more different alarms occur at the same time

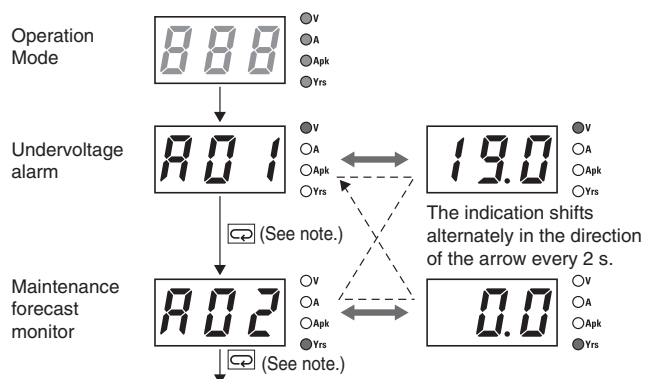

Note: 1. When undervoltage alarm is indicated: Press → output load indication When the maintenance forecast monitor or overheat alarm is indicated: Press → undervoltage alarm indication

2. The above displays are for models with a maintenance forecast monitor (S8VS-□□□24A□).

■ Self-Diagnostics Function


Numbers in the following table indicate the number used in *Nomenclature* on pages 8 and 10.

(6) Main display	Description	Output status	Restoration method	Setting after restoration
- - -	Noise detected in voltage or current	No change	Automatic restoration	No change
Hot	Overheated	(12) Maintenance forecast output terminal (Yrs) turns OFF.	Automatic restoration	No change
E01	Undervoltage alarm set value memory error	(11) Undervoltage output terminal (DC LOW) turns OFF.	Press and hold the (9) Up Key U or (10) Down Key D for three seconds and check the set value of the corresponding point. The set value must return to the shipment setting	Shipment setting or value set in the setting mode again
E02	Memory error of alarm set value of maintenance forecast monitor or total run time monitor	(12) Maintenance forecast output terminal (Yrs) turns OFF or total run time output terminal (kh) turns OFF.		
E03	Other memory error	(11) Undervoltage output terminal (DC LOW) turns OFF. (12) Maintenance forecast output terminal (Yrs) turns OFF or total run time output terminal (kh) turns OFF.	Turn the AC input OFF then ON again. If the product is not reset, contact the dealer.	No change

- Note:**
1. External noise is probable as a cause of “- - -”, “E01”, “E02” and “E03” errors.
 2. Operation out of the derating curve area, ventilation error, and incorrect mounting direction are probable as a cause of “Hot” error.
 3. If the “Hot” error state continues for more than three hours, the maintenance forecast monitor function becomes invalid. The Yrs output ((12) Maintenance forecast output terminal (Yrs)) will remain OFF (no continuity between (12) Maintenance forecast output terminal (Yrs) and (13) Alarm output common terminal).
Replace the power supply if this condition occurs even if the output is correct, as internal parts may be deteriorated.
 4. The “Hot” error detection function is only for the S8VS-□□□24A□.

■ Maintenance Forecast (S8VS-□□□24A□)

Displays when the maintenance forecast has reached the set value.

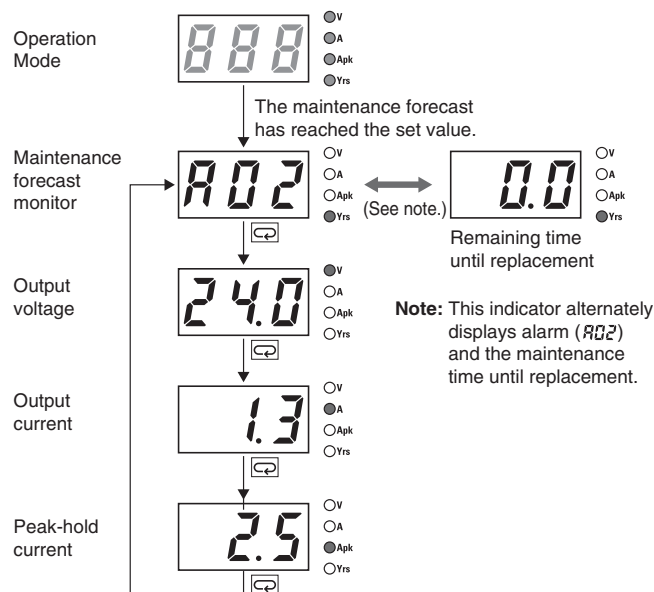

■ Indication and Output

When the product is purchased, "FUL" will be indicated. As electrolytic capacitors deteriorate, indication changes to "HLF". "FUL" will be indicated for the maintenance forecast display for approximately one month after the Power Supply is first turned ON. The accumulated value will then be displayed depending on the ambient conditions thereafter. (However, the "HLF" indication may not appear, depending on the usage environment and the set value for maintenance forecast.)

S8VS-06024A:

After the remaining time to maintenance is reduced to less than two years, indication automatically changes to a value, which decreases from "1.5" to "1.0" to "0.5" to "0.0" (year) as the running hours increase. If the remaining time becomes less than 0.5 year, an alarm (A02) and "0.0" are indicated alternately.

S8VS-09024A□/S8VS-12024A□, S8VS-18024A□/S8VS-24024A□:

If the maintenance forecast setting L (which can be set arbitrarily from 0.0 to 5.0 years in 0.5-year steps) is set to a value larger than two years, the indication automatically changes to a value (L - 0.5) after the remaining time to maintenance is reduced to the set years, and an alarm (A02) and the remaining time are indicated alternately.

If the setting is less than 2.0 years, the indication changes to a value (1.5) after the remaining time becomes less than two years, and after the remaining time becomes less than the set time, an alarm (A02) and the remaining time (L - 0.5) are indicated alternately.

If the alarm (A02) and a numeric value are indicated alternately, a transistor ((12) maintenance forecast output terminal (Yrs)) will turn OFF to indicate the need for maintenance. (The transistor turns OFF when the maintenance forecast time is reached, i.e., there will be no continuity between (12) maintenance forecast output terminal (Yrs) and (13) alarm output common terminal.)



- Note:**
1. The remaining time to maintenance is based on continuous operation, not including the time when the power supply is turned OFF.
 2. "FUL" will be indicated until approximately one month of time is accumulated to estimate the speed of deterioration and the output will remain ON (continuity between (12) maintenance forecast output terminal (Yrs) and (13) alarm output common terminal).
 3. For details on the display, refer to *Relationship between Indication Value and Outputs of Set Value under Maintenance Forecast Monitor Function*.

Maintenance Forecast Monitor Function

The Power Supply is equipped with electrolytic capacitors.

The electrolyte inside the electrolytic capacitor penetrates the sealing rubber and evaporates as time passes since it is manufactured, which causes deterioration of characteristics such as decreasing the capacitance, etc.


Due to this deterioration of the characteristics of the electrolytic capacitor, the Power Supply decreases its performance as time passes.

The maintenance forecast monitor function shows an approximate period left for maintenance of the Power Supply due to deterioration of electrolytic capacitors. When the period left for maintenance that the power supply forecasts reaches the set value, an alarm is indicated and an output signal is triggered.

Use this function to know the approximate replacement timing of the Power Supply.

Note: The maintenance forecast monitor function indicates an approximate period left for maintenance, based on deterioration of the electrolytic capacitor. It does not predict failures caused by other reasons.

Relationship between Indicated Values and Output of Set Values

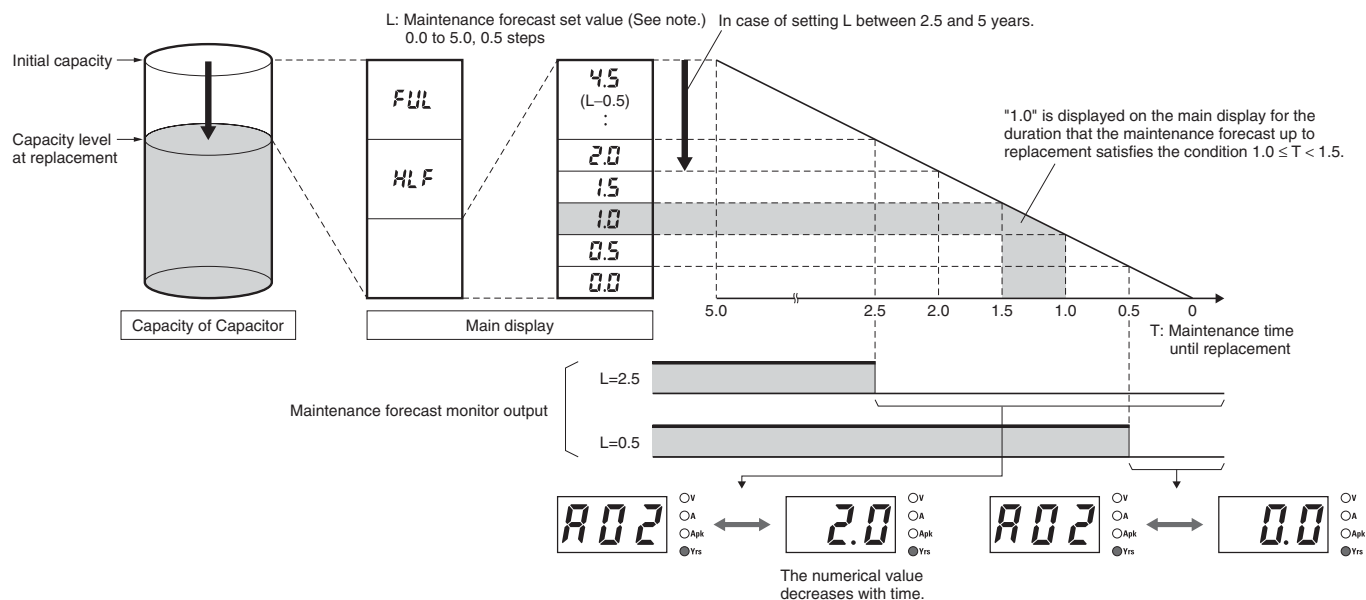

Note: This function can be set only on the S8VS-09024A□, S8VS-12024A□, S8VS-18024A□, and S8VS-24024A□.

Principle of Operation

The deterioration speed of the electrolytic capacitor varies considerably according to the ambient temperature. (Generally the speed follows "Rule of Two for every 10°C"; for every 10°C increase in temperature the rate of degradation doubles according to Arrhenius's equation.) The S8VS-□□□24A□ monitors the temperature inside the power supply, and calculates the amount of deterioration according to the running hours and inside temperature. Judging by this amount of deterioration, the power supply will give the alarm indication and output when the period left for maintenance reaches the set value.

- Note:**
1. Due to degradation of internal electronic parts, replace the power supply approximately 15 years after purchase even if indication and output of maintenance forecast monitor are not issued.
 2. The maintenance forecast is accelerated or decelerated according to operating conditions. Periodically check indication.
 3. Acceleration or deceleration of the maintenance forecast may cause the output to repeatedly go ON/OFF. Only the S8VS-09024A□, S8VS-12024A□, S8VS-18024A□, and S8VS-24024A□ are equipped with output.
 4. The accuracy of the maintenance forecast function may be adversely affected by applications in which the AC input is frequently turned ON/OFF.

Reference Values

Item	Value	Definition
Reliability (MTBF)	135,000 hrs min.	MTBF stands for Mean Time Between Failures, which is calculated according to the probability of accidental device failures, and indicates reliability of devices. Therefore, it does not necessarily represent a life of the product.
Life expectancy	10 yrs. min.	The life expectancy indicates average operating hours under the ambient temperature of 40°C and a load rate of 50%. Normally this is determined by the life expectancy of the built-in aluminum electrolytic capacitor.

Note: The maintenance forecast is the service life (the power supply's internal temperature is monitored at all times) of the internal electrolytic capacitor in actual operating conditions, and varies according to the customer's operating conditions. 15 years is taken as the maximum period of the maintenance forecast.


■ Models with Total Run Time Monitor (S8VS-□□□24B□)

S8VS-06024B

The accumulated value of the operating time of the Power Supply is displayed as the total run time. 0 (kh) will be displayed initially after purchase and then the display will advance in 1-kh steps as the operating time accumulates. The S8VS-06024B, however, does not have an alarm function (setting, display, or output).

S8VS-09024B□/S8VS-12024B□/ S8VS-18024B□/S8VS-24024B□

The display will appear when the set value for the total run time has been reached.

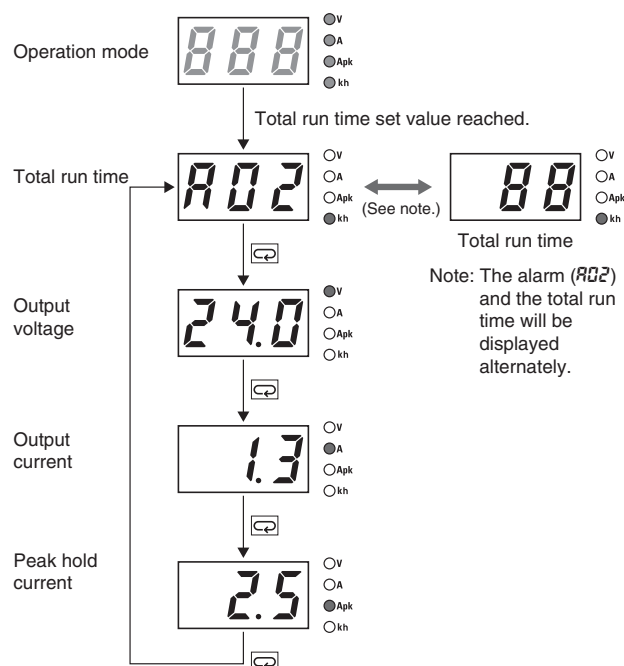

The accumulated value of the operating time of the Power Supply is displayed as the total run time. 0 (kh) will be displayed initially after purchase and then the display will advance in 1-kh steps as the operating time accumulates. When the total run time reaches the preset alarm set value, the alarm (AO2) and the total run time will be displayed alternately and a transistor ((12) total run time output terminal (kh)) will output the status externally.

(Alarm set value reached = OFF, i.e., no continuity between (12) total run time output terminal (kh) and (13) alarm output common terminal)


The alarm set value can be changed in the setting mode.

Example: Alarm Displays When a Total Run Time Set Value of 88 kh Is Reached



Note: The total run time cannot be reset. To clear the alarm, change the alarm set value to a value higher than the value displayed for the total run time.

Time Chart

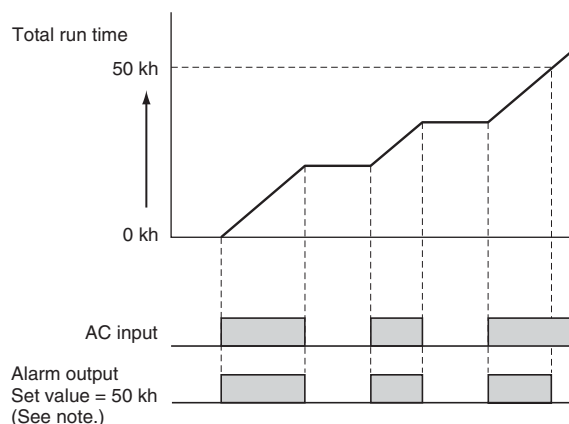


Note: Setting is possible for the following models only:
S8VS-09024B□, S8VS-12024B□, S8VS-18024B□,
S8VS-24024B□

- Note:**
1. The total run time does not include the time that the Power Supply is OFF.
 2. The total run time measures the total time that power is being supplied and is not related in any way to deterioration in the electrolytic capacitor built into the Power Supply or to the effects of the ambient temperature.

Engineering Data (60-W, 90-W, 120-W, 180-W, 240-W Models)

Derating Curve

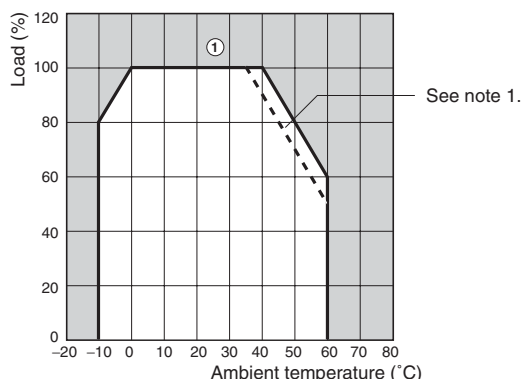


Note: 1. Using side mounting bracket for right-side mounting (excluding 240-W Models).

2. Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading A in the above graph),

3. If there is a derating problem, use forced air-cooling.


Mounting

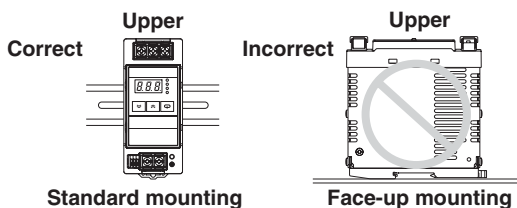

Note: Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. It may also result in failure of the maintenance forecast monitor function. Use the standard mounting method only.

Overload Protection

The Power Supply is provided with an overload protection function that protects the power supply from possible damage by overcurrent. When the output current rises above 105% min. of the rated current, the protection function is triggered, decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.

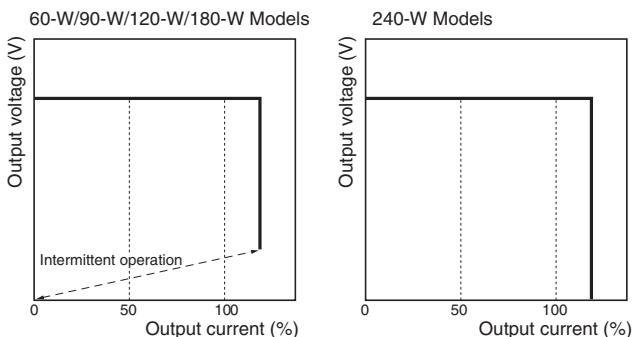


The values shown in the above diagrams are for reference only.

Note: 1. Internal parts may occasionally deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.

2. Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

Overvoltage Protection


Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the Power Supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF. Reset the Power Supply by turning it OFF for at least three minutes and then turning it back ON again.

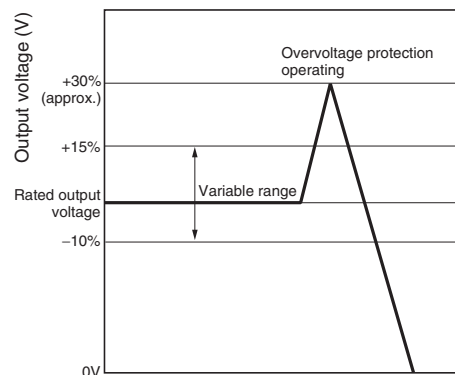

The values shown in the above diagram is for reference only.

Note: Do not turn ON the power again until the cause of the overvoltage has been removed.

Inrush Current, Start Up Time, Output Hold Time

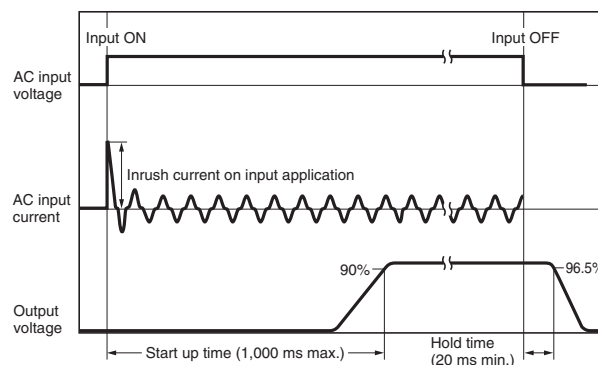

■ Undervoltage Alarm Function (Indication and Output) (S8VS-□□□24□□ Only)

When output voltage drop is detected, an alarm (*RD I*) and lowest output voltage value are indicated alternately. The preset value of detection voltage can be changed in the setting mode.


(From 18.5 to 27.5 V (18.5 to 26.3 V for the S8VS-24024□□), in 0.1-V steps. The value is fixed at 20.0 V for the S8VS-06024□.)

Further, an output ((11) undervoltage output terminal (DC LOW)) to an external device is given from the transistor to notify of the error (excluding S8VS-06024□). (Output voltage drop = OFF, i.e., no continuity between (11) undervoltage output terminal (DC LOW) and (13) alarm output common terminal.)

Example: Outputting an Alarm When the Voltage Output by the S8VS-09024□□ Drops to the Set Value (19.0 V) or Lower



- Note:**
1. Operation begins after about three seconds since the AC power is supplied.
 2. The alarm is not indicated in the setting mode.
 3. Press the ((8) Mode Key) after the output voltage is restored, to reset alarm indication.
 4. The undervoltage alarm function monitors the output terminal voltage of the Power Supply. To check the voltage accurately, measure the voltage at the load end.

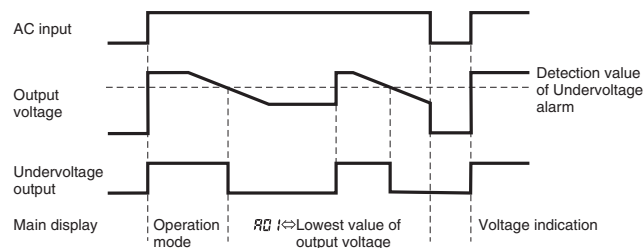


- Note:**
1. Operation begins after about three seconds since the AC power is supplied.
 2. The undervoltage alarm function may also operate when an interruption in AC input is not restored within 20 ms.

Dimensions


Note: All units are in millimeters unless otherwise indicated.

S8VS-015 (15-W)
S8VS-030 (30-W)

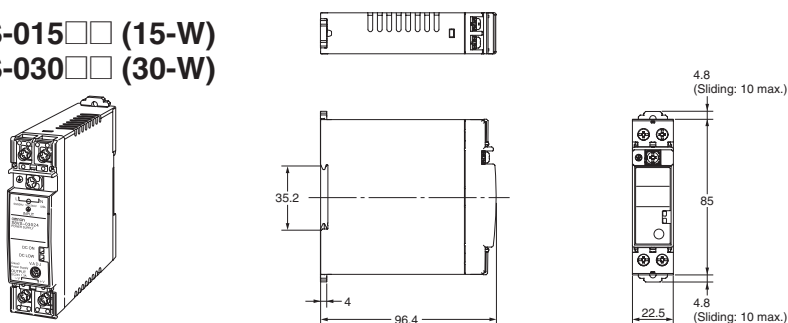


Note: The illustration is the S8VS-03024 Model.

S8VS-06024 (60-W)
S8VS-06024 (60-W)

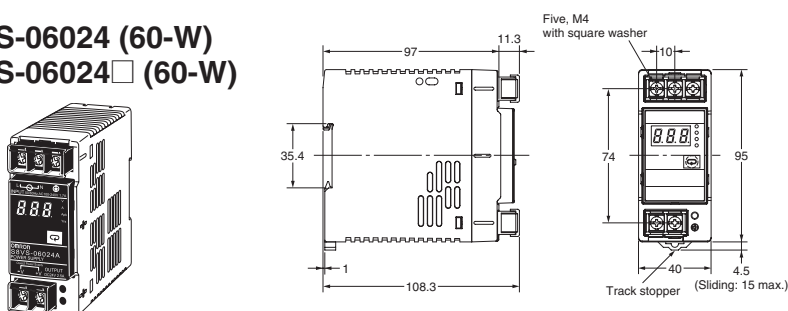


Note: The illustration is the S8VS-06024A Model.

S8VS-09024 (90-W)/**S8VS-12024** (120-W)
S8VS-09024 (90-W)/**S8VS-12024** (120-W)

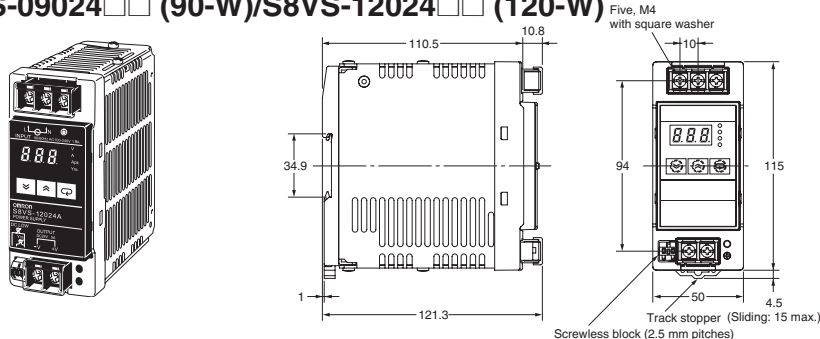




Note: The illustration is the S8VS-12024A Model.

S8VS-18024 (180-W)
S8VS-18024 (180-W)

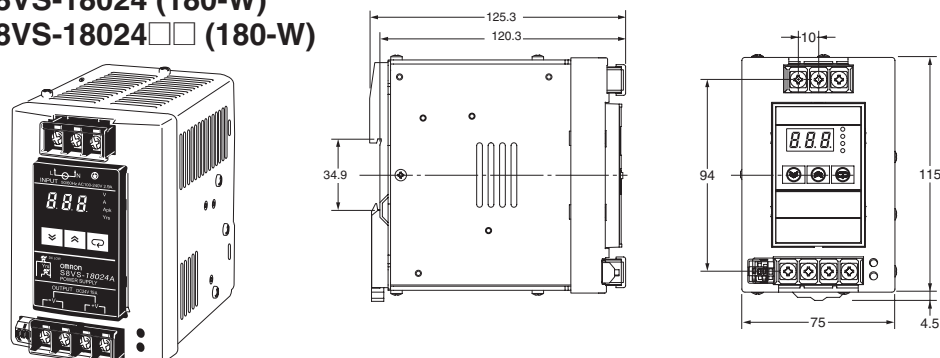

Note: The illustration is the S8VS-18024A Model.

S8VS-24024 (240-W) S8VS-24024□□ (240-W)

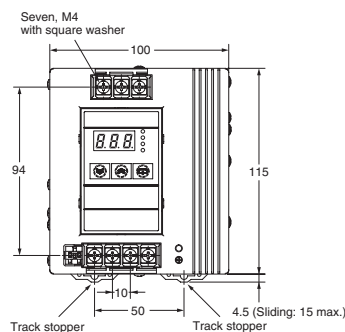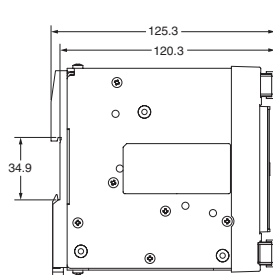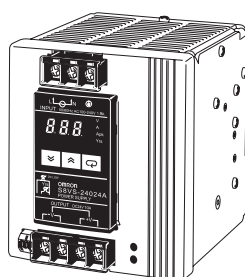



Note: The illustration is the S8VS-24024A Model.

■ DIN Rail (Order Separately)

Note: All units are in millimeters unless otherwise indicated.



Mounting Rail (Material: Aluminum)

PFP-100N PFP-50N

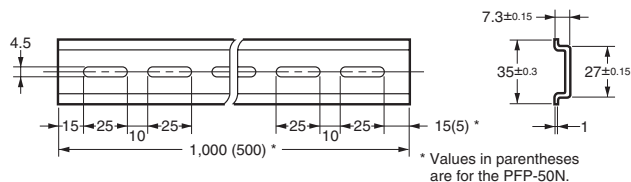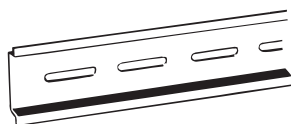



Mounting Rail (Material: Aluminum)

PFP-100N2

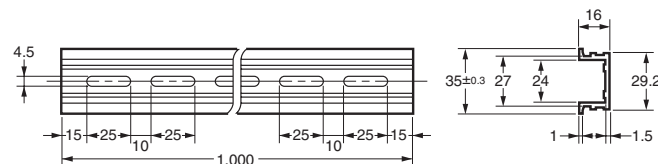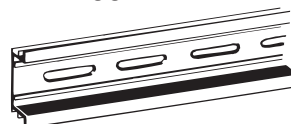

End Plate

PFP-M

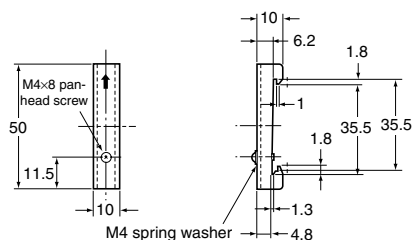

■ Mounting Brackets

Stock Note: Shaded models are normally stocked.

Name	Model
Side-mounting Bracket (for 15- and 30-W models)	S82Y-VS30P
Side-mounting Bracket (for 60-, 90-, and 120-W models)	S82Y-VS10S
Side-mounting Bracket (for 180-W models)	S82Y-VS15S
Side-mounting Bracket (for 240-W models)	S82Y-VS20S
Front-mounting Bracket (for 60-, 90-, 120-, 180-, and 240-W models) (See note.)	S82Y-VS10F

Note: Two required to mount a 240-W model.

Type	Model	Dimensions	Appearance
Side-mounting Bracket (For 15-, 30-W models)	S82Y-VS30P		
Side-mounting Bracket (For 60-, 90-, 120-W models)	S82Y-VS10S		Left-side mounting Right-side mounting
Side-mounting Bracket (For 180-W models)	S82Y-VS15S		Left-side mounting *Right-side mounting also possible.
Side-mounting Bracket (For 240-W models)	S82Y-VS20S		Left-side mounting *Right-side mounting also possible.
Front-mounting Bracket (For 60-, 90-, 120-, 180-, and 240-W models)	S82Y-VS10F		(For 60-, 90-, 120-, 180-W types) (For 240-W type) *Use two S82Y-VS10F brackets for the 240-W type.

Safety Precautions

CAUTION

Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product or touch the interior of the Product.



Minor burns may occasionally occur. Do not touch the Product while power is being supplied or immediately after power is turned OFF.



Fire may occasionally occur. Tighten terminal screws to the specified torque (15 and 30 W Models: 0.8 to 1.0 N·m 60, 90, 120, 180, and 240 W Models: 1.08 N·m).



Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied. Always close the terminal cover after wiring.



Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.




Precautions for Safe Use

Mounting

Take adequate measures to ensure proper heat dissipation to increase the long-term reliability of the product. Be sure to allow convection in the atmosphere around devices when mounting. Do not use in locations where the ambient temperature exceeds the range of the derating curve.

When cutting out holes for mounting, make sure that cuttings do not enter the interior of the products.

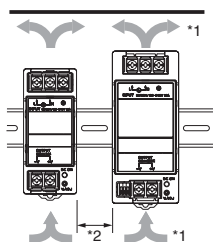

*1. Convection of air
*2. 20 mm min.

(15-W and 30-W Models)

Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the product within the derating curve for the mounting direction that is used.

Use a mounting bracket when the product is mounted facing horizontally.

Heat dissipation will be adversely affected. When the product is mounted facing horizontally, always place the side with the label facing upward.

Always provide a space of 20 mm even when mounting horizontal or facing horizontal.

(60-W, 90-W, 120-W, 180-W and 240-W Models)

Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.

Wiring

Connect the ground completely. A protective earthing terminal stipulated in safety standards is used. Electric shock or malfunction may occur if the ground is not connected completely.

Minor fire may possibly occur. Ensure that input and output terminals are wired correctly.

Do not apply more than 100 N force to the terminal block when tightening it.

Be sure to remove the sheet covering the product for machining before power-ON so that it does not interfere with heat dissipation.

Use the following material for the wires to be connected to the S8VS to prevent smoking or ignition caused by abnormal loads.

Recommended Wire Type

15-W and 30-W Models

Model	Stranded wire	Solid wire
S8VS-03005	AWG18 to 14 (0.9 to 2.0 mm ²)	AWG18 to 16 (0.9 to 1.1 mm ²)
Other models	AWG20 to 14 (0.5 to 2.0 mm ²)	AWG20 to 16 (0.5 to 1.1 mm ²)

60-W, 90-W, 120-W, 180-W and 240-W Models

Model	Recommended wire size	
	For screw terminal	For alarm output terminal
S8VS-06024□	AWG14 to 20 (Cross section 0.517 to 2.081mm ²)	---
S8VS-09024□□ S8VS-12024□□ S8VS-18024□□ S8VS-24024□□	AWG14 to 18 (Cross section 0.823 to 2.081mm ²)	AWG18 to 28 (Cross section 0.081 to 0.823mm ²)

Installation Environment

Do not use the Power Supply in locations subject to shocks or vibrations. In particular, install the Power Supply as far away as possible from contactors or other devices that are a vibration source.

Install the Power Supply well away from any sources of strong, high-frequency noise and surge.

Operating Life

The life of a Power Supply is determined by the life of the electrolytic capacitors used inside. Here, Arrhenius Law applies, i.e., the life will be cut in half for each rise of 10°C or the life will be doubled for each drop of 10°C. The life of the Power Supply can thus be increased by reducing its internal temperature.

Ambient Operating and Storage Environments

Store the Power Supply at a temperature of -25 to 65°C and a humidity of -25% to 90%.

Do not use the Power Supply in areas outside the derating curve otherwise, internal parts may occasionally deteriorate or be damaged.

Use the Power Supply at a humidity of 25% to 85%.

Do not use the Power Supply in locations subject to direct sunlight.

Do not use locations where liquids, foreign matter, or corrosive gases may enter the interior of products.

S8VS-□□□24A□ Models only

Satisfy the following conditions when storing the Power Supply for long periods of time to maintain its remaining service life function.


- When storing for more than three months, store within an ambient temperature range of -25 to +30°C and the humidity range of 25% to 70%.

Periodic Check (S8VS-09024□□, S8VS-12024□□, S8VS-18024□□ and S8VS-24024□□ only)

It may take from several years to more than 10 years under general operating conditions for the power supply to output the maintenance forecast monitor alarm (S8VS-□□□24A□). The total run time monitor (S8VS-□□□24B□) may be a similar number of years as the maintenance forecast monitor according to some settings. During operation over an extended period of time, periodically check if the maintenance forecast monitor output ((12)Yrs) or total run time monitor output ((12)kh) is correctly functioning by the following procedure.

1. Select the operation mode.
2. Check that the output ((12)Yrs/kh) is turned ON (with continuity between (12) and (13)).
3. In the operation mode, press and hold the Down Key D (10) and the Mode Key M (8) simultaneously for at least three seconds. The main display (6) changes to "RD2". An inactive output ((12)Yrs/kh) (no continuity between (12) and (13)) in the "RD2" indication indicates the correct function.
4. Release keys to return to the regular state.

Note: DC output stays ON during the periodical check.

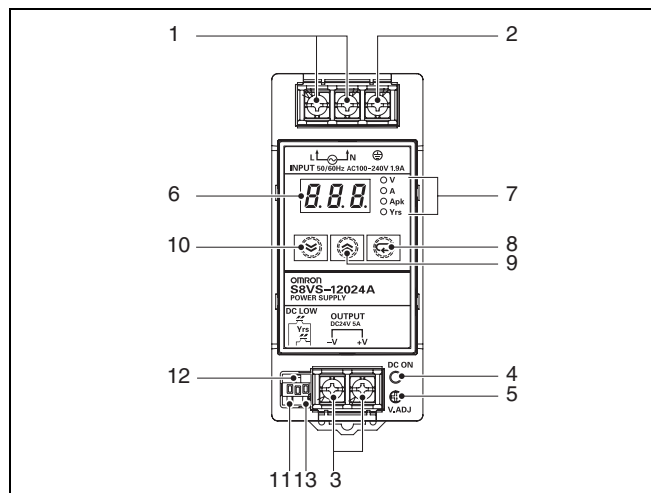

Overcurrent Protection

Internal parts may possibly deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.

Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

Alarm Output (S8VS-09024□□, S8VS-12024□□, S8VS-18024□□, S8VS-24024□□ Only)

When using the alarm output, sufficiently consider the maximum ratings, residual voltage, and leakage current.

Transistor output: Sinking for S8VS-□□□24□ Models
Sourcing for S8VS-□□□24□P Models

30 VDC max., 50 mA max.

ON residually voltage: 2 V max.

OFF leakage current: 0.1 mA max.

Charging the Battery

If a battery is to be connected as the load, mount an overcurrent limiting circuit and an overvoltage protection circuit.

Dielectric Strength Test

If a high voltage is applied between an input and the case (FG), it will pass through the LC of the built-in noise filter and energy will be stored. If the high voltages used for dielectric strength testing are turned ON and OFF with a switch, timer, or similar device, impulse voltage will be generated when the voltage is turned OFF and internal parts may possibly be damaged. To prevent the generation of impulse voltages, reduce the applied voltage slowly with a variable resistor on the test device or turn the voltage ON and OFF at the zero-cross point.

Inrush Current

When two or more Power Supplies are connected to the same input, the total current is the sum of the currents for each Supply. Select fuses and circuit breakers giving sufficient consideration to the fusing or operating characteristics so that fuses will not burn and breakers will not break due to inrush current.

Output Voltage Adjuster (V.ADJ)

The output voltage adjuster (V.ADJ) may possibly be damaged if it is turned with unnecessary force. Do not turn the adjuster with excessive force.

After completing output voltage adjustment, be sure that the output capacity or output current does not exceed the rated output capacity or rated output current.

15-W, 30-W Models


If the output voltage is set to a value less than -10%, the undervoltage alarm function may operate.

60-W, 90-W, 120-W, 180-W, and 240-W Models


If the output voltage is set to a value less than 20 V (the factory setting), the undervoltage alarm function may operate.

DIN Rail Mounting

To mount the Block on a DIN rail, hook portion (A) of the Block onto the rail and press the Block in direction (B).

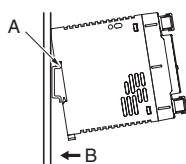

To dismount the Block, pull down portion (C) with a flat-blade screwdriver and pull out the Block.

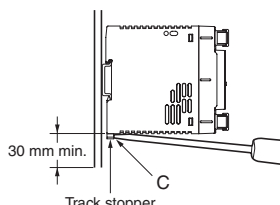


Series Operation

(24-V Model)

Two power supplies can be connected in series.

The ($\pm$) voltage output can be accomplished with two power supplies.

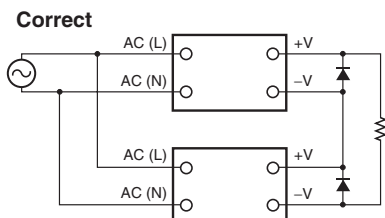


Note: 1. The diode is connected as shown in the figure. If the load is short-circuited, a reverse voltage will be generated inside the Power Supply. If this occurs the Power Supply may possibly deteriorate or be damaged. Always connect a diode as shown in the figure. Select a diode having the following ratings.

Type	Schottky Barrier diode
Dielectric strength (VRRM)	Twice the rated output voltage or above
Forward current (IF)	Twice the rated output current or above

- Although products having different specifications can be connected in series, the current flowing through the load must not exceed the smaller rated output current.
- Serial operation is not possible with 5-V and 12-V Models.

Parallel Operation

The product is not designed for parallel operation.

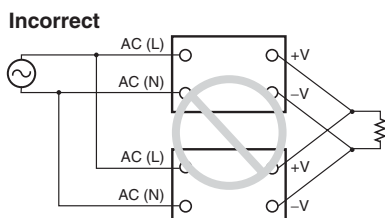

In Case There Is No Output Voltage

The possible cause for no output voltage may be that the overcurrent or overvoltage protection has operated. The internal protection may operate if a large amount of surge voltage such as a lightening surge occurs while turning ON the power supply.

In case there is no output voltage, please check the following points before contacting us:

- Checking overload protected status:
Check whether the load is in overload status or is short-circuited. Remove wires to load when checking.
- Checking overvoltage or internal protection (except for 15-W Models):
Turn the power supply OFF once, and leave it OFF for at least 3 minutes. Then turn it ON again to see if this clears the condition.

Harmonic Current Suppression Circuits

(120-W, 180-W and 240-W Models)

A harmonic current suppression circuit is built into the Power Supply. This circuit can create noise when the input is turned ON, but it will last only until the internal circuits stabilize and does not indicate any problem in the product.

Certain Terms and Conditions of Sale

1. **Offer; Acceptance.** These terms and conditions (these "Terms") are deemed part of all catalogs, manuals or other documents, whether electronic or in writing, relating to the sale of goods or services (collectively, the "Goods") by Omron Electronics LLC and its subsidiary companies ("Seller"). Seller hereby objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms. Please contact your Omron representative to confirm any additional terms for sales from your Omron company.
2. **Prices.** All prices stated are current, subject to change without notice by Seller. Buyer agrees to pay the price in effect at time of shipment.
3. **Discounts.** Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Seller's payment terms and (ii) Buyer has no past due amounts owing to Seller.
4. **Orders.** Seller will accept no order less than \$200 net billing.
5. **Governmental Approvals.** Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Goods.
6. **Taxes.** All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Seller or required to be collected directly or indirectly by Seller for the manufacture, production, sale, delivery, importation, consumption or use of the Goods sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Seller.
7. **Financial.** If the financial position of Buyer at any time becomes unsatisfactory to Seller, Seller reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Seller may (without liability and in addition to other remedies) cancel any unshipped portion of Goods sold hereunder and stop any Goods in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts.
8. **Cancellation; Etc.** Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Seller fully against all costs or expenses arising in connection therewith.
9. **Force Majeure.** Seller shall not be liable for any delay or failure in delivery resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.
10. **Shipping; Delivery.** Unless otherwise expressly agreed in writing by Seller:
 - a. Shipments shall be by a carrier selected by Seller;
 - b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall constitute delivery to Buyer;
 - c. All sales and shipments of Goods shall be FOB shipping point (unless otherwise stated in writing by Seller), at which point title to and all risk of loss of the Goods shall pass from Seller to Buyer, provided that Seller shall retain a security interest in the Goods until the full purchase price is paid by Buyer;
 - d. Delivery and shipping dates are estimates only.
 - e. Seller will package Goods as it deems proper for protection against normal handling and extra charges apply to special conditions.
11. **Claims.** Any claim by Buyer against Seller for shortage or damage to the Goods occurring before delivery to the carrier must be presented in writing to Seller within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Goods from Seller in the condition claimed.
12. **Warranties.** (a) **Exclusive Warranty.** Seller's exclusive warranty is that the Goods will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Seller (or such other period expressed in writing by Seller). Seller disclaims all other warranties, express or implied. (b) **Limitations.** SELLER MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE GOODS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE GOODS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Seller further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Goods or otherwise of any intellectual property right. (c) **Buyer Remedy.** Seller's sole obligation hereunder shall be to replace (in the form originally shipped with Buyer) responsible for labor charges for removal or replacement thereof) the non-complying Good or, at Seller's election, to repay or credit Buyer an amount equal to the purchase price of the Good; provided that in no event shall Seller be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Goods unless Seller's analysis confirms that the Goods were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any goods by Buyer must be approved in writing by Seller before shipment. Seller shall not be liable for the suitability or unsuitability or the results from the use of Goods in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.
13. **Damage Limits; Etc.** SELLER SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE GOODS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Seller exceed the individual price of the Good on which liability is asserted.
14. **Indemnities.** Buyer shall indemnify and hold harmless Seller, its affiliates and its employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Seller is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Goods. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Seller and defend or settle any action brought against Seller to the extent that it is based on a claim that any Good made to Buyer specifications infringed intellectual property rights of another party.
15. **Property; Confidentiality.** The intellectual property embodied in the Goods is the exclusive property of Seller and its affiliates and Buyer shall not attempt to duplicate it in any way without the written permission of Seller. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Seller. All information and materials supplied by Seller to Buyer relating to the Goods are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
16. **Miscellaneous.** (a) **Waiver.** No failure or delay by Seller in exercising any right and no course of dealing between Buyer and Seller shall operate as a waiver of rights by Seller. (b) **Assignment.** Buyer may not assign its rights hereunder without Seller's written consent. (c) **Amendment.** These Terms constitute the entire agreement between Buyer and Seller relating to the Goods, and no provision may be changed or waived unless in writing signed by the parties. (d) **Severability.** If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (e) **Setoff.** Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (f) As used herein, "including" means "including without limitation".

Certain Precautions on Specifications and Use

1. **Suitability of Use.** Seller shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Good in the Buyer's application or use of the Good. At Buyer's request, Seller will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Good. This information by itself is not sufficient for a complete determination of the suitability of the Good in combination with the end product, machine, system, or other application or use. The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of this Good, nor is it intended to imply that the uses listed may be suitable for this Good:
 - (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
 - (ii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
 - (iii) Systems, machines and equipment that could present a risk to life or property. Please know and observe all prohibitions of use applicable to this Good.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE SELLER'S PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
2. **Programmable Products.** Seller shall not be responsible for the user's programming of a programmable Good, or any consequence thereof.
3. **Performance Data.** Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Seller's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Seller's Warranty and Limitations of Liability.
4. **Change in Specifications.** Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed or when significant construction changes are made. However, some specifications of the Good may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Seller's representative at any time to confirm actual specifications of purchased Good.
5. **Errors and Omissions.** The information in this catalog has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors, or omissions.

Complete "Terms and Conditions of Sale" for product purchase and use are on Omron's website at www.omron.com/oei – under the "About Us" tab, in the Legal Matters section.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.



OMRON ELECTRONICS LLC

One Commerce Drive
Schaumburg, IL 60173

847-843-7900

For US technical support or other inquiries:

800-556-6766

OMRON CANADA, INC.

885 Milner Avenue
Toronto, Ontario M1B 5V8

416-286-6465

OMRON ON-LINE

Global - <http://www.omron.com>
USA - <http://www.omron.com/oei>
Canada - <http://www.omron.ca>