

MAXIM

DS33X162 Demo Kit

General Description

The DS33X162 demo kit (DK) is an easy-to-use evaluation board for the DS33X162 Ethernet-over-PDH device. The demo kit contains an option for either T3/E3 or T1/E1 serial links. All serial links are complete with line interface, transformers, and network connections. Maxim's ChipView software is provided with the demo kit, giving point-and-click access to configuration and status registers from a Windows®-based PC.


On-board LEDs indicate receive loss-of-signal, queue overflow, Ethernet link, Tx/Rx, and interrupt status.

Windows is a registered trademark of Microsoft Corp.

Ordering Information

PART	TYPE
DS33X162DK	Demo card, T3/E3, T1/E1

Demo Kit Board

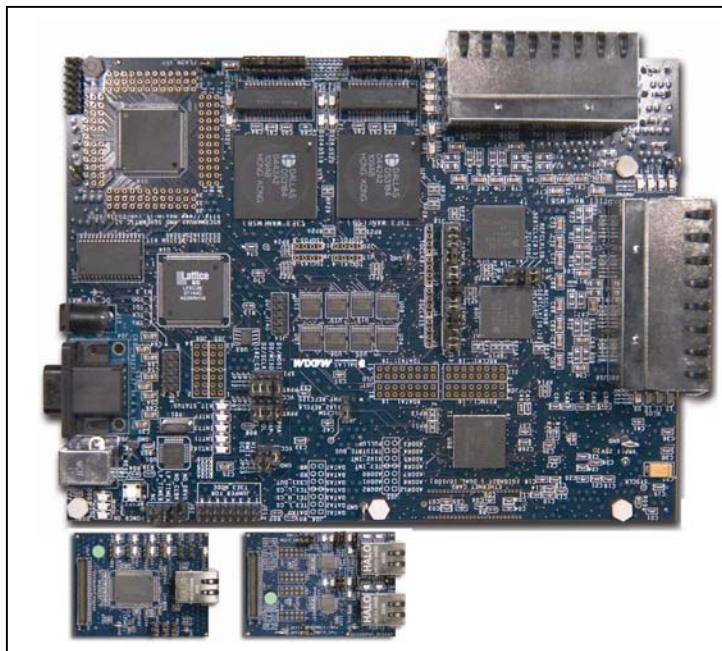

Features

- ◆ Demonstrates Key Functions of DS33X162 Ethernet Transport Chipset
- ◆ Includes DS26528 T1/E1 Transceiver, DS3174 T3/E3 Transceiver, Transformers, BNC, and RJ48 Network Connectors and Termination
- ◆ Includes Ethernet PHY Supporting 10/100 and Gigabit Modes
- ◆ Provides Support for Hardware and Software Modes
- ◆ On-Board MMC2107 Processor and ChipView Software Provide Point-and-Click Access to the DS33X162, DS26528, DS3174, and PHY Registers
- ◆ All DS33X162 Interface Pins are Easily Accessible for External Data Source/Sink
- ◆ LEDs for Loss-of-Signal, Ethernet Link, Tx/Rx, and Interrupt Status
- ◆ Easy-to-Read Silkscreen Labels Identify the Signals Associated with All Connectors, Jumpers, and LEDs

Demo Kit Contents

DS33X162DK Main Board
 Dual-Port 10/100Mb Ethernet Card
 Single-Port 10/100/1000Mb Ethernet Card
 5V 2.5A Power Supply
 USB Cable, RS232 Cable
 T3/E3 BNC-to-2-Pin Adapter
 CD-ROM
 ChipView Software and Manual
 DS33X162DK Data Sheet
 Configuration Files

1. SYSTEM FLOORPLAN	4
2. PCB ERRATA.....	5
3. FILE LOCATIONS	5
4. BASIC OPERATION.....	7
4.1 POWERING UP THE DEMO KIT	7
4.1.1 General	7
4.2 BASIC DS33X162 INITIALIZATION	7
4.2.1 Additional Configuration for DS33X162	8
4.3 MONITOR AND CAPTURE ETHERNET TRAFFIC	8
5. LEDS, CONFIGURATION SWITCHES, JUMPERS, AND CONNECTORS	9
6. REGISTER ACCESS.....	14
6.1 ADDRESS MAP	14
6.2 CONTROL THROUGH EXTERNAL PROCESSOR.....	14
6.3 SPI MODE	14
6.4 MAC AND PHY REGISTERS.....	14
7. ADDITIONAL INFORMATION/RESOURCES	15
7.1 DS33X162 INFORMATION	15
7.2 DS33X162DK INFORMATION	15
7.3 TECHNICAL SUPPORT	15
8. COMPONENT LIST	16
9. SCHEMATICS	23

List of Figures

Figure 1-1. DS33X162 System Floorplan 4

Figure 1-2. DS33X162DK Board Floorplan—Main Board 4

List of Tables

Table 3-1. File Details 5

Table 5-1. Main Board PCB Configuration 9

Table 5-2. Dual-Port PHY Card Configuration..... 12

Table 5-3. Single-Port PHY Card Configuration 13

Table 6-1. Overview of Daughter Card Address Map..... 14

Table 8-1. Component List 16

1. System Floorplan

Figure 1-1. DS33X162 System Floorplan


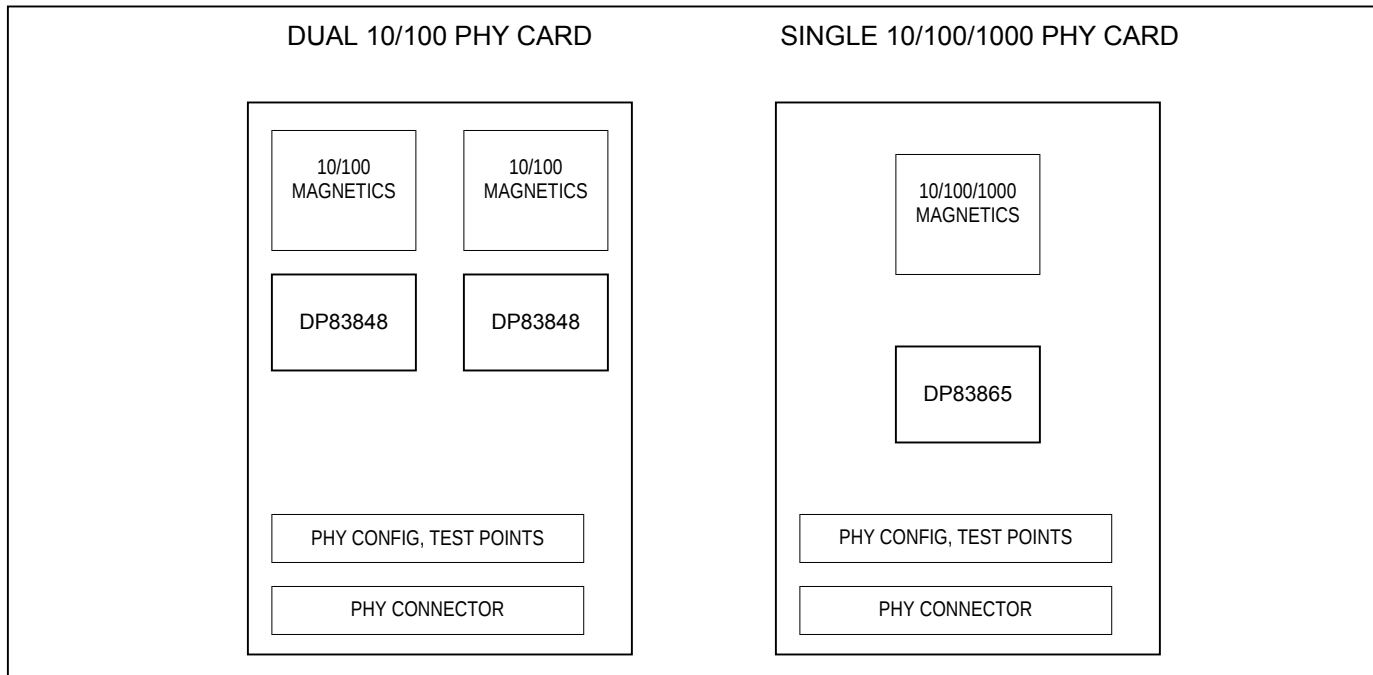


Figure 1-2. DS33X162DK Board Floorplan—Main Board

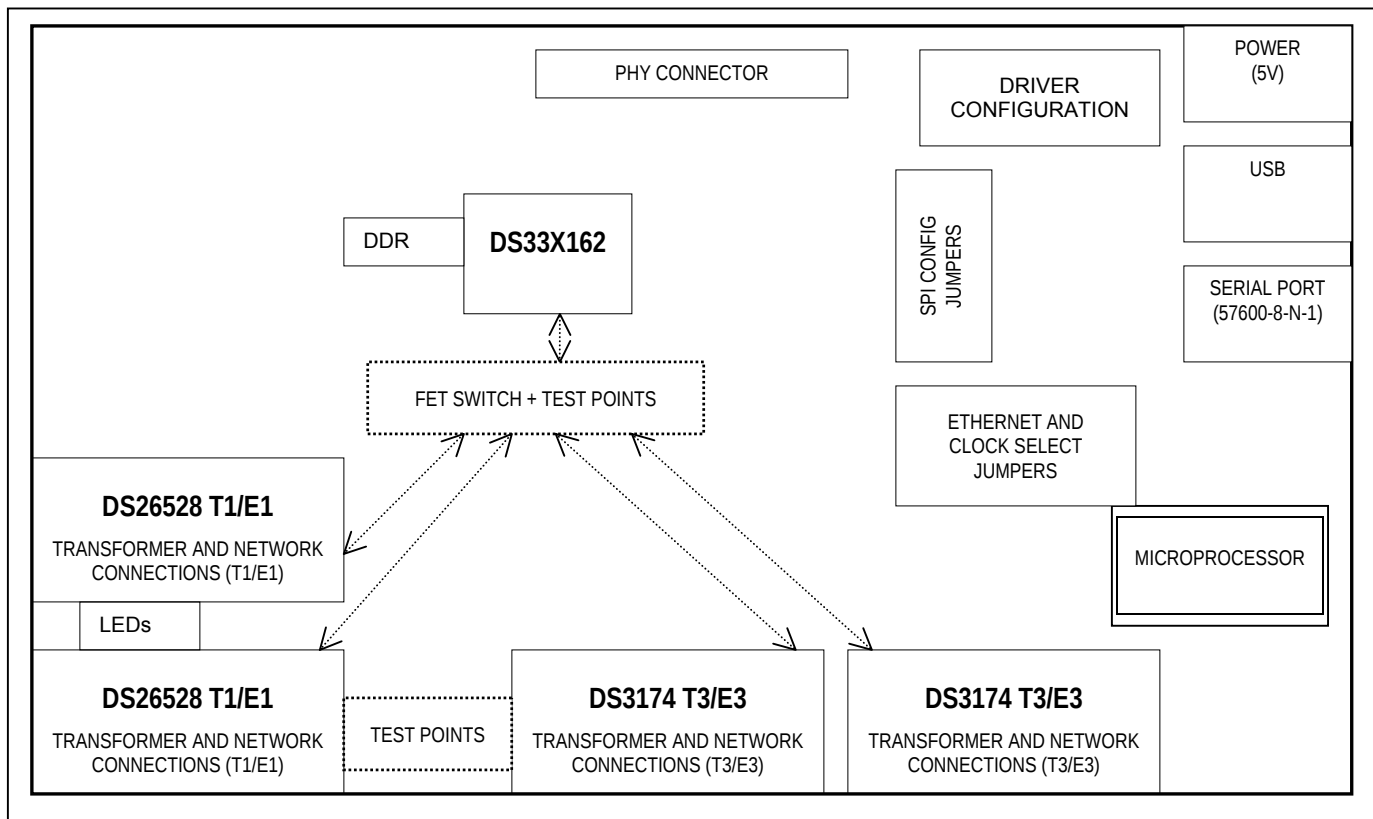

2. PCB Errata

DS33X162DK02A0 board errata:

- There are no errata associated with the DS33X162DK02A0.

3. File Locations

This demo kit relies upon several supporting files, which are provided on the CD-ROM and are available as a zip file from the Maxim website at www.maxim-ic.com/DS33X162DK.

All locations are given relative to the top directory of the CD-ROM/zip file **DS33X162_cfg_demo_gui**. The DS33X162, DS3174, and DS26528 register definition files and configuration files are listed in [Table 3-1](#).

Table 3-1. File Details

FILE NAME	FILE USAGE
._DS33X162_GlobalMicroport.def	Top-level definition file to select in ChipView's register mode. This file will autoload the remaining definition files for the DS33X162. (Note that the wan files still need to be loaded (either DS).)
.\DS33X162_Lan.def .\DS33X162_BufferMan.def .\DS33X162_EncapDecap.def .\DS33X162_Vcat.def .\DS33X162_SerialPort.def	DS33X162 dependent files. These are called by the ds33x162_GlobalMicroport.def file listed above.
.\DS33X162_lan_T3wan_ext.mfg	File for manually configuring the DS33X162 to interface with the DS3174.
.\DS33X162_lan_T1wan_ext.mfg	File for manually configuring the DS33X162 to interface with the DS26528.
.\x162_wan1.eset	GUI interface for loading settings when running the Xchip plug-in (launched from the Tools menu of the ChipView program).
.\te3_ds3174\DK_ports*\ds3174_evbrd.def Note that there are two folders: DK_ports_4to1_CS4 and DK_ports_8to5_CS3 .	Top-level definition file to select the DS3174 T3/E3 transceiver. This file will autoload the remaining definition files for the DS3174.
.\te3_ds3174\DK_ports*\misc1_p1.def .\te3_ds3174\DK_ports*\feac_frac_p1.def .\te3_ds3174\DK_ports*\ttrace_p1.def .\te3_ds3174\DK_ports*\ds3_p1.def .\te3_ds3174\DK_ports*\e3751_p1.def .\te3_ds3174\DK_ports*\e3832_p1.def .\te3_ds3174\DK_ports*\port1.def	DS3174 dependent files. These are called by the ds3174_evbrd.def file listed above. Files for port 1 are shown; other ports are not listed here.
.\te3_ds3174\DK_ports_8to5_CS5\t3_config_dlb.mfg	DS3174 configuration file for T3 mode.
.\te3_ds3174\DK_ports_8to5_CS5\t3_config_AlignedSync_dlb.mfg	DS3174 configuration file for T3 mode. Aligns sync pulses by use of bulk write feature.
.\te3_ds3174\DK_ports_8to5_CS5\ds33x162_no_lb_vcat_ports_5to8_T3.mfg	DS33X162 configuration file for vcat T3 mode.
.\te3_ds3174\DK_ports_4to1_CS4\t3_config_dlb.mfg	DS3174 configuration file for T3 mode.

FILE NAME	FILE USAGE
.\te3_ds3174\DK_ports_4to1_CS4\t3_config_AlignedSync_dlb.mfg	DS3174 configuration file for T3 mode. Aligns sync pulses by use of bulk write feature.
.\te3_ds3174\DK_ports_4to1_CS4\ds33x162_no_lb_vcat_ports_1to4_T3.mfg	DS33X162 configuration file for vcat T3 mode.
.\ds26528\...\DS26528_GLOBAL_T1.def Note that groups of definition files exist for both T1 and E1 modes and also for ports 1 to 8 and ports 9 to 16. This results in a total of four file groups. Only one group is shown here.	Top-level definition file to select the DS26528 T1/E1 transceiver. This file will autoload the remaining definition files for the DS26528.
.\ds26528\...\DS26528_1_LIU_BERT.def .\ds26528\...\DS26528_1_T1.def	DS26528 dependent files. These are called by DS26528_GLOBAL_T1.def file listed above. Files for port 1 are shown; other ports are not listed here.
.\ds26528\ DK_wan_8to1_CS2\T1\DS26528_t1_config.mfg	DS26528 configuration file for T1 mode.
.\ds26528\ DK_wan_8to1_CS2\T1\ds26528..._t1_config_master_bulkWr.mfg	DS26528 configures all 8 ports identically using bulk write mode. Places device in master mode, where TSYNC is an output.
.\ds26528\ DK_wan_8to1_CS2\T1\ds33x162_no_lb_vcat_4ports.mfg	DS33X162 configuration file for vcat mode (ports 1 to 4).
.\ds26528\ DK_wan_8to1_CS2\T1\ds33x162_16ports_vcg.mfg	DS33X162 configuration file for vcat mode (ports 1 to 16).
.\ds26528\ DK_wan_8to1_CS2\disable_framer_lb.mfg .\ds26528\ DK_wan_8to1_CS2\looptime.mfg	DS26528 partial configuration files. These files should be run after a full configuration is made.
*.eset	GUI interface for loading settings when running the Xchip plug-in (launched from the Tools menu of the ChipView program).
.\ds26528\ DK_wan_8to1_CS2\E1*.*	Similar files exist for ports 1 to 8 E1 mode.
.\ds26528\ DK_wan_9to16_CS2[E1 T1]*.*	Similar files exist for ports 9 to 16 E1 and T1 mode.

4. Basic Operation

Note: In the following sections, software-related items are identified by bolding. Text in **bold** refers to items directly from the demo kit (DK) software. Text in **bold and underlined** refers to items from the Windows operating system.

4.1 Powering Up the Demo Kit

- Connect the PCB power jack to the wall adapter. A 2.5A supply is recommended.
- Connect the RS232 serial cable or USB cable between the host PC and the demo kit.
- Verify that the jumpers are configured as described in [Table 5-1](#).

4.1.1 General

- Upon power-up the power LEDs (DS01, DS02, DS03 green) will be lit. The DS3174 transceiver LEDs will not be lit. The DS26528 transceiver RLOS + LTC LED will be lit if the device drivers are disabled.
- PHY LINK LED should be lit if an Ethernet cable is connected.

Following are several basic system initializations.

4.2 Basic DS33X162 Initialization

This section covers three basic methods for configuring the DS33X162.

- 1) Device Driver-Based Configuration. If the pins J02.1+J02.2 are unjumped, the device driver will auto configure the DS33X162 upon power-up. This enables traffic to pass from the Ethernet port to the serial port. Refer to the device driver documentation for further details. To load the GUI interface for the device drivers, go to the ChipView register mode **Tools** menu and select **Tools→Plugins→DS33XW Device Driver Demo**.
- 2) Register-Based Configuration—Port 1 T1 Mode
 - a) Install jumper J02.1+J02.2 to disable device drivers, and then reset the board. Ensure that J01.1+J01.2 is not installed.
 - b) Launch **ChipView.exe** and select **Register View**.
 - c) When prompted for a definition file, pick the file named **DS33X162_GlobalMicroport.def**. Six additional definition files will load.
 - d) Go to the **File** menu and select **File→Definition File**. When prompted, select **DK_wan_8to1_CS2\T1\DS26528_GLOBAL_T1.def**.
 - e) Go to the **File** menu and select **File→Memory Config File→Load .MFG file**. When prompted, select the file named **DS33X162_lan_T1wan_ext.mfg**.
 - f) Go to the **File** menu and select **File→Memory Config File→Load .MFG file**. When prompted, select the file named **DK_wan_8to1_CS2\T1\ds26528_t1_config.mfg**.
- 3) Register-Based Configuration—Port 1 T3 Mode
 - a) Install jumper J02.1+J02.2 to disable device drivers, and then reset the board. Ensure that J01.1+J01.2 is installed.
 - b) Launch **ChipView.exe** and select **Register View**.
 - c) When prompted for a definition file, pick the file named **DS33X161_GlobalMicroport.def**. Six additional definition files will load.
 - d) Go to the **File** menu and select **File→Definition File**. When prompted select **ds3174_evbrd.def**.
 - e) Go to the **File** menu and select **File→Memory Config File→Load .MFG file**. When prompted, select the file named **DS33X162_lan_T3wan_ext.mfg**.
 - f) Go to the **File** menu and select **File→Memory Config File→Load .MFG file**. When prompted, select the file named **DK_ports_4to1_CS4\t3_config_dlb.mfg**.

4.2.1 Additional Configuration for DS33X162

- Using either a patch or crossover cable, connect the Ethernet connector to an ordinary PC or network test equipment. This should cause the link LED to turn on.
- Place a loopback connector at the T1/E1 network side; RLOS and LTC LEDs should go out.
- At this point any packets sent to the DS33X162 are echoed back. Incoming packets (i.e., ping) should cause the **Activity LED** to blink.
- Note that ChipView.exe display settings can be changed using the **Options→Settings** menu.

4.3 Monitor and Capture Ethernet Traffic

- Although ping is mentioned, it is *not* the recommended frame source for testing. The ping command goes through the computer's TCP/IP stack and sometimes will not be sent out the PC's network connector (i.e., if the PC's ARP cache is out of date). Additionally, ping requires two PCs, as a Windows PC with only one adapter cannot ping itself (a local ping gets sent to "local host" instead of out the connector). However, ping is still a valuable test once the prototyping stage is complete.
- Generation and capture of arbitrary (raw) packets can be accomplished using CommView. A time-limited demo is available at www.tamos.com/products/commview.
- Wireshark is an excellent (and free) packet capture utility. Download is available at www.wireshark.org.
- Adding additional Ethernet ports to a PC is rather simple when a USB-to-Ethernet adapter is used. This allows for end-to-end testing using a single PC. When using two adapters the PC has a different IP address for each adapter. Test equipment allows selection of either adapter. Operating -system-based network traffic is sent out of the default adapter; usually this is the adapter that has recently had connection to a live network.

5. LEDs, Configuration Switches, Jumpers, and Connectors

The DS33X162DK has several configuration switches, oscillators, and jumpers. [Table 5-1](#) provides a description of these signals, given in order of appearance on the PCB, from top to bottom and then left to right (with the board held so that the RS232 and USB connectors are on the right-hand side of the board).

Table 5-1. Main Board PCB Configuration

SILKSCREEN REFERENCE	FUNCTION	BASIC SETTING	SCHEMATIC PAGE	DESCRIPTION
YB01 (bottom of PCB)	125MHz Oscillator	—	52	DS33X162 SysClock.
JB01, JB02 (bottom of PCB)	PHY/Ethernet Interface	Card Installed	88	Connector and Test Points for PHY Card Connector. A PHY card (provided) should be installed in this connector.
J01	Mode select for Ports 1 to 8	Not Installed (set for T1/E1 mode)	53	Install jumper to enable T3/E3 mode; remove jumper to set T1/E1 mode. This jumper controls FET switches U04 to UB20. There are a total of 8 jumpers used for controlling ports 1 to 8.
J02	Configuration. All Jumpered. Schematic page 53.	- P1+P2: Jumper to disable drivers (remove to enable drivers). - P3+P4: Jumper to disable interrupt handlers (this jumper is only valid when drivers are enabled). - P5+P6: Jumper to set for SourceTime—WAN ports 1 to 8 TxClock driven by oscillator. Remove to set for LoopTime—WAN TxClock driven by RxClk. (This jumper is only valid when drivers are enabled.) - P7+P8: Jumper to set for SourceTime—WAN ports 9 to 16 TxClock driven by oscillator. Remove to set for LoopTime WAN TxClock driven by RxClock. (This jumper is only valid when drivers are enabled.)		
SW01	System Reset	—	54	System reset.
DS01, DS02, DS03	LED	ON		Power OK LEDs for 1.8V, 2.5V, and 3.3V power supplies. All three LEDs must be lit.
J03	USB	—	58	USB Interface. See folder marked USBdrivers FT245 for drivers.
J04	RS232 DB9 Connector	—	58	RS232 DB9 Connector. Operates in ASCII mode at 57.6K,8,N,1.
J15	Power Jack	—	54	System Power. Always connected to 5V wall adapter (provided).
JP01	DS33X162 Pin	Jumper P2+3	53	DS33X162 HIZ pin.
JP02	DS33X162 Bias RMII	Jumpered P1+2 (low)		Jumper P1+2 for MII Mode. Jumper P2+3 for RMII Mode. (RMII mode is not available in this demo kit.)
JP03	DS33X162 Bias DCE	Jumpered P1+2 (low)		Jumper P1+2 for DTE Mode. Jumper P2+3 for DCE Mode. (This demo kit does not support DCE mode.)
JP08	PHY Clock In	Jumper P2+3	52	PHY Clock Input. Set for P2+3 in 10/100 mode, driving PHY with 25MHz oscillator. Setting P2+1 drives with DS33X162 RefClk with PHY 125MHz clock (1000Mb mode only).

SILKSCREEN REFERENCE	FUNCTION	BASIC SETTING	SCHEMATIC PAGE	DESCRIPTION
YB02 (Bottom of PCB)	25MHz Oscillator	—	52	25MHz Oscillator. Used for PHY clock in (MII+GMII). Used for DS33X162 RefClk in MII mode.
YB02	PHY RefClk	25MHz	52	PHY Reference Clock. Populated with 25MHz clock in MII mode.
DS04, DS05, DS06	Interrupt LED	—	44	Interrupt LEDs for X162, T3. and T1 Devices.
DS08	Kit Status LED	Off	58	Kit Status LED. Currently not assigned to any software function.
JP07, JP09 to JP12	DS33X162 SPI Test Points	All Jumped P1+2	43	SPI Test Points for DS33X162. Jumpers are installed to connect the DS33X162 to the processor Data port to the FPGA data pins. Connecting pins 2+3 connects DS33X162 to processor SPI port.
JP05	DS33X162 Bias SPI SWAP	Jumped P1+2	43	Processor default is to transfer MSB first. Jumper P1+2 to match this setting.
JP04, JP06	DS33X162 Bias SPI CPHA Bias SPI CPOL	Both Jumped P1+2	43	Processor default is to have normal phase and idle high. See Section 6.3 for further SPI detail.
J05, J06	Test Points	Not used	59	Address Data Bus Test Points. See Section 6.2 regarding control by external processor. Silkscreen for these signals is provided a few inches to the left of the signals.
J09	JTAG	Not Used	60	JTAG connector for programming Lattice FPGA
J16	RJ45 T1E1	User option	63	T1/E1 Connectors for Ports 9 to 16.
DS09 to DS16	RLOS LED	—	69	RLOS LED for DS26528 Ports 9 to 16.
J08	RSYNC Test Points	—	45	Test Points for DS33X162 RSYNC.
J07	RDATA Test Points	—	45	Test Points for DS33X162 RDATA.
J11	RGCLK Test Points	—	45	Test Points for DS33X162 RGCLK.
J10	TDATA Test Points	—	45	Test Points for DS33X162 TDATA.
J14	DS33X162 JTAG	Jumped P1+3 P7+9	53	JTAG for DS33X162, DS26528, and DS3174. DS33X162 can be isolated from DS26528 and DS3174. Jumpers on P1+3 and P7+9 prevent the devices from entering JTAG mode.
JP13	DS26528 TCLK	Jumped P1+2	44	DS26528 TCLK Selection for Ports 5 to 8. Jumper pins 1+2 to drive TCLK with RefClk. Jumper pins 2+3 to drive TCLK with TCLK oscillator.
JP14	DS26528 TCLK	Jumped P1+2	44	DS26528 TCLK Selection for Ports 12 to 16. Jumper pins 1+2 to drive TCLK with RefClk. Jumper pins 2+3 to drive TCLK with TCLK oscillator.

SILKSCREEN REFERENCE	FUNCTION	BASIC SETTING	SCHEMATIC PAGE	DESCRIPTION
J19	Join DS26528 REFCLKs	Not Jumpered	44	Join reference clocks on DS26528 ports 1 to 8 and ports 9 to 16. This jumper should only be installed when one of the DS26528 devices is in slave mode, and can be a source of bit errors if it is installed with both devices in master mode.
J13	DS26528 TSYNC	Jumpered	76	Jumpered such that all DS26528 ports receive the same TSYNC.
J18	DS26528 TSYNC	Jumpered	68	
J8, J7, J3, J4	DS26528 TGCLK	Not Jumpered	68, 76	Test Points for DS26528 TGCLK.
J17, J9	DS3174 TGCLK	Not Jumpered	81, 86	Test Points for DS3174 TGCLK.
J20, J12	DS3174 TSOFO	Not Jumpered	81, 86	Test Points for DS3174 TSOFO.
YB05	Oscillator	—	46	Oscillator for T3/E3 MCLK. Silkscreen and target are provided on topside of PCB.
YB06	Oscillator	—	46	Oscillator for T3/E3 TCLK. Silkscreen and target are provided on top side of PCB.
DS22, DS27, DS29, DS31, DS23, DS28, DS30, DS32	RLOS LED	—	69	RLOS led for DS26528 ports 1-8
J24	RJ45 T1E1	User option	63	T1E1 connectors for ports 9-16
DS17, DS18, DS26, DS20, DS24, DS19, DS25, DS21	LED	User setting (OFF)		DS3174 General-Purpose I/O LED. Not configured by ini files.
J26 to J41	WAN Network Connection	—	80, 85	T3/E3 Jumpers for Network Interface. Used with 2-pin coax adapter (provided).
J42	OnCe	Not used		OnCe debug connector for MMC2107 microcontroller.
J25	Flash VPP	Not used		For programming flash memory.

Table 5-2. Dual-Port PHY Card Configuration

SILKSCREEN REFERENCE	FUNCTION	BASIC SETTING		SCHEMATIC PAGE	DESCRIPTION
J91, J92	Ethernet Connection	—		109, 111	RJ45 Ethernet Connector. Used in 10/100 modes.
DS65, DS63 DS64, DS66	LED Link	1 of each pair should be lit (when linked)		109, 111	LED to Indicate Link.
DS67, DS68, DS70, DS69	LED Speed	—		109, 111	Lit for 100Mb; off when in 10Mb mode.
DS74, DS72, DS73, DS71	LED Activity	—		109, 111	Blinks when a packet is transmitted or received
JP68 JP67 JP69, JP70 JP71, JP72	PHY CONFIG	AN_EN	AN1	AN0	FORCED MODE
		0	0	0	10BASE-T, Half-Duplex
		0	0	1	10BASE-T, Full-Duplex
		0	1	0	100BASE-T, Half-Duplex
		0	1	1	100BASE-T, Full-Duplex
		1	0	0	10BASE-T, Half-/Full-Duplex
		1	0	1	10BASE SE-Tx, Half-/Full-Duplex
		1	1	0	100BASE-T, Half-Full Duplex
		1	1	1	100BASE-T, Half-Full Duplex
JP73, JP75	RMII	Jumpered P1+2		109, 111	Jumper Pins 1+2 for MII Mode. When in RMII mode, the PHY RefClk must be 50MHz. This clock is sourced from YB02 on the main board.
JP74, JP76	MDIX	Jumpered P2+3		109, 111	Jumper pins 2+3 to enable MDIX.

Table 5-3. Single-Port PHY Card Configuration

SILKSCREEN REFERENCE	FUNCTION	BASIC SETTING	SCHEMATIC PAGE	DESCRIPTION
J1	Ethernet Connection			RJ45 Ethernet Connector. Used in 10/100 and Gigabit modes.
DS75	LED Duplex	—		LED is on in full-duplex mode.
JP77	Bias PHY Non-IEEE	Jumper P2+3 (high)		Jumper P2+3 to enable IEEE-compliant operation.
JP78	Bias PHY ManMDIX	Jumper P1+2 (high)		Default MDIX setting P1+2 PHY is set to straight mode; P2+3 PHY is in crossover mode.
DS76	LED Activity	—		Flashes for PHY Tx-Rx activity.
DS78+79 DS80+81 DS82+83	LED Link Speed	1 of the 6 should be lit (when linked)		LED to indicate link speed: 1000, 100, or 10Mbps. Only 1 of the 6 LEDs should be lit. See JP15 + JP101 description for setting in GMII mode vs. MII mode.
JP82 + JP81	Bias PHY Speed1 + Speed0	Jumper P1+2 (low) P1+2 (low)		If autonegotiation is enabled, this setting advertises capability for 10/100/1000 speeds. If autonegotiation is disabled, this setting forces 10Mb mode.
		Jumper P2+3 (high) P2+3 (high)		If autonegotiation is enabled, this setting advertises capability for 10/100 speeds. If autonegotiation is disabled, this setting is not legal.
		Jumper P2+3(high) P1+2 (low)		If autonegotiation is enabled, this setting advertises capability for 1000 speeds. If auto negotiation is disabled, this setting forces 1000Mb mode.
Note: When the PHY is in GMII mode, the REFCLK pin on DS33X162 must be driven with 125MHz (JP08_2+1). Additionally, MacClkEn must be enabled (JP82_2+3). In MII mode, RefClk must be driven with 25MHz (JP08_2+1). Here MacClkEn does not matter, but could be disabled to save power and reduce noise.				
JP89	Bias PHY Duplex	Jumper P2+3 (high)		Jumper P2+3 to enable full duplex; jumper P1.2 to force half duplex.
JP86	Bias PHY ANEN	Jumper P2+3 (high)		Jumper P2+3 to enable autonegotiation.
JP79	Bias PHY MultiEn	Jumper P1+2 (high)		PHY Advertisement Setting. P2+3 selects multiple node priority (switch or hub). P1+2 selects single node priority (NIC).
JP80	Bias PHY MdixEn	Jumper P2+3 (low)		P2+3 enables pair swap mode, P1+3 disables pair swap mode
JP82	Bias PHY MacClkEn	Jumper P2+3 (low)		P2+3 PHY clock to MAC output is enabled; P1+2 PHY clock to MAC output is disabled. MAC clock only needs to be enabled in Gigabit mode.
TP17	Test Point			MAC Clock Test Point.

6. Register Access

6.1 Address Map

The external device address space begins at 0x81000000. All offsets given in [Table 6-1](#) are relative to this offset.

Table 6-1. Overview of Daughter Card Address Map

OFFSET	DEVICE	DESCRIPTION
0X0000 to 0X0087	FPGA	Processor board identification .
0X1000 to 0X1FFF	DS33X162	DS33X162 uses CS1.
0X4000 to 0X5FFF	DS26528	DS26528 T1/E1 device, ports 1 to 8. Uses CS_X2.
0X6000 to 0X7FFF	DS26528	DS26528 T1/E1 device, ports 9 to 16. Uses CS_X3.
0X8000 to 0X9FFF	DS3174	DS3174 T3/E3 device ports 1 to 4. Uses CS_X4.
0XA000 to 0XBFFF	DS3174	DS3174 T3/E3 device, ports 5 to 8. Uses CS_X5.

All device registers can be easily modified using the ChipView host-based user-interface software with the definition files previously mentioned.

6.2 Control Through External Processor

The demo kit is intended to be controlled using the on-board microcontroller and a host PC. However, the demo kit has jumper points to allow it to be controlled by an external processor. The DS33X162 can be controlled in SPI mode by attaching to the signals at JP09, JP10, JP11, and JP12. Alternately, the DS33X162 and transceivers (DS26528 and DS3174) can be controlled by jumpering J05.12+14 and then connecting to J05 and J06. Doing so pulls up the tristate_bus signal and places the FPGA in a high-impedance mode (see the [Address Map](#) section).

6.3 SPI Mode

The DS33X162 has an option to use both parallel and SPI mode. SPI mode is addressed differently than devices that use a parallel address/data bus. In SPI mode, the DS33X162 does not have an address offset; its base address starts at 0x00.

[Table 5-1](#) details the default bias levels for SPI configuration pins. To change these settings the processor's SPI settings must also change. A special set of definition files must be used when in SPI mode. These are contained in the subfolder **.DS33X162_spi**. The processor SPI settings can be changed in ChipView's terminal mode using the **SPISG S** function.

6.4 MAC and PHY Registers

The MAC and PHY are accessed indirectly. This process is automated by the indirect register module. To load this module, first select the DS33X162 device driver demo plugin using the **Tools→Plugins** menu. Once the device driver demo loads, select the indirect register module from the **Tools→Indirect register** menu. The first tab of the menu has a selection for the device bus mode. Select **SPI mode** when using the DS33X162.

To test that the indirect register section is working, try to reset the PHY. Select the **PHY** tab, change the **Padd** field to 00001 to select the PHY at MDIO address 1. In the **Data write** field enter 00 00 80 00. Click the **Write PHY** button. At this point the link LED of the PHY should go out (and turn back on within a few seconds).

7. Additional Information/Resources

7.1 DS33X162 Information

For more information about the DS33X162, refer to the DS33X162 data sheet available on our website at www.maxim-ic.com/DS33X162.

7.2 DS33X162DK Information

For more information about the DS33X162DK, including software downloads, refer to the DS33X162DK data sheet available on the our website at www.maxim-ic.com/DS33X162DK.

7.3 Technical Support

For additional technical support, go to www.maxim-ic.com/support.

8. Component List

[Table 8-1](#) shows the component list for the DS33X11 and DS33X162 demo kits and resource cards. This BOM contains the part listing for four boards. These boards are the DS33X11DK, DS33X162DK, DualPhyRC, and GigPhyRC. Each reference designator is only used once. For example, U25 only appears on the DS33X11DK and is not used on any of the other boards. See [Table 5-1](#).

Table 8-1. Component List

DESIGNATION	QTY	DESCRIPTION	SUPPLIER	PART
C02, C22, C145, CB19, CB23, CB42, CB95, CB129, CB303, CB319, CB445, CB447, CB452, CB460, CB463	15	D CASE TANT 470uF 6.3V 20%	KEM	T491D477M006AS
Reference designators shown on next row	231	0603 CERAM 4.7uF 6.3V MULTILAYER	UNK	ECJ-1VB0J475M
C03, C08, C11, C14, C15, C16, C17, C21, C24, C29, C33, C45, C49, C51, C52, C91, C92, C96, C97, C115, C119, C120, C122, C123, C129, C137, C138, C141, C142, C146, C149, C151, C153, C158, C258, C263, C265, CB01, CB04, CB06, CB09, CB13, CB16, CB17, CB21, CB24, CB26, CB27, CB28, CB36, CB37, CB41, CB44, CB45, CB46, CB47, CB48, CB58, CB60, CB66, CB67, CB74, CB75, CB76, CB78, CB80, CB84, CB92, CB93, CB98, CB99, CB100, CB104, CB107, CB114, CB115, CB116, CB118, CB123, CB125, CB126, CB137, CB138, CB141, CB144, CB151, CB155, CB158, CB163, CB164, CB166, CB170, CB171, CB172, CB179, CB181, CB183, CB185, CB186, CB188, CB189, CB191, CB192, CB193, CB195, CB197, CB198, CB201, CB204, CB209, CB215, CB218, CB221, CB222, CB227, CB229, CB230, CB231, CB234, CB235, CB239, CB243, CB249, CB251, CB255, CB258, CB263, CB264, CB267, CB270, CB271, CB273, CB276, CB277, CB278, CB284, CB287, CB293, CB294, CB297, CB298, CB302, CB304, CB306, CB307, CB320, CB322, CB327, CB328, CB341, CB343, CB344, CB345, CB347, CB348, CB351, CB352, CB353, CB357, CB358, CB364, CB365, CB366, CB367, CB369, CB370, CB371, CB375, CB376, CB379, CB380, CB388, CB392, CB393, CB395, CB396, CB399, CB400, CB401, CB404, CB405, CB406, CB407, CB408, CB409, CB415, CB416, CB423, CB424, CB425, CB427, CB431, CB436, CB438, CB441, CB442, CB446, CB449, CB453, CB454, CB462, CB467, CB760, CB766, CB768, CB777, CB779, CB789, CB790, CB791, CB792, CB793, CB795, CB798, CB802, CB804, CB805, CB807, CB808, CB810, CB812, CB813, CB815, CB816, CB817, CB818, CB824, CB827, CB856, CB857, CB859				
Reference designators shown on next row	114	L_0603 CERAM .01uF 50V 10% X7R	AVX	06035C103KAT
C04, C05, C06, C07, C09, C10, C18, C20, C32, C37, C40, C41, C42, C50, C57, C70, C89, C98, C104, C113, C114, C118, C125, C133, C134, C136, C148, C150, C261, C266, CB03, CB11, CB14, CB20, CB30, CB34, CB52, CB55, CB61, CB69, CB71, CB73, CB83, CB103, CB109, CB112, CB119, CB120, CB128, CB139, CB150, CB157, CB161, CB167, CB173, CB187, CB194, CB205, CB206, CB207, CB213, CB216, CB217, CB219, CB223, CB224, CB225, CB228, CB240, CB256, CB259, CB261, CB275, CB285, CB295, CB300, CB308, CB332, CB350, CB354, CB359, CB361, CB381, CB385, CB391, CB398, CB402, CB413, CB414, CB419, CB428, CB432, CB435, CB439, CB443, CB444, CB448, CB451, CB466, CB468, CB761, CB765, CB770, CB771, CB772, CB776, CB794, CB803, CB806, CB811, CB819, CB823, CB853, CB855				
C110, C112, CB86, CB87	4	L_0603 CERAM 22pF 25V 5% NPO	AVX	06033A220JAT
C156, C259, CB51, CB762, CB763, CB764, CB767, CB769, CB773, CB774, CB775, CB780, CB782, CB786, CB787, CB788	16	0603 CERAM 0.1uF 16V 10%	Phycomp	06032R104K7B20D
C25, C126, CB10, CB31, CB33, CB88, CB89, CB102, CB145, CB146, CB147, CB315, CB333, CB338, CB363, CB368, CB383, CB417, CB418, CB437	20	L_1206 CERAM 10uF 10V 20%	Panasonic	ECJ-3YB1A106M
C28, C31, C132, CB25, CB32, CB35, CB38, CB40, CB43, CB56, CB68, CB81, CB85, CB96, CB105, CB313, CB321, CB324, CB372, CB373, CB384, CB394, CB397, CB410, CB411, CB412, CB422, CB450	28	0603 CERAM .1uF 16V 10%	Panasonic	ECJ-1VB1C104K
C39, C44, C54, C55, C56, C60, C61, C64, C99, C100, C101, C102, C103, C105, C106, C107, C108, C109	18	1206 CERAM 10uF 10V 20%	Panasonic	ECJ-3YB1A106M

DESIGNATION	QTY	DESCRIPTION	SUPPLIER	PART
C58, C63, C67, C69, C73, C76, C77, C86, C87, CB108, CB153, CB208, CB238, CB252, CB253, CB254	16	1206 CERAM 0.1uF 25V 10%	Panasonic	ECJ-3VB1E104K
C59, C62, C65, C66, C68, C71, C72, C75, C78, C79, C80, C81, C82, C83, C84, C85, C116	17	1206 CERAM 560pf 50V 5%	AVXZ	12065A561JAT2A
Reference designators shown on next row (begins with C01)	226	L_0603 CERAM .1uF 16V 20% X7R	AVX	0603YC104MAT
C01, C12, C13, C19, C23, C26, C27, C30, C34, C35, C36, C38, C43, C46, C47, C48, C53, C74, C88, C90, C93, C94, C95, C111, C117, C121, C124, C127, C128, C130, C131, C135, C139, C140, C143, C144, C147, C152, C154, C155, C157, C260, C262, C264, CB02, CB05, CB07, CB12, CB18, CB22, CB29, CB39, CB49, CB53, CB57, CB59, CB62, CB63, CB64, CB65, CB70, CB72, CB77, CB79, CB82, CB90, CB91, CB94, CB97, CB101, CB106, CB110, CB111, CB113, CB117, CB121, CB122, CB124, CB130, CB131, CB132, CB133, CB134, CB135, CB136, CB140, CB142, CB148, CB149, CB152, CB154, CB156, CB159, CB160, CB162, CB165, CB168, CB169, CB174, CB175, CB176, CB177, CB178, CB180, CB182, CB184, CB190, CB196, CB199, CB200, CB202, CB203, CB210, CB211, CB212, CB214, CB220, CB226, CB232, CB233, CB236, CB237, CB241, CB242, CB244, CB245, CB246, CB247, CB248, CB250, CB257, CB260, CB262, CB266, CB268, CB269, CB272, CB274, CB280, CB282, CB283, CB286, CB288, CB289, CB296, CB299, CB301, CB305, CB309, CB310, CB311, CB312, CB314, CB316, CB317, CB318, CB323, CB325, CB326, CB329, CB330, CB331, CB334, CB335, CB336, CB337, CB339, CB340, CB342, CB346, CB349, CB355, CB356, CB360, CB362, CB374, CB377, CB378, CB382, CB386, CB387, CB389, CB390, CB403, CB420, CB421, CB426, CB430, CB433, CB434, CB440, CB455, CB456, CB457, CB458, CB459, CB461, CB464, CB465, CB469, CB470, CB757, CB758, CB759, CB778, CB781, CB783, CB784, CB785, CB796, CB797, CB799, CB800, CB801, CB809, CB814, CB820, CB821, CB822, CB825, CB826, CB828, CB829, CB852, CB854, CB858				
CB08, CB15, CB54, CB127, CB143, CB279, CB281, CB290, CB291, CB292	10	L_D CASE TANT 68uF 16V 20%	Panasonic	ECS-T1CD686R
CB265, CB429	2	L_1206 CERAM 1uF 16V 10%	Panasonic	ECJ-3YB1C105K
DB01, DB02, DB03	3	SCHOTTKY DIODE, 1 AMP 40 VOLT	International Rectifier	10BQ040
DS01, DS02, DS03, DS33, DS34, DS35, DS41, DS42, DS43, DS44, DS45, DS46, DS47, DS48, DS49, DS75, DS76, DS77, DS78, DS79, DS80, DS81, DS82, DS83	24	LED, GREEN, SMD	Panasonic	LN1351C
DS04, DS05, DS06, DS07, DS17, DS18, DS19, DS20, DS21, DS24, DS25, DS26, DS36, DS37, DS38, DS39, DS40	17	L_LED, RED, SMD	Panasonic	LN1251C
DS08, DS50, DS63, DS64, DS65, DS66	6	L_LED, GREEN, SMD	Panasonic	LN1351C
DS09, DS10, DS11, DS12, DS13, DS14, DS15, DS16, DS22, DS23, DS27, DS28, DS29, DS30, DS31, DS32, DS71, DS72, DS73, DS74	20	LED, RED, SMD	Panasonic	LN1251C
DS67, DS68, DS69, DS70	4	LED, AMBER, SMD	Panasonic	LN1451C
H01, H02, H03, H04, H05, H06, H07, H08, H09, H10, H11, H12	12	KIT, 4-40 HARDWARE, .50 NYLON STANDOFF AND NYLON HEX-NUT	NA	4-40KIT4
J01, J12, J13, J17, J18	5	TERMINAL STRIP, 16 PIN, DUAL ROW, VERT	Samtec	TSW-108-07-T-D
J02, J50	2	TERMINAL STRIP, 10 PIN, DUAL ROW, VERT	NA	NA
J03, J43	2	TYPE B SINGLE RT ANGLE, BLACK	MOL	NA
J04, J51	2	L_CONN, DB9 RA, LONG CASE	AMP	747459-1
J05, J06, J48, J49	4	NON POPULATED HEADER, 14 PIN, DUAL ROW, VERT	Samtec	NOPOP-HDR-TSW-107-14-T-D
J07, J08, J10, J11	4	NOPOP TERMINAL STRIP, 16 PIN, DUAL ROW, VERT	Samtec	NOPOP-TSW-108-07-T-D

DESIGNATION	QTY	DESCRIPTION	SUPPLIER	PART
J09, J14, J20, J21, J22, J23, J52, J53, J57	9	L_TERMINAL STRIP, 10 PIN, DUAL ROW, VERT	Samtec	TSW-105-07-T-D
J15, J46	2	CONN 2.1MM/5.5MM PWRJACK RT ANGLE PCB, closed frame, high current 24VDC@5A also requires 5V ACDC adapter INPUT 100-240VAC 50-60HZ 0.6A OUTPUT DC 5V 2.6A. PN DMS050260-P5P-SZ. MODEL 3Z-161WP05	DIGIKEY	CP-002AH-ND
J16, J24	2	CONNECTOR, STACKED OCTAL JACK, 64-PIN, SHIELDED	MOL	SD-44520-001
J19, J25, JB06	3	100 MIL 2 POS JUMPER	NA	NA
J26, J27, J28, J29, J30, J31, J32, J33, J34, J35, J36, J37, J38, J39, J40, J41, J44, J45	18	L_2 PIN HEADER, .100 CENTERS, VERTICAL	Samtec	TSW-102-07-T-S
J42, J58	2	100 MIL 2*7 POS JUMPER	NA	NA
J47	1	L_RJ48 8 PIN SINGLE PORT CONNECTOR	MOLEX	15-43-8588
J54, J93, J94, J95, J96	5	L_TERMINAL STRIP, 10 PIN, DUAL ROW, VERT DO NOT POPULATE	DNP	DNP
J55	1	HEADER, 14 PIN, DUAL ROW, VERT	Samtec	HDR-TSW-107-14-T-D
J56, J98	2	CONNECTOR, PULSEJACK, 16 PIN	Pulse	JK0654218Z
J91, J92	2	CONNECTOR, FASTJACK SINGLE, 8 PIN FOR NATIONAL PHY	Halo Electronics	HFJ11-2450E
J97, J99	2	SOCKET, SMD, 50 PIN, 2 ROW VERTICAL	Samtec	TFM-125-02-S-D-LC
JB01, JB05	2	PLUG, SMD, 50 PIN, 2 ROW VERTICAL	Samtec	SFM-125-L2-S-D-LC
JB02, JB04	2	TEST POINTS FOR SMD 50 PIN, 2 ROW VERTICAL	NA	NA_NOTPOPULATED
JB03	1	100 MIL 2 POS JUMPER DO NOT POPULATE	NOPOP	NA
Reference designators shown on next row (begins with JP01)	49	100 MIL 3 POS JUMPER	NA	NA
JP01, JP02, JP03, JP04, JP05, JP06, JP07, JP08, JP09, JP10, JP11, JP12, JP13, JP14, JP15, JP16, JP17, JP18, JP19, JP20, JP21, JP22, JP23, JP24, JP25, JP26, JP27, JP28, JP29, JP67, JP68, JP69, JP70, JP71, JP72, JP73, JP74, JP75, JP76, JP77, JP78, JP79, JP80, JP81, JP82, JP83, JP84, JP85, JP86				
R01, R02, R42, R43, RB01, RB02, RB04, RB39, RB46, RB47, RB62, RB87, RB88, RB89, RB90, RB91, RB107, RB128, RB231, RB232	20	RES 0603 0.0 Ohm 1/16W 5%	Panasonic	ERJ-3GEY0R00V
R03, R05, RB09, RB10, RB12, RB14, RB26, RB28, RB96, RB97, RB100, RB113, RB114, RB115, RB116, RB118, RB120, RB122, RB123	19	RES 0603 30 Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ300V
R04, RB03, RB05, RB07, RB13, RB18, RB23, RB24, RB25, RB92, RB99, RB101, RB104, RB106, RB121	15	L_RES 0603 330 Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ331V

DESIGNATION	QTY	DESCRIPTION	SUPPLIER	PART
R06, R07, R39, R41	4	RES 0603 24.3 Ohm 1/16W 1%	Panasonic	ERJ-3EKF24R3V
R08, RB06, RB15, RB17, RB19, RB20, RB21, RB43, RB45	9	L_RES 0603 1.0K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ102V
R09, R10, R11, R12, R14, R15, R16, R17, R18, R19, R20, R21, R22, R23, R24, R25, R26, R27, R28, R29, R30, R31, R32, R33, R34, R35, RB32, RB33, RB48, RB49, RB50, RB51	32	RES 1206 61.9 Ohm 1/8W 1%	Panasonic	ERJ-8ENF61R9V
R13, RB30, RB31, RB60, RB61, RB109, RB110, RB111, RB127	9	L_RES 0603 10K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ103V
R36, R40	2	RES 0603 1.0M Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ105V
R37, R38	2	RES 0805 61.9 Ohm 1/10W 1%	Panasonic	ERJ-6ENF61R9V
RB08, RB41, RB98, RB108	4	RES 0603 10K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ103V
RB11, RB95	2	RES 0603 1.5K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ152V
RB119, RB246	2	RES 0603 9.76K Ohm 1/16W 1%	Panasonic	ERJ-3EKF9761V
RB125, RB126, RB129, RB245, RB248, RB249	6	RES 0603 2.0K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ202V
RB16, RB22, RB131, RB132	4	L_RES 0603 0 Ohm 1/16W 1%	AVX	CJ10-000F
RB233, RB234, RB235, RB236, RB239, RB241	6	RES 0603 2.2K Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ222V
RB237, RB238	2	RES 0603 4.87K Ohm 1/16W 1%	Panasonic	ERJ-3EKF4871V
RB27, RB124, RB130, RB247	4	RES 0603 330 Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ331V
RB29, RB34, RB35, RB36, RB37, RB38	6	RES 0603 51 Ohm 1/10W 5% - SEE SPECIAL INSTRUCTIONS	Panasonic	ERJ-3GEY0R00V
RB40, RB44, RB112, RB240, RB242, RB243, RB244	7	RES 0603 30 Ohm 1/16W	Panasonic	ERJ-3GEYJ300V
RB42, RB117	2	RES 0805 10K Ohm 1/10W 1%	Panasonic	ERJ-6ENF1002V
RB52, RB53, RB54, RB55, RB56, RB57, RB58, RB59, RB63, RB64, RB65, RB66, RB67, RB68, RB69, RB70, RB103, RB105	18	RES 0603 332 Ohm 1/16W 1%	Panasonic	ERJ-3EKF3320V
RB71, RB72, RB73, RB74, RB75, RB76, RB77, RB78, RB79, RB80, RB81, RB82, RB83, RB84, RB85, RB86, RB93, RB94, RB102	19	RES 0603 51 Ohm 1/16W 5%	Panasonic	ERJ-3GEYJ510V
RP01, RP02, RP03, RP04, RP05, RP06, RP41, RP42, RP43, RP44, RP48, RP49, RPB07, RPB10, RPB109, RPB110	16	4 PACK RESISTOR 24 OHM 2 PCT	KOA	CN1J4TTD240G
RP07, RP08, RP09, RP10, RP12, RP45, RP46, RP47, RP50, RP51, RPB15, RPB19, RPB93, RPB98, RPB107, RPB108, RPB131, RPB132, RPB144, RPB145	20	4 PACK RESISTOR 50 OHM 2 PCT	KOA	CN1J4TTD500G
See next row (begins with RP11)	62	4 PACK RESISTOR 30 OHM 5% QUAD 0402	PANASONIC	EXB-N8V300JX

DESIGNATION	QTY	DESCRIPTION	SUPPLIER	PART
RP11, RP13, RP15, RP16, RP17, RP18, RP19, RP20, RP25, RP26, RP27, RP28, RP29, RP30, RP31, RP32, RP33, RP34, RP35, RP36, RP37, RP38, RP39, RP84, RP85, RP86, RP87, RP88, RP89, RP91, RP92, RP93, RP94, RPB05, RPB08, RPB09, RPB11, RPB13, RPB16, RPB18, RPB21, RPB24, RPB25, RPB30, RPB35, RPB43, RPB44, RPB51, RPB52, RPB58, RPB59, RPB60, RPB61, RPB62, RPB63, RPB64, RPB65, RPB84, RPB87, RPB91, RPB99, RPB143				
RP14, RPB04, RPB06, RPB14, RPB20, RPB22, RPB54, RPB55, RPB56, RPB66, RPB77, RPB79, RPB89, RPB92, RPB94, RPB95, RPB96, RPB97, RPB100, RPB101, RPB103, RPB150	22	4 PACK RESISTOR 10K OHM 5% QUAD 0402	PANASONIC	EXB-N8V103JX
RP21, RP22, RP23, RP24, RPB26, RPB27, RPB28, RPB29, RPB31, RPB32, RPB33, RPB34, RPB36, RPB38, RPB39, RPB40, RPB41, RPB42, RPB45, RPB46, RPB47, RPB49, RPB50, RPB53	24	4 PACK RESISTOR 20 OHM 5% QUAD 0402	PANASONIC	EXB-N8V200JX
RP40, RP90, RPB01, RPB02, RPB03, RPB12, RPB17, RPB37, RPB57, RPB67, RPB68, RPB69, RPB70, RPB71, RPB74, RPB78, RPB80, RPB82, RPB83, RPB85, RPB90, RPB104, RPB149	23	4 PACK RESISTOR 1K OHM 5% QUAD 0402	PANASONIC	EXB-N8V102JX
RPB23, RPB48, RPB72, RPB73, RPB75, RPB76, RPB81, RPB86, RPB102, RPB105, RPB133, RPB135, RPB147	13	4 PACK RESISTOR 330 OHM 5% QUAD 0402	PANASONIC	EXB-N8V331JX
RPB88, RPB106, RPB134, RPB136, RPB137, RPB138, RPB139, RPB140, RPB141, RPB142, RPB146, RPB148	12	4 PACK RESISTOR 2.2K OHM 5% QUAD 0402	PANASONIC	EXB-N8V222JX
SW01	1	SWITCH MOM 4PIN SINGLE POLE	Panasonic	EVQPAE04M
T01, T02, T03	3	XFMR, OCTAL T3/E3, 1 TO 2, SMT 32 PIN	Pulse	T3049
TB01, TB02, TB03, TB04	4	XFMR, XMIT/RCV, 1 TO 2 AND 1 TO 1, SMT 32 PIN	Pulse	TX1475
TB05	1	XFMR, 1CT_1CT & 1CT_2CT, 12P SMT	Pulse	TX1277
TP01, TPB01, TPB02, TPB07, TPB08, TPB09	6	TEST POINT, 1 PLATED HOLE, DO NOT STUFF	NA	NA
U01, U19	2	USB UART (USB - 8 bit FIFO), 32 PIN LQFP	FTD	FT245BM
U02	1	ETHERNET EXTENSION DEVICE 16 WAN 2 LAN	DALLAS SEMICONDUCTOR	NA
U03, UB29	2	SPI SERIAL EEPROM 2M 8 PIN SOIC 2.7V to 3.6V	Atmel	AT25F2048N-10SU-2.7
U04, U05, U06, U07, U11, U22, UB12, UB14, UB15, UB17, UB19, UB34	12	IC, OCT BUFFER FET SWITCH 5V 20-PIN TSSOP	Philips	CBT3244APW
U08, U15	2	IC, OCTAL TRANSCEIVER 0-70C 256P BGA	Dallas Semiconductor	DS26528N
U09, U10, U12, UB13, UB18, UB20	6	BAD PARTNUM IC, OCT BUFFER FET SWITCH 5V TSOP	Philips	CBT3244APW-T
U13, U23, UB22, UB33	4	CYPRESS SRAM, LAB STOCK	NA	NA
U14, U24	2	IC, FPGA, 1.2V, 20X20 TQFP, 144 PIN	Lattice	LFEC3E-3T144C


DESIGNATION	QTY	DESCRIPTION	SUPPLIER	PART
U16, U17	2	QUAD TRIPLE DUAL SINGLE ATM PACKET PHYs FOR DS3 E3 STS1 0-70C 400P BGA	Dallas Semiconductor	DS3184
U18, U27	2	MMC2107 PROCESSOR	Motorola	MMC2107
U20	1	DS3/E3 SCT, 11X11 CSBGA, 100 PIN	Dallas Semiconductor	DS3170
U21	1	IC, SINGLE T1 E1 J1 TRANSCEIVER, 10X10 LQFP, 64-PIN	Dallas Semiconductor	DS26521
U25	1	ETHERNET EXTENSION DEVICE 1 WAN 2 LAN	Dallas Semiconductor	NA
U26, U33	2	GIG PHYTER V, 10/100/1000 ETHERNET PHYSICAL LAYER, 128 PIN QFP	National Semiconductor	DP83865BVH
U31, U32	2	IC, DP83848C PHYTER 10/100 ETHERNET TRANSCEIVER, 48 PIN TQFP	National Semiconductor	DP83848C
UB01, UB28, UB70	3	HIGH SPEED BUFFER	FAIRCHILD	NC7SZ86
UB02, UB36	2	SINK SOURCE DDR TERMINATION REGULATOR	AVNET	LP2995M
UB03, UB35	2	DOUBLE DATA RATE (DDR) SDRAM 2-2-2 TIMING 256MBITX16 TSSOP	MICRON	NA
UB04, UB30	2	IC, LINEAR REG 1.5W, 1.8V or Adj, 1A, 16TSSOP-EP	Maxim	MAX1793EUE-18
UB05, UB06, UB37, UB38	4	IC, LINEAR REG 1.5W, 2.5V or Adj, 1A, 16TSSOP-EP	Maxim	MAX1793EUE-25
UB07, UB08, UB09, UB11, UB16, UB23, UB24, UB25, UB26, UB27	10	IC, LINEAR REG 1.5W, 3.3V or Adj, 1A, 16TSSOP-EP	Maxim	MAX1793EUE-33
UB10, UB31	2	Dual RS-232 transceivers with 3.3V/5V internal capacitors	MAXIM	NA
UB21, UB32	2	IC, LDO REGULATOR WITH RESET, 1.20V OUTPUT 300 MA, 6 PIN SOT23	Maxim	MAX1963EZT120-T
XB01, XB02	2	XTAL LOW PROFILE 8.0MHZ	ECL	EC1-8.000M
Y01, YB07	2	XTAL, LOW PROFILE, 6.00 MHZ	Pletronics	LP49-26-6.00M
YB01, YB03, YB09, YB11	4	SOCKETED OSCILLATOR, CRYSTAL CLOCK, 3.3V - 125.000 MHZ	ECLIPTEK	EC1325HSTS-125.000M+SOCKET
YB02, YB10	2	SOCKETED OSCILLATOR, CRYSTAL CLOCK, 3.3V - 25.000 MHZ	SaRonix	NTH089AA3-25.000+SOCKET
YB04	1	OSCILLATOR, CRYSTAL CLOCK, 5.0V - 44.736 MHZ	SaRonix	NTH089AA-44.736
YB05	1	OSCILLATOR + Socket, CRYSTAL CLOCK, 3.3V - 2.048 MHZ	SaRonix	SOCKET+NTH039A3-2.0480

DESIGNATION	QTY	DESCRIPTION	SUPPLIER	PART
YB06	1	OSCILLATOR + Socket, CRYSTAL CLOCK, 5V - 1.544 MHZ	SaRonix	SOCKET+NTH039A-1.5440
YB08	1	OSCILLATOR, CRYSTAL CLOCK, 3.3V - 44.736 MHZ	SaRonix	NTH089AA3-44.736
YB12	1	OSCILLATOR, CRYSTAL CLOCK, 3.3V - 1.544 MHZ	SaRonix	NTH039A3-1.5440
YB13	1	OSCILLATOR, CRYSTAL CLOCK, 3.3V - 2.048 MHZ	SaRonix	NTH039A3-2.0480

9. Schematics

The DS33X162DK schematics are featured in the following pages. As this is a hierarchal schematic some explanation follows. The schematic contains nine hierarchal blocks: the microcontroller, DS26528, DS3174, Ethernet PHY, Ethernet Test Points, and Power Supply.



All signals inside a hierarchy block are local, with exception for V_{CC} and ground. In-port and out-port connectors are used to allow signals inside a hierarchy block to become accessible as pins on the hierarchy blocks symbol. From here blocks are wired together as if they were ordinary components. The system diagram is shown again below, with schematic page numbers given for each functional block.

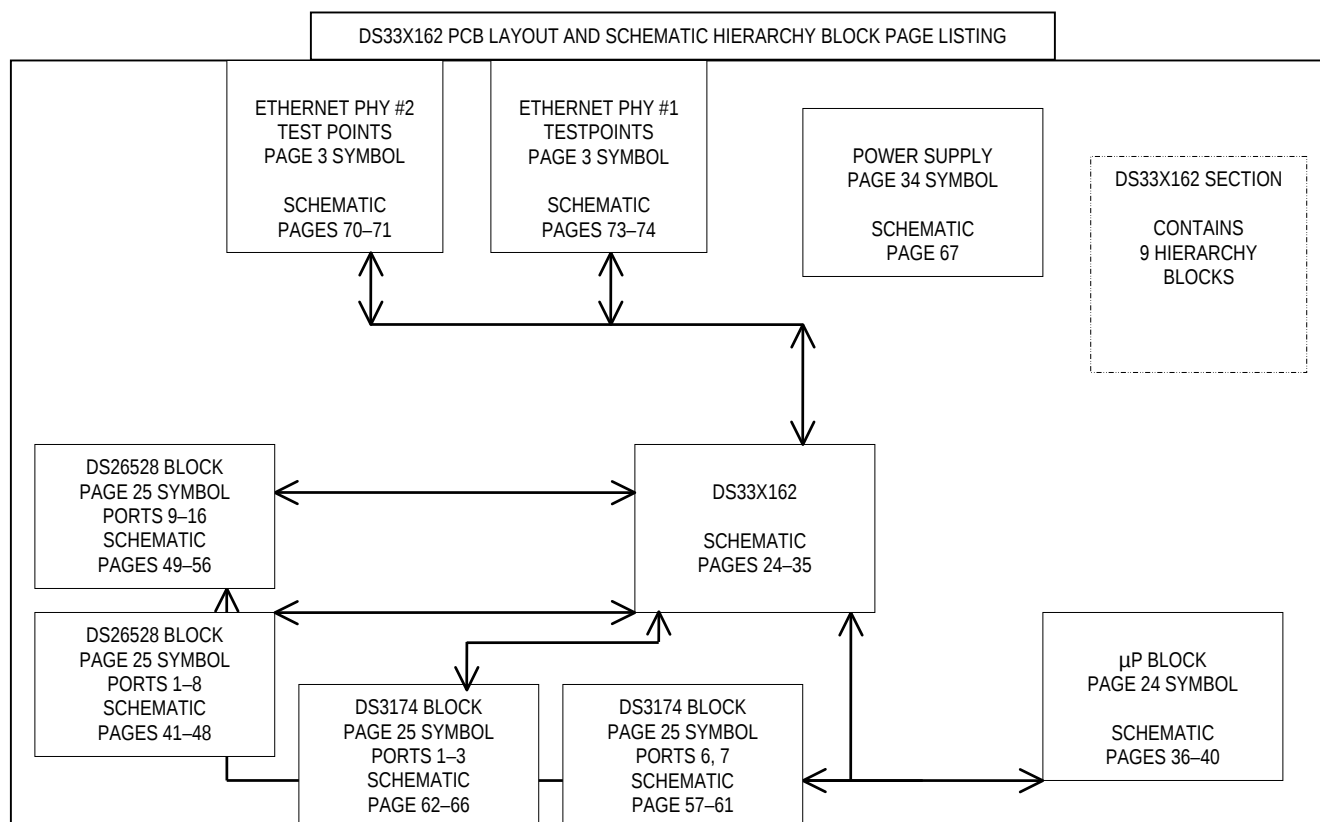

DS33X162DK CONTENTS / INDEX








MICROPORT.	P.24,36-40
WAN SECTION.	P.25-30
LSB WAN.	P.26,41-48
MSB WAN.	P.25,49-56
ETHERNET.	P.51,87
DDR MEMORY.	P.31-32
OSCILLATORS.	P.51
BIAS+CONFIG.	P.33
POWER.	P.34-35,67


SCHEMATICS FOR GIGABIT AND DUAL PHY CARDS AT THE END OF THE DS33X162DK SCHEMATIC

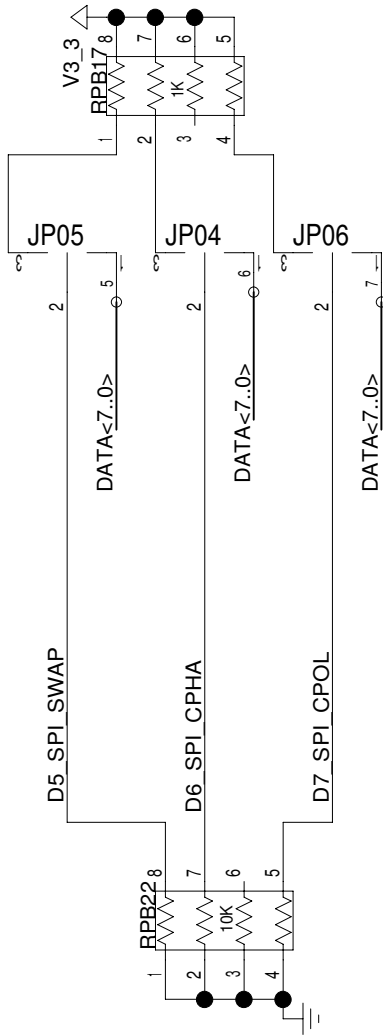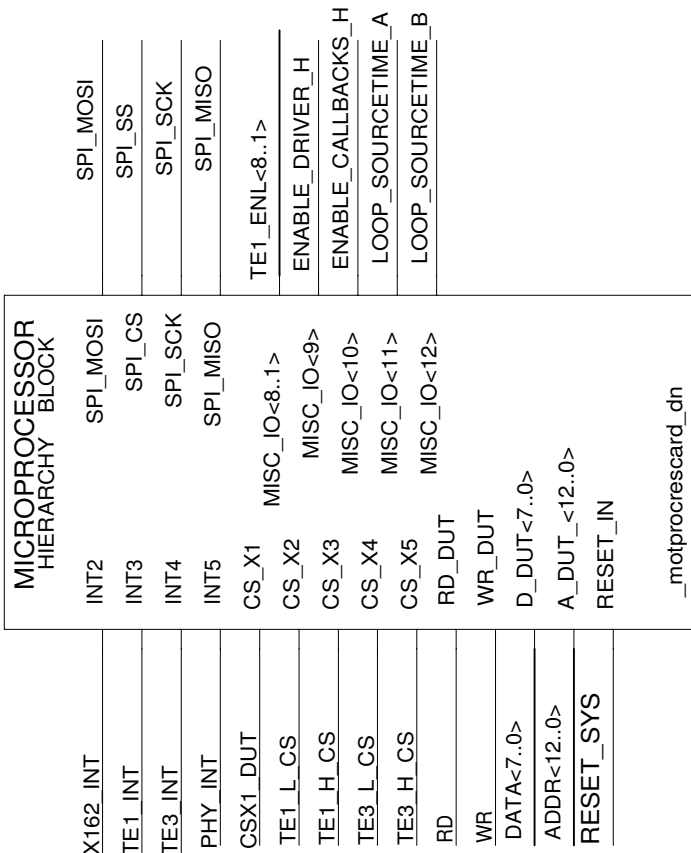


BEGINNING OF DS33X162DK


TITLE: DS33X42X82X162EE01A0 MICROPORT. P.24,36-40	DATE: 06/07/2006
ENGINEER: STEVE SCULLY	PAGE: 1/12(BLOCK) 24/76(TOTAL)

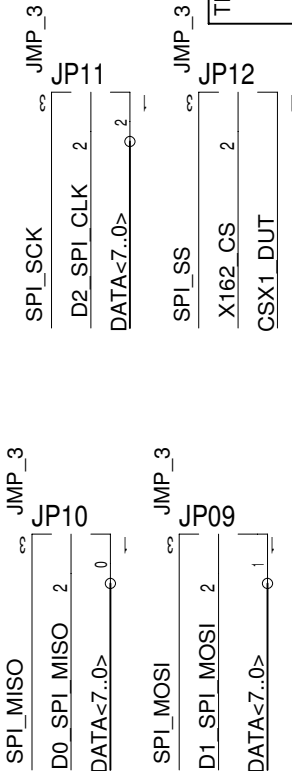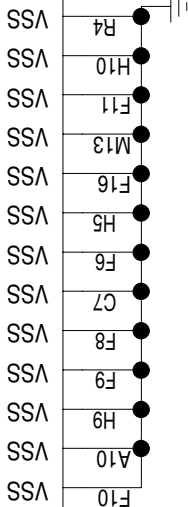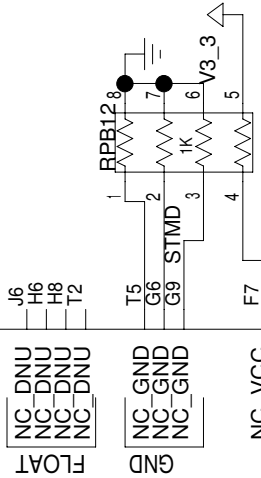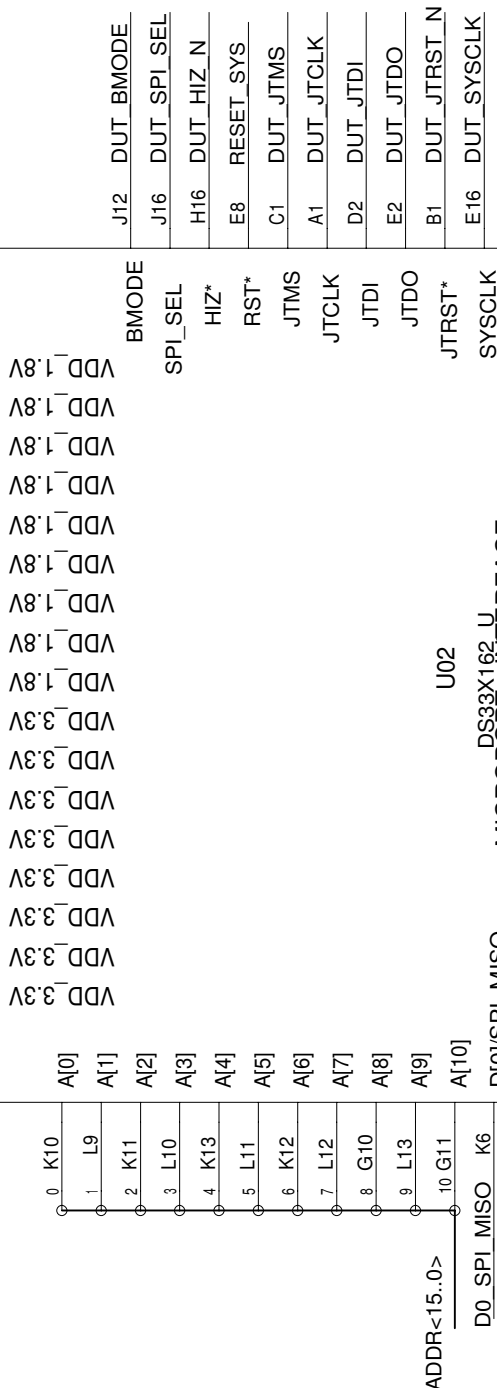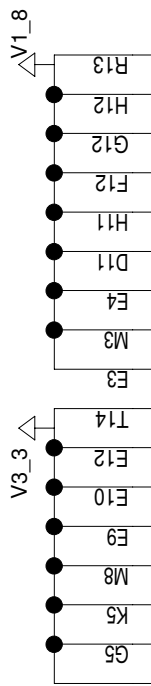

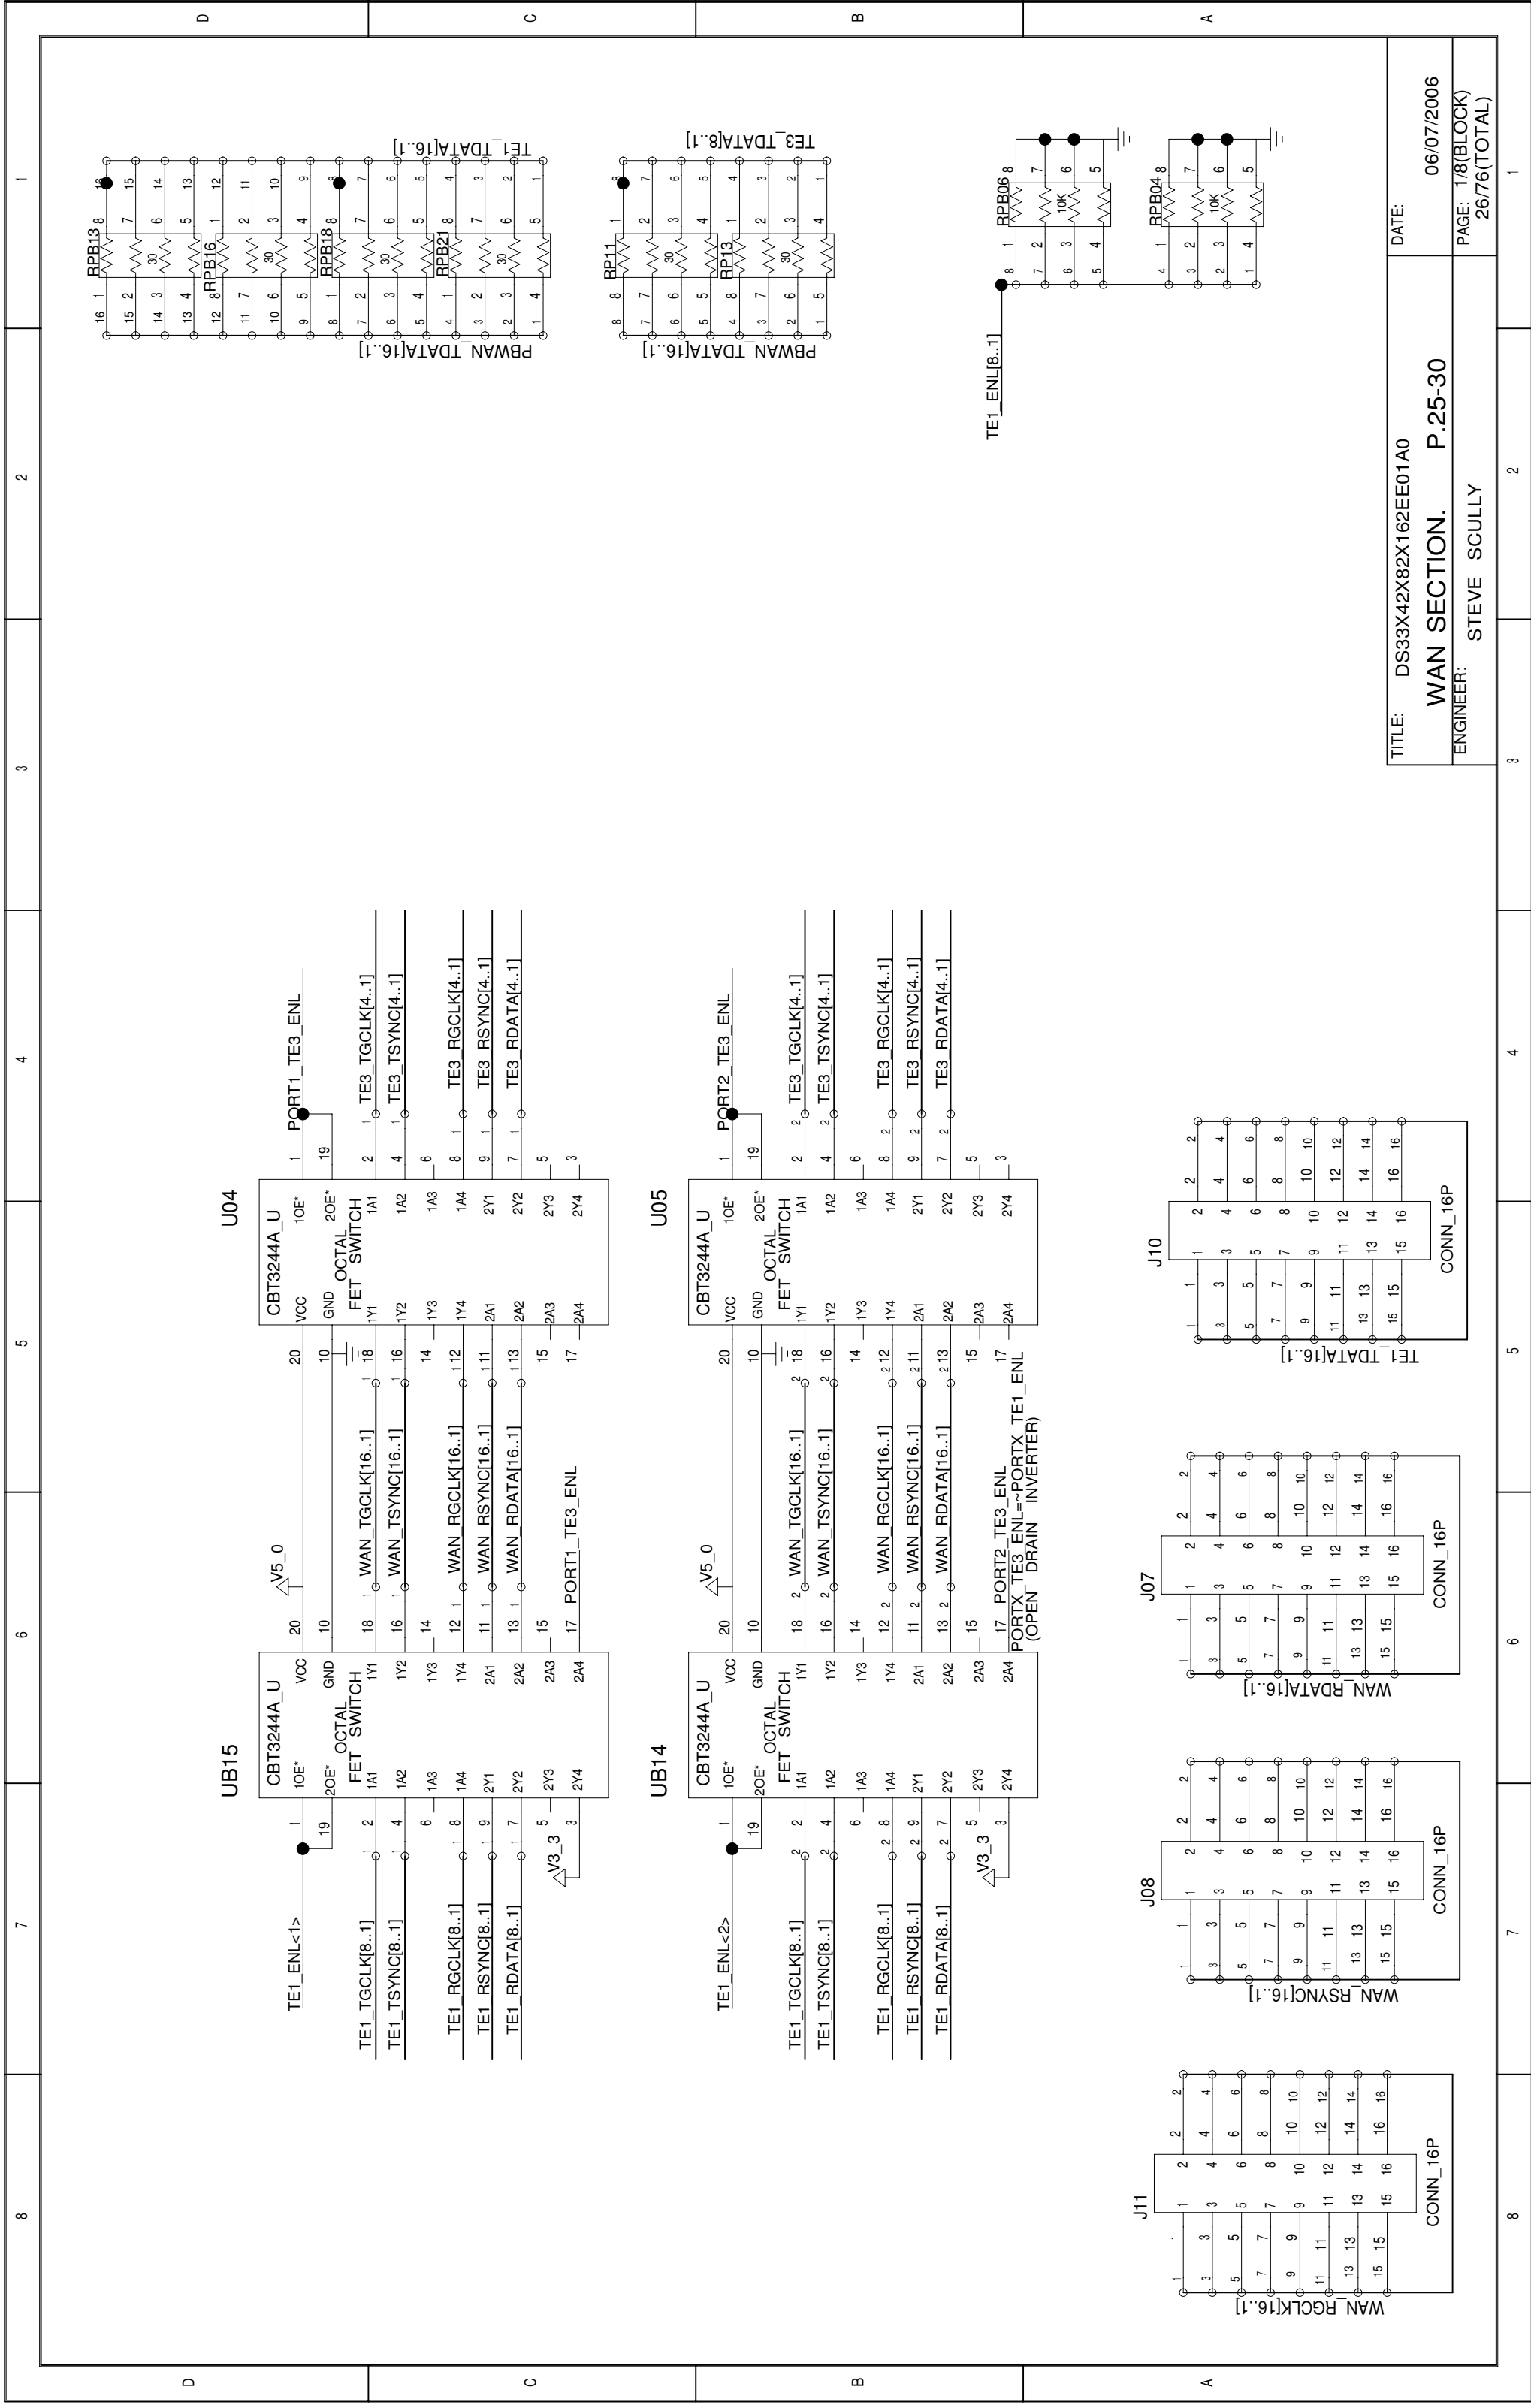


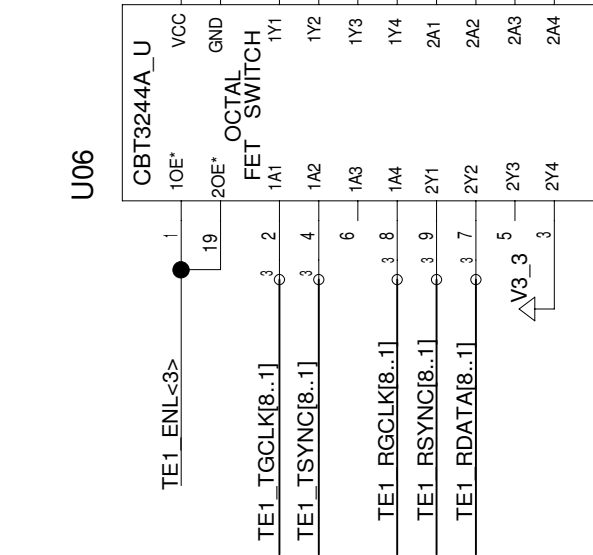



907

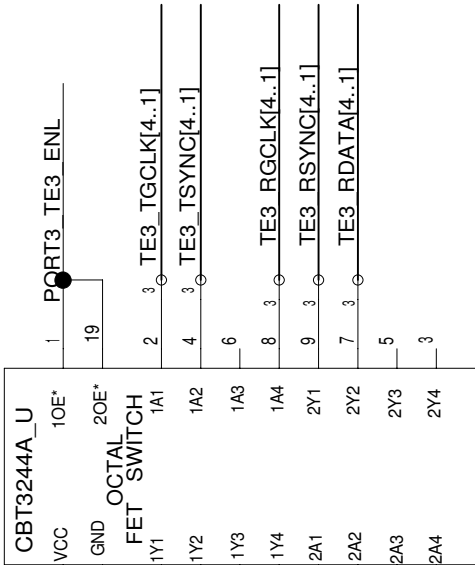


UB13

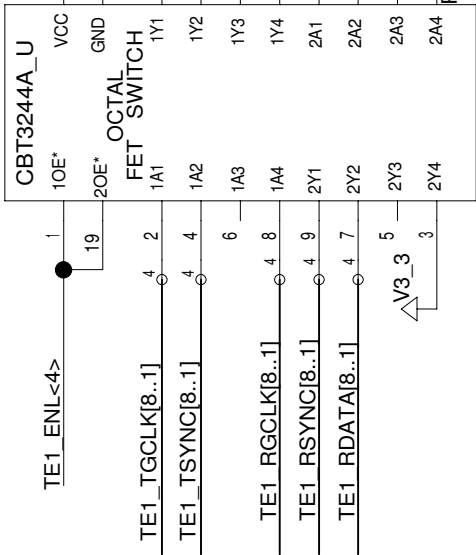


607

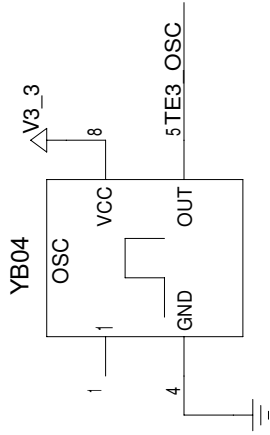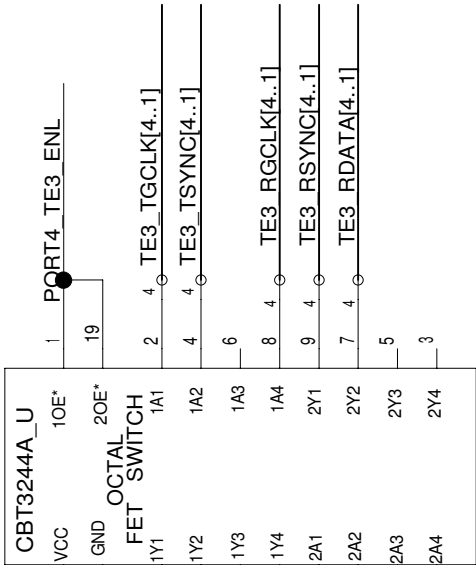

1.544MHZ_5.0VS

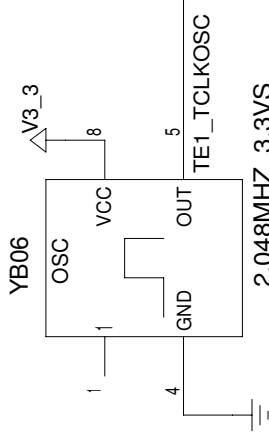


2.048MHZ 3.3VS

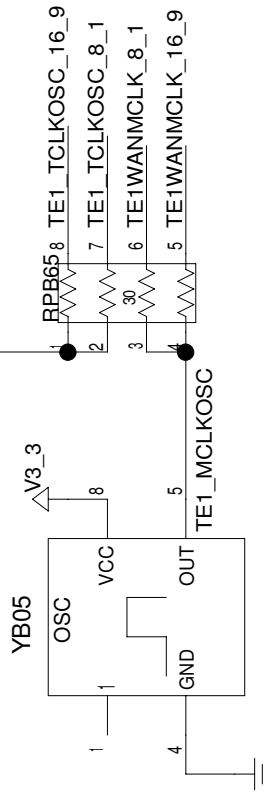

TITLE: DS33X42X82X162EE01A0	DATE:
WAN SECTION. P.25-30	06/07/2006
ENGINEER: STEVE SCULLY	PAGE: 1/8(BLOCK) 27/76(TOTAL)

[illegible]

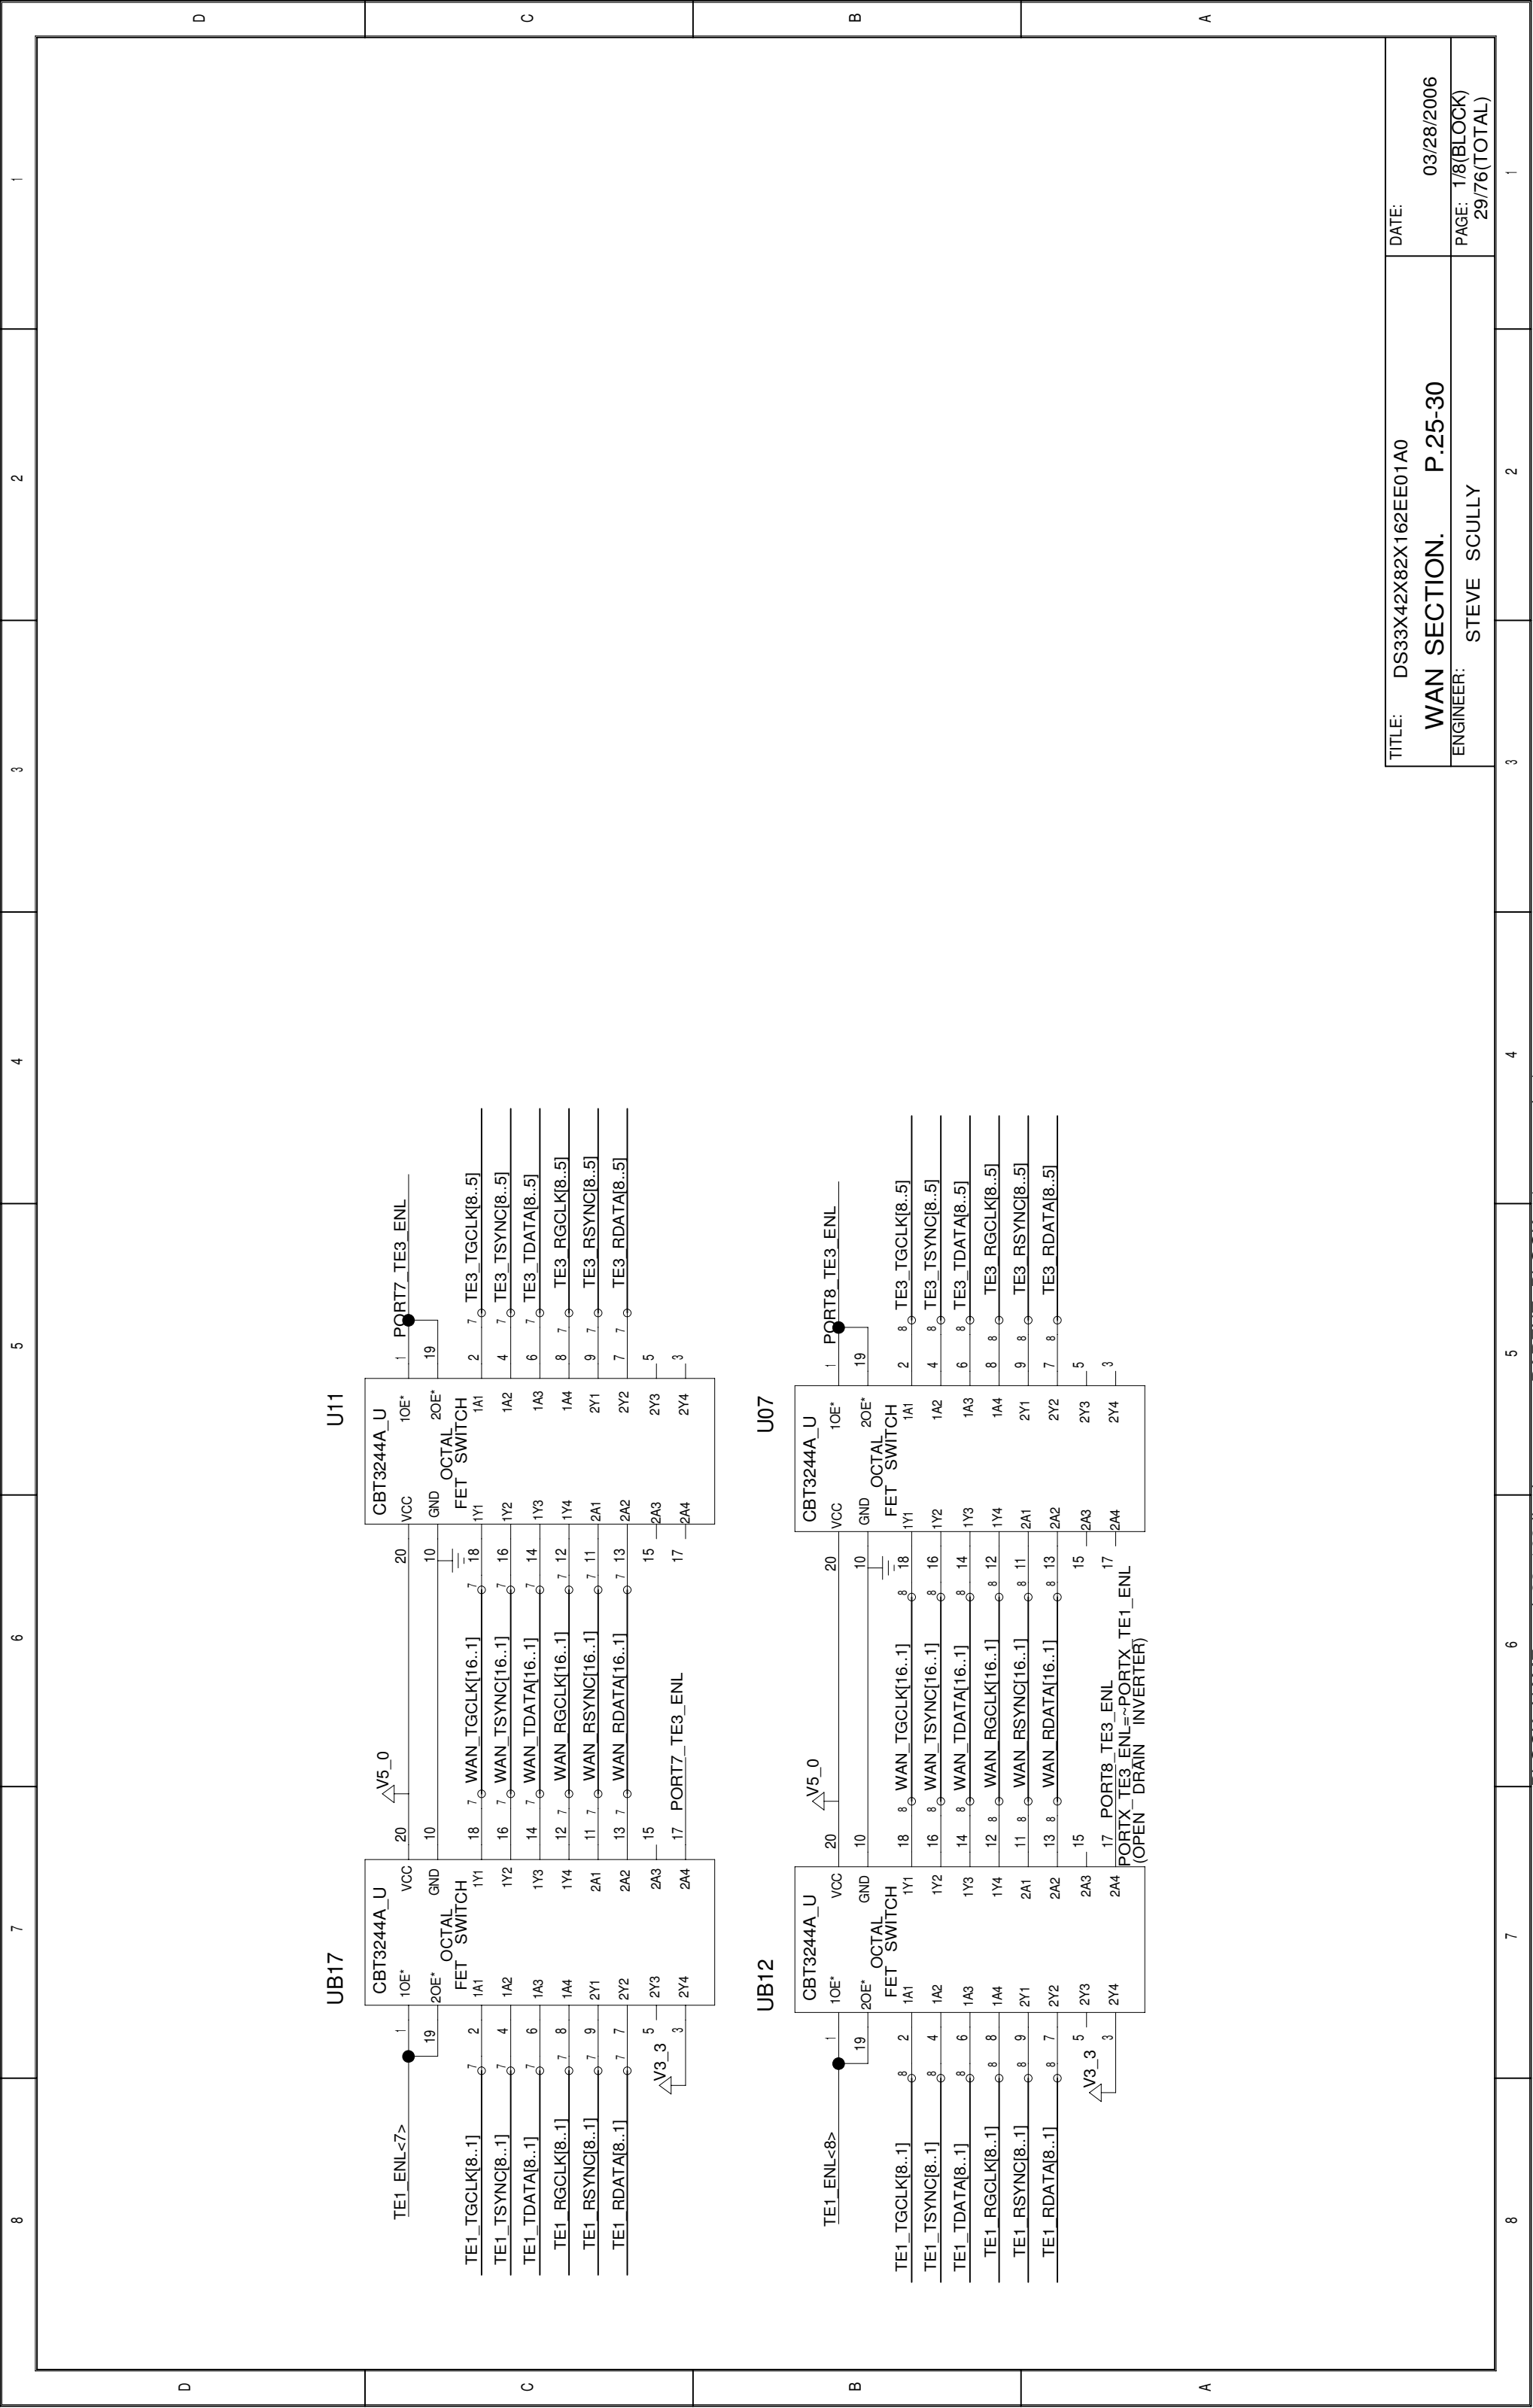

UB12

TE1_ENL<8>

1

19

TE1_TGCLK[8..1]

8

2

TE1_TSYNC[8..1]

8

4

TE1_TDATA[8..1]

8

6

TE1_RGCLK[8..1]

8

8

TE1_RSYNC[8..1]

8

9

TE1_RDATA[8..1]

8

7

△V3_3

5

3

CBT3244A_U

10E*

20E*

FET SWITCH

OCTAL

1Y1

1Y2

1Y3

1Y4

2A1

2A2

2A3

2A4

VCC

GND

1Y1

1Y2

1Y3

1Y4


2A1

2A2

2A3

2A4

B UB11 TE1_ENL<7> 1 19 TE1_TGCLK[8..5] 7 2 TE1_TSYNC[8..5] 7 4 TE1_TDATA[8..5] 7 6 TE1_RGCLK[8..5] 7 8 TE1_RSYNC[8..5] 7 9 TE1_RDATA[8..5] 7 7 △V5_0 5 3 CBT3244A_U 10E* 20E* FET SWITCH OCTAL 1A1 1A2 1A3 1A4 2Y1 2Y2 2Y3 2Y4 VCC GND 1Y1 1Y2 1Y3 1Y4 2A1 2A2 2A3 2A4 |A U07 TE1_ENL<8> 1 19 TE1_TGCLK[8..5] 8 2 TE1_TSYNC[8..5] 8 4 TE1_TDATA[8..5] 8 6 TE1_RGCLK[8..5] 8 8 TE1_RSYNC[8..5] 8 9 TE1_RDATA[8..5] 8 7 △V5_0 5 3 CBT3244A_U 10E* 20E* FET SWITCH OCTAL 1A1 1A2 1A3 1A4 2Y1 2Y2 2Y3 2Y4 VCC GND 1Y1 1Y2 1Y3 1Y4 2A1 2A2 2A3 2A4 |

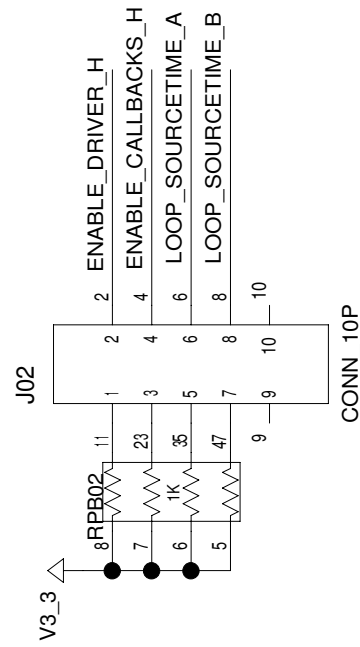

DEVICE DRIVER SETTINGS

ENABLE DRIVER H: ENABLES DEVICE DRIVERS WHEN JUMPER IS INSTALLED
 ENABLE_CALLBACKS H: ENABLES INTERRUPT HANDLING WHEN JUMPER IS INSTALLED

```




LOOP SOURCE TIME A: (IN DRIVER MODE ONLY)
WHEN JUMPER IS INSTALLED WAN PORTS 1-8 HAVE TCLK<=RCLK
WHEN JUMPER IS NOT INSTALLED WAN PORTS 1-8 HAVE TCLK<=REFCLKIO

```


```

LOOP SOURCE TIME B: (IN DRIVER MODE ONLY)
WHEN JUMPER IS INSTALLED WAN PORTS 9-16
WHEN JUMPER IS NOT INSTALLED WAN PORTS
9-16 HAVE TCLK<=RCLK
HAVE TCLK>=REFCLKIO



```

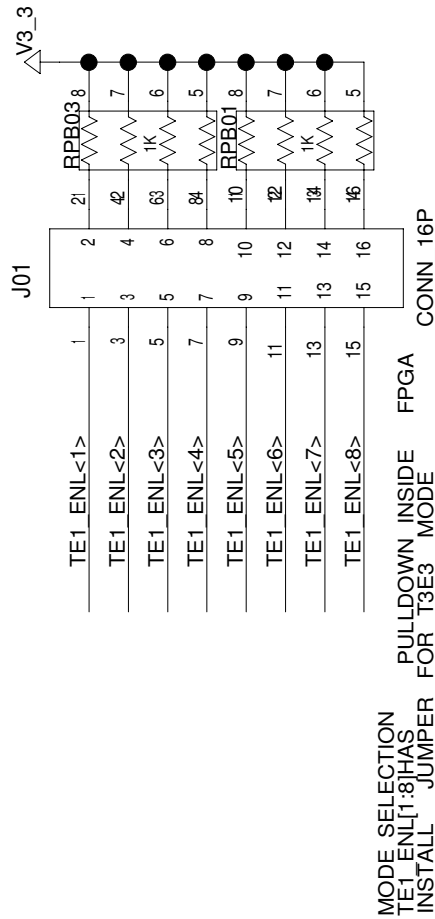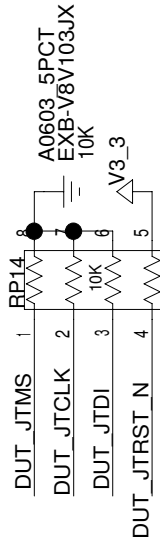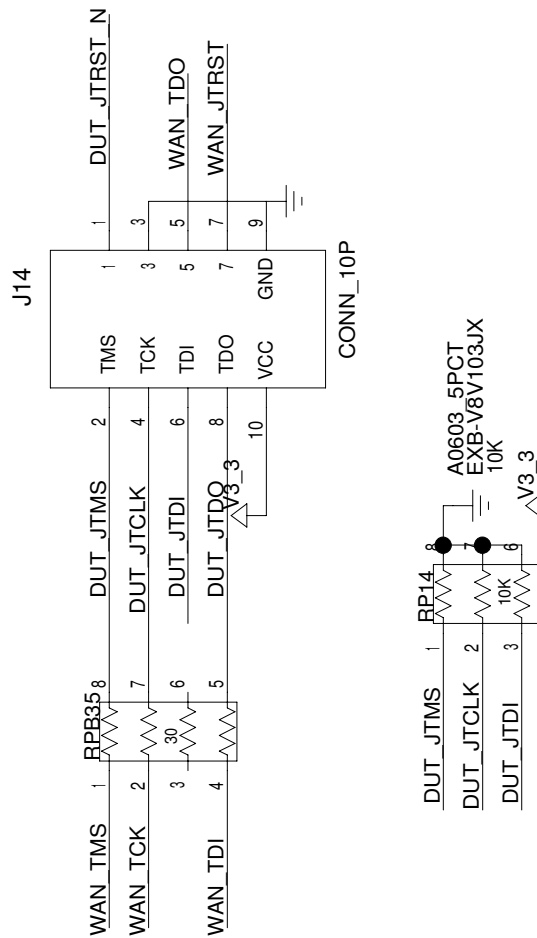

MODE SELECTION
TE1_ENL[1:8] HAS
INSTALL JUMPER
PULLDOWN INSIDE
FOR T3E3 MODE
FPGA
CONN 16P

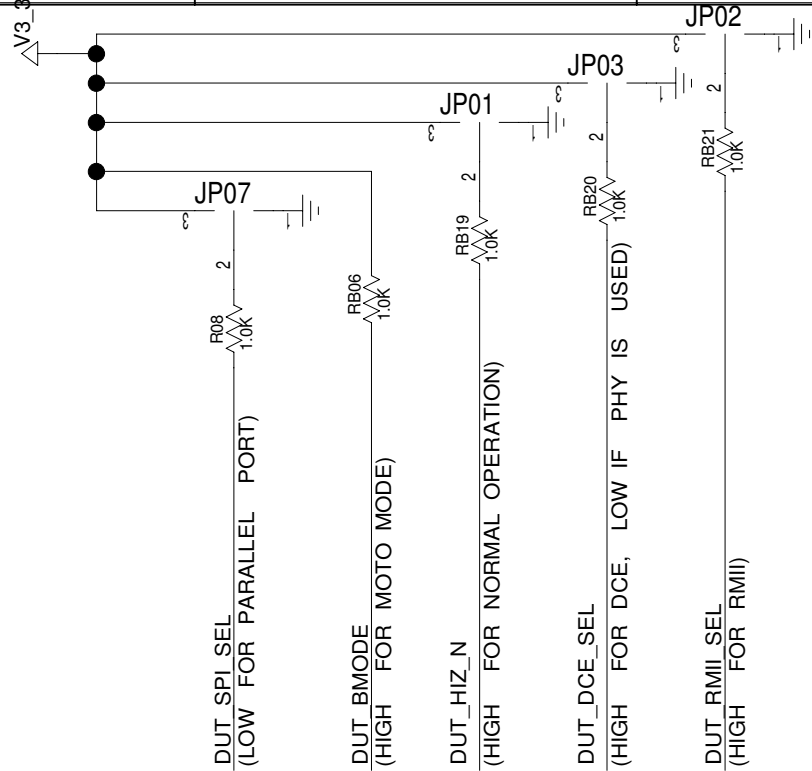






TITLE:	DS33X42X82X162EE01A0	DATE:
BIAS+CONFIG. P.33		
ENGINEER:	STEVE SCULLY	PAGE: 10/12(BLOCK) 33/76(TOTAL)



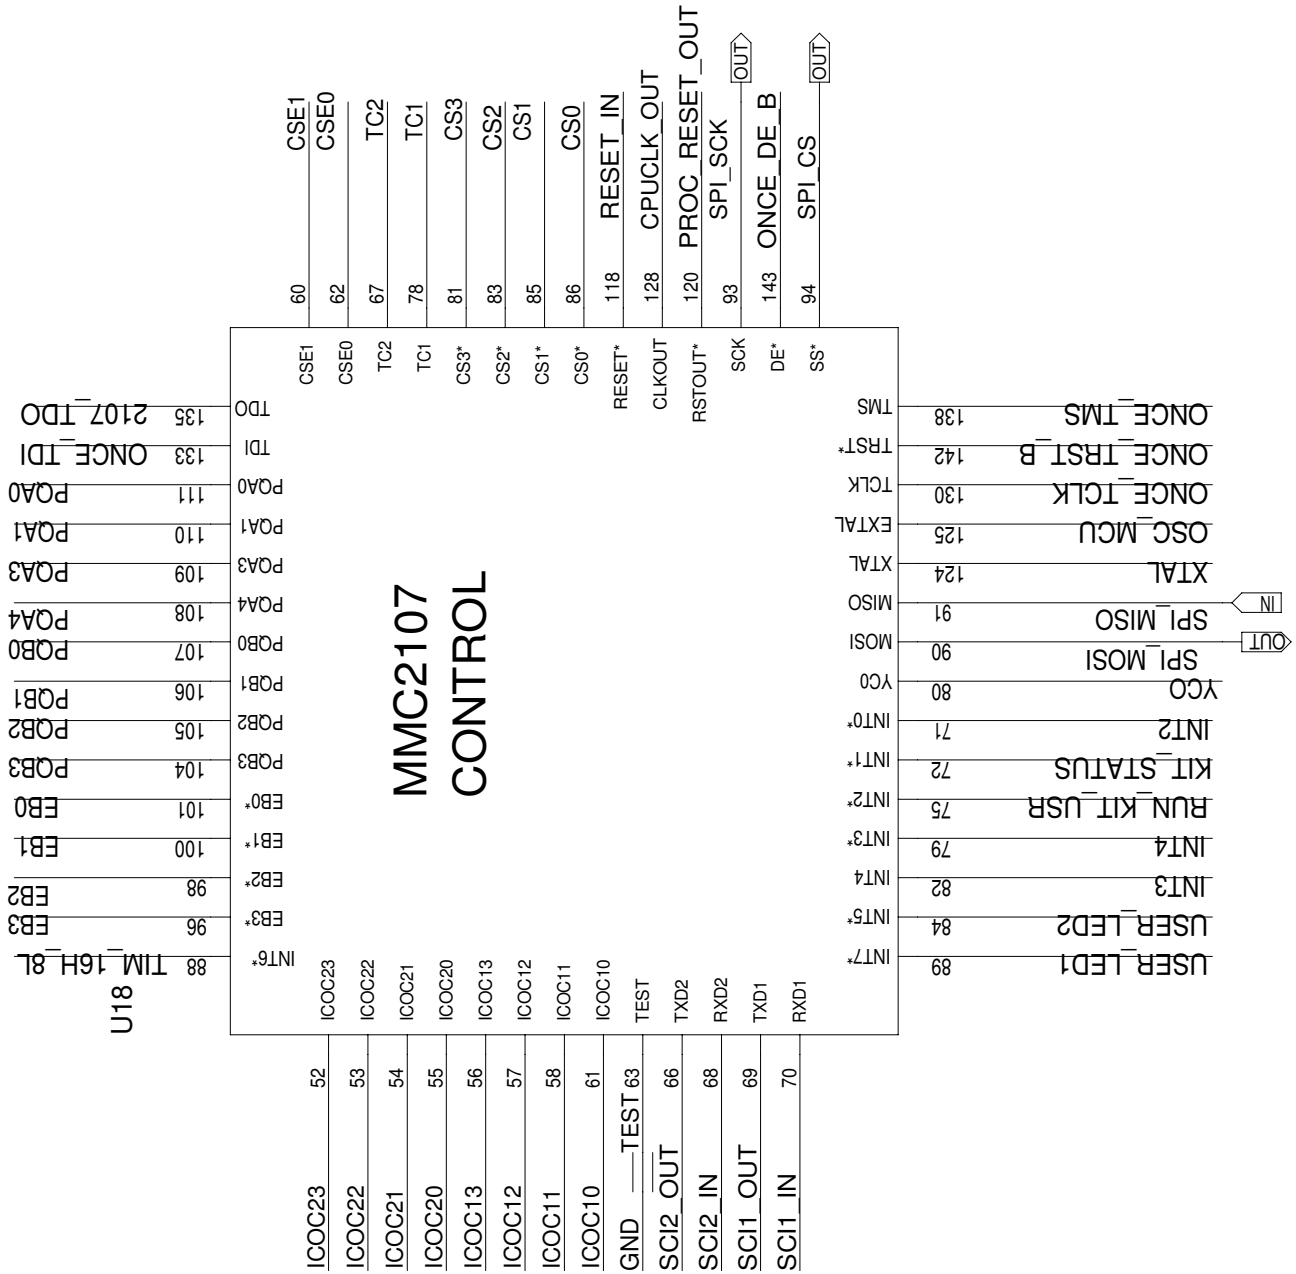
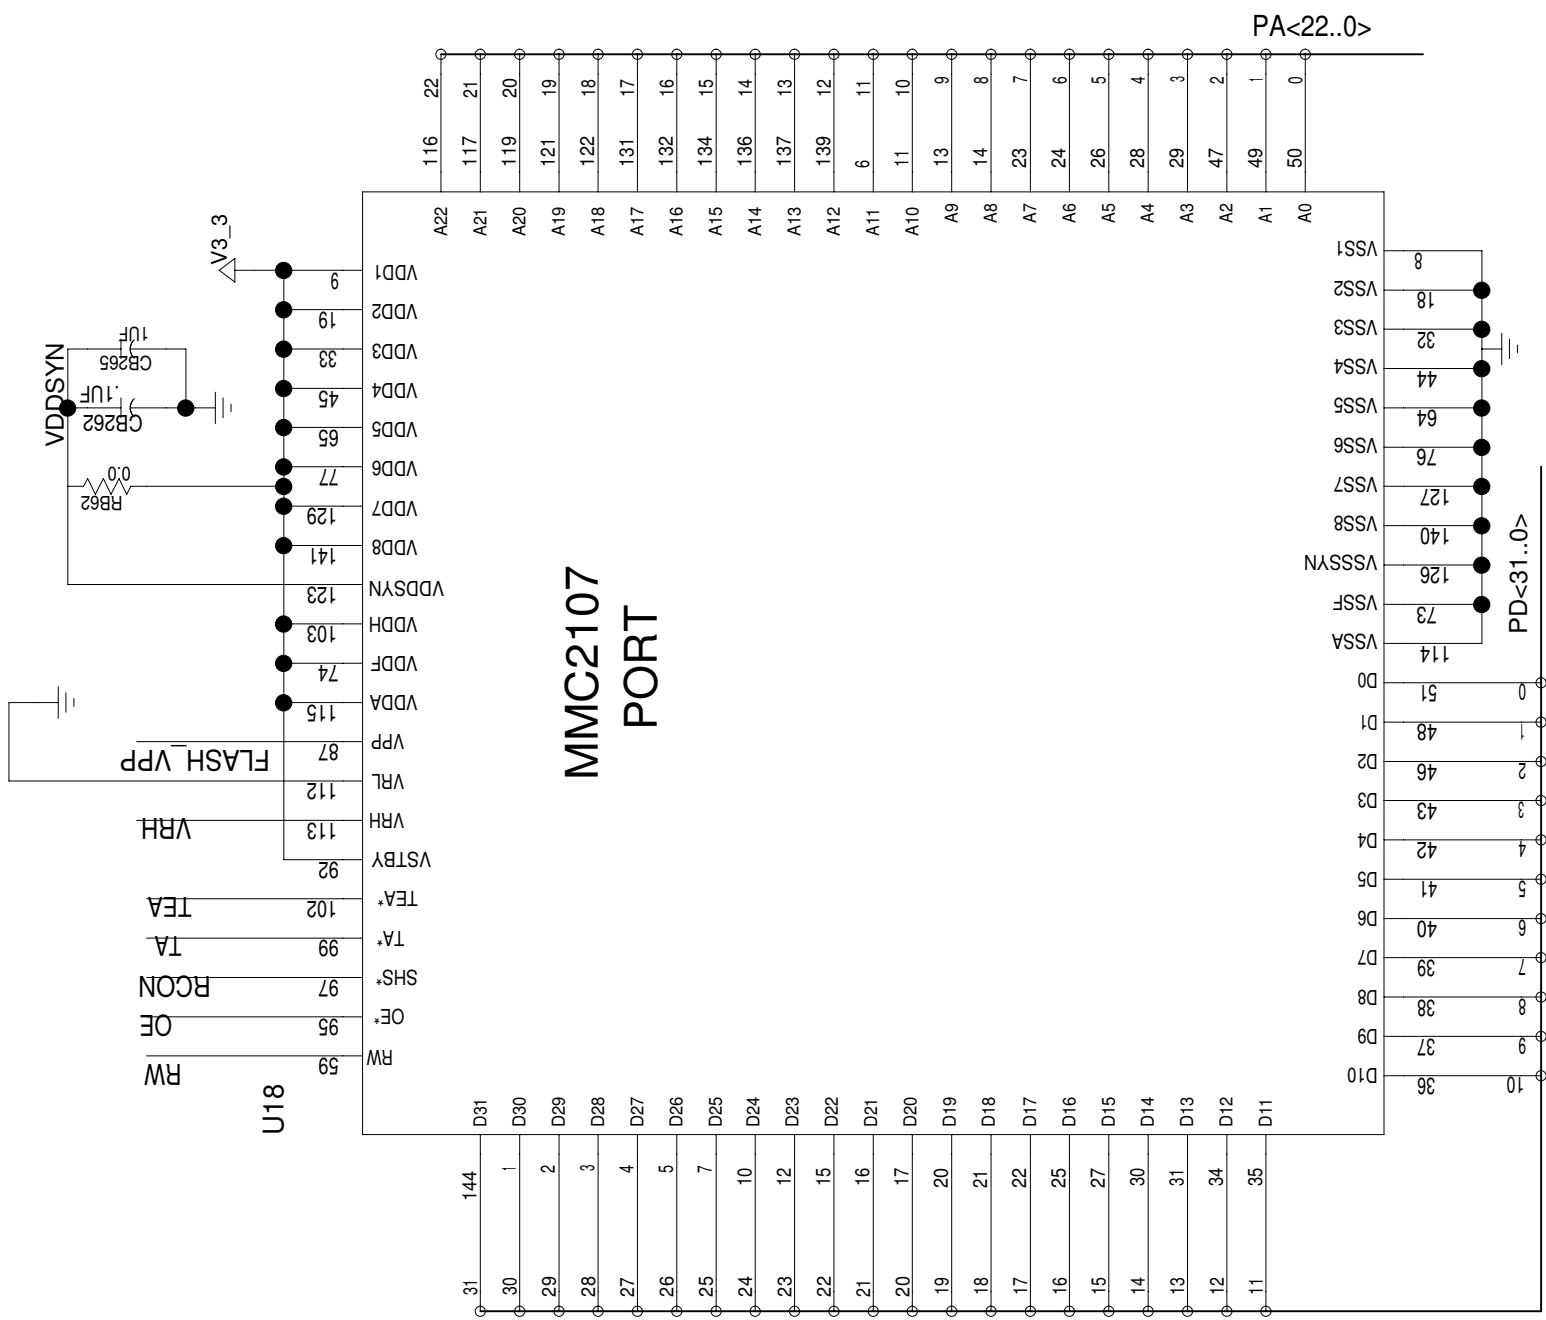


BEGINNING OF PROCESSOR HIERARCHY BLOCK

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	1/5(BLOCK) 36/76(TOTAL)





RESET CONFIGURATION

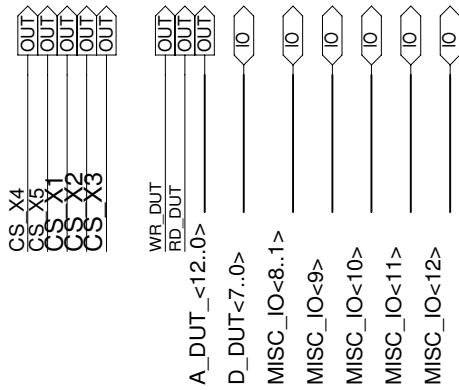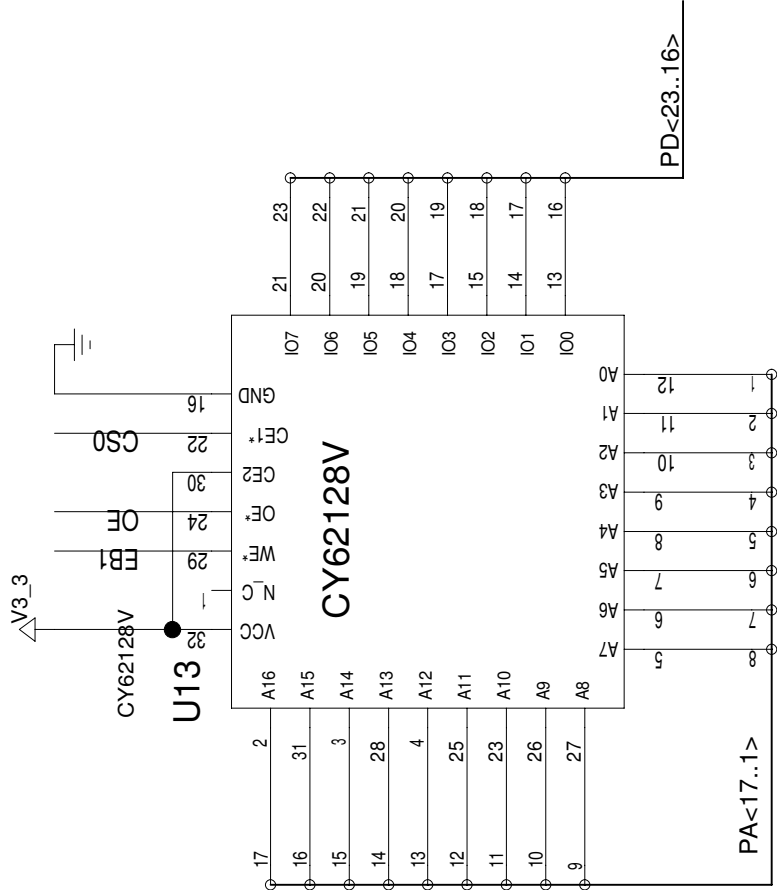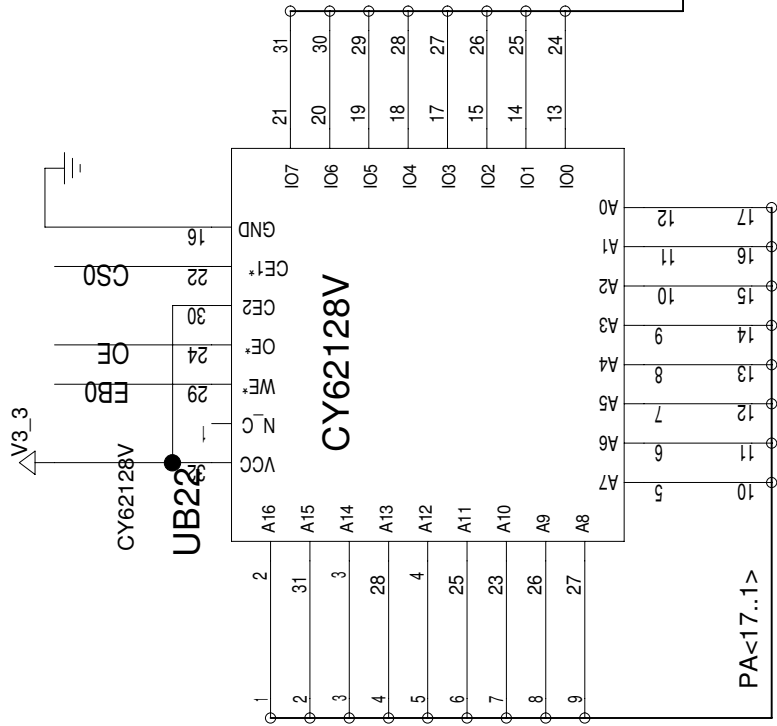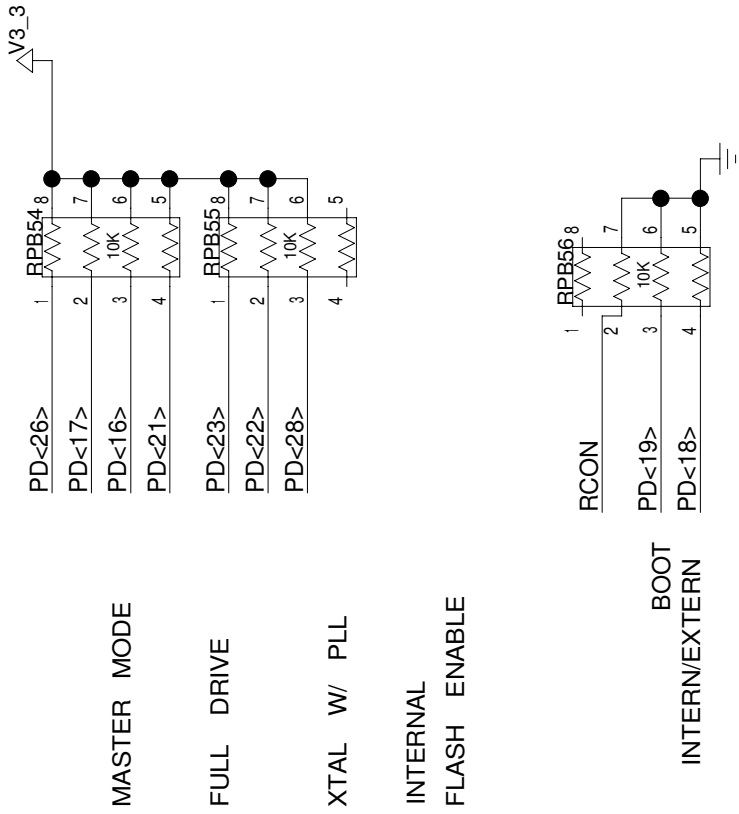


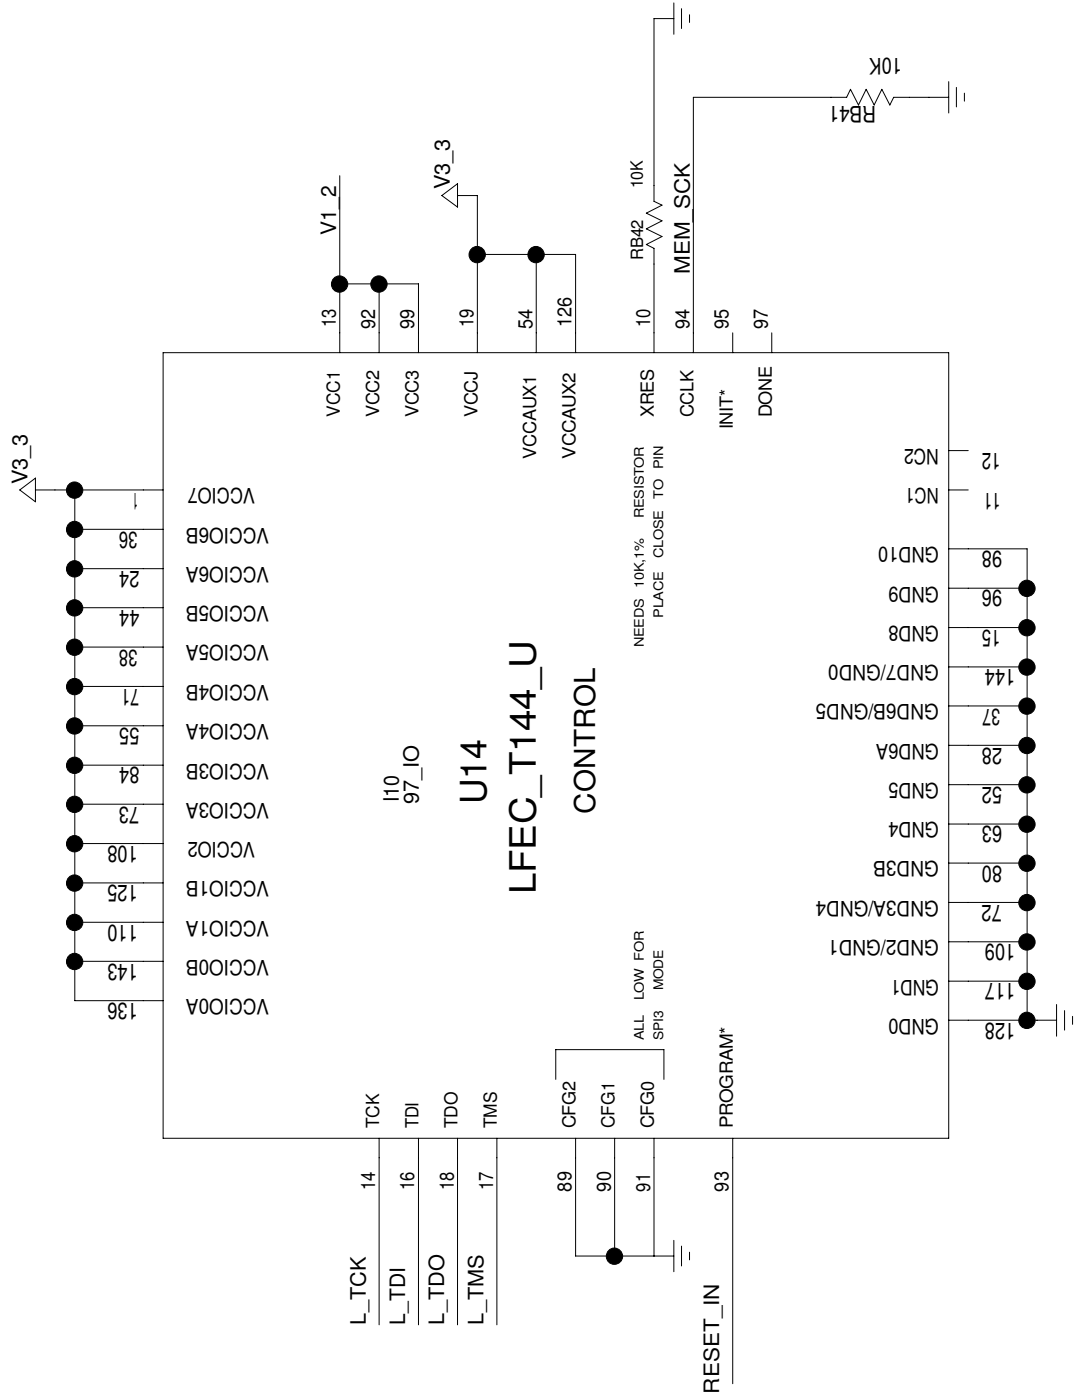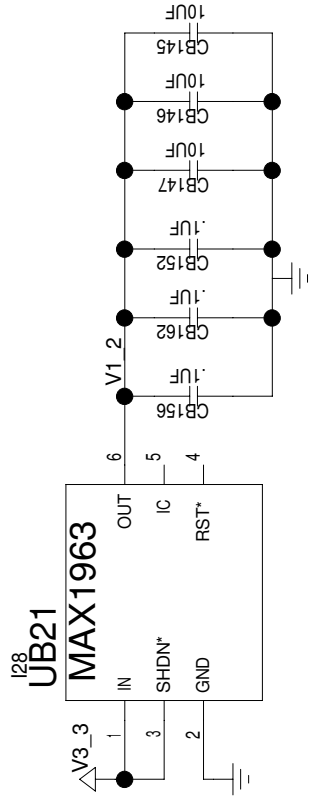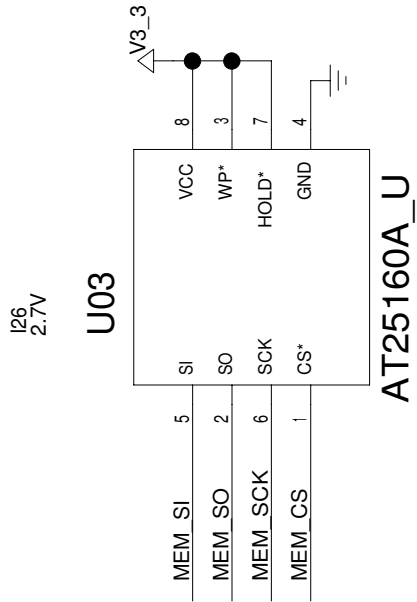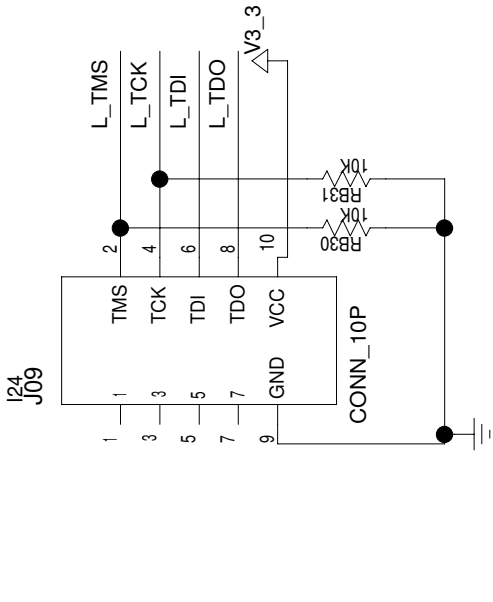


END OF PROCESSOR HIERARCHY BLOCK


TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	5/5(BLOCK) 40/76(TOTAL)

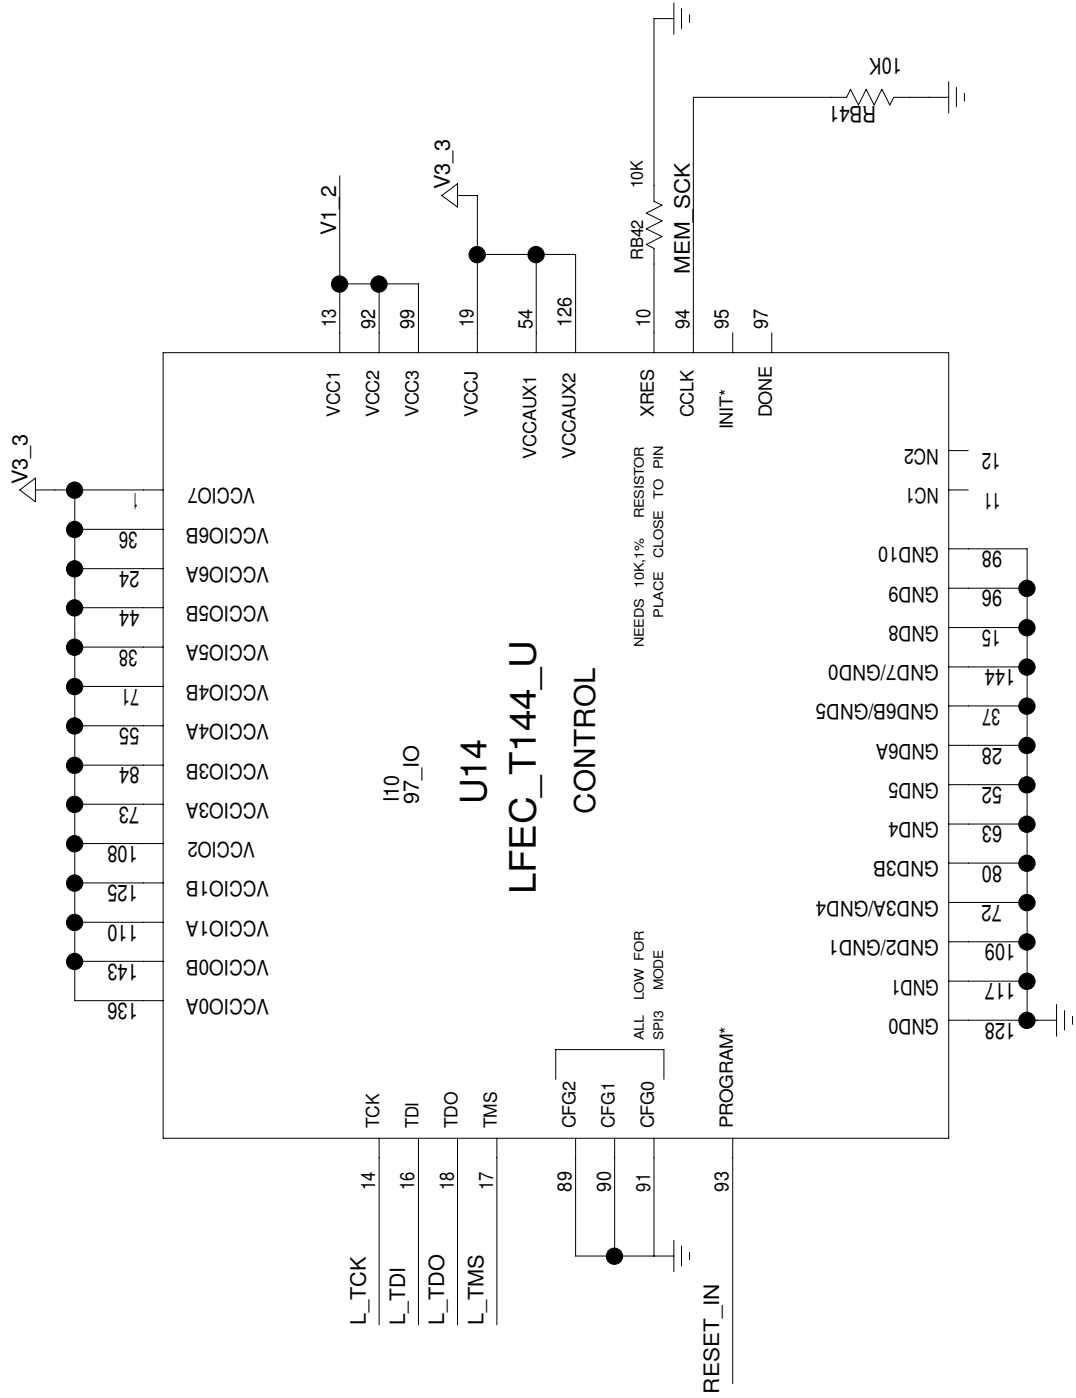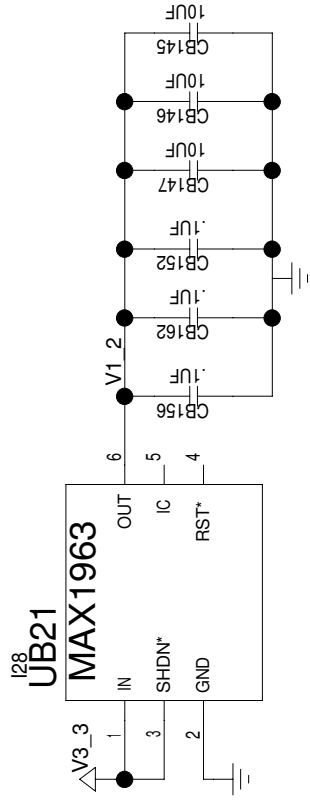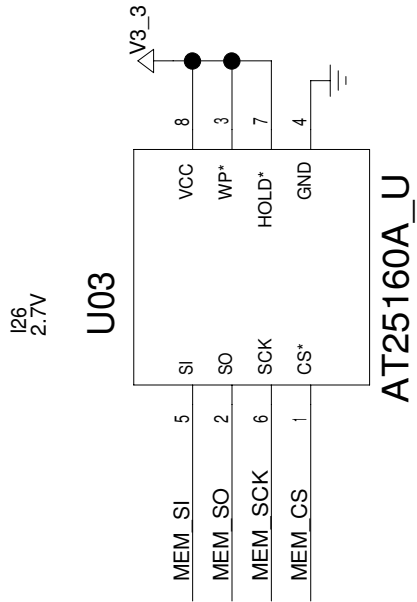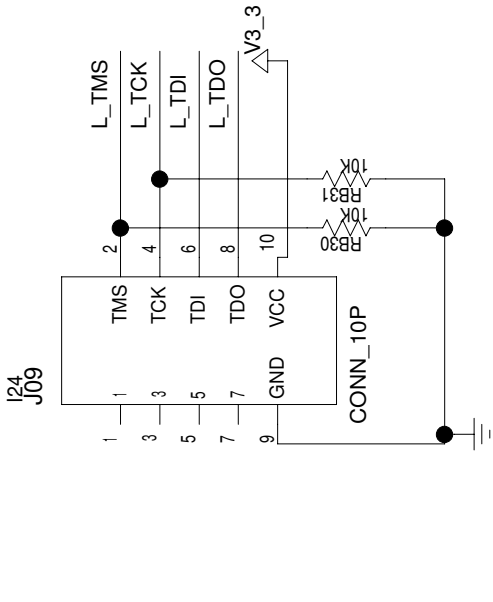

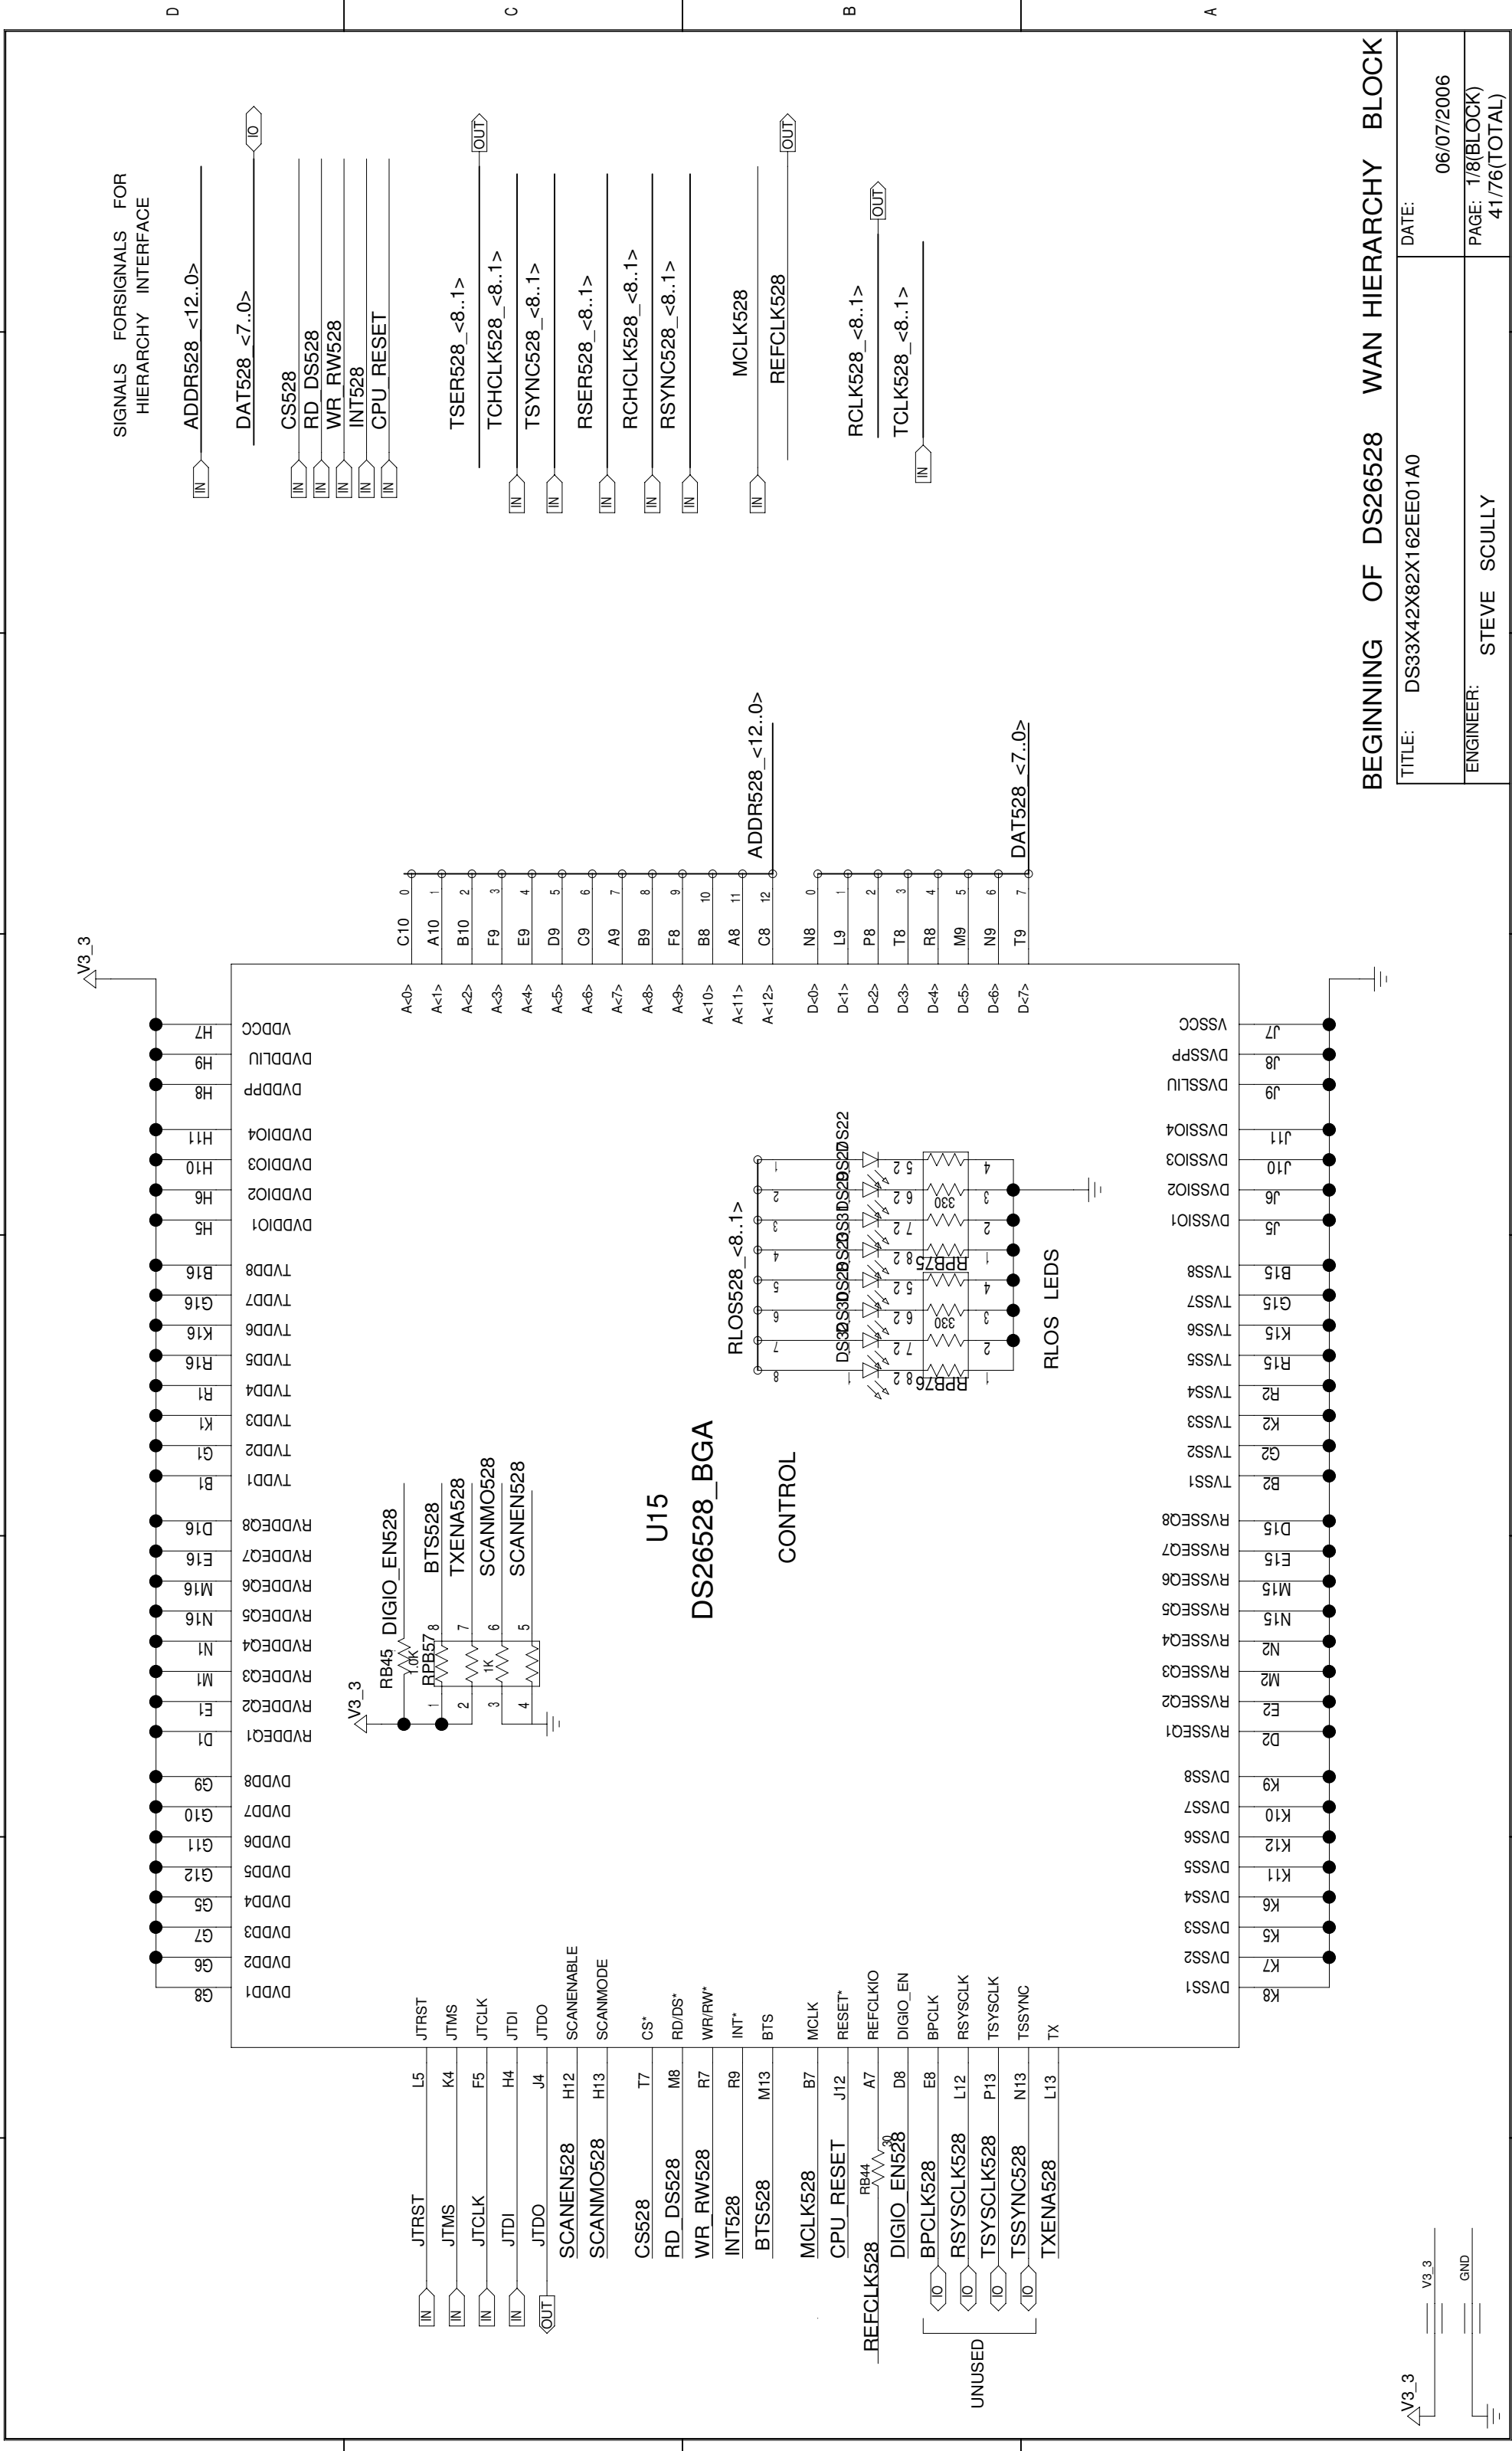


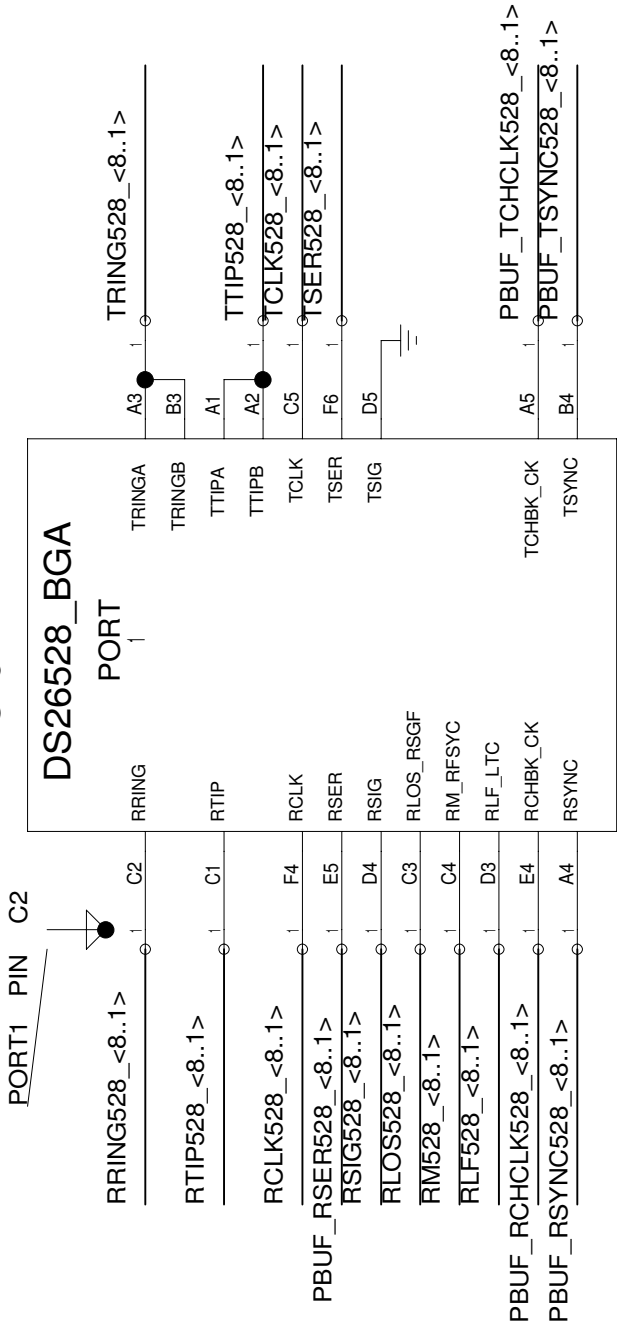


U15

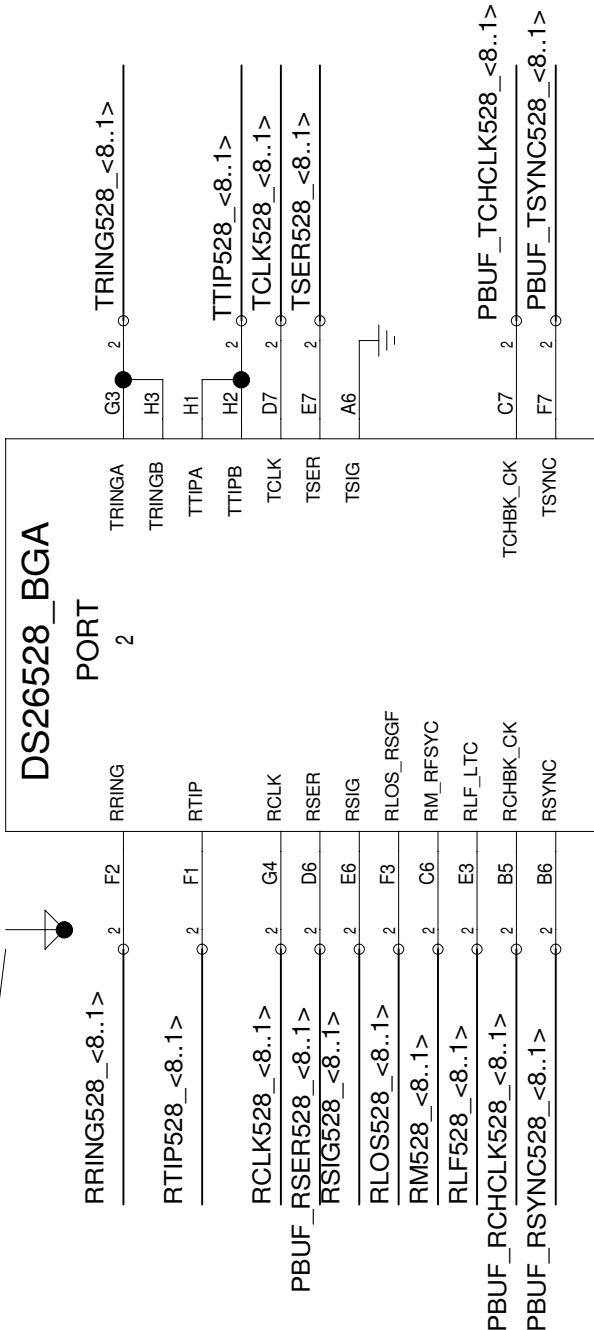


U15


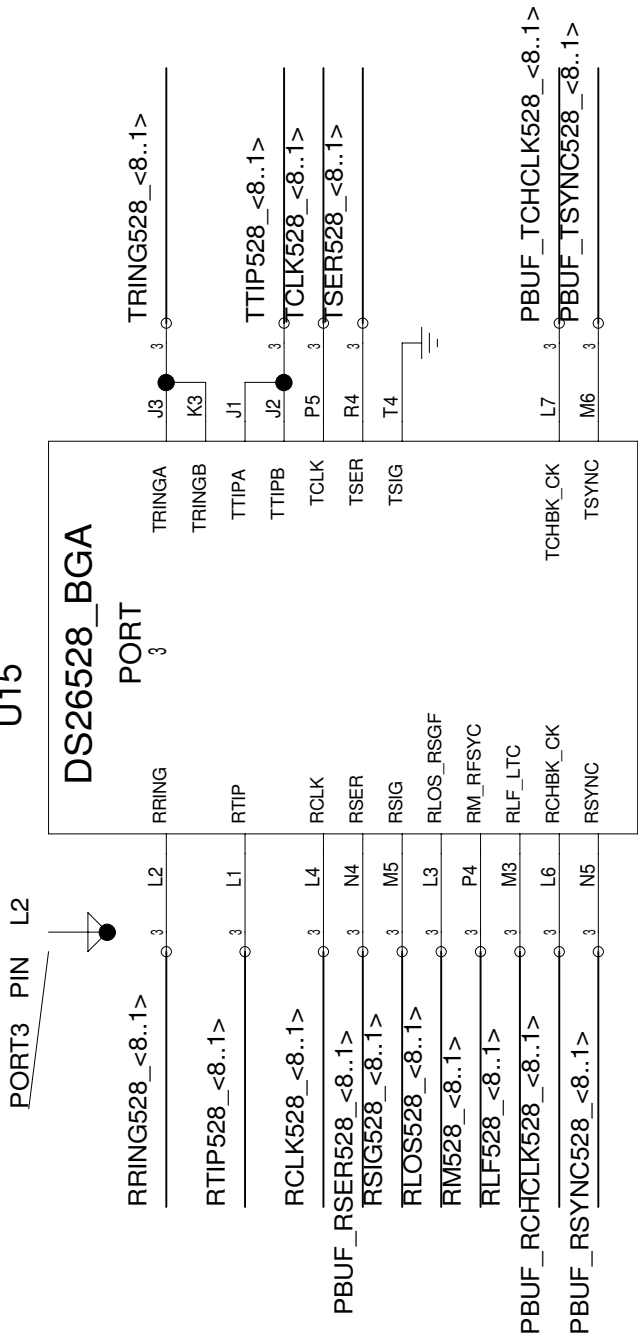


U15

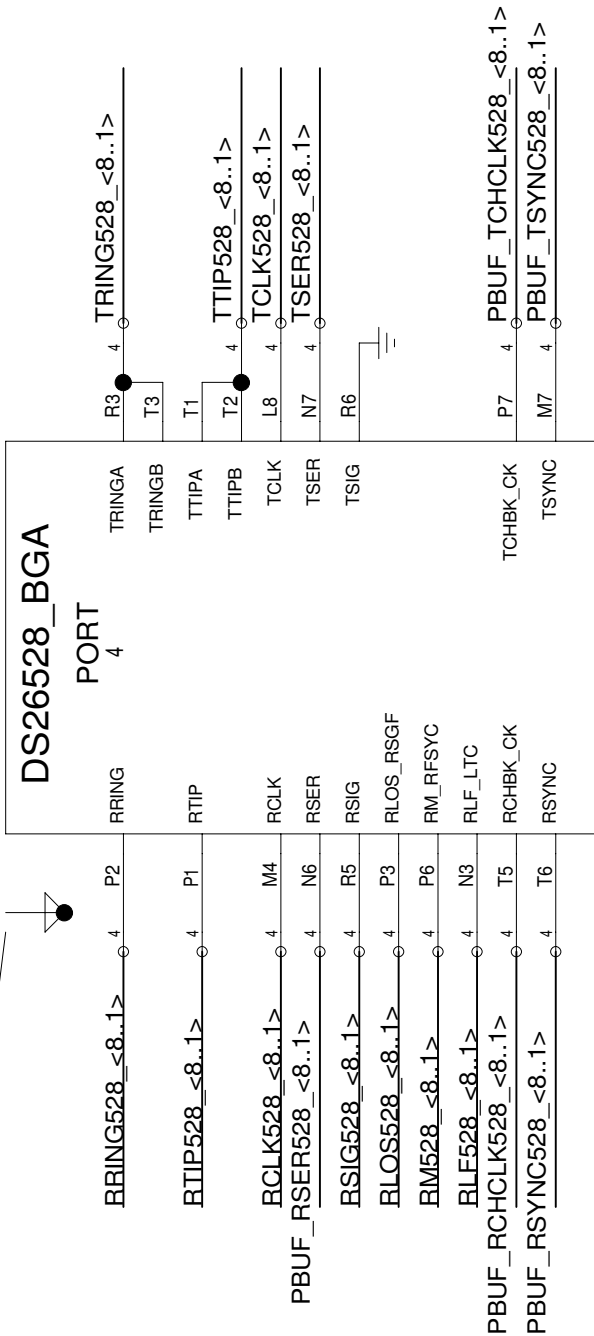


TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	2/8(BLOCK) 42/76(TOTAL)

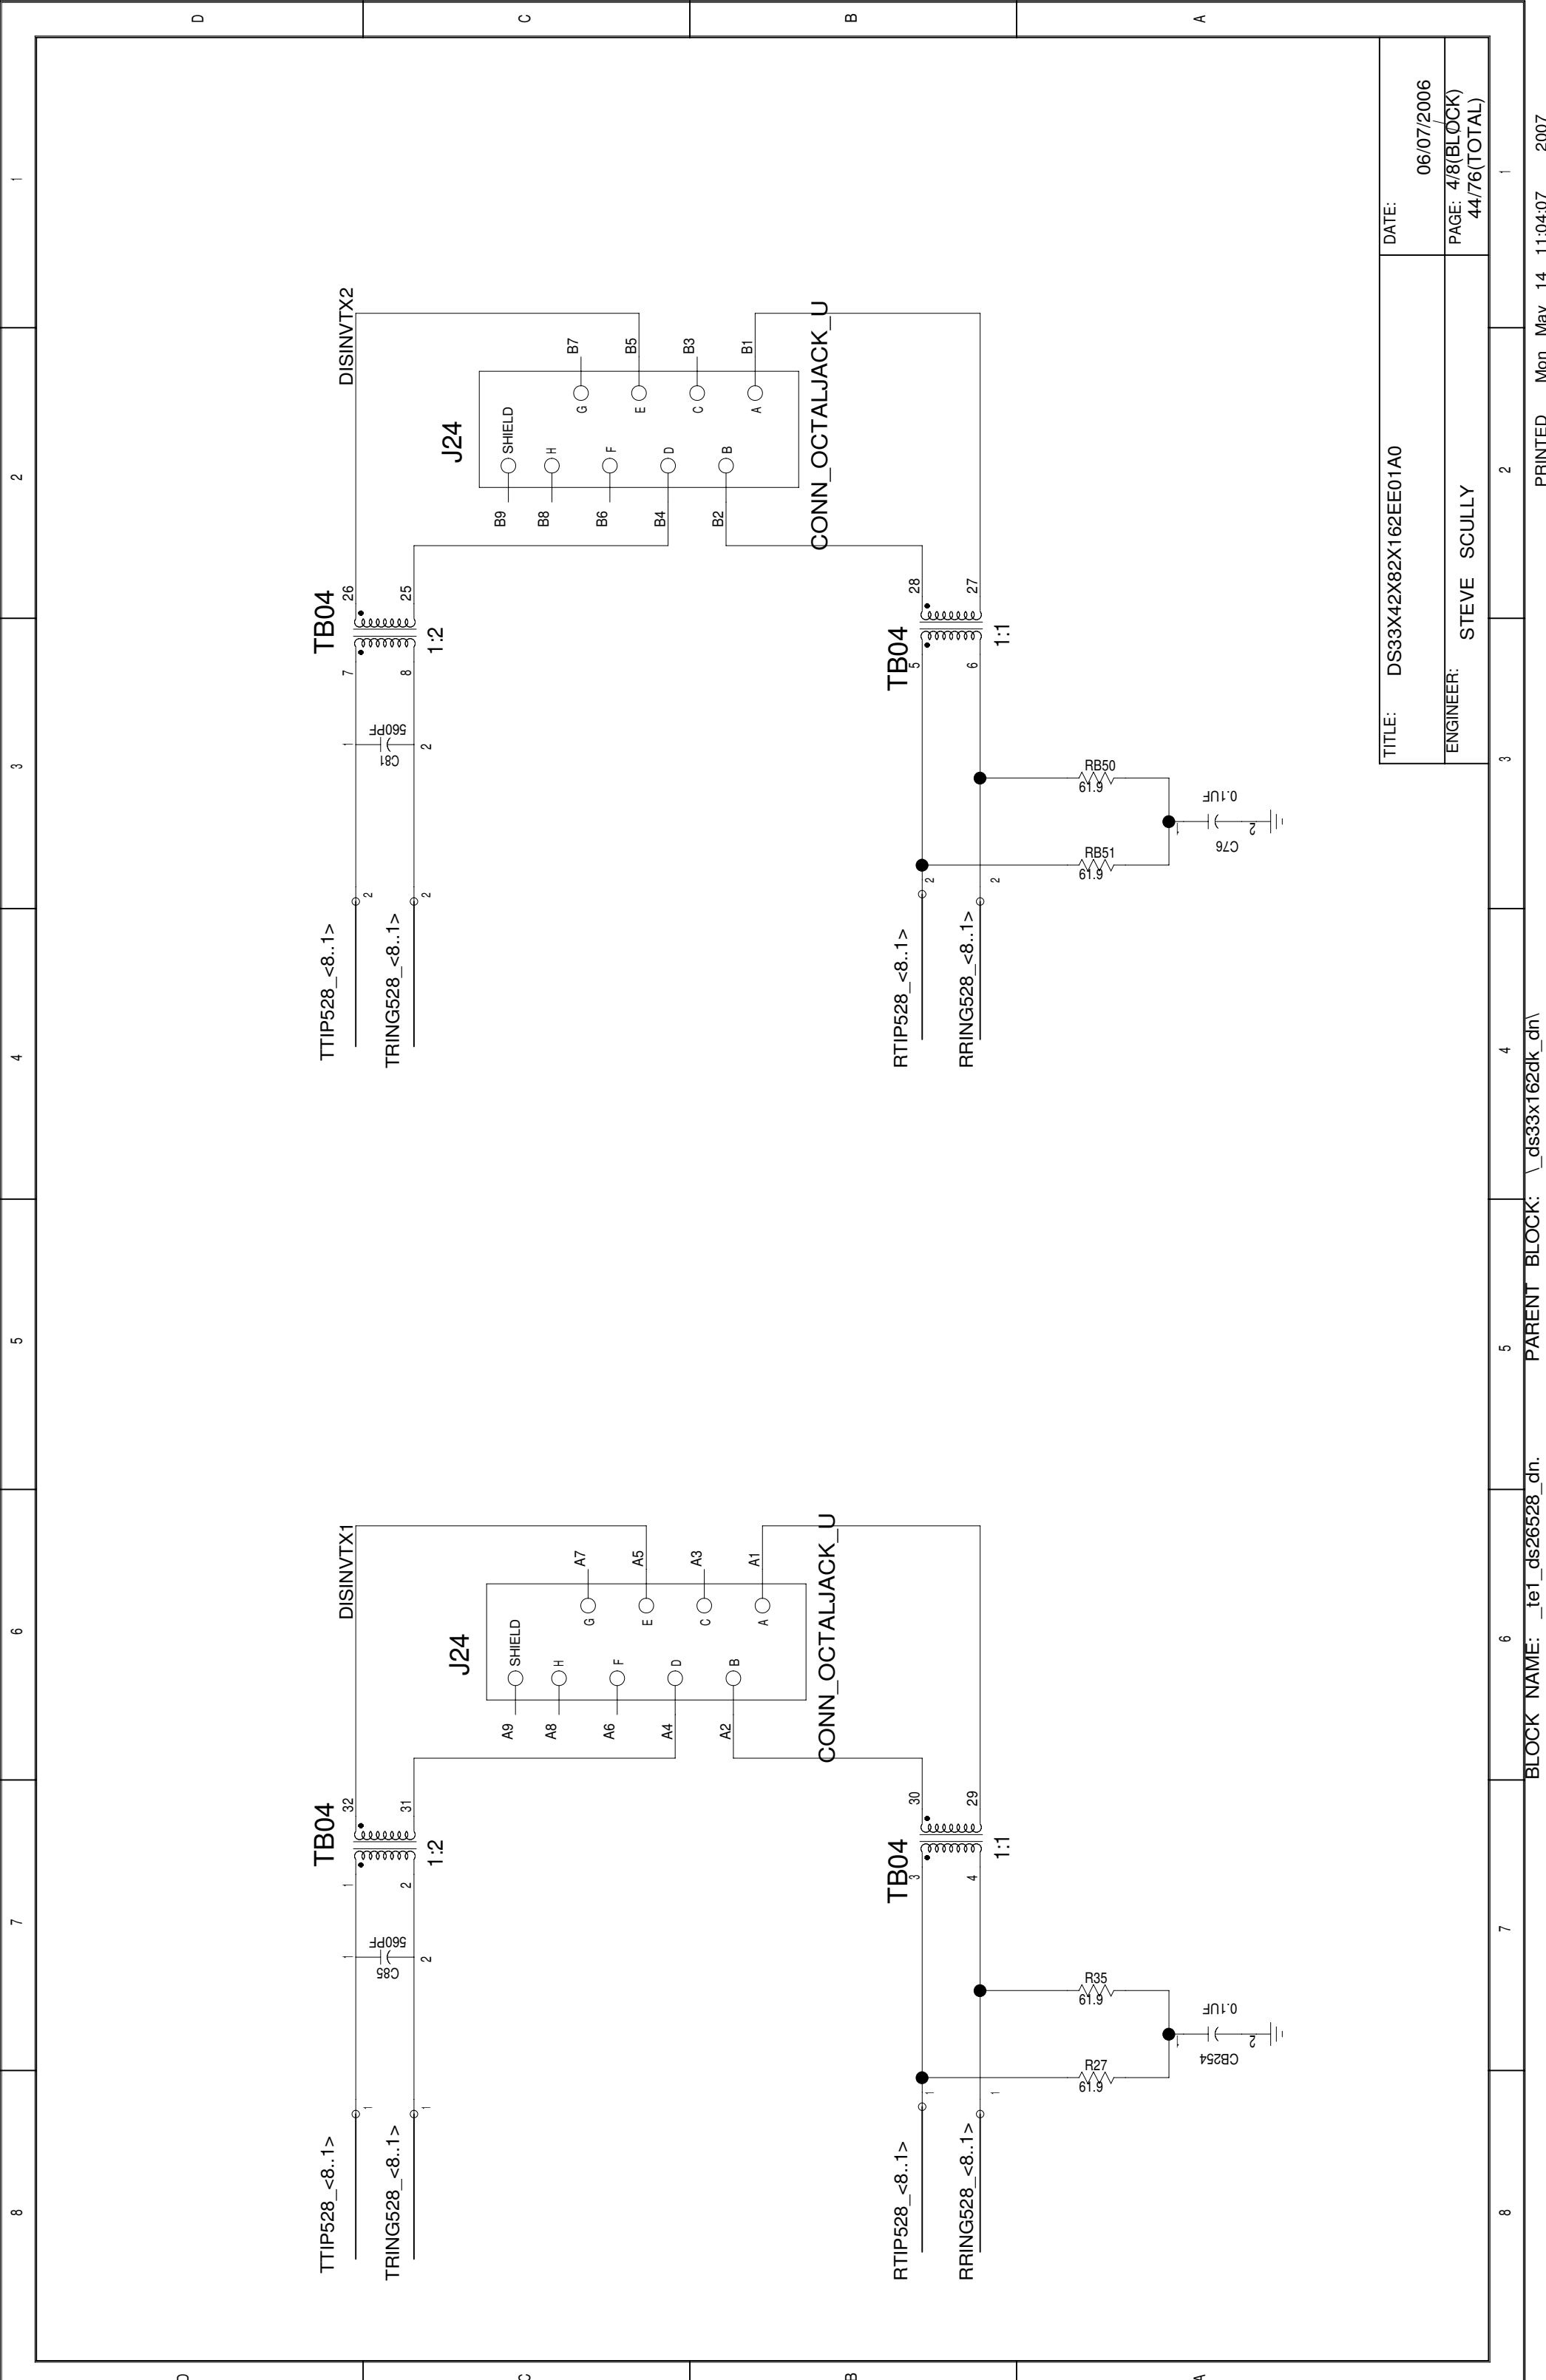

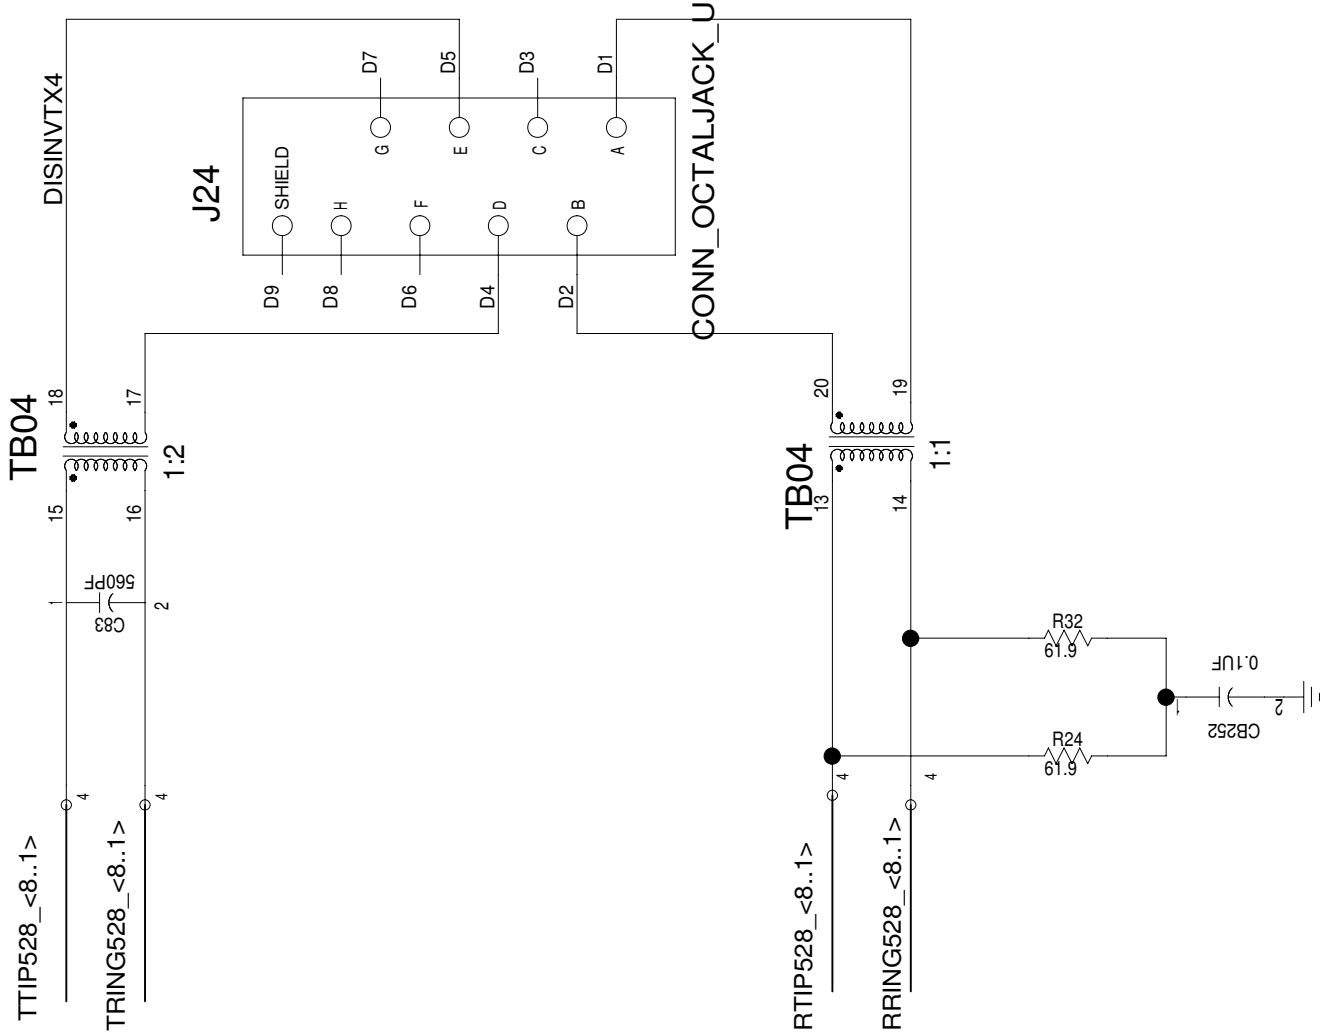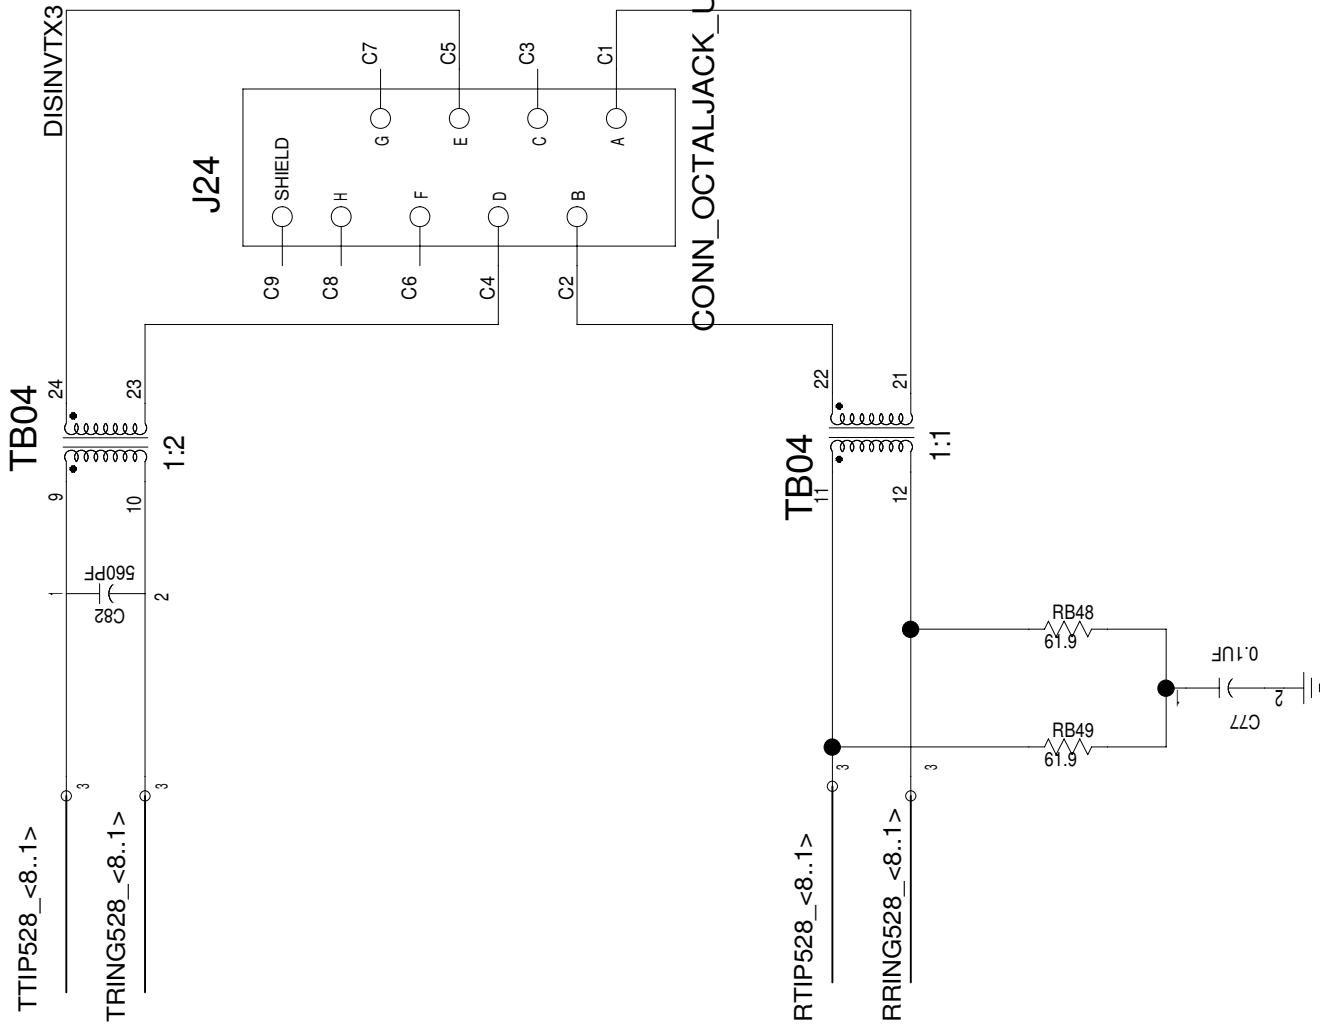

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	5/8(BLOCK) 45/76(TOTAL)

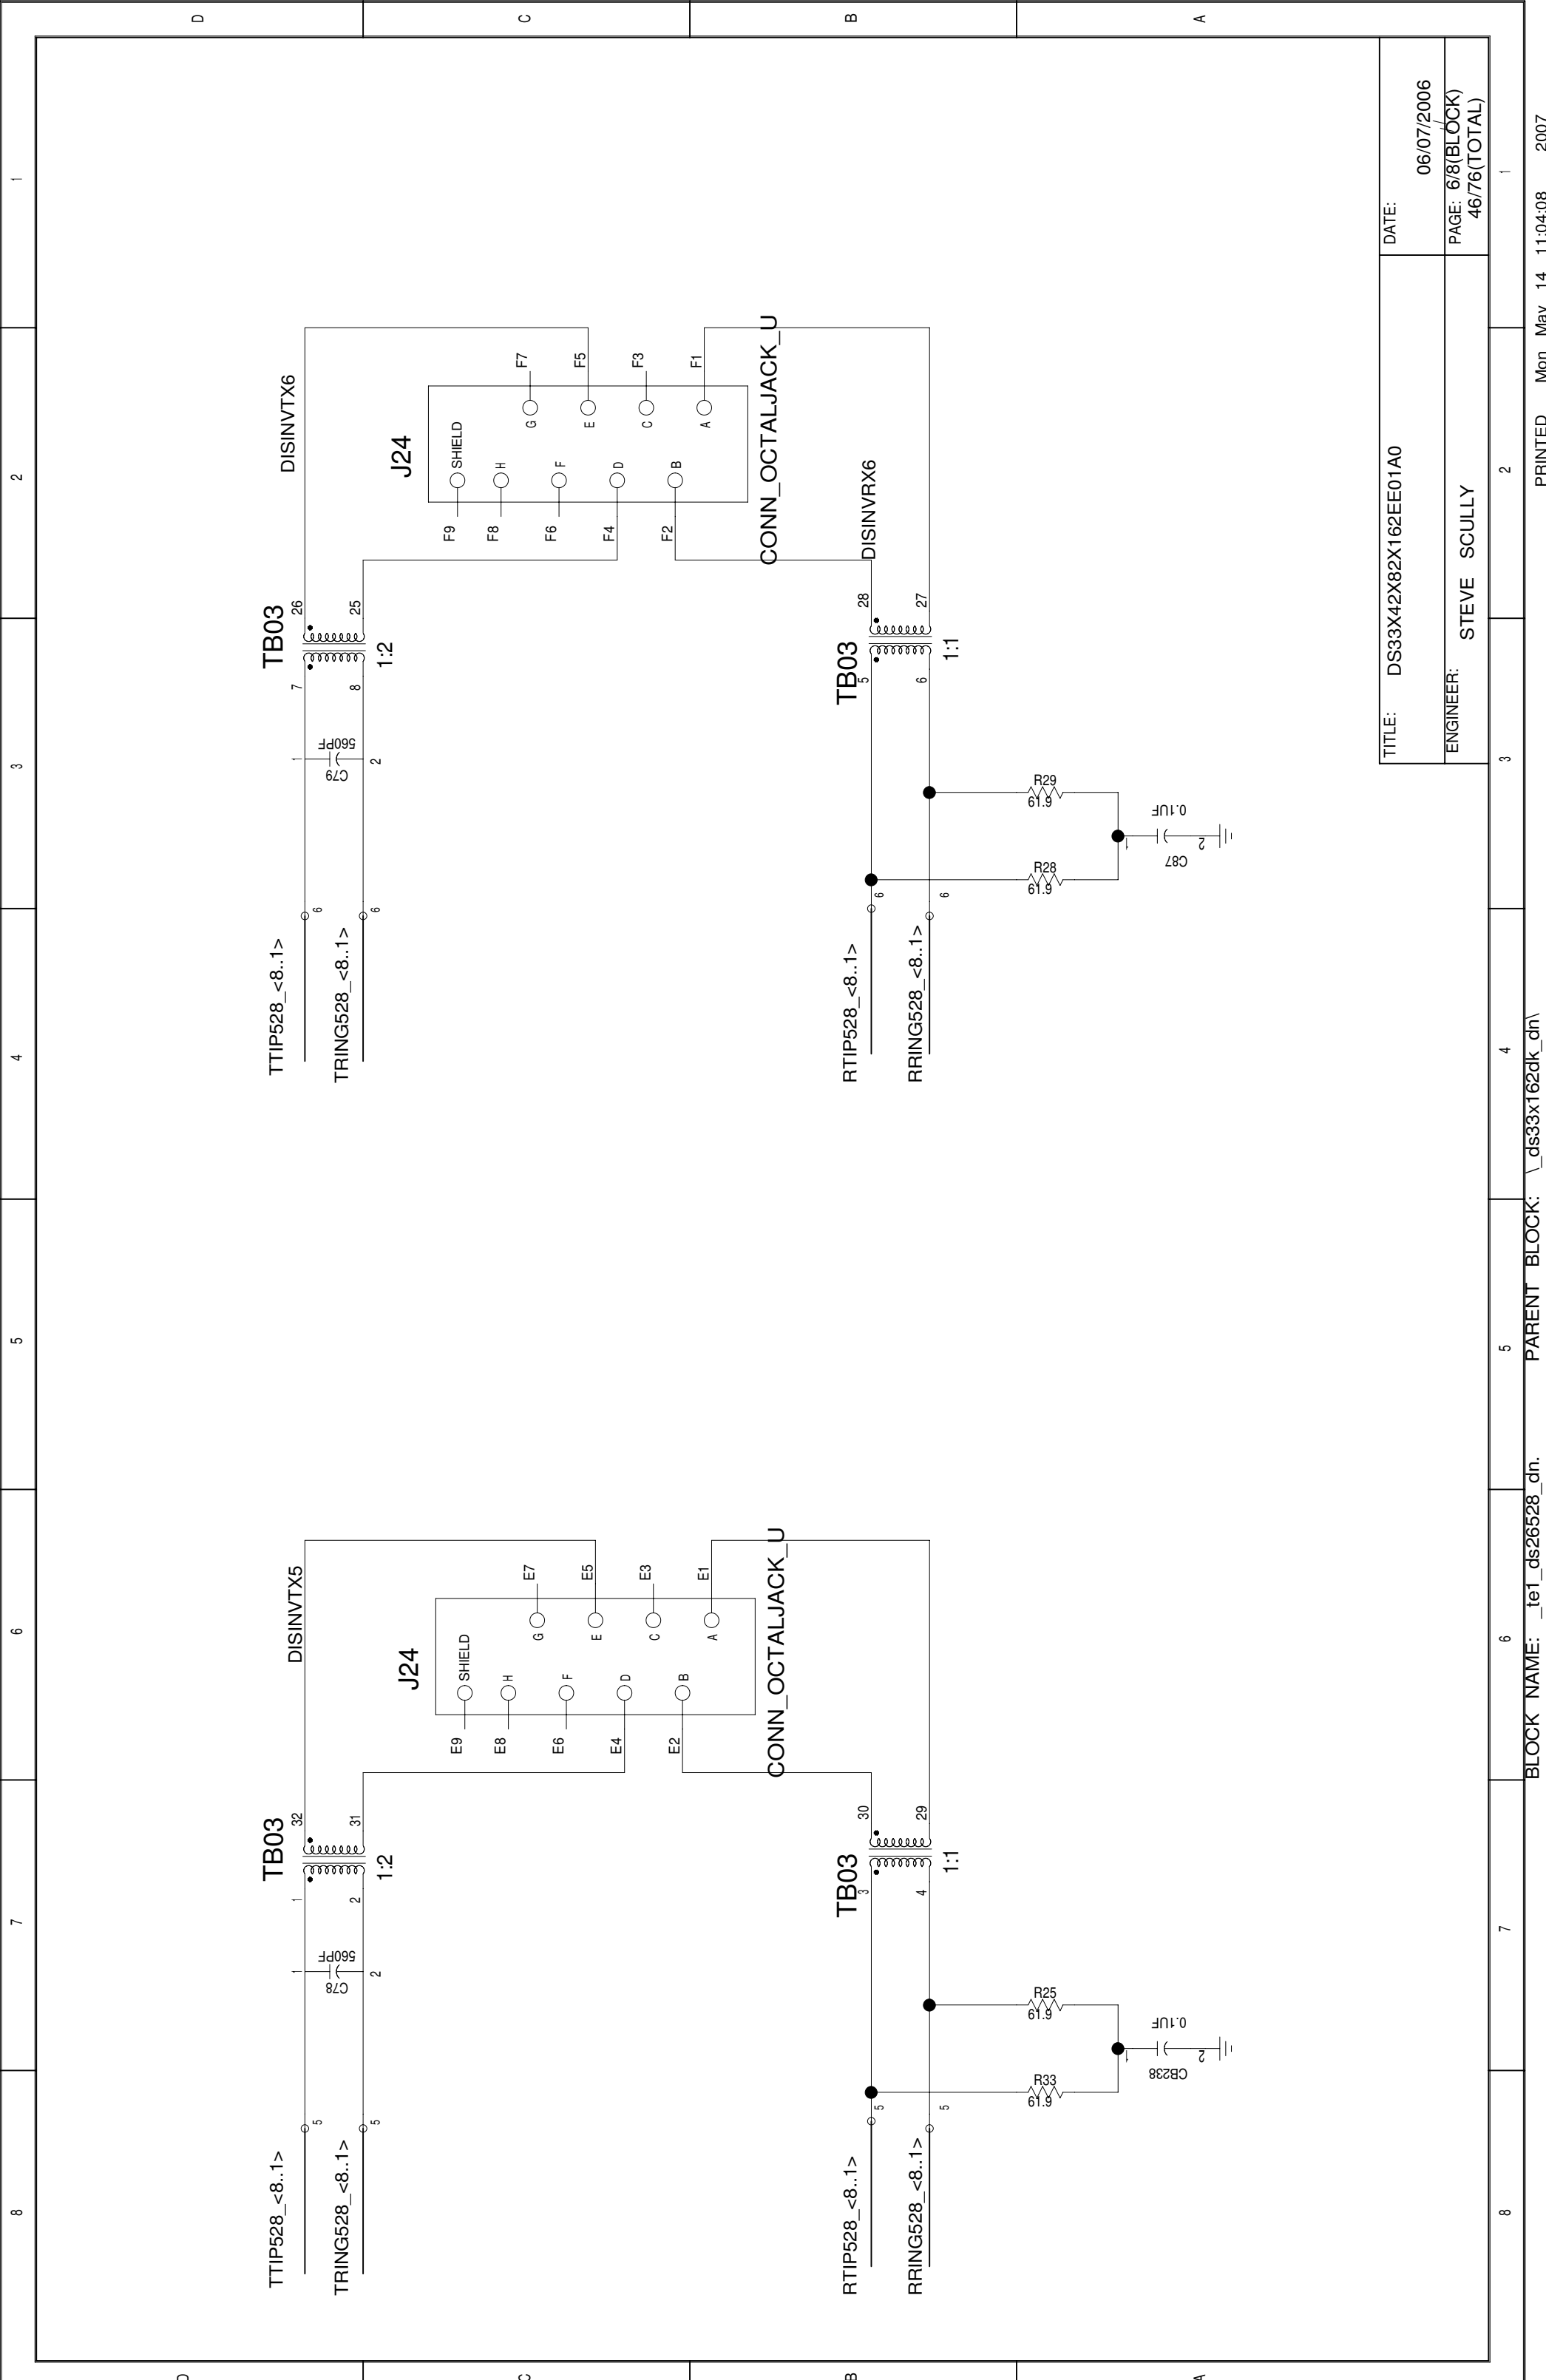

TTIP528_<8..1>

TRING528_<8..1>

1

2

560PF

C79

7

8

1:2

DISINVTX6

J24

F9 SHIELD

F8 H

F6 F

F4 D

F2 B

F7 G

F5 E

C3 C

F1 A

CONN_OCTALJACK_U

RTIP528_<8..1>

RRING528_<8..1>

6

6

61.9 R28

61.9 R29

0.1UF

CB87

1

2

RTIP528_<8..1>

RRING528_<8..1>

5

6

1:1

TB03

5

28

27

DISINVRX6

J24

F9 SHIELD

F8 H

F6 F

F4 D

F2 B

F7 G

F5 E

C3 C

F1 A

CONN_OCTALJACK_U



TITLE: DS33X42X82X162EE01A0

ENGINEER: STEVE SCULLY




DATE: 06/07/2006

PAGE: 6/8(BLOCK)

46/76(TOTAL)

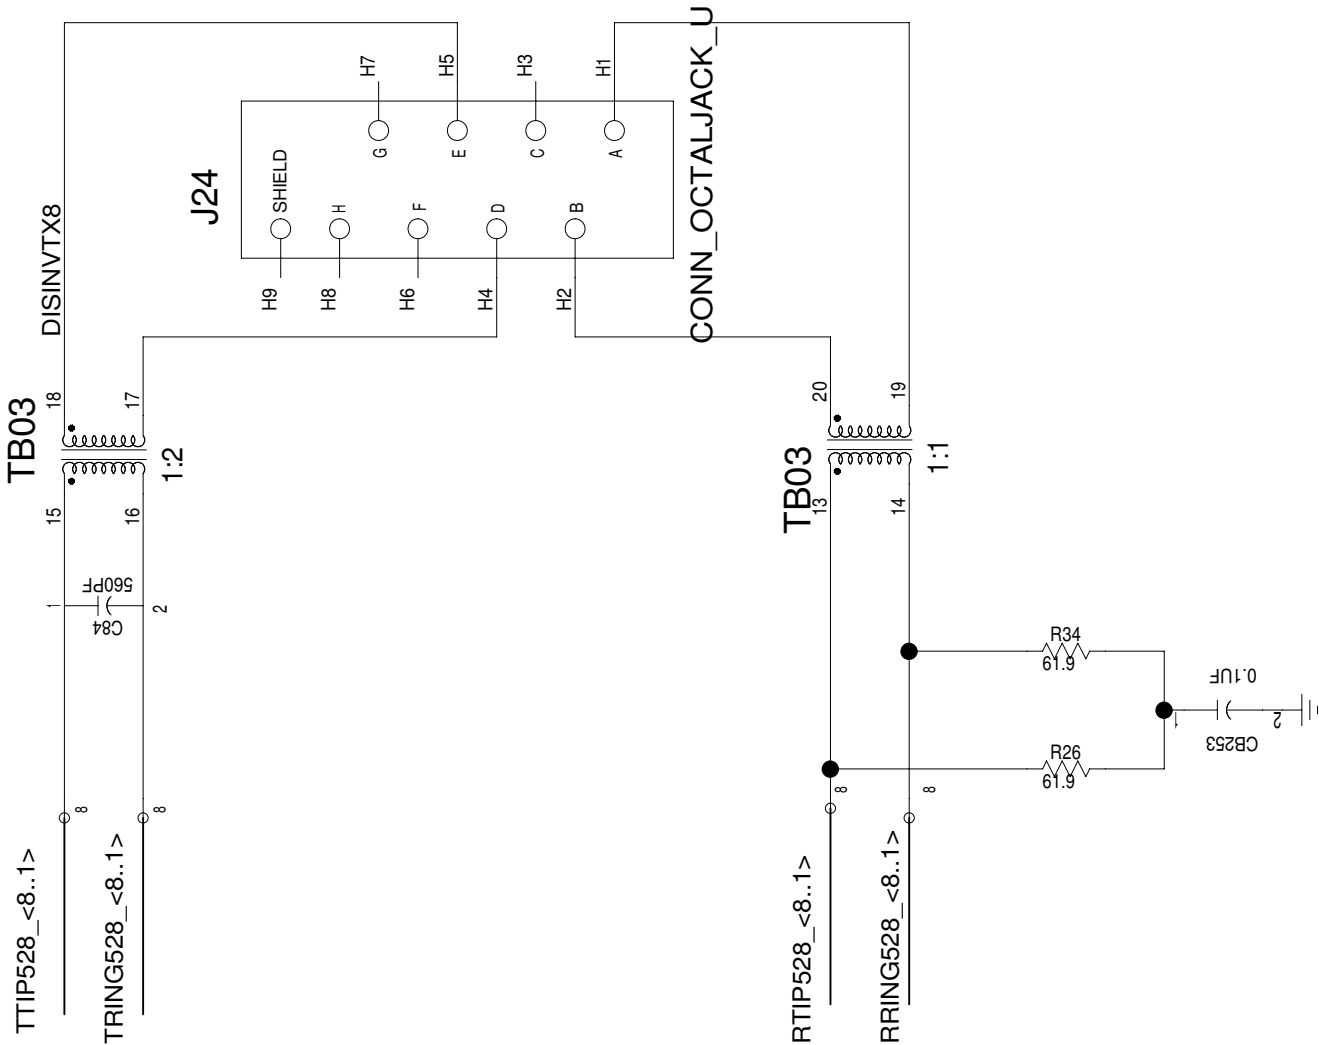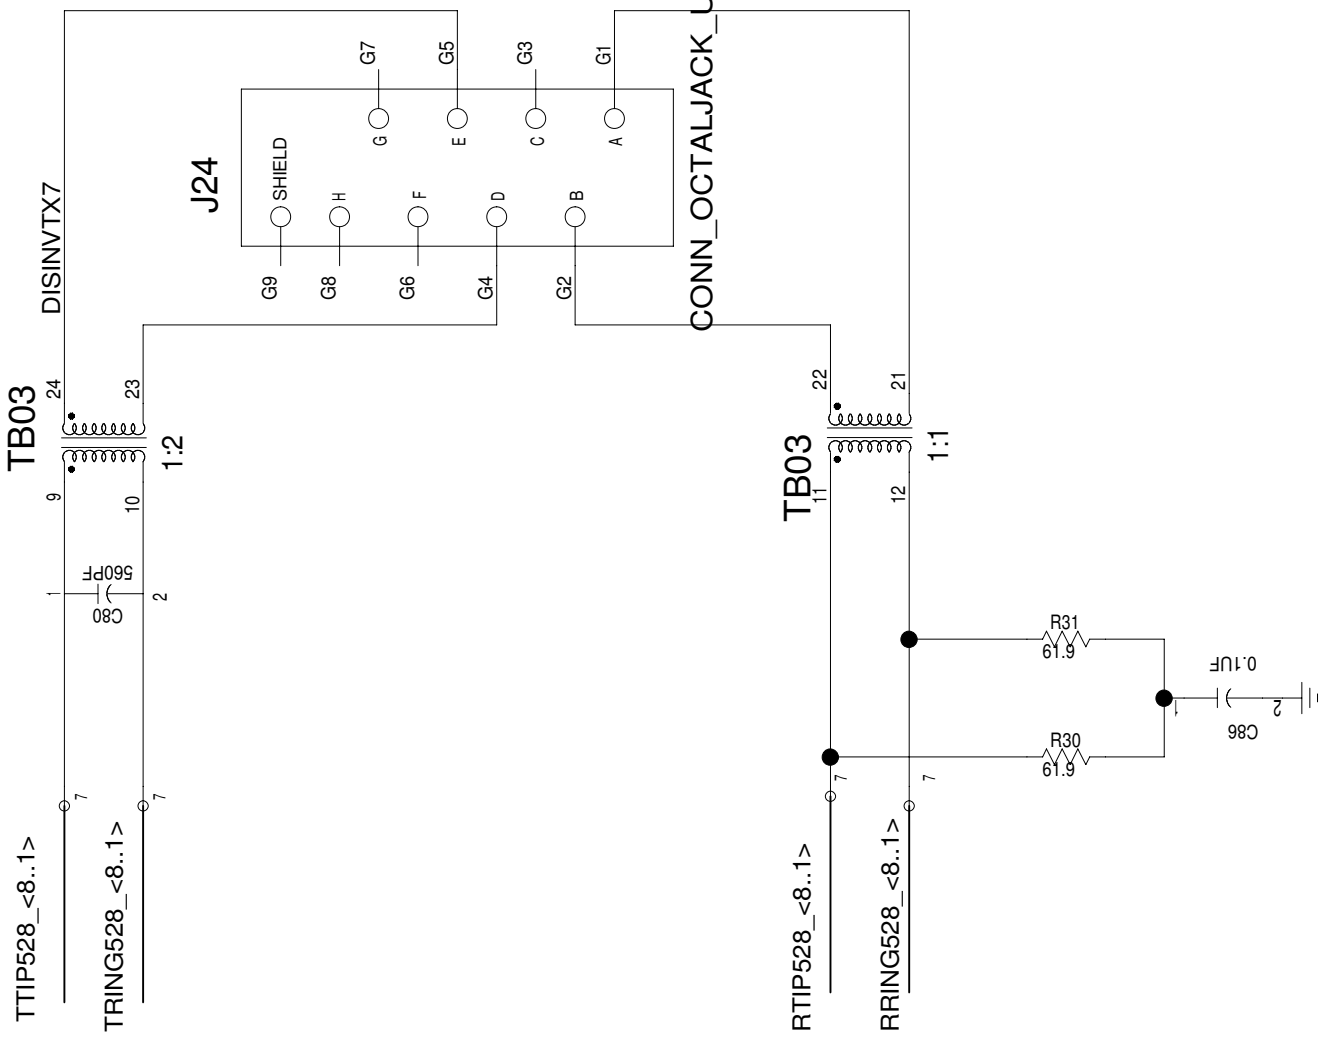


TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	7/8(BLOCK) 47/76(TOTAL)


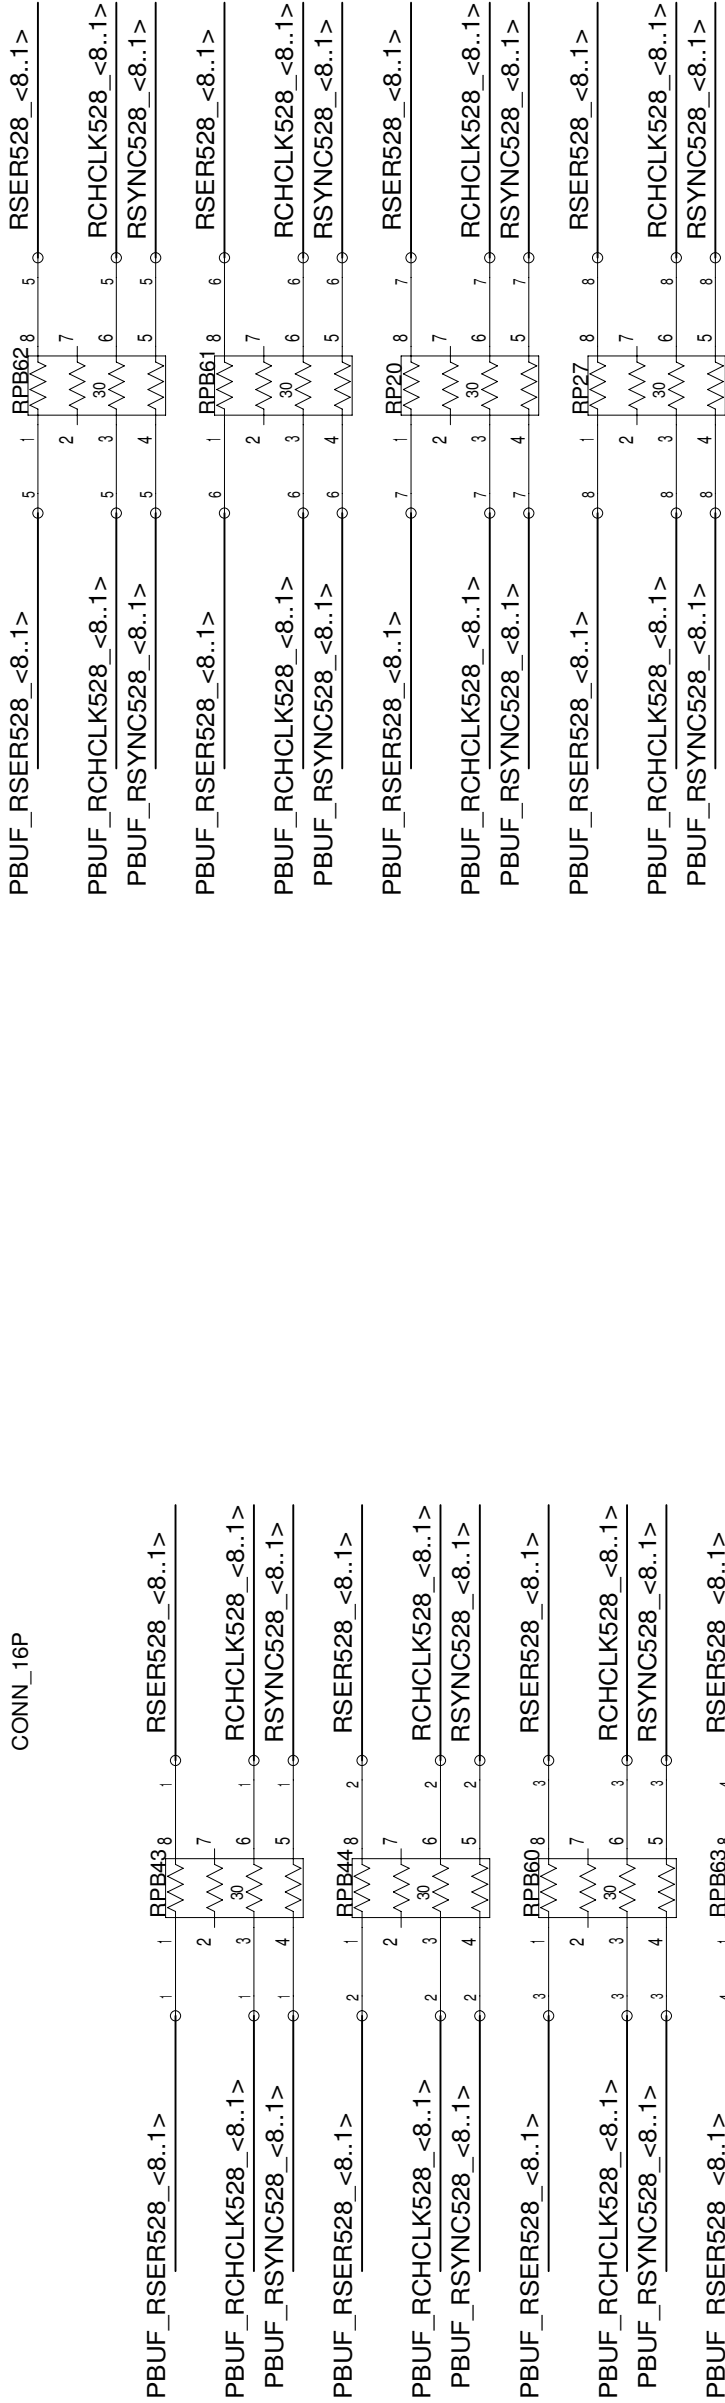
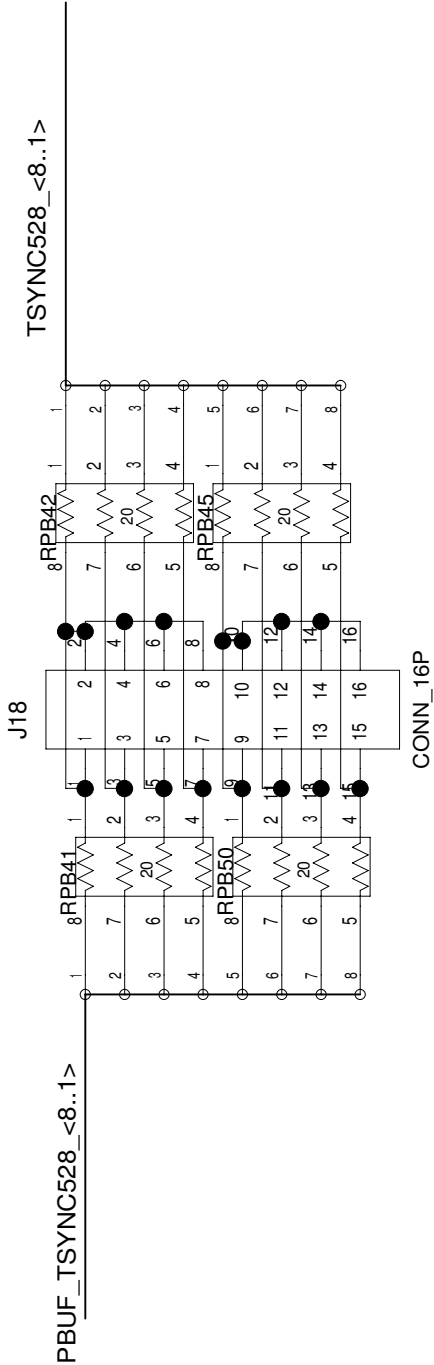
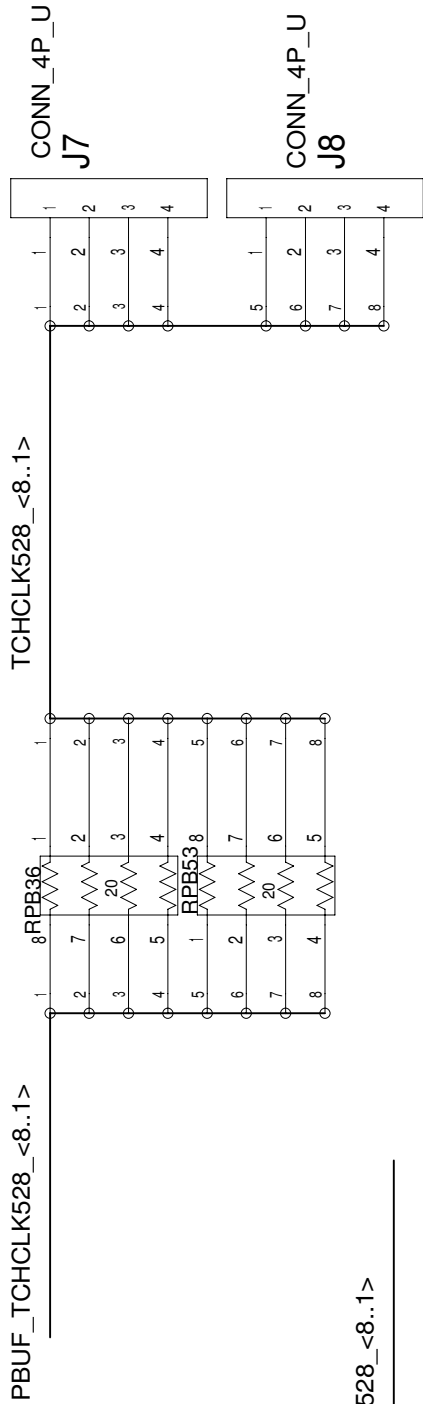


JUMPERS FOR GAPCLK AND SYNC
TO BE PLACED CLOSE TO
THE OTHER EIGHT T1E1 PORTS
TO ALLOW CONNECTION WITH JUMPER


END OF DS26528 WAN HIERARCHY BLOCK



TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	7/8(BLOCK) 48/76(TOTAL)

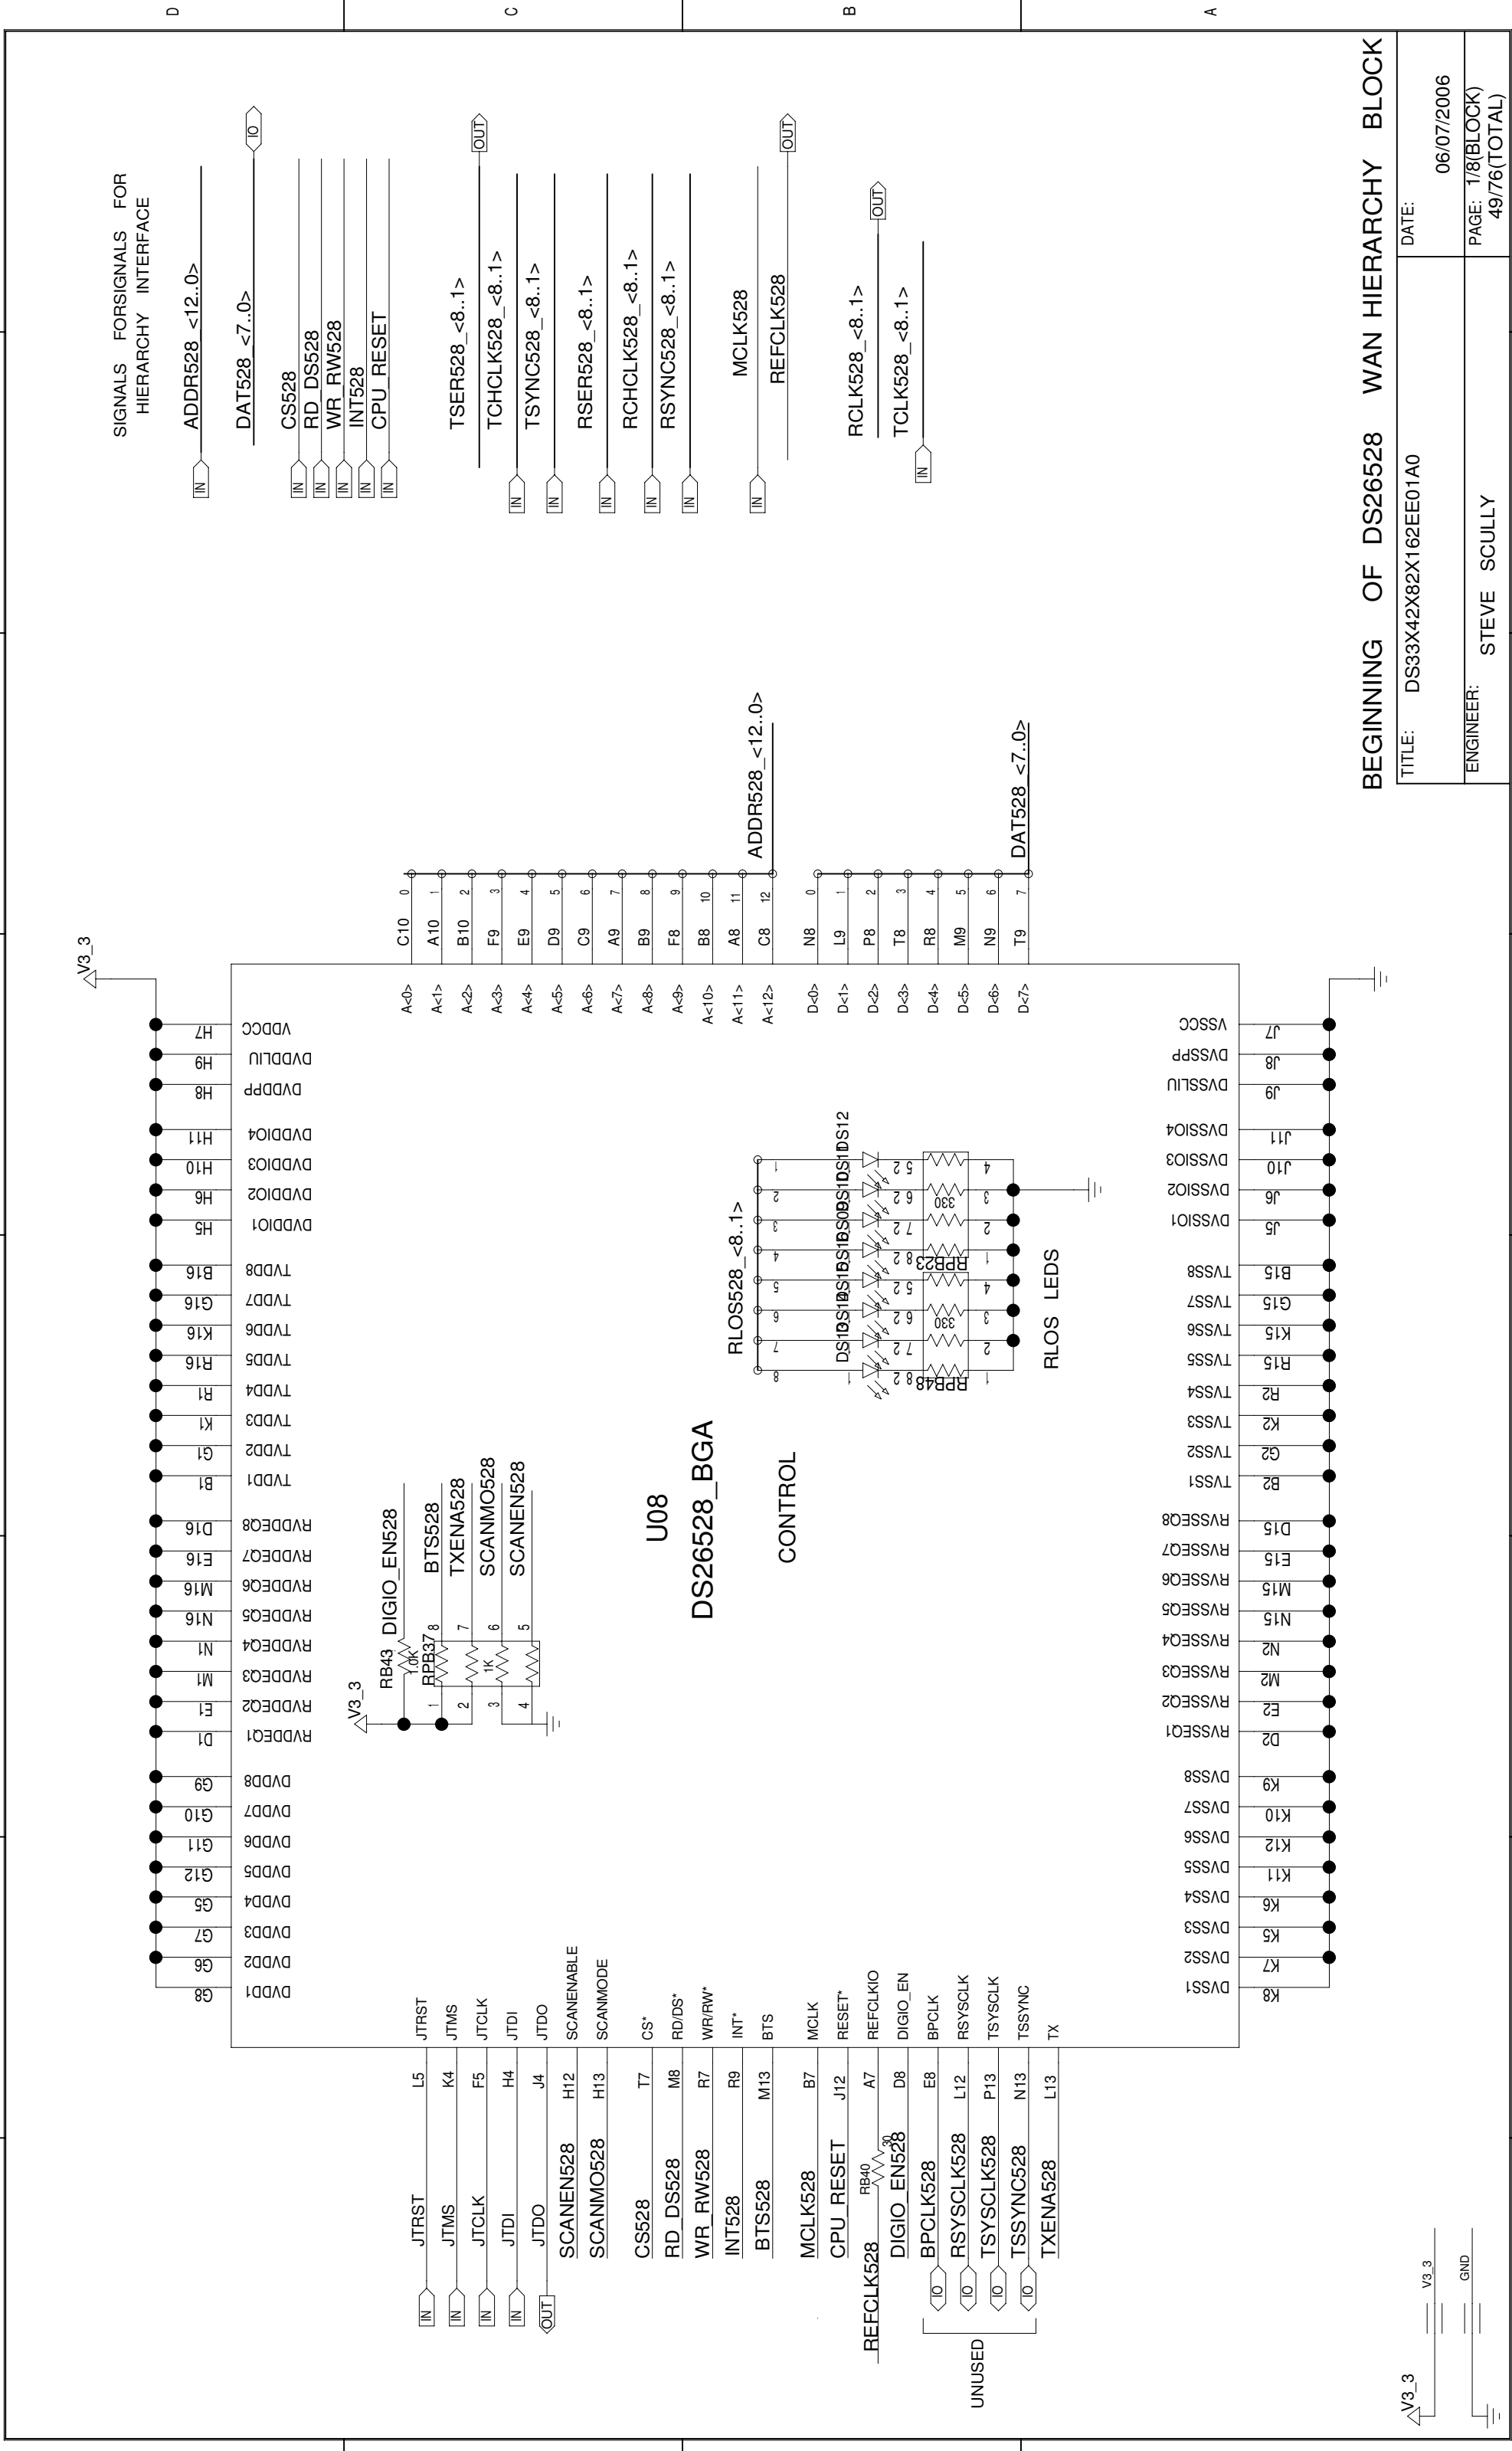

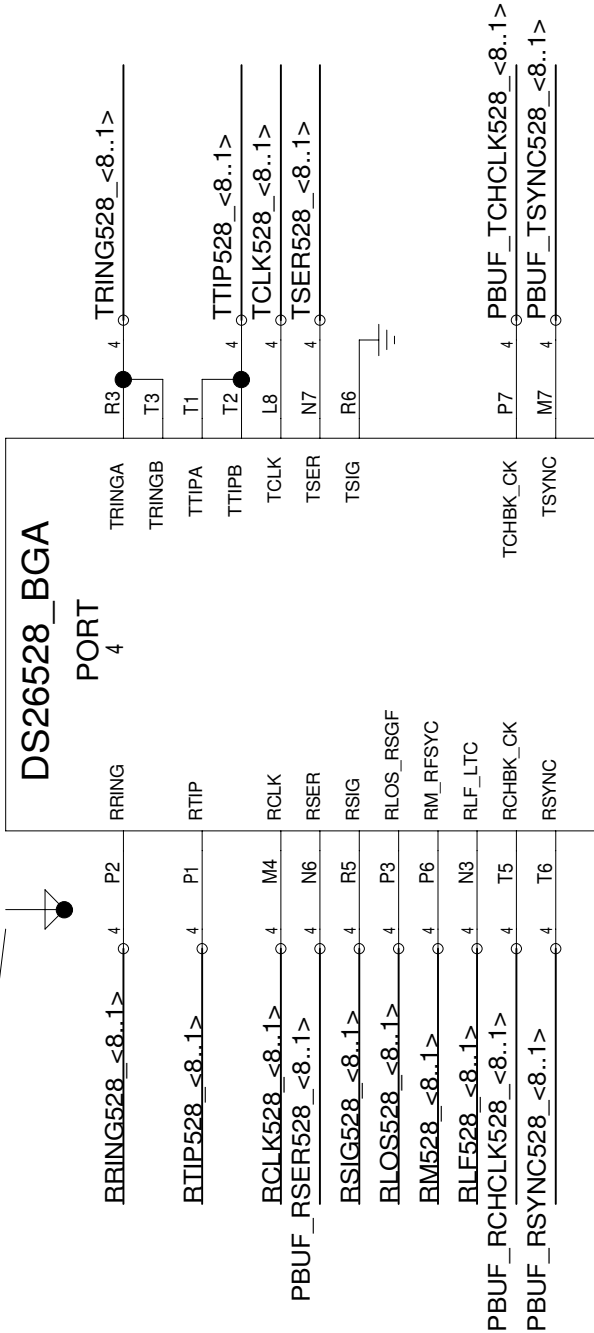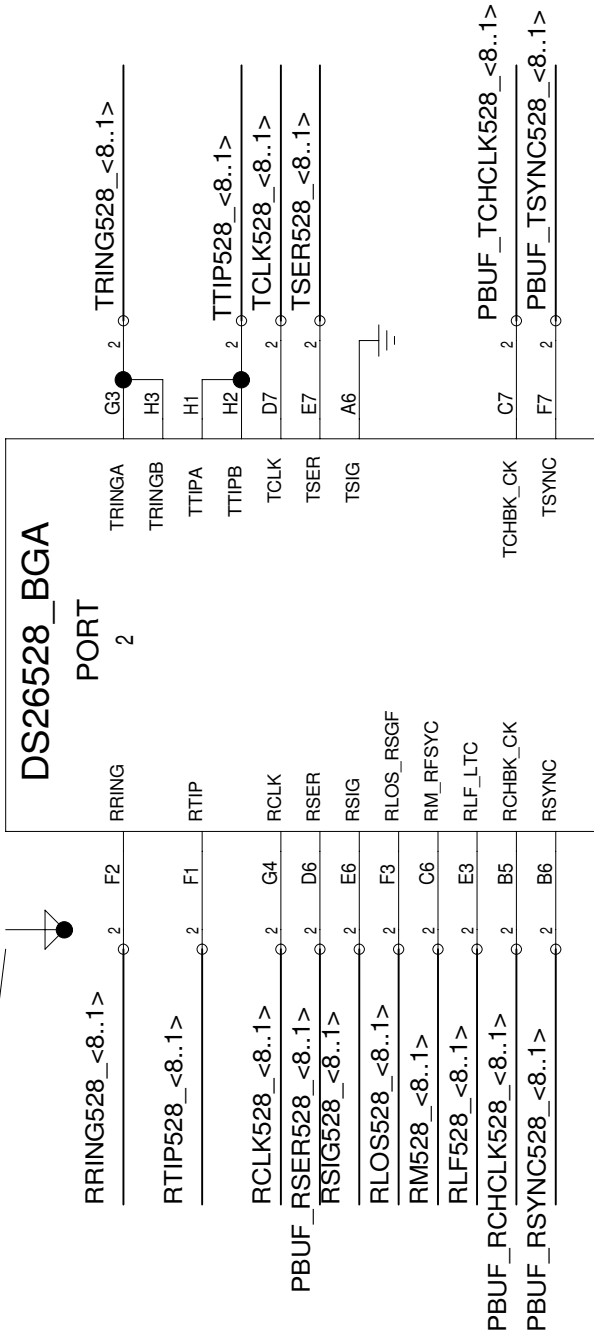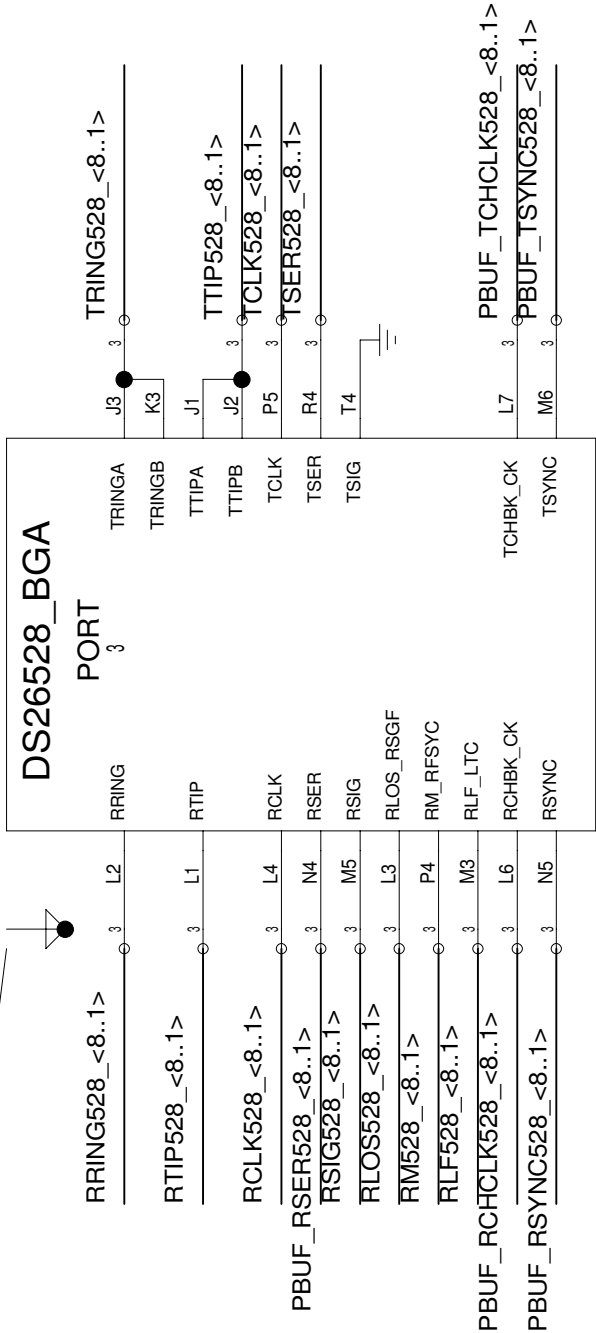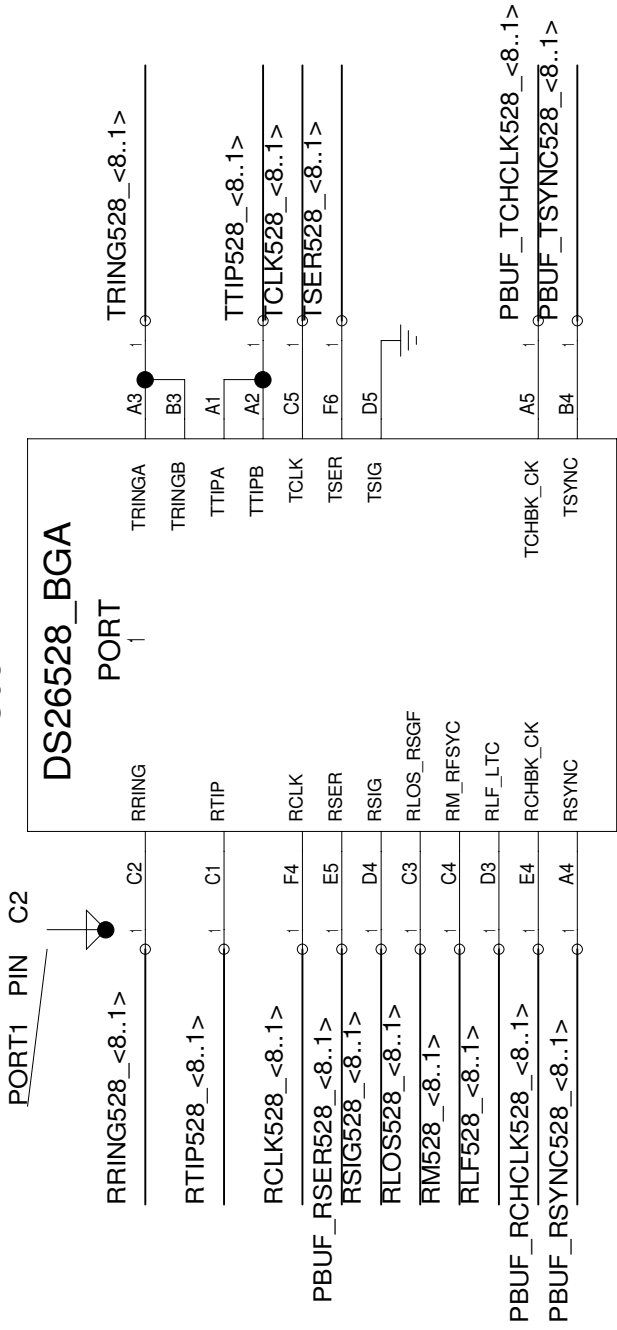


TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	2/8(BLOCK) 50/76(TOTAL)

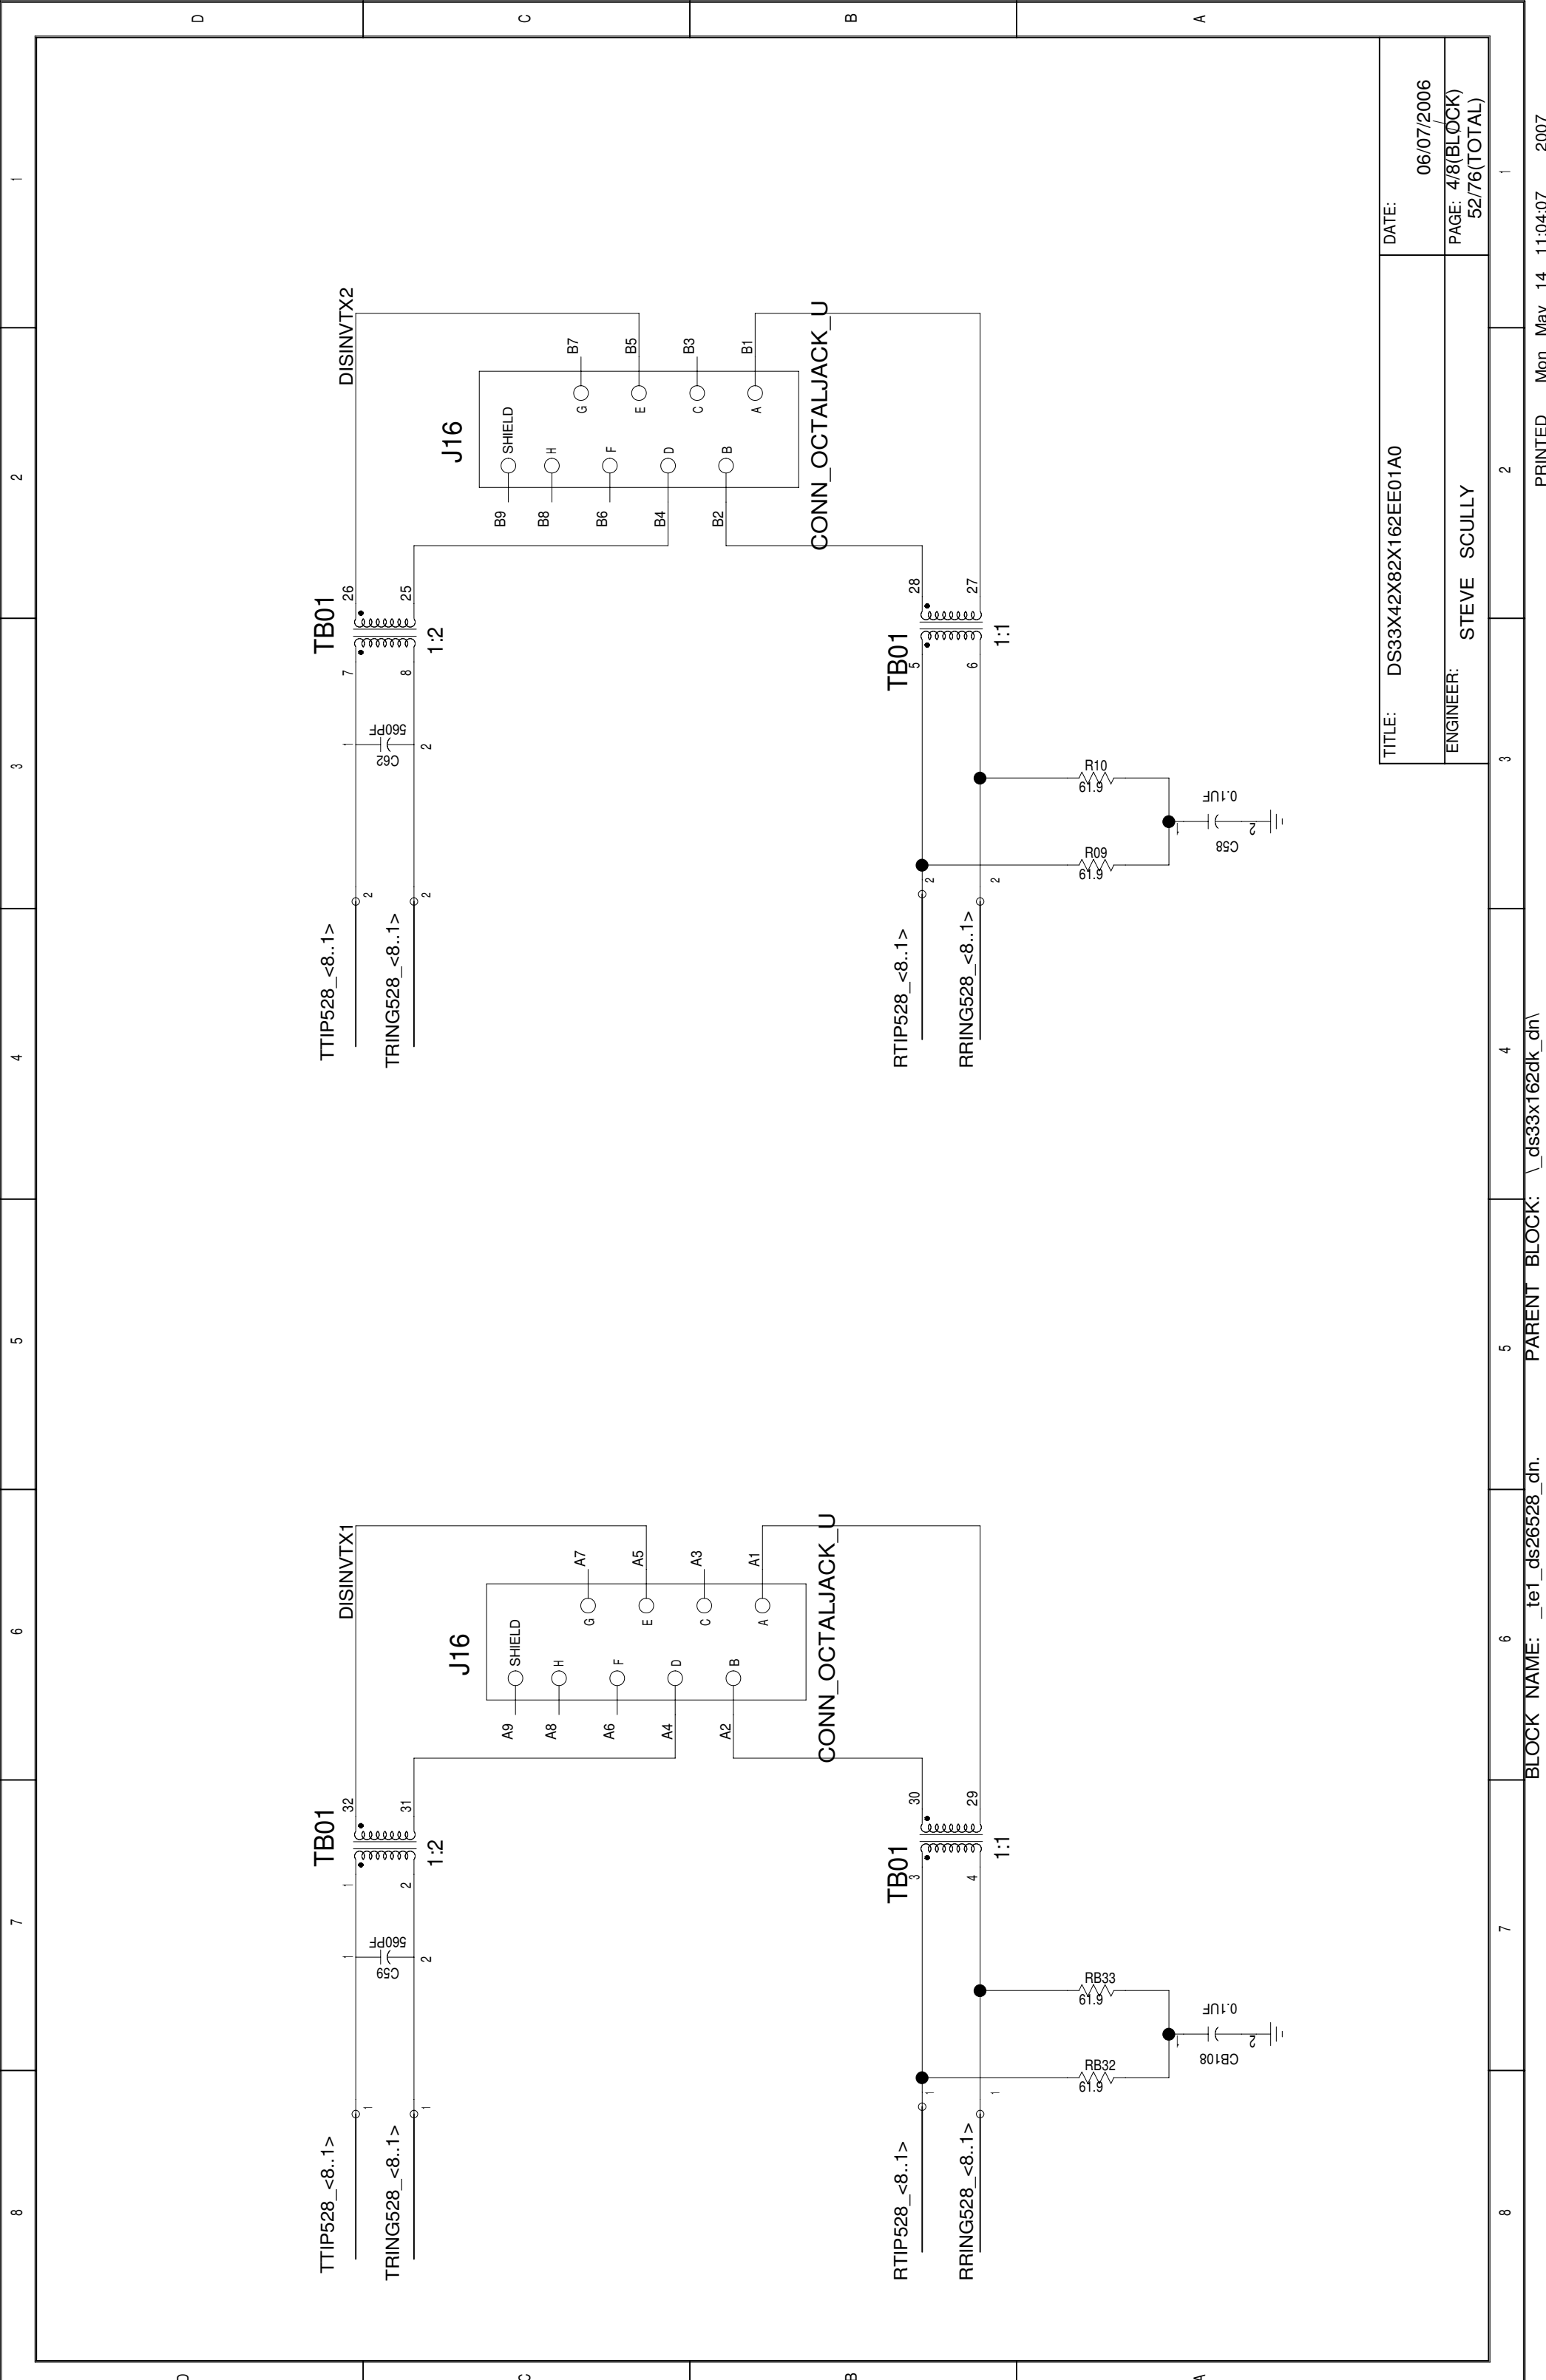

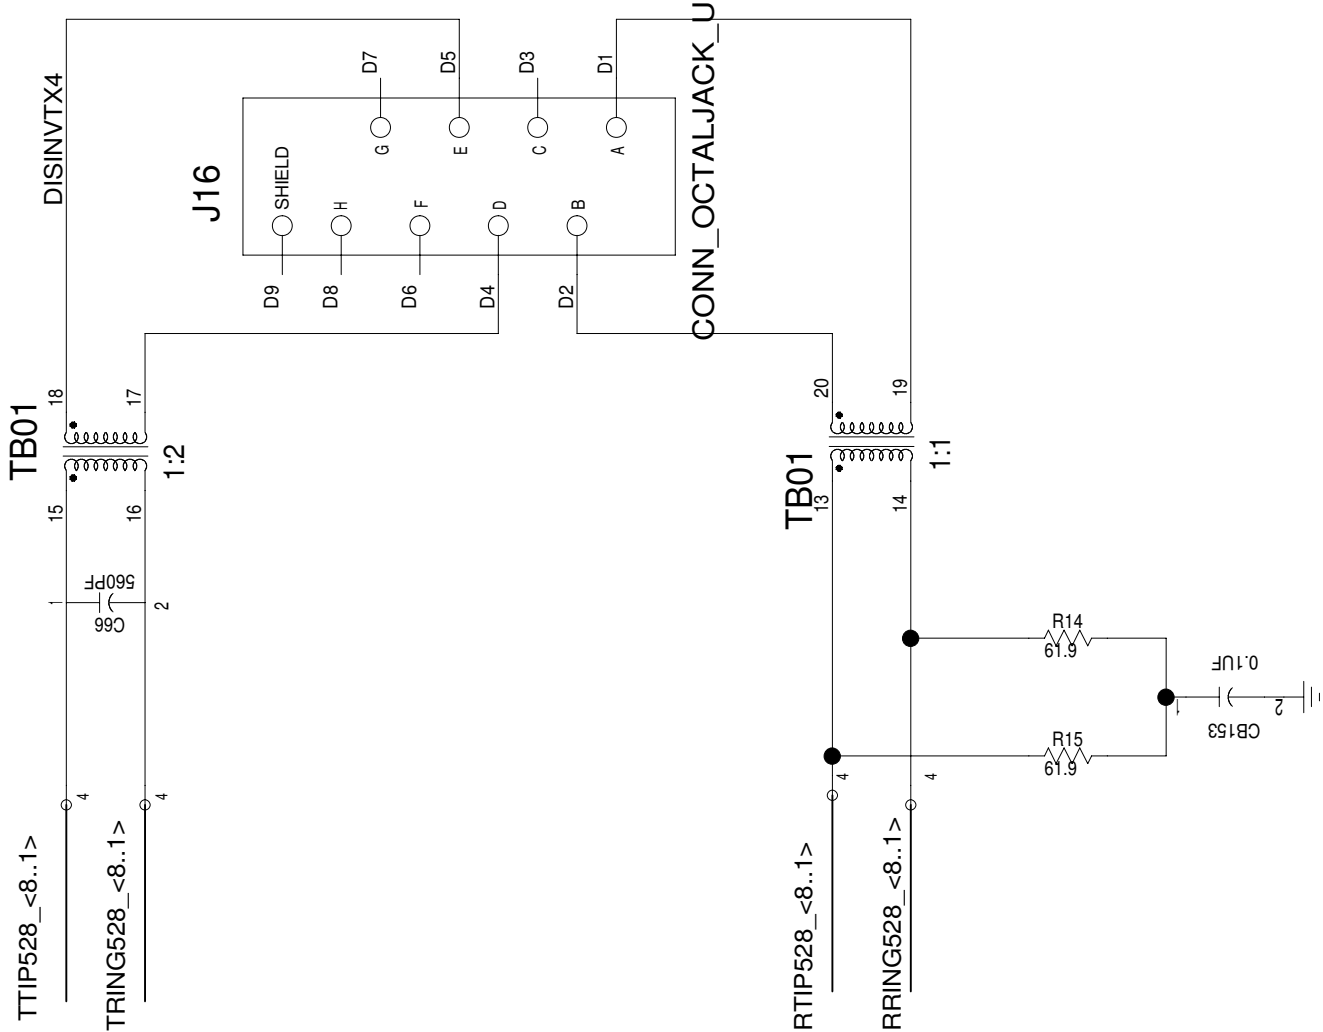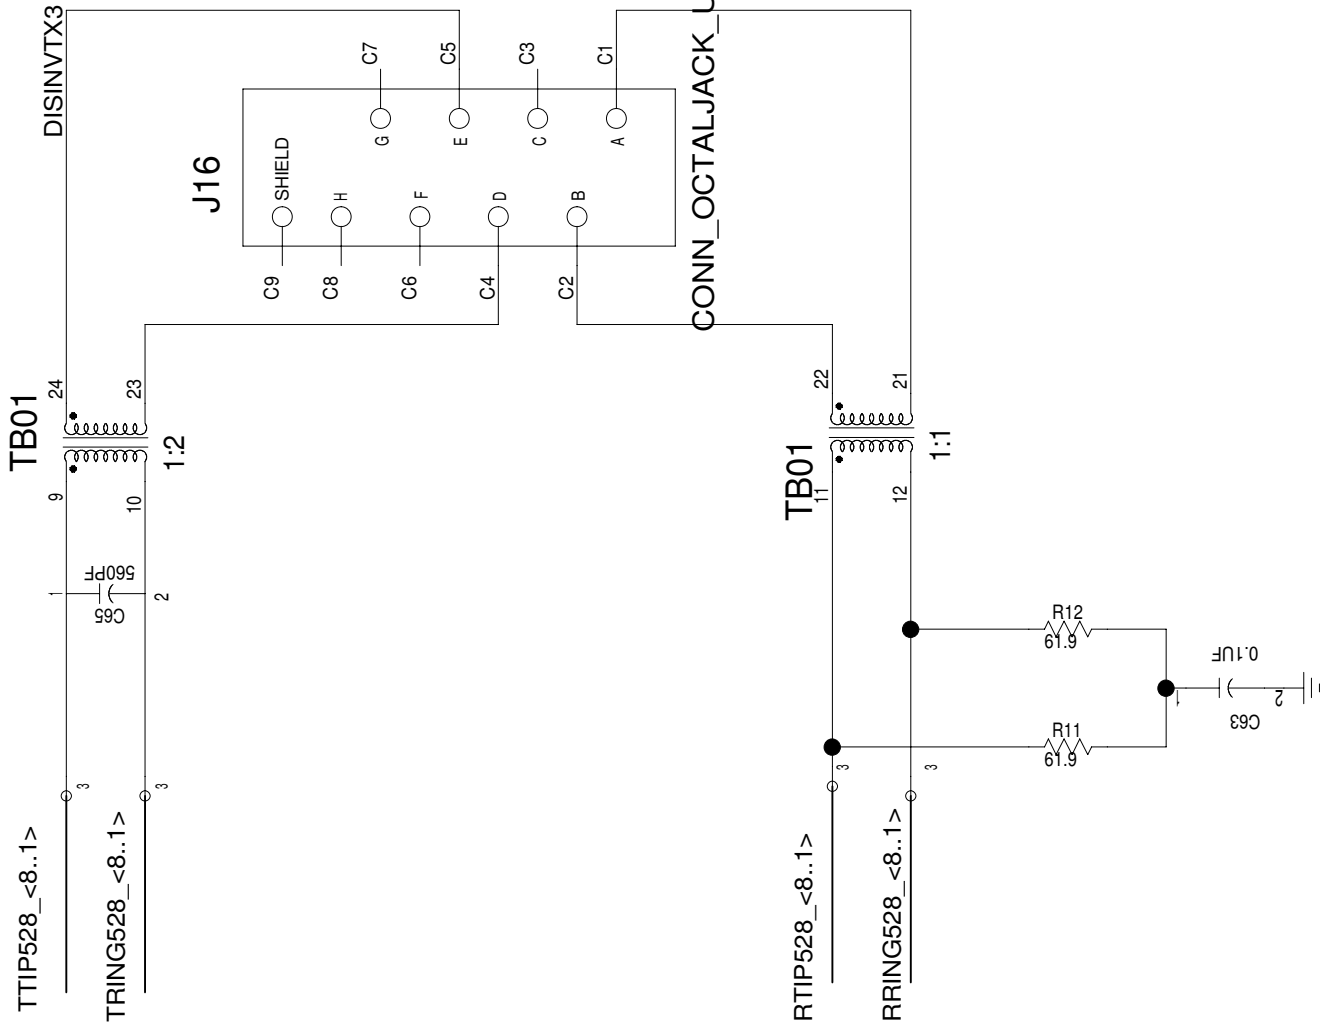

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	5/8(BLOCK) 53/76(TOTAL)

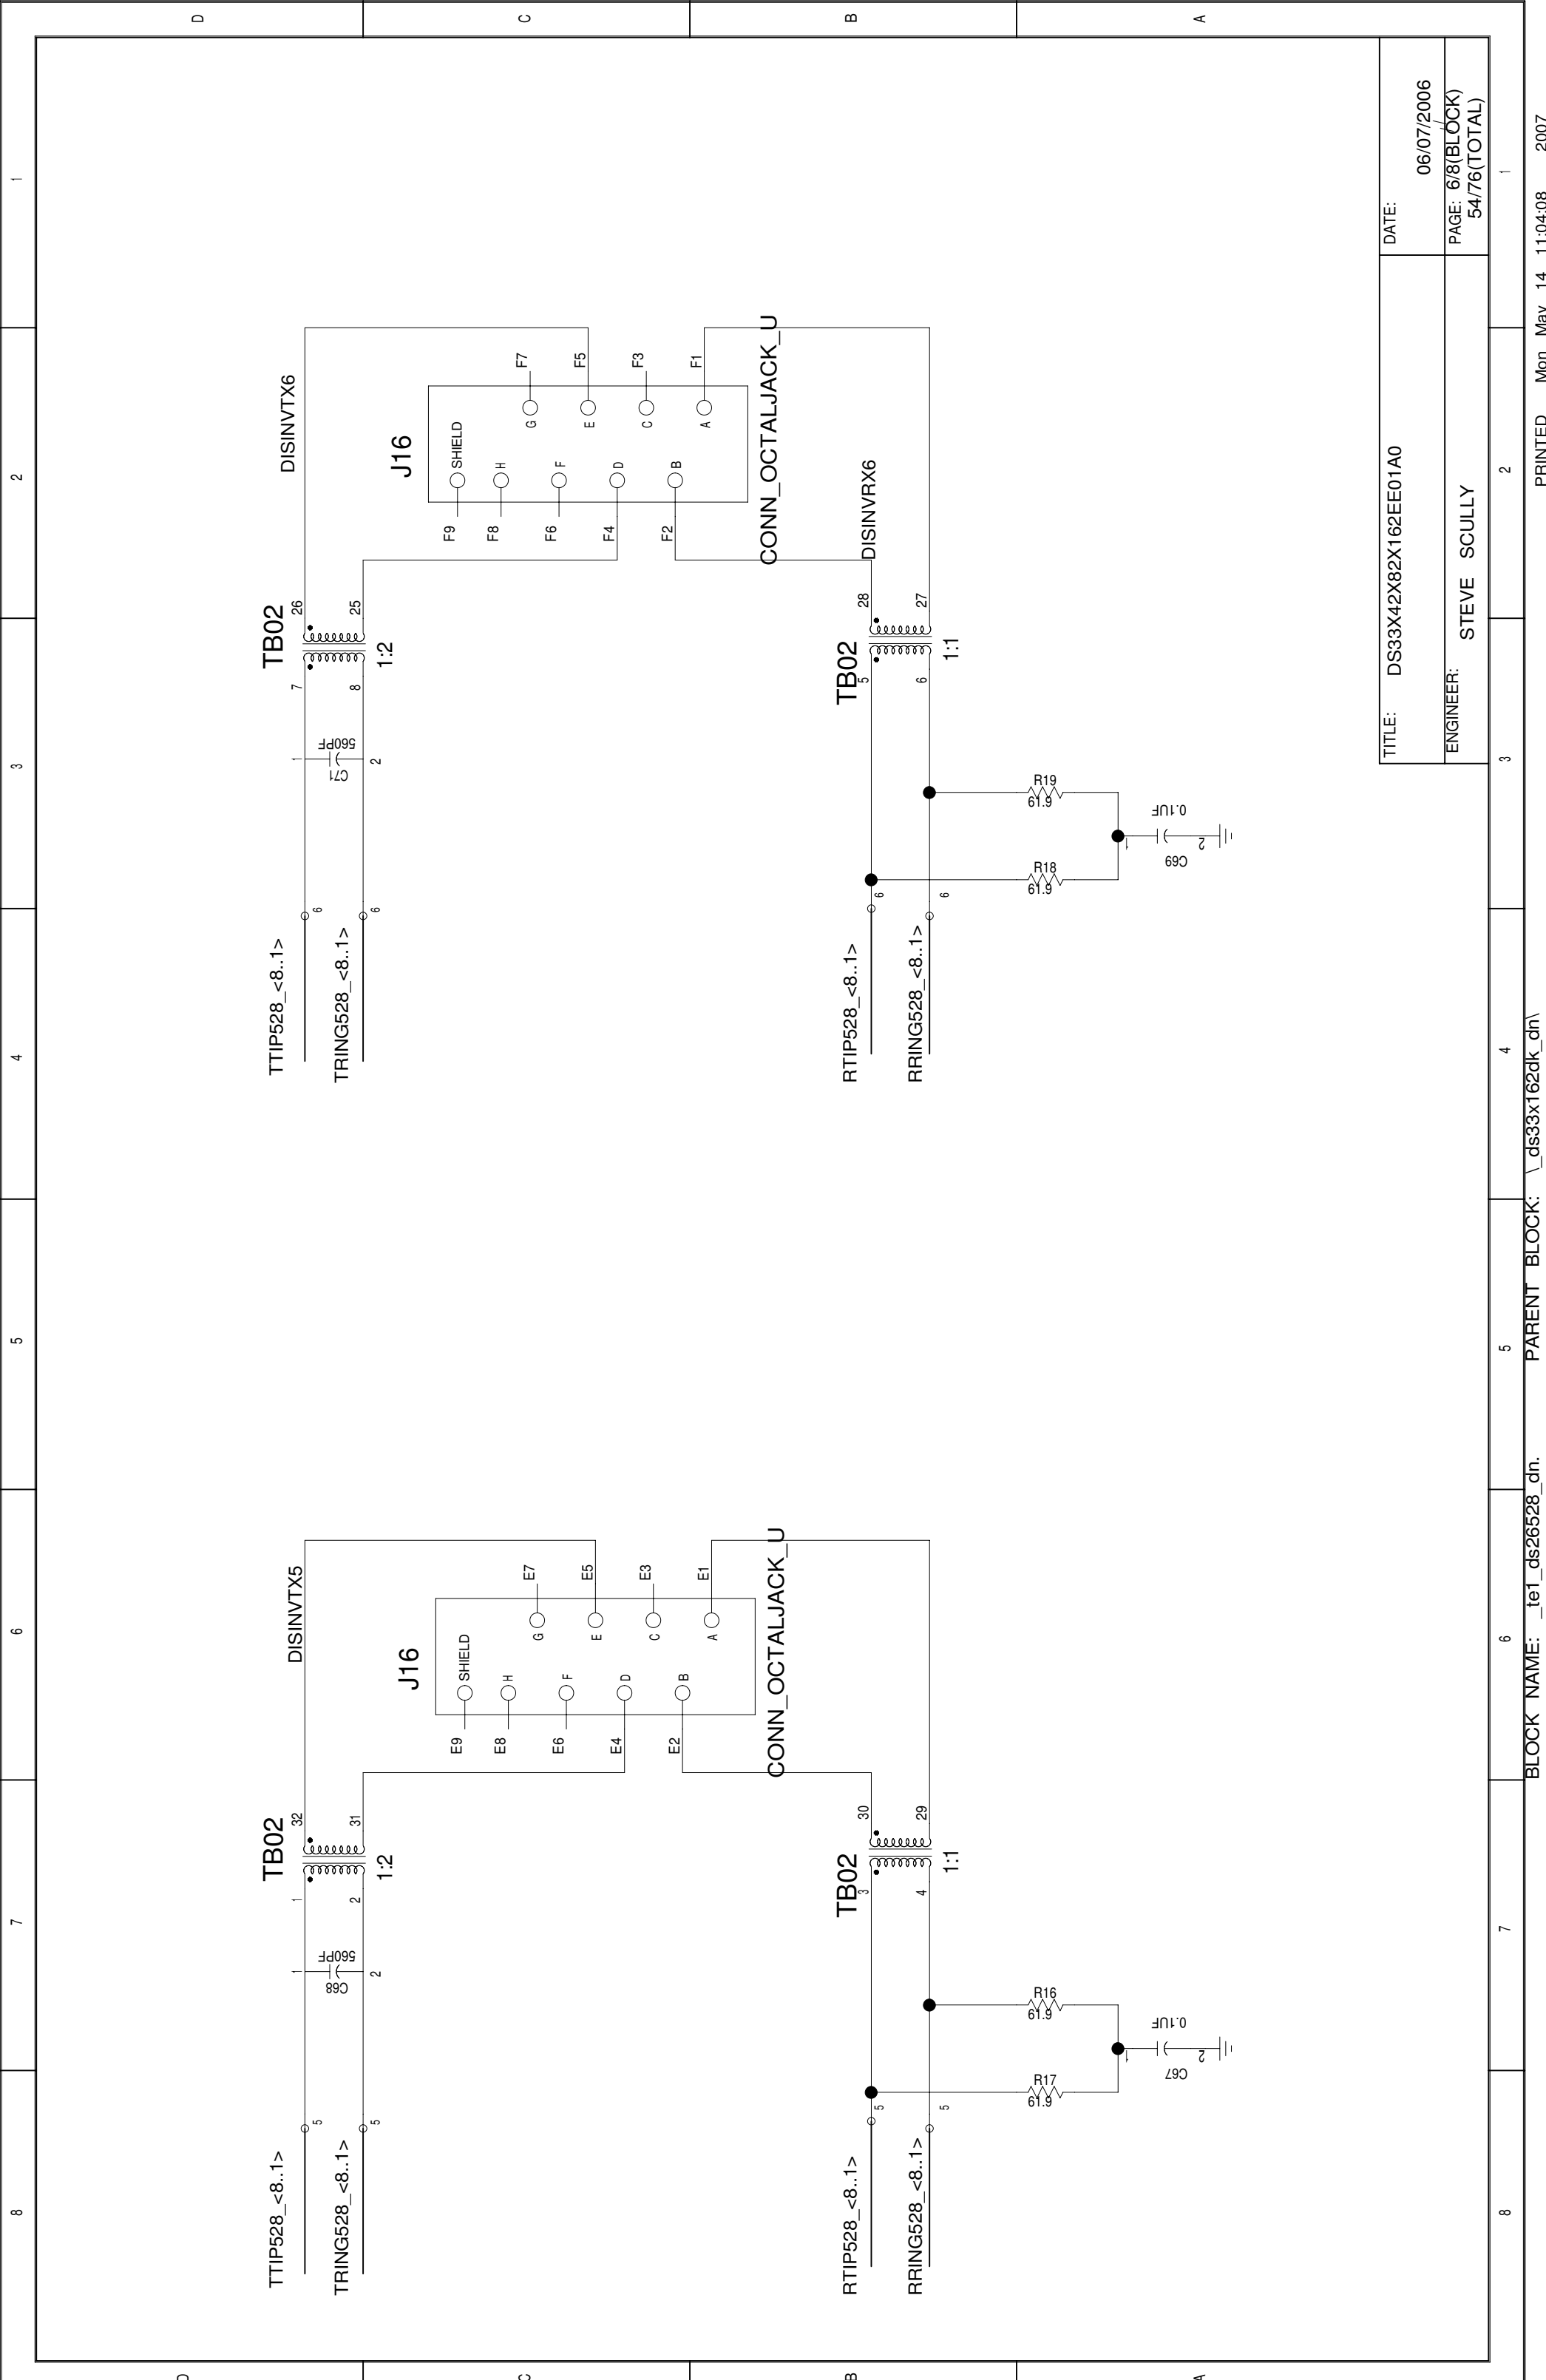

RTIP528_<8..1>

RRING528_<8..1>

6

6

61.9 R18

61.9 R19

0.1UF

2

1

5

6

1:1

TB02

27

28

DISINVRX6

J16

F9 SHIELD

F8 H

F6 F

F4 D

F2 B

F7 G

F5 E

C3 C

F1 A

CONN_OCTALJACK_U



8 7 | 6 | 5 | 4 | 3 | 2 | 1 || D | C | B | A | | | | |

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	6/8(BLOCK)
			54/76(TOTAL)


BLOCK NAME: te1_ds26528_dn

PARENT BLOCK: \ds33x162dk_dn\

PRINTED Mon May 14 11:04:08 2007

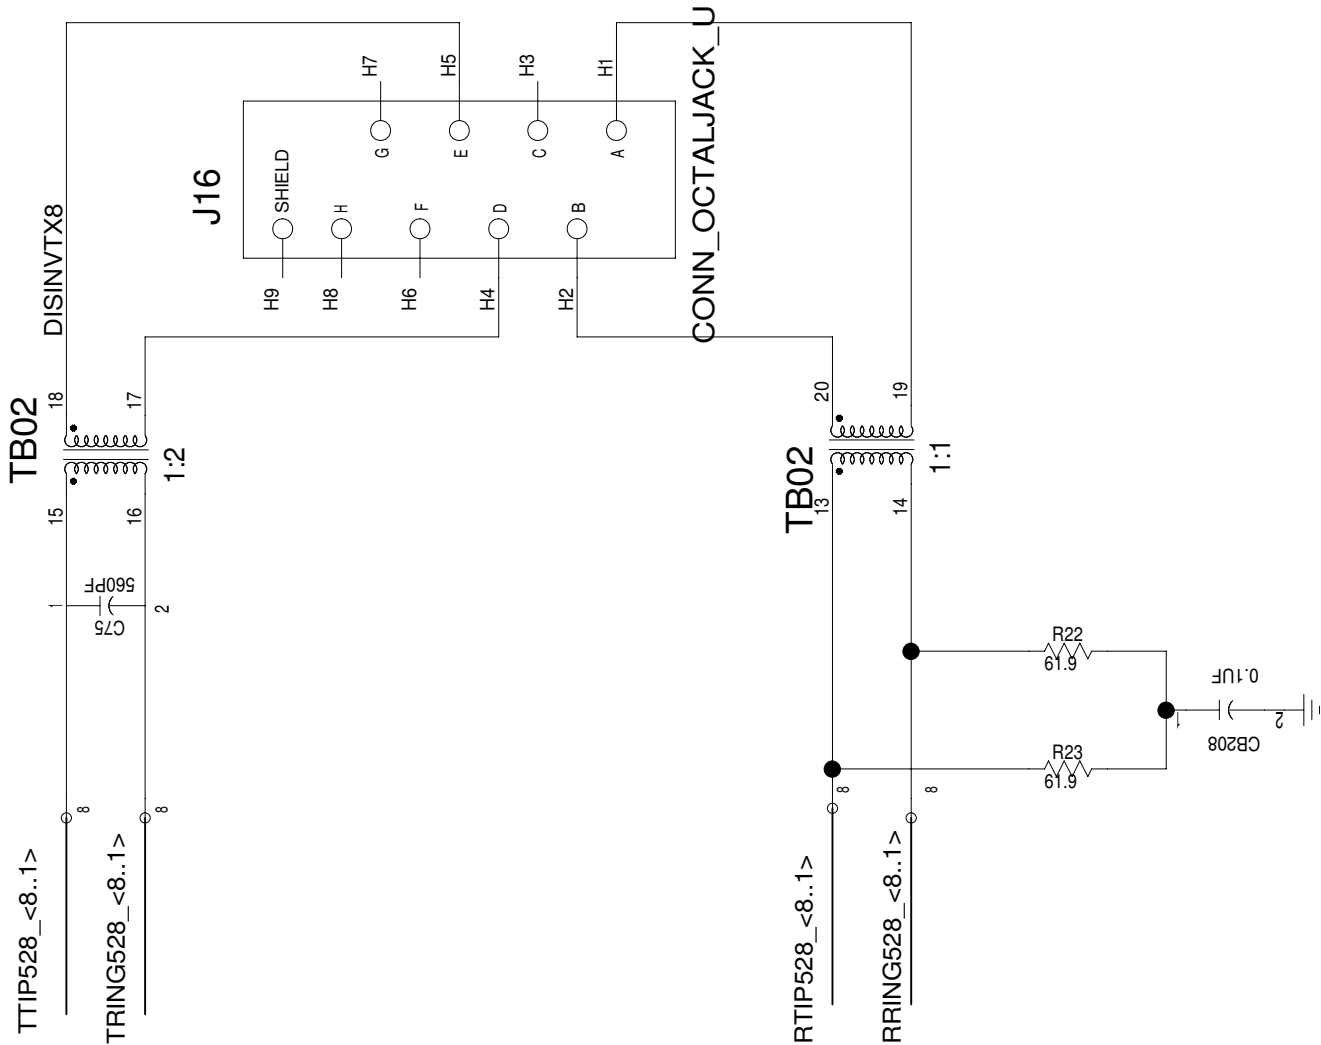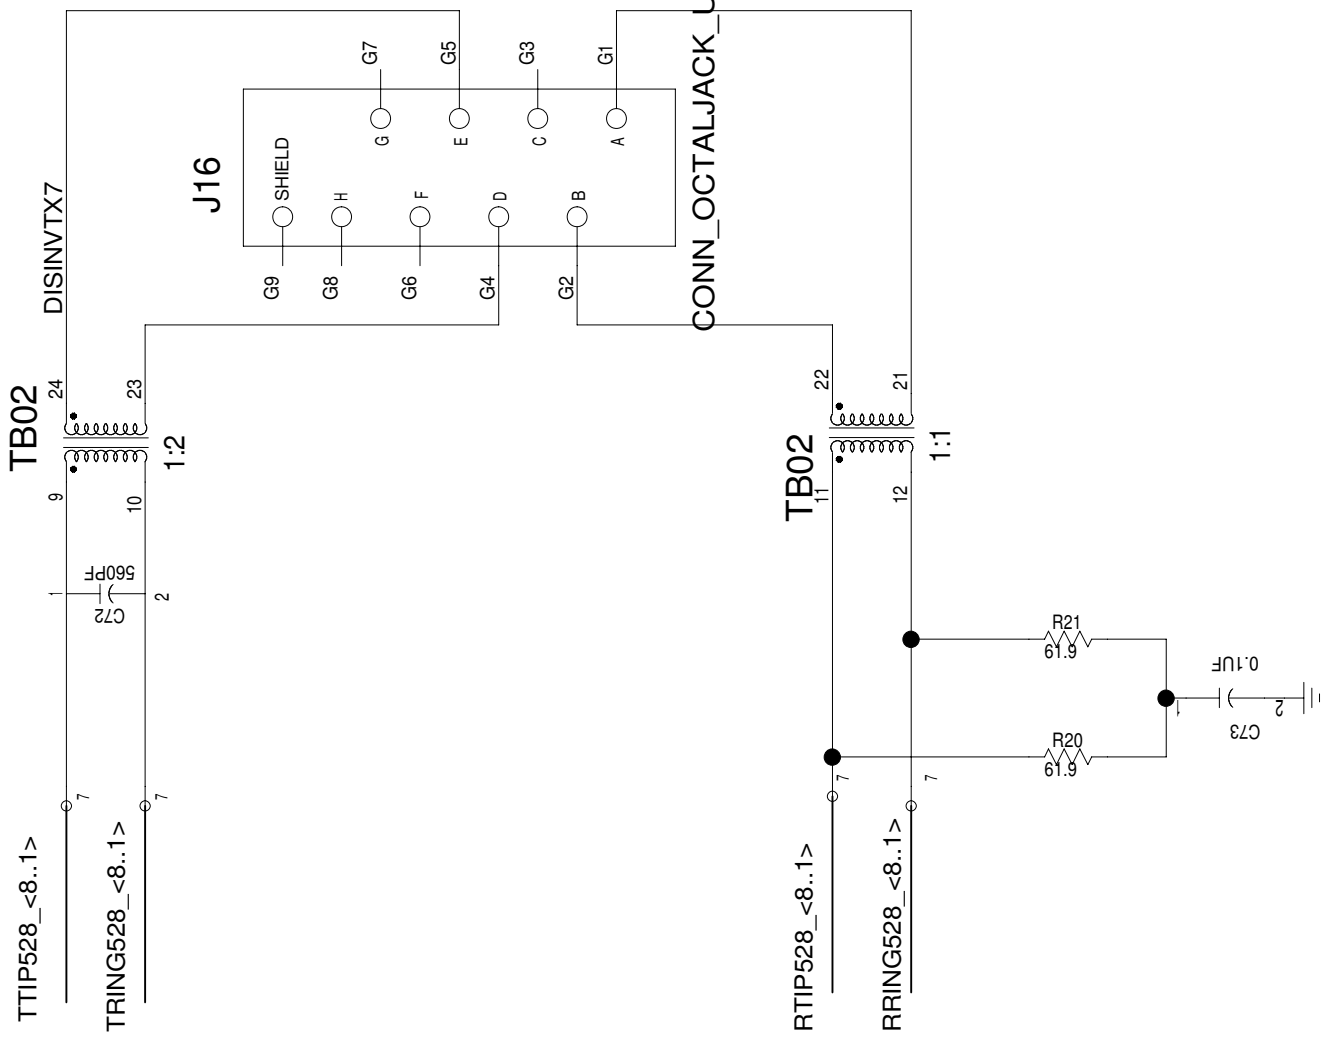


TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	7/8(BLOCK) 55/76(TOTAL)

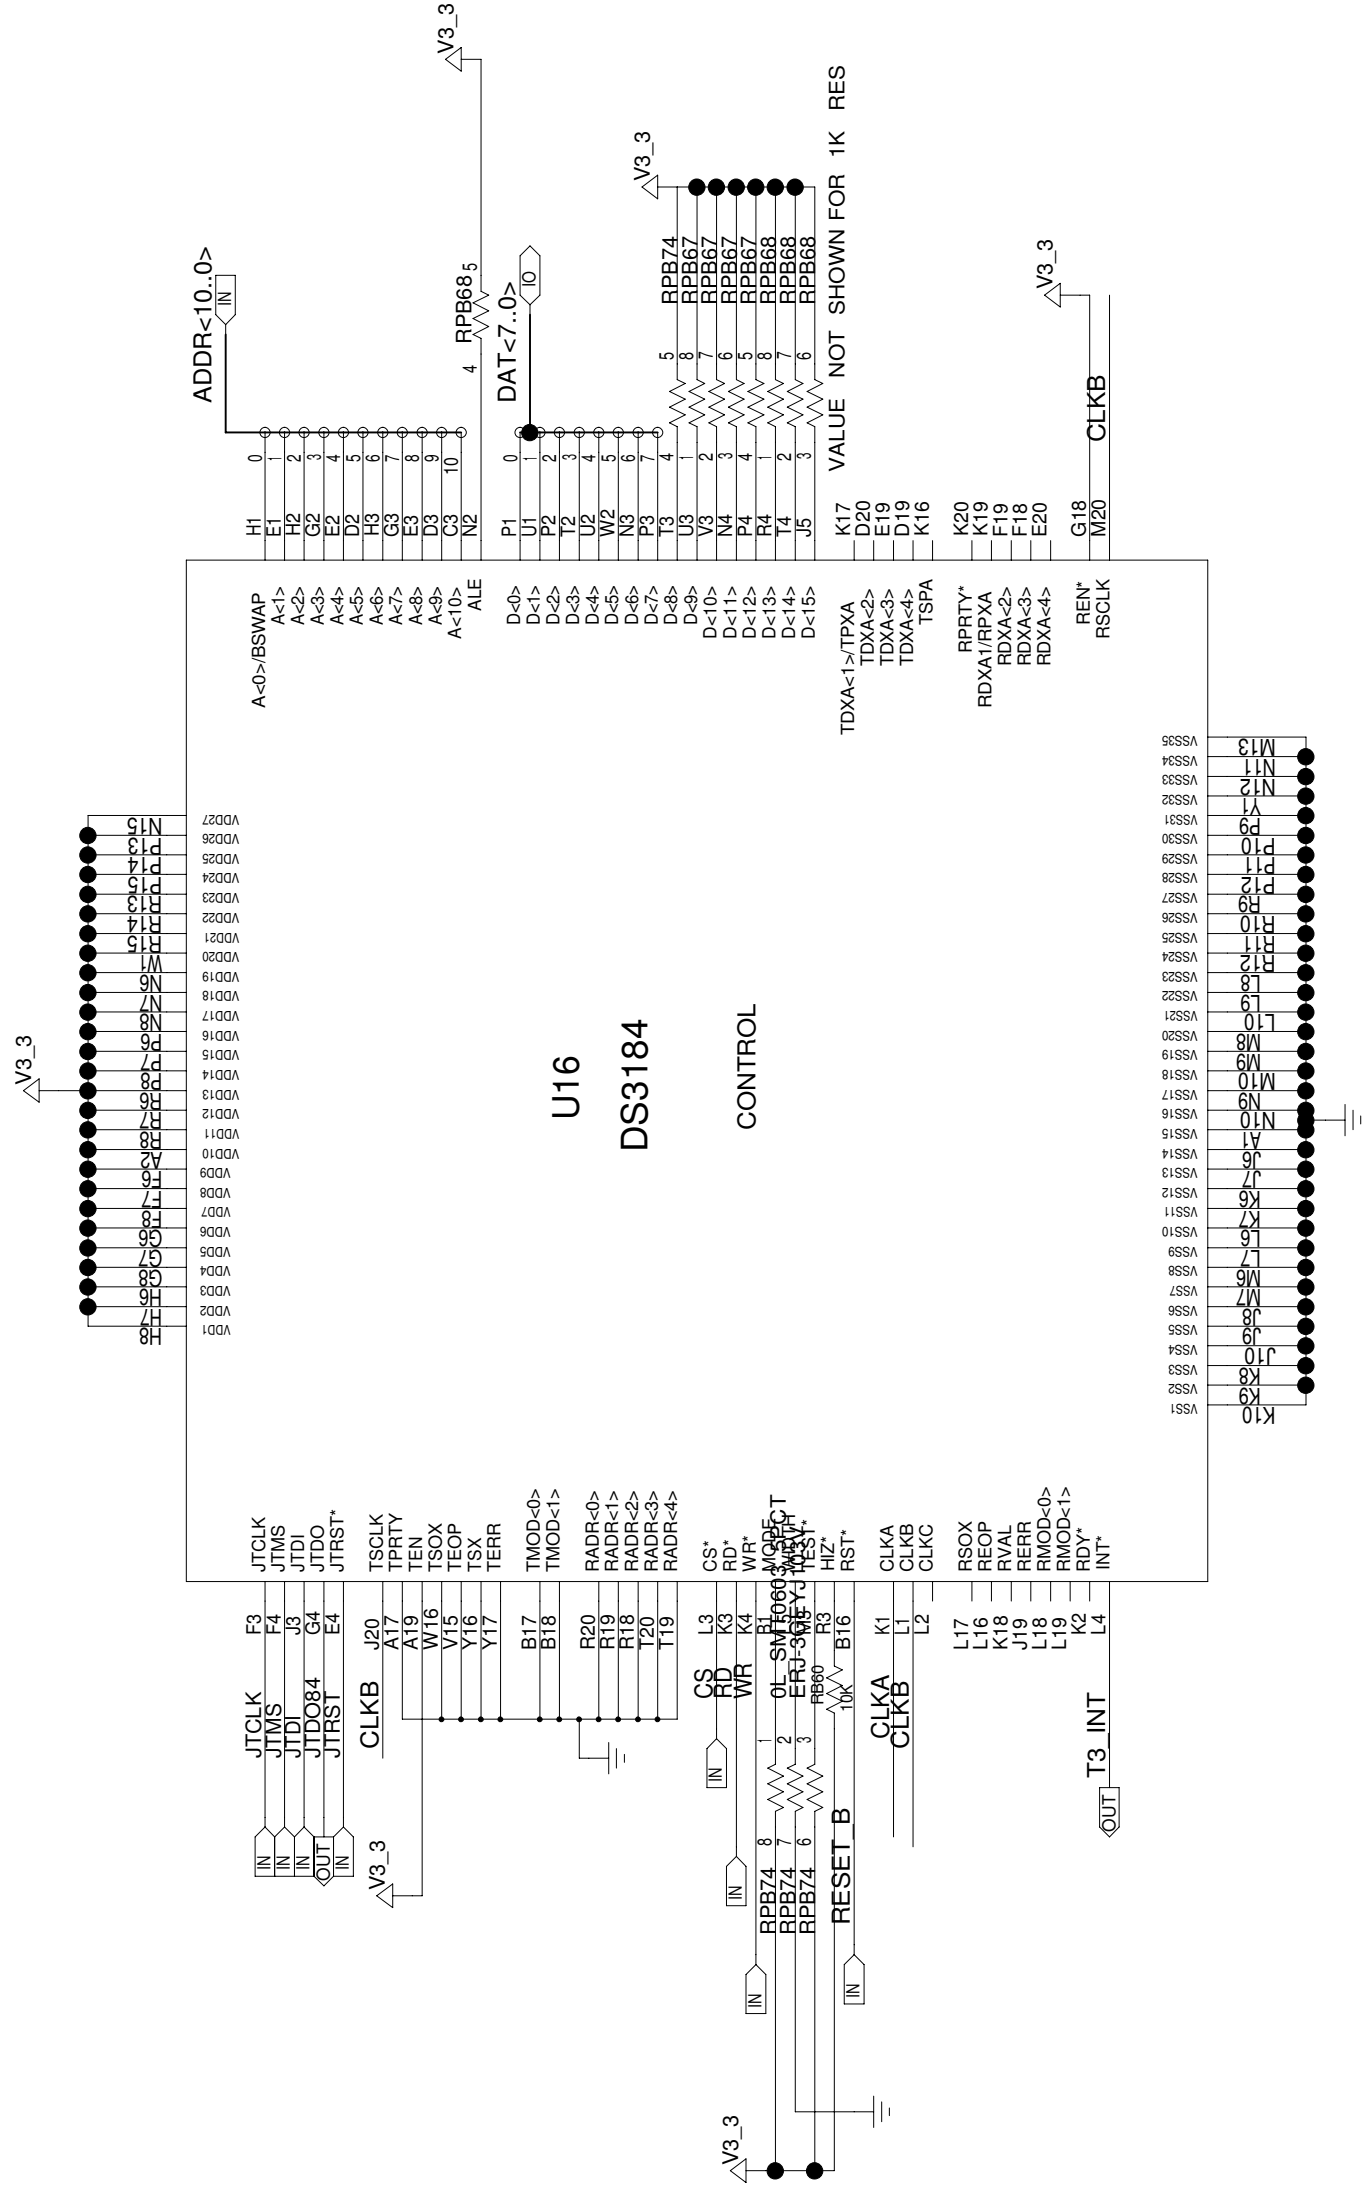


BEGINNING OF DS3184 WAN HIERARCHY BLOCK

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	1/5(BLOCK) 57/76(TOTAL)


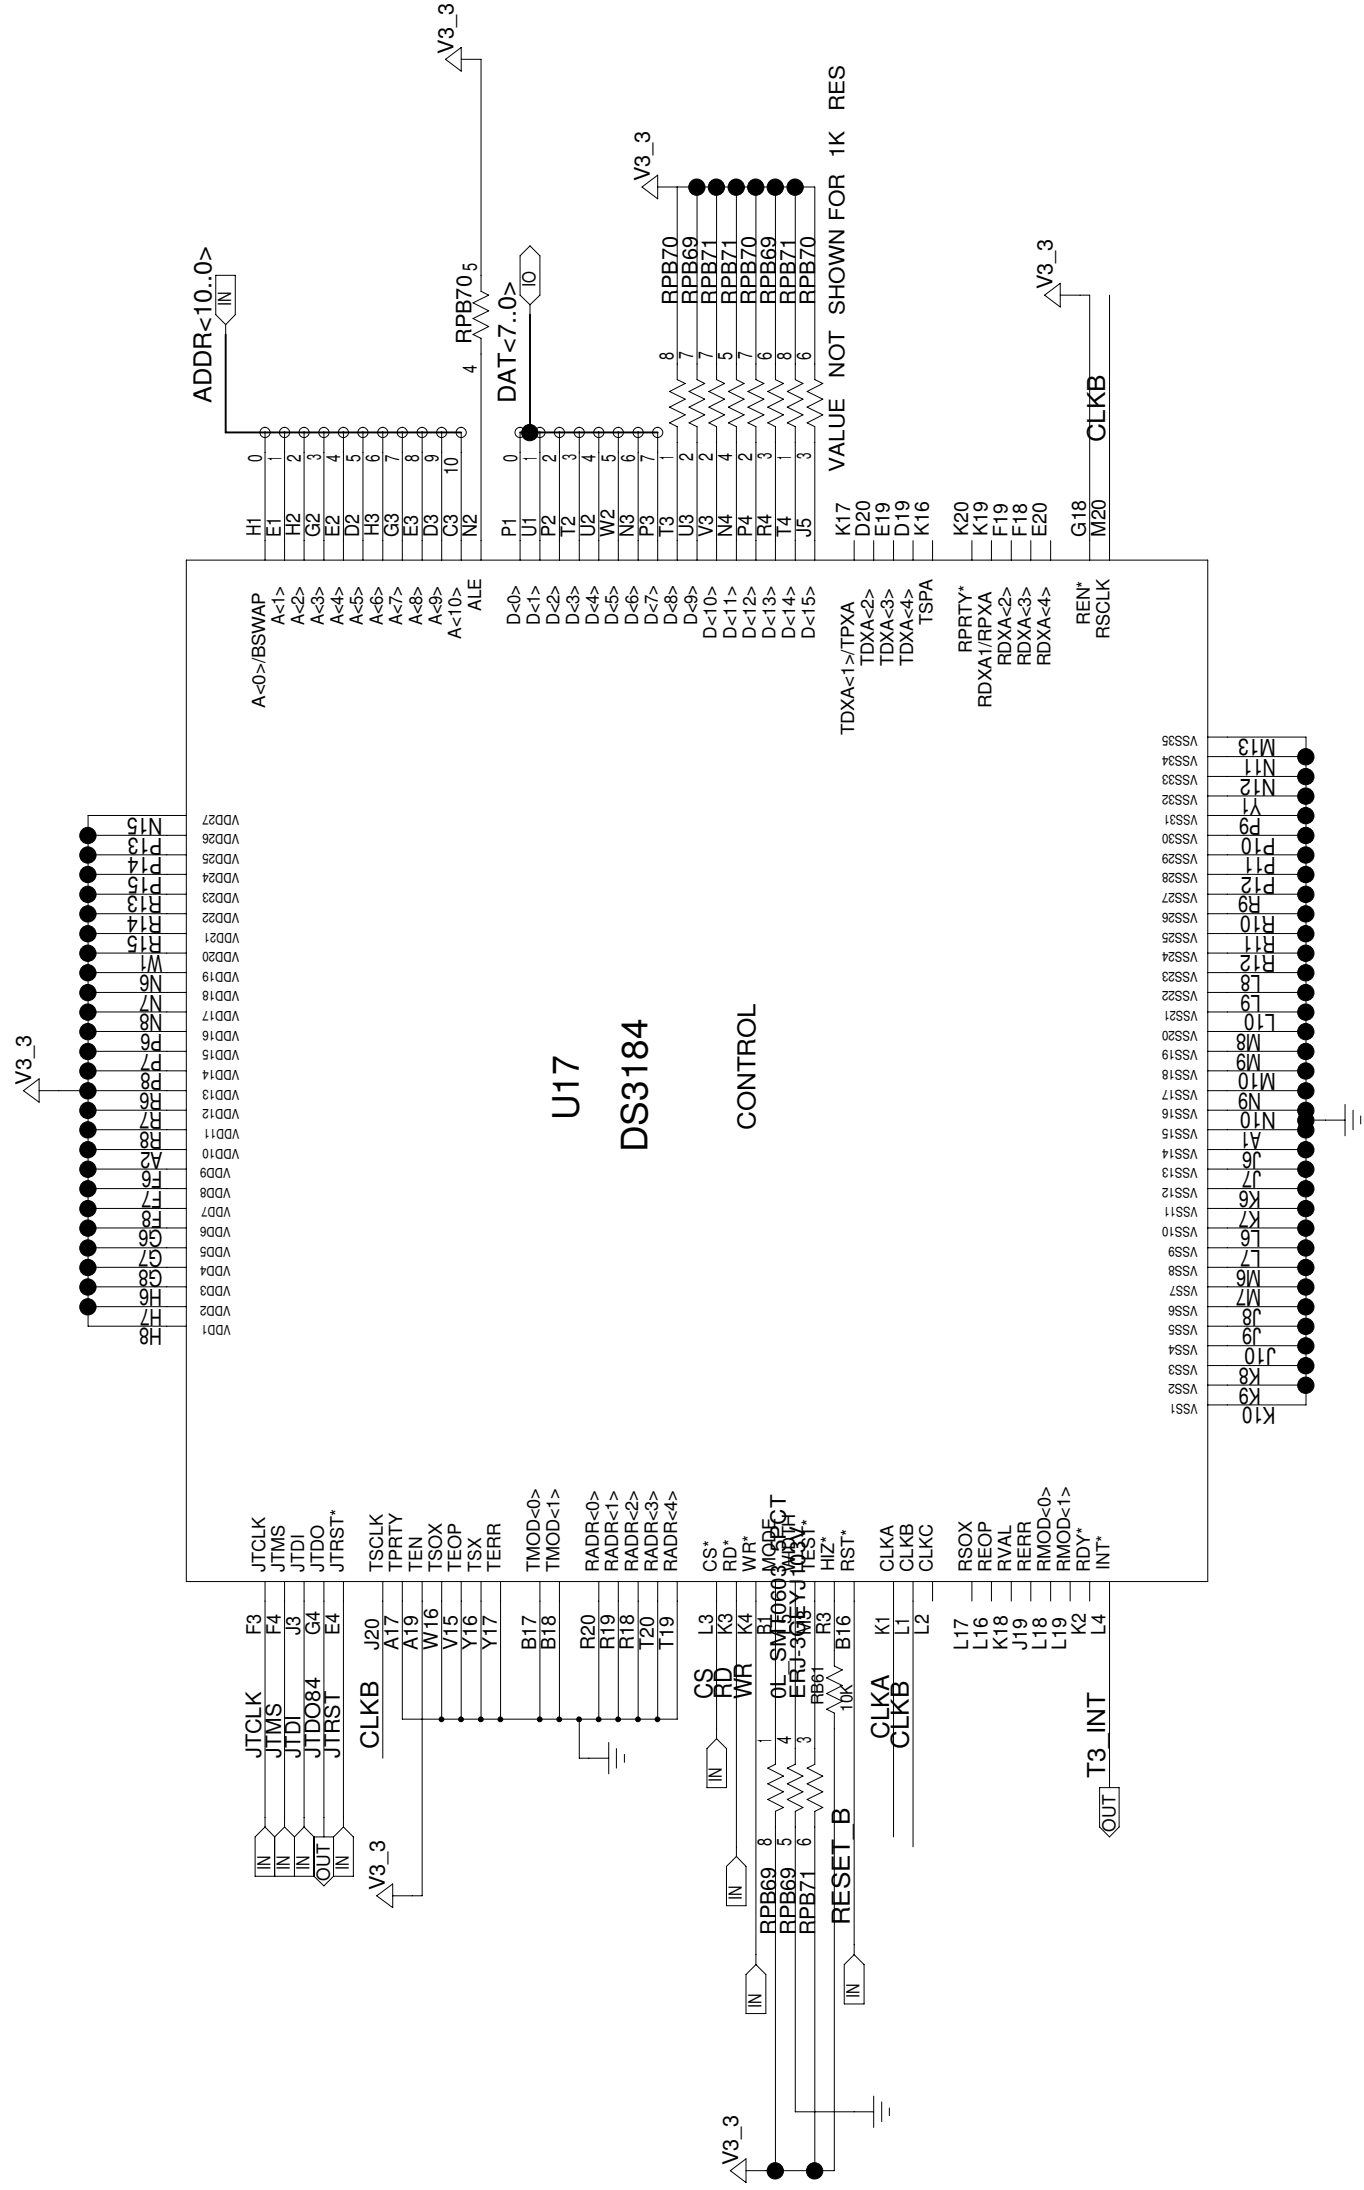


BEGINNING OF DS3184 WAN HIERARCHY BLOCK


TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	1/5(BLOCK) 62/76(TOTAL)

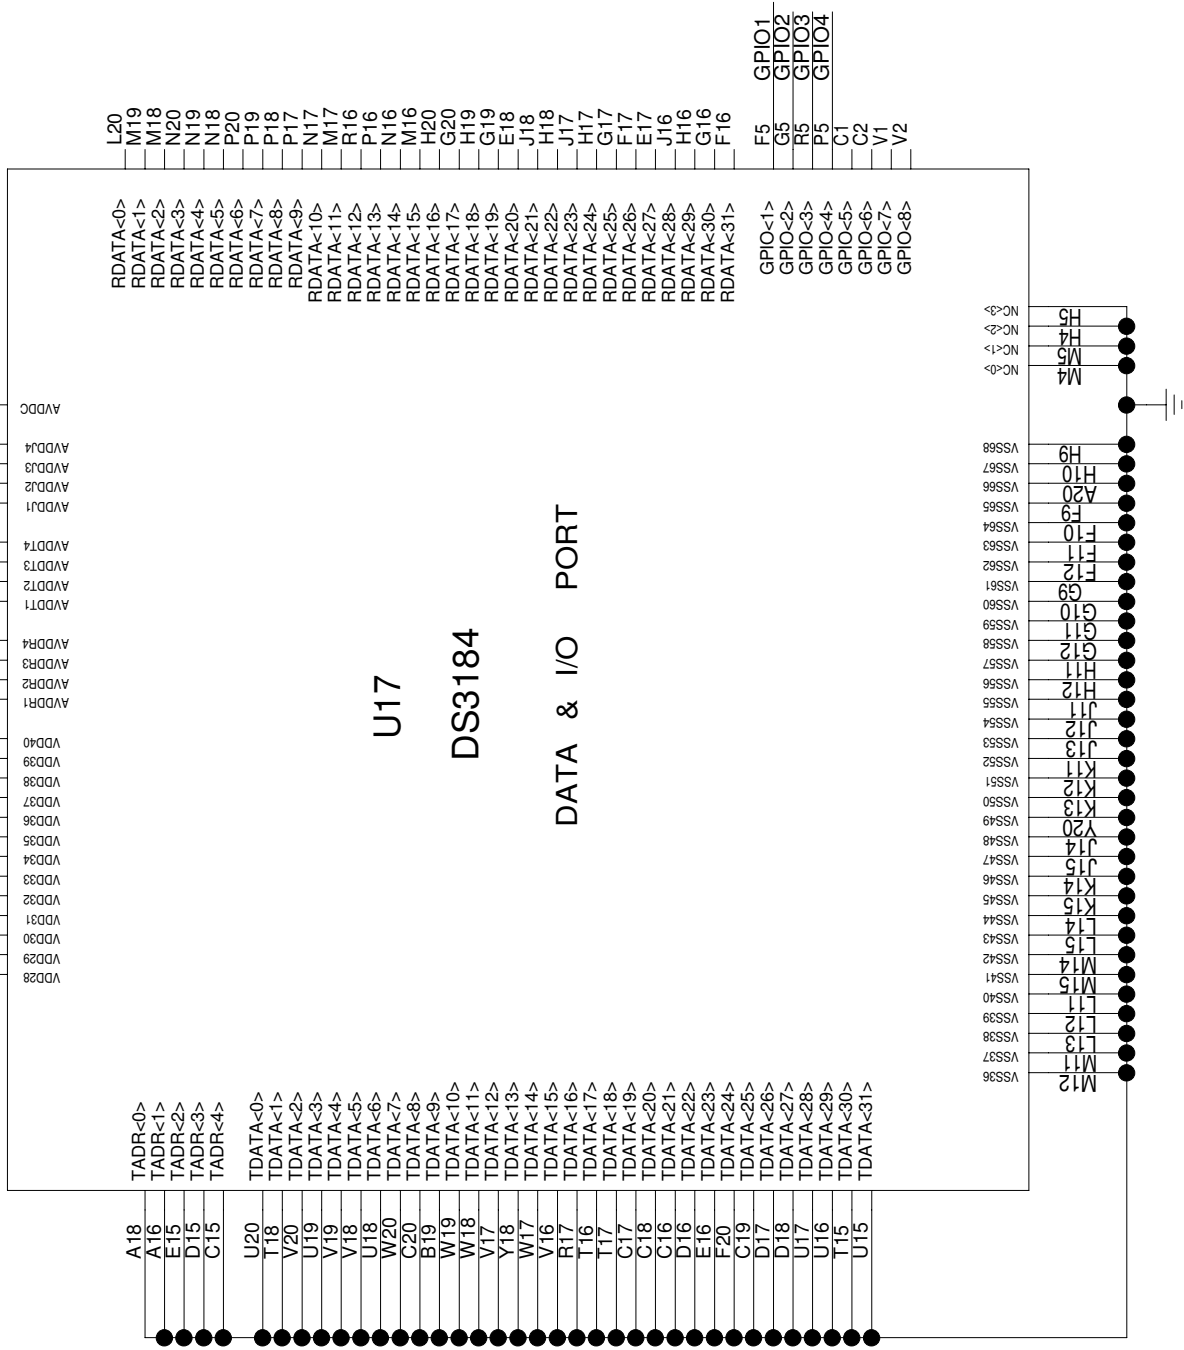

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	3/5(BLOCK) 64/76(TOTAL)

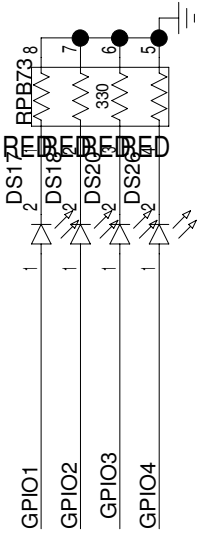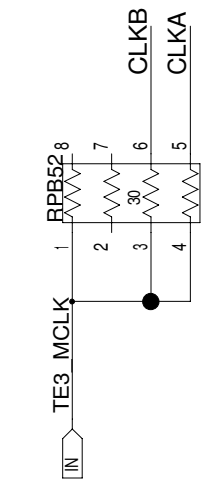

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	3/5(BLOCK) 64/76(TOTAL)











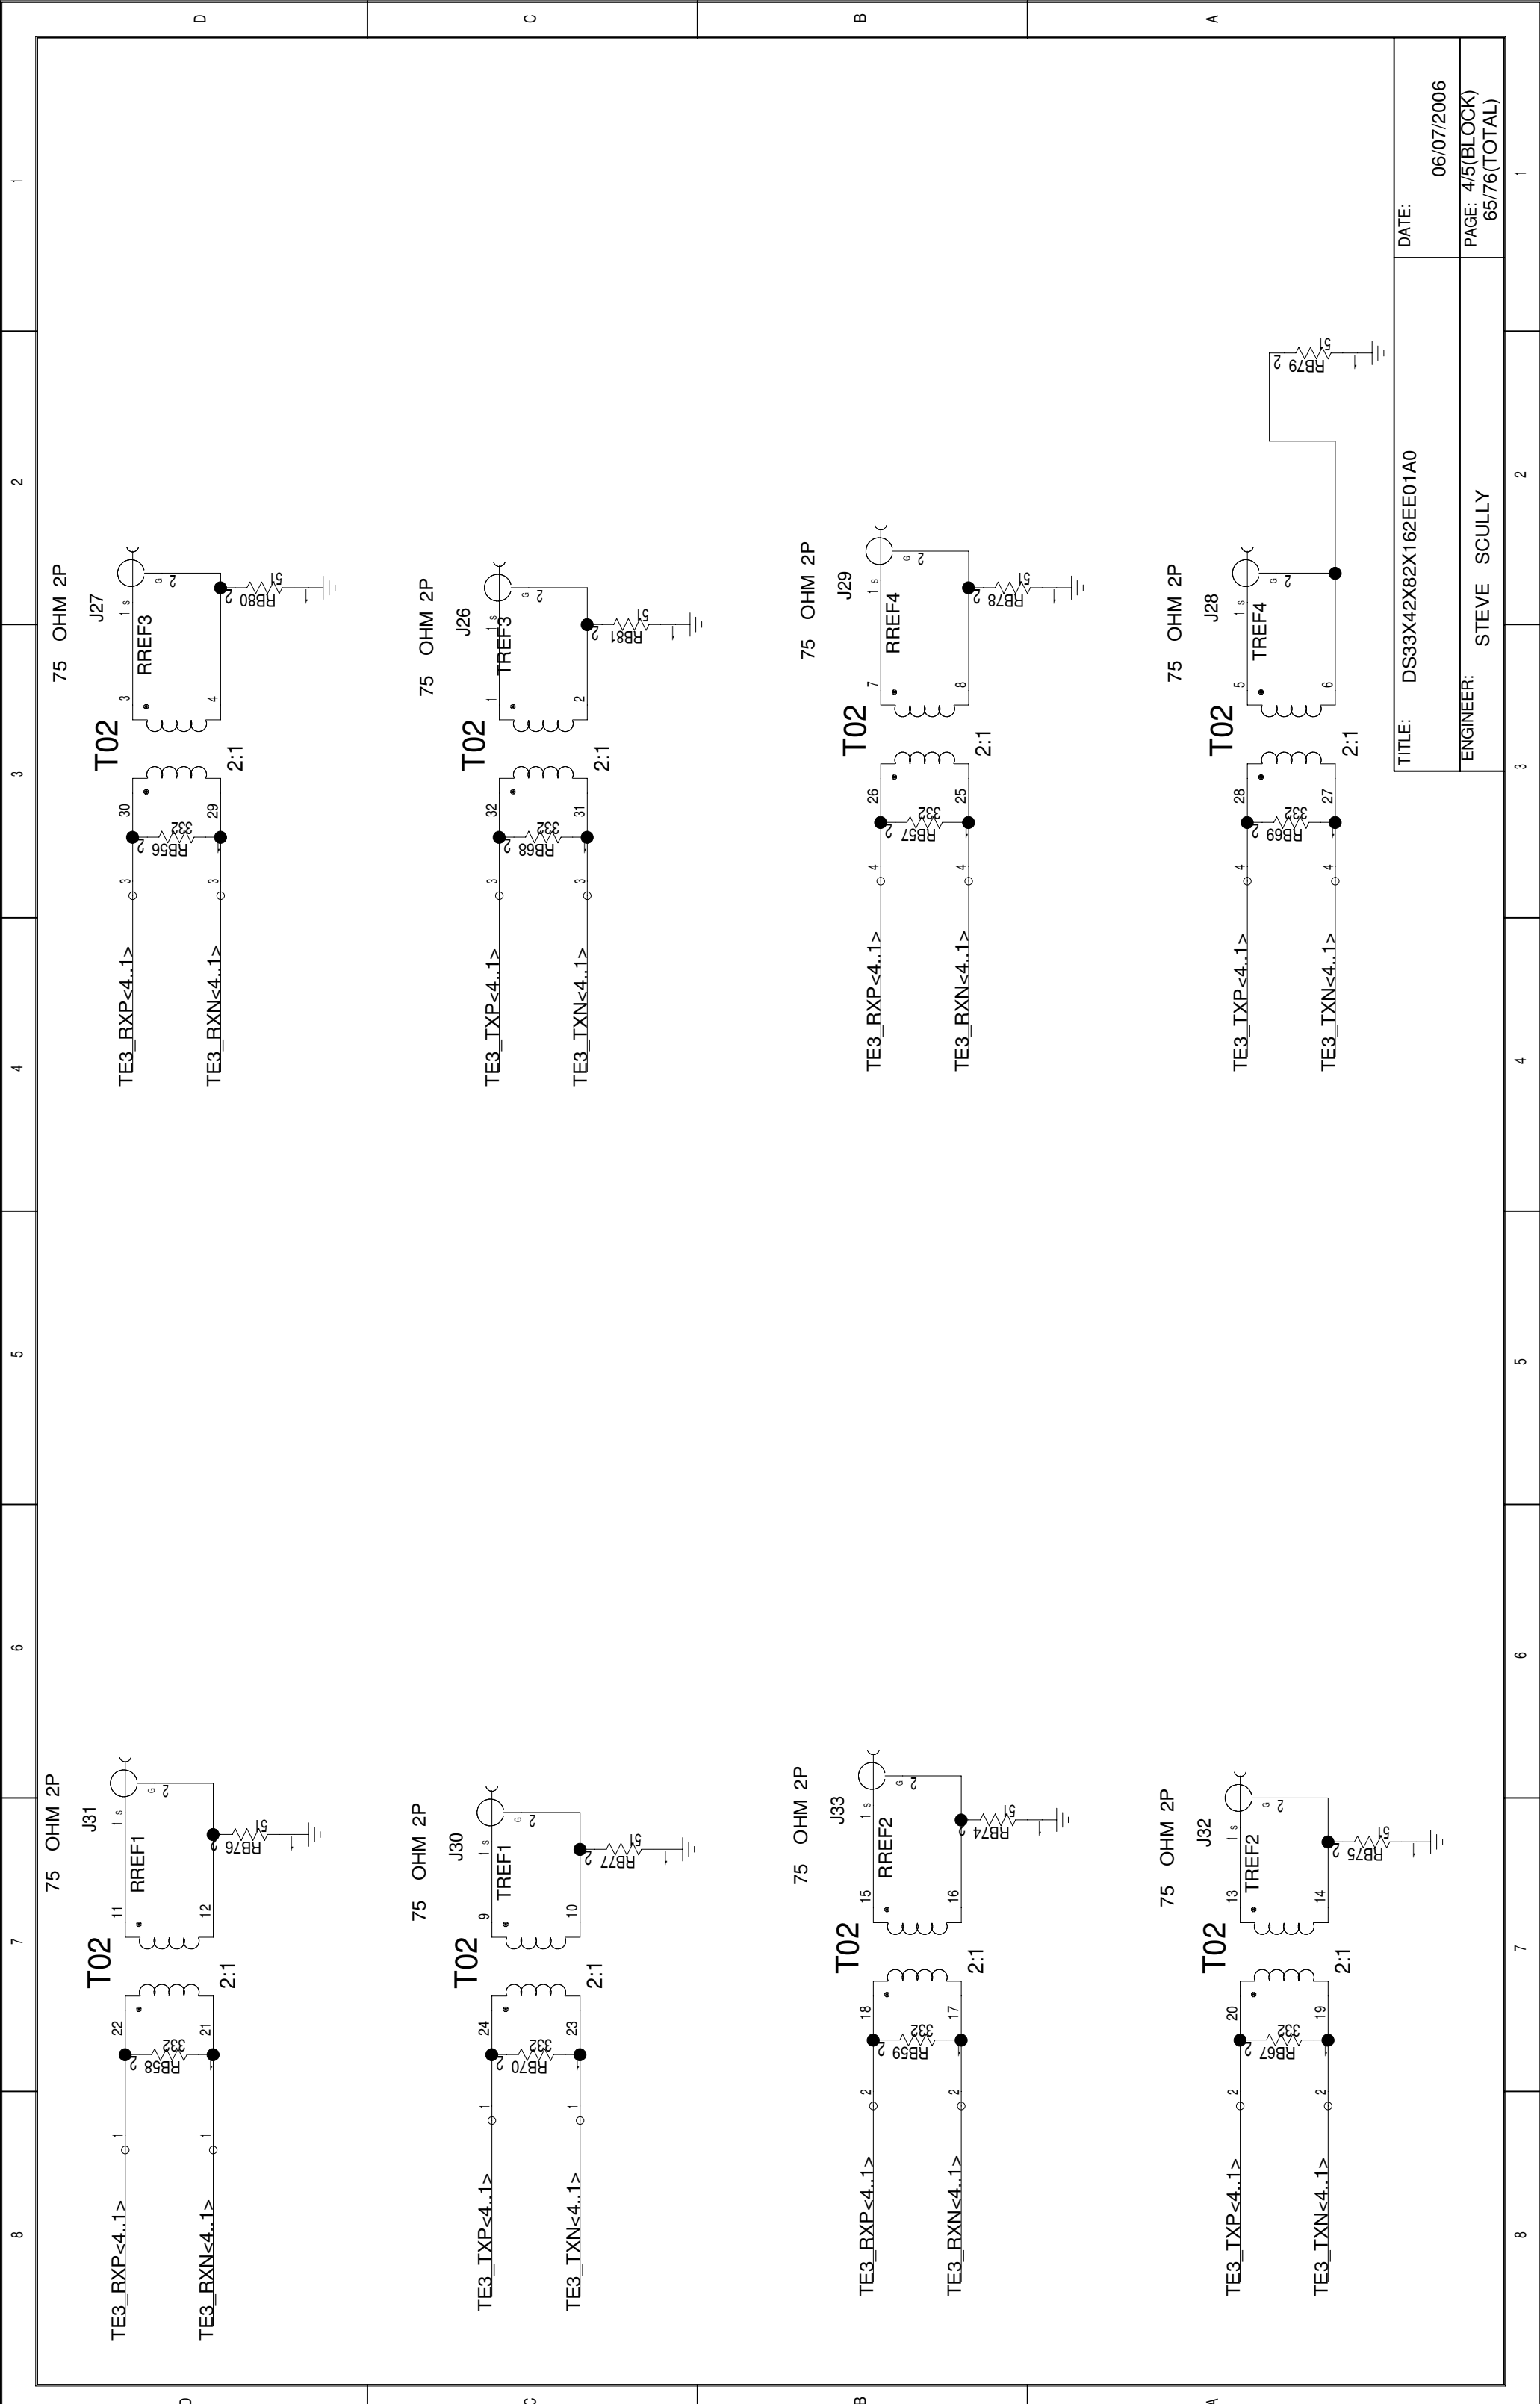





D

C

B

A

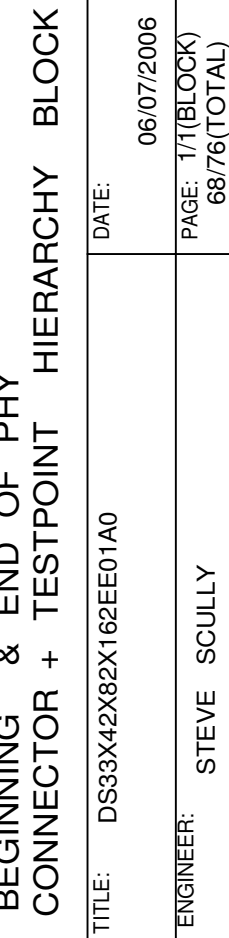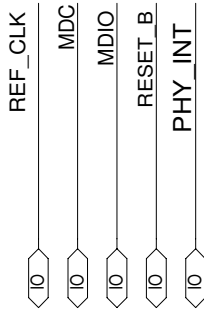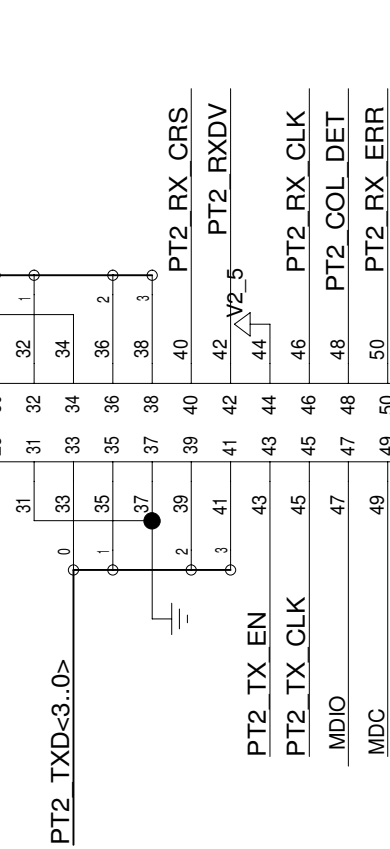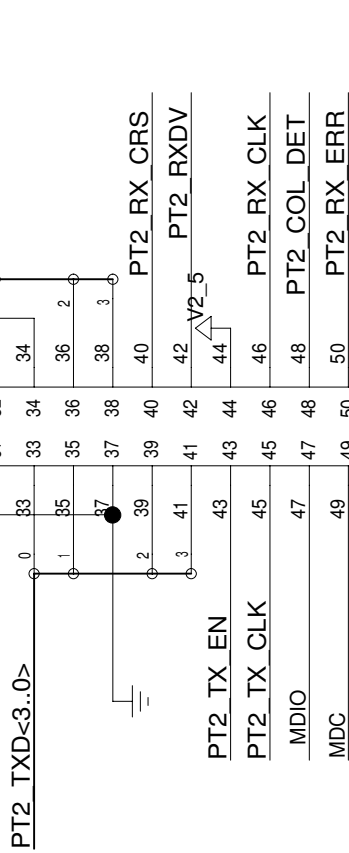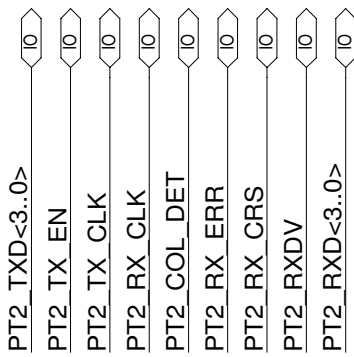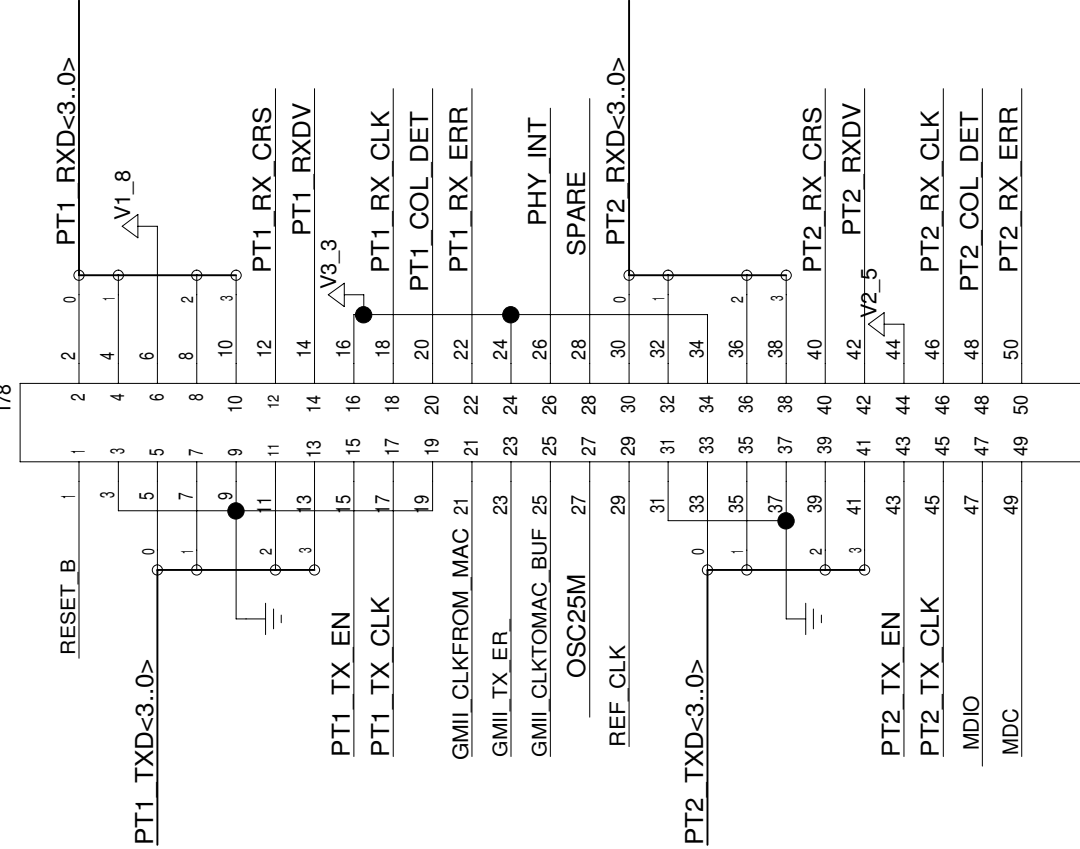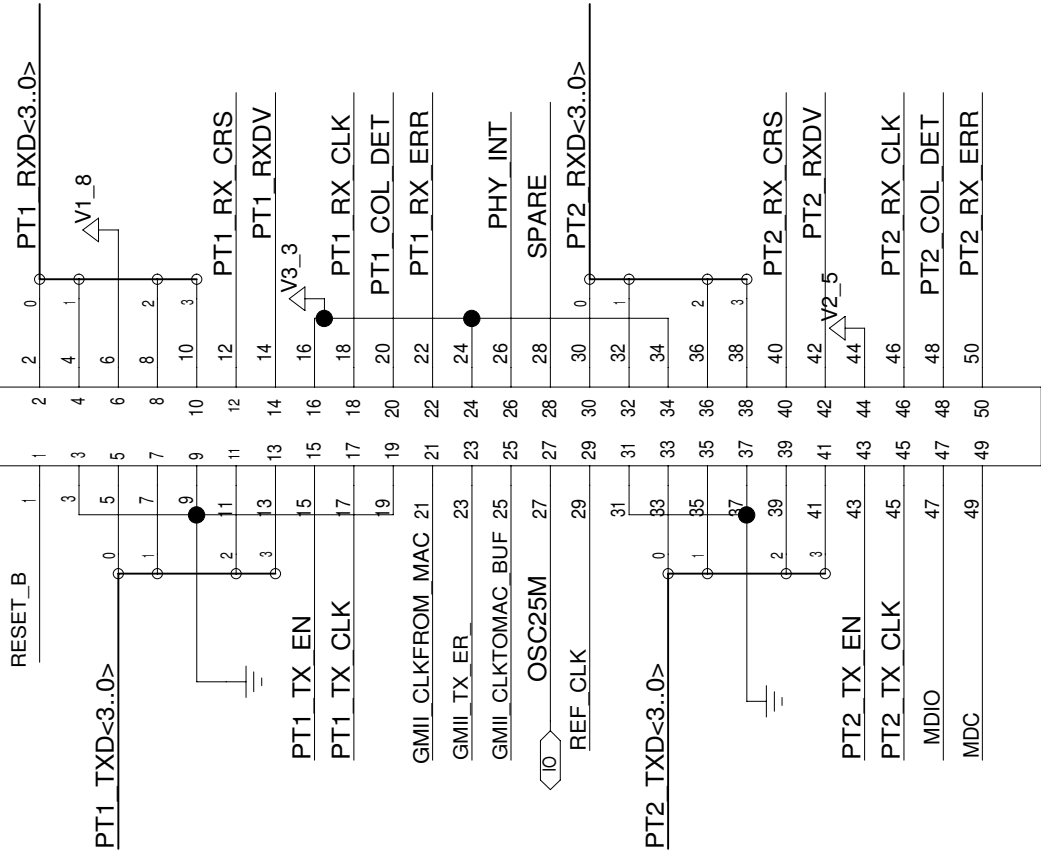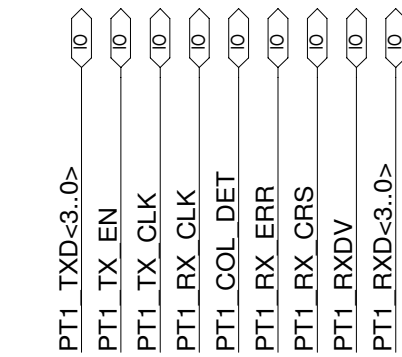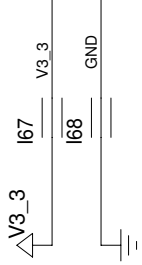

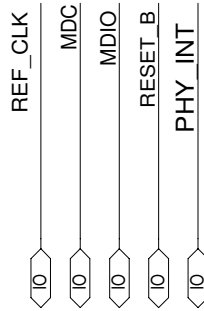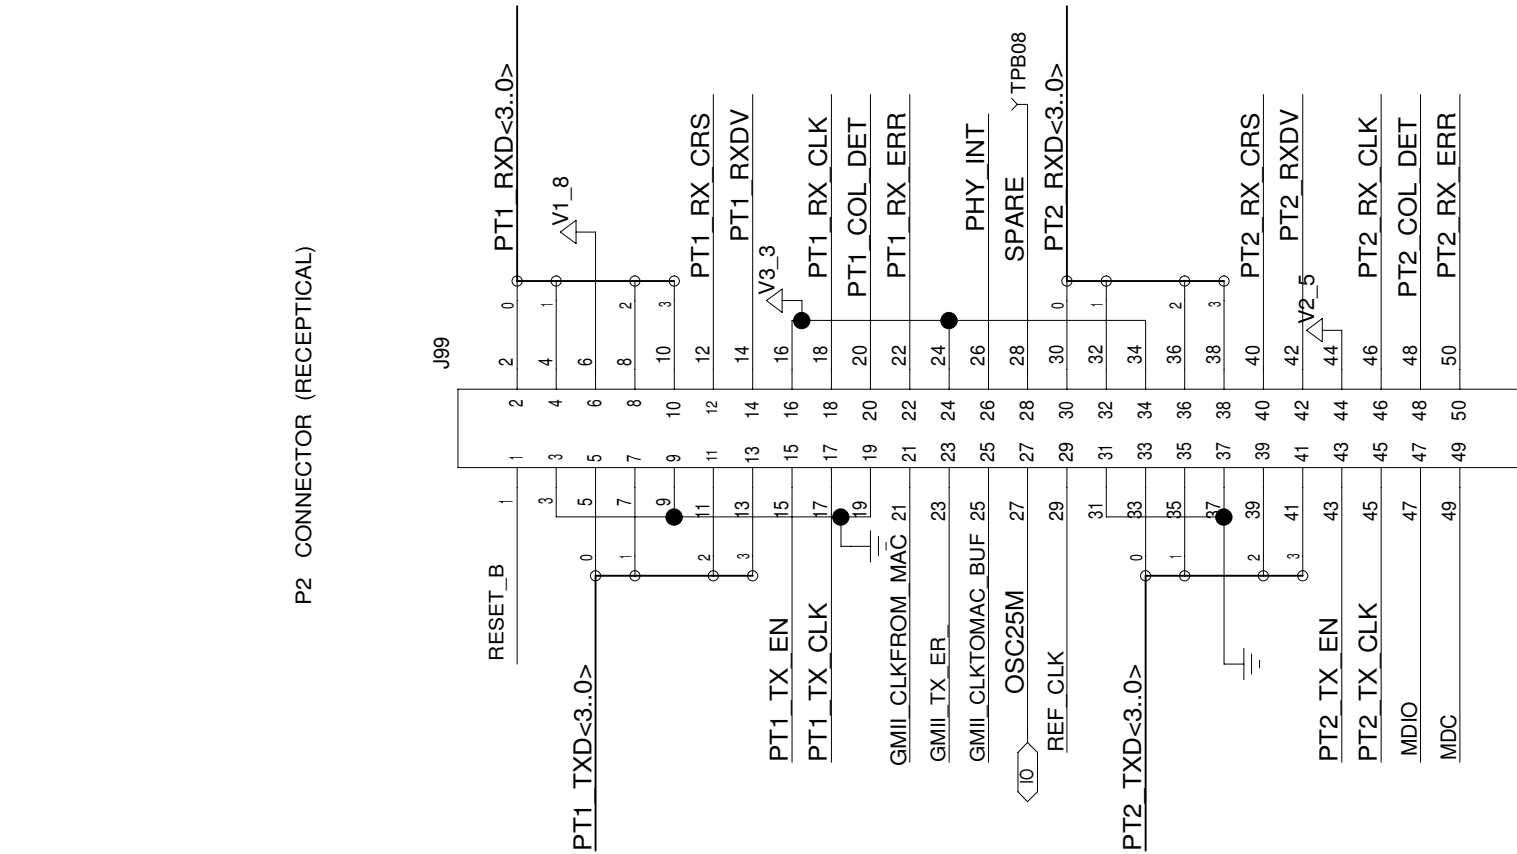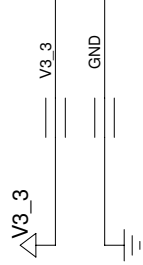




RESOURCE CARD CONNECTOR FOR LAN TO MOTHERBOARD

BEGINNING / END OF PHY
CONNECTOR HIERARCHY BLOCK

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	171(BLOCK) 69/76(TOTAL)

SPARE

8	7	6	5	4	3	2	1
BLOCK NAME: <u>phy_imbus_rc dn.</u> PARENT BLOCK: <u>rc_top dn</u>							
PRINTED Mon Feb 11 13:59:19 2008							

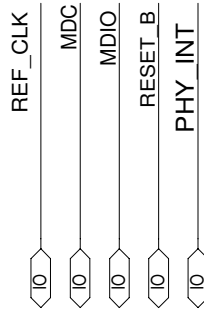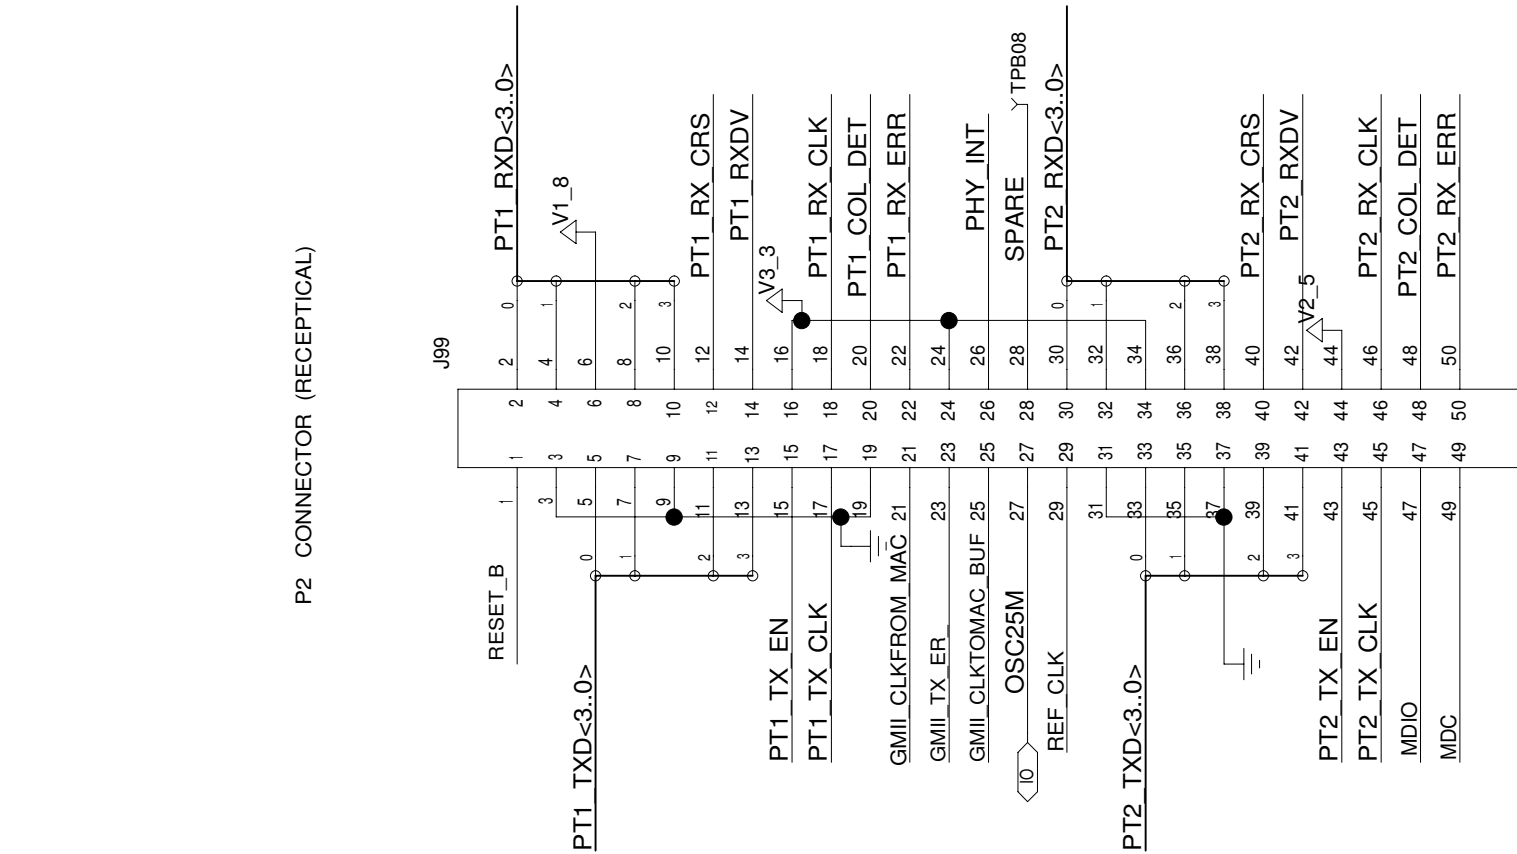


RESOURCE CARD CONNECTOR FOR LAN TO MOTHERBOARD

BEGINNING / END OF PHY
CONNECTOR HIERARCHY BLOCK






TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	171(BLOCK) 69/76(TOTAL)

SPARE

8	7	6	5	4	3	2	1
BLOCK NAME: <u>phy_imbus_rc dn.</u> PARENT BLOCK: <u>rc_top dn</u>							
PRINTED Mon Feb 11 13:59:19 2008							

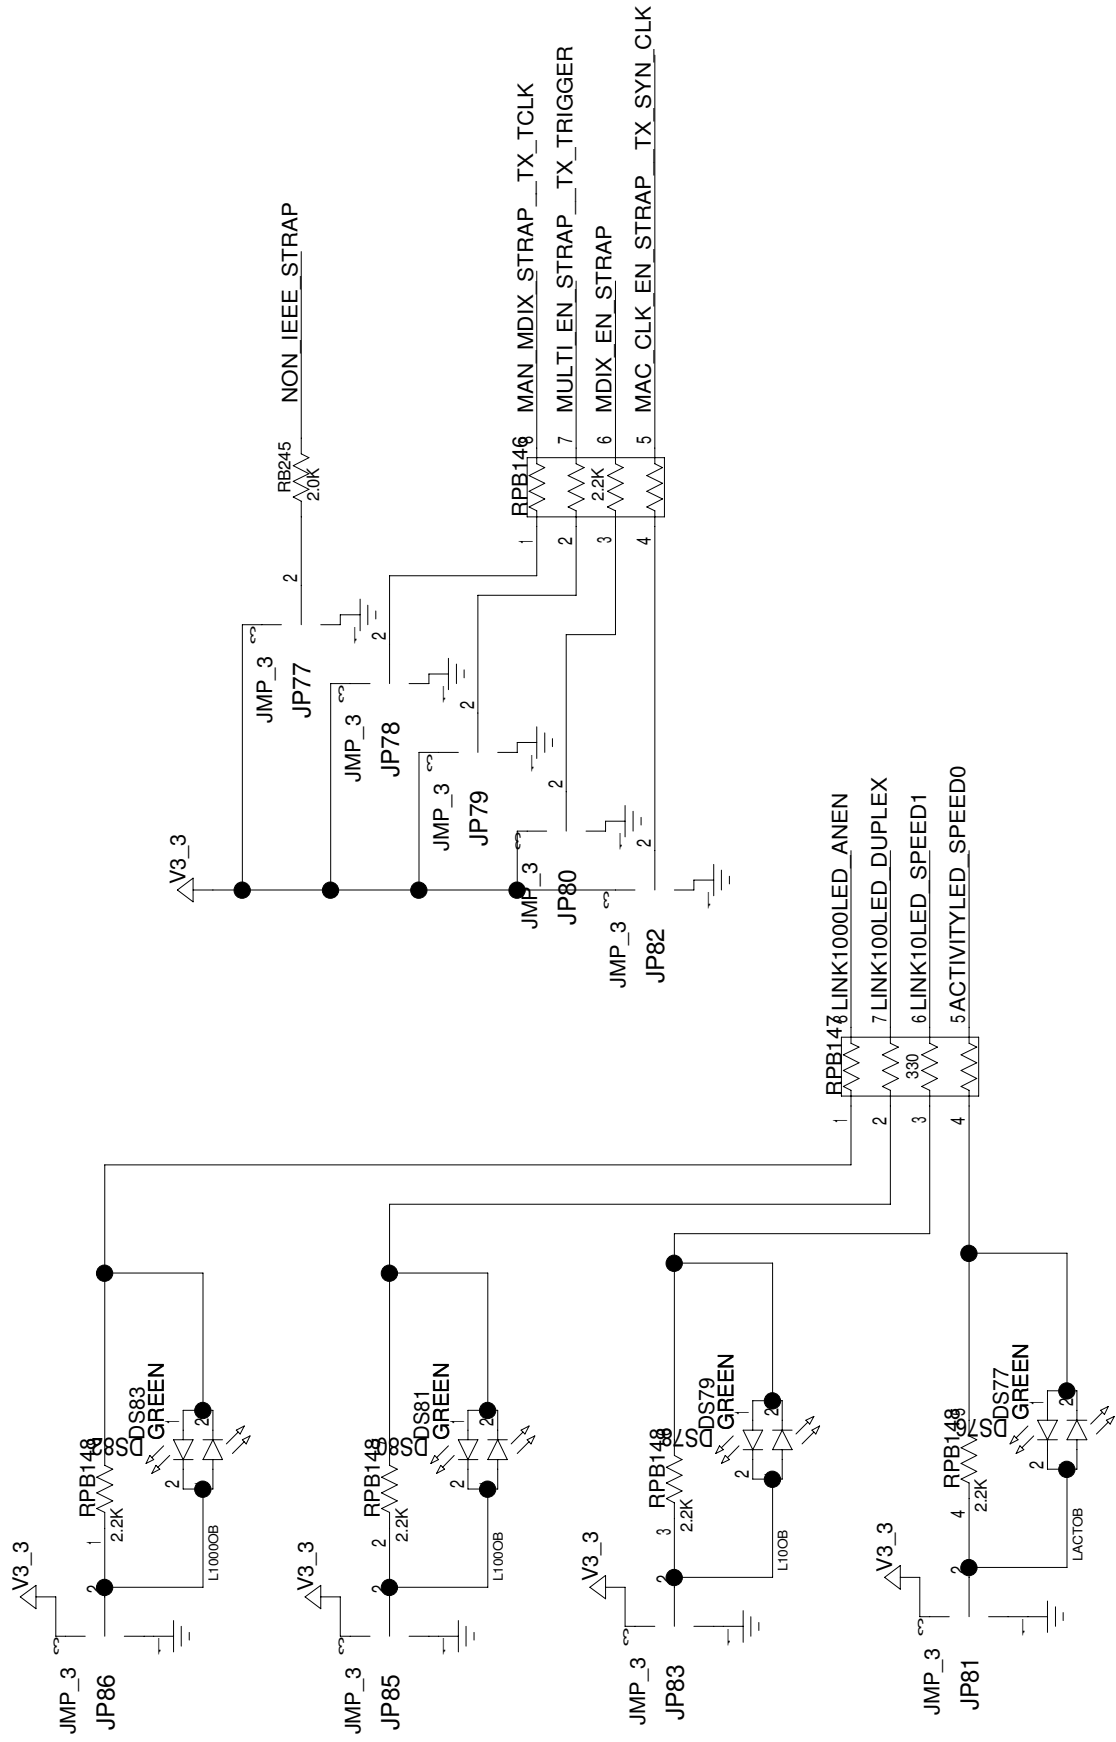


CHECK THAT 22K RES USE THE SAME RPAC STRAP OPTIONS HERE DO NOT FOLLOW DATASHEET

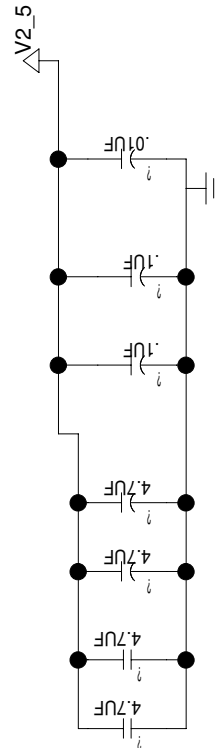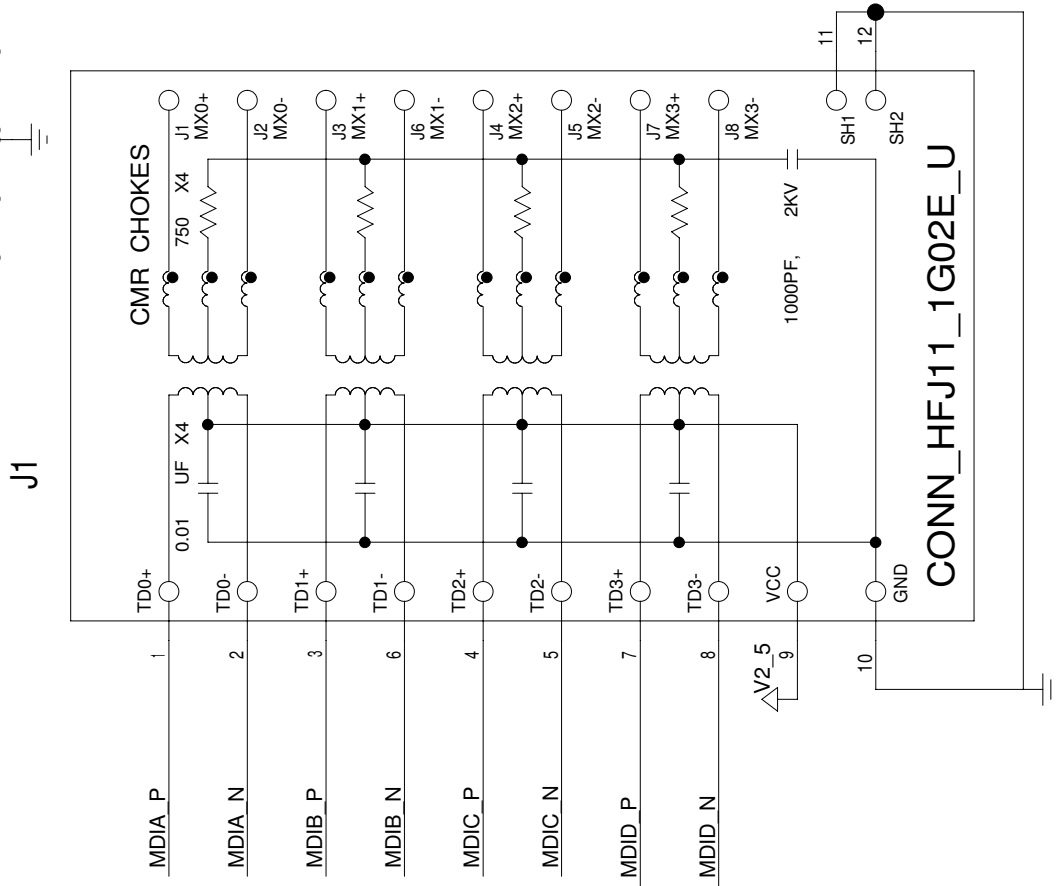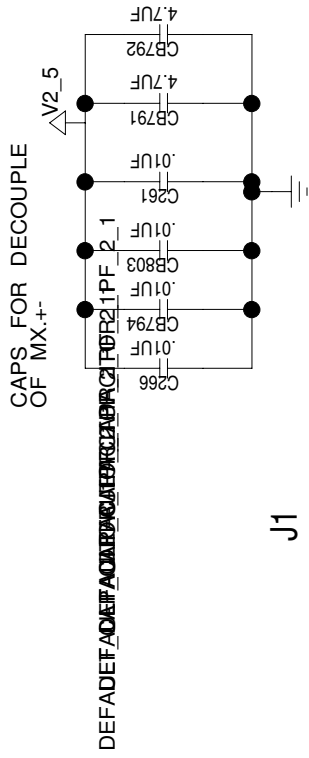
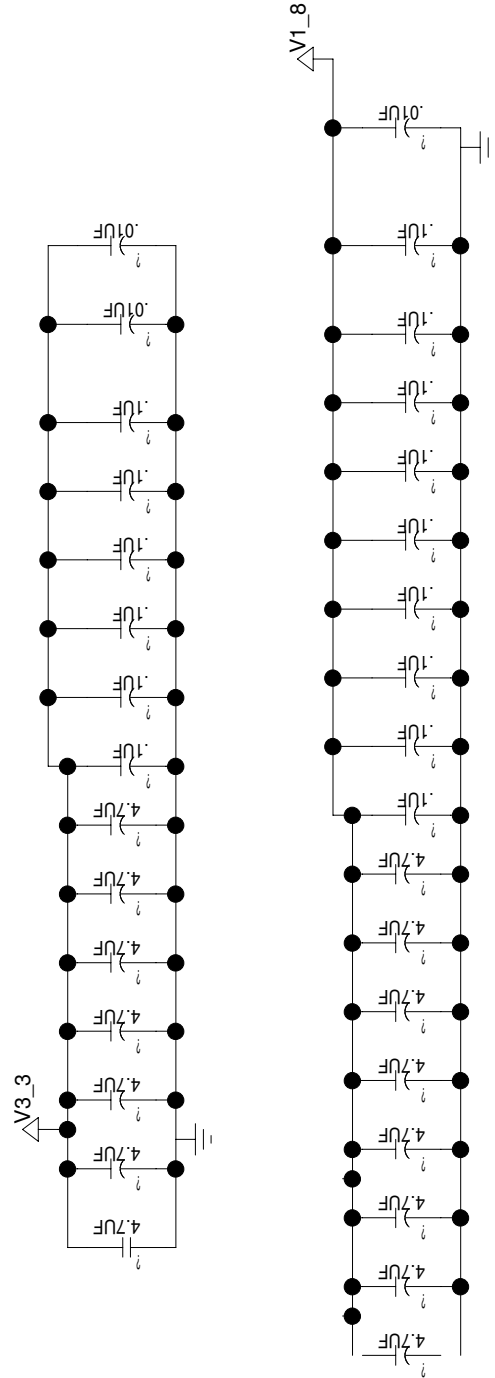
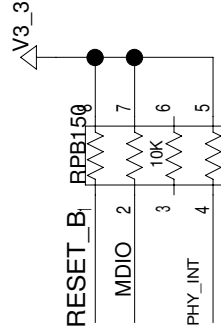


END OF GIGABIT PHY HIERARCHY BLOCK

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	2/2(BLOCK) 71/76(TOTAL)

8		7		6		5		4		3		2		1	
DUAL PHY CARD CONTENTS / INDEX															
ETHERNET PHY P.3,73-74,75-76 PHY CONNECTOR P.3,73															
I.M. CARD RECEPTICAL-CONNECTORS USED ON TOP OF ETHERNET CARD FOR CONNECTION TO MOTHERBOARD															
_phy_imbus_rc_dn															
DPH1_COL_DET															
DPH1_RXD<3..0>															
DPH1_RXDV															
DPH1_RX_CLK															
DPH1_RX_CRS															
DPH1_RX_ERR															
DPH1_TXD<3..0>															
DPH1_TX_CLK															
DPH1_TX_EN															
DPH2_COL_DET															
DPH2_RXD<3..0>															
DPH2_RXDV															
DPH2_RX_CLK															
DPH2_RX_CRS															
DPH2_RX_ERR															
DPH2_TXD<3..0>															
DPH2_TX_CLK															
DPH2_TX_EN															
REF_CLK															
OSC25M															
MDC															
MDIO															
RESET_B															
PHY_INT															
ETHERNET (LAN) CONNECTORS															
GMII_CLKFROM MAC															
GMII_TX_ER															
GMII_CLKTOMAC_BUF															
SPARE															
DPH2_TXD<0>															
DPH2_TXD<1>															
DPH2_TXD<2>															
DPH2_TXD<3>															
DPH2_TX_CLK															
DPH2_TX_EN															
DPH2_RXD<0>															
DPH2_RXD<1>															
DPH2_RXD<2>															
DPH2_RXD<3>															
DPH2_RX_CLK															
DPH2_RX_CRS															
DPH2_RX_ERR															
DPH2_TXD<3..0>															
DPH2_TX_CLK															
DPH2_TX_EN															
DPH_REF_CLK															
PY25MHZOSC															
DPH_MDC															
DPH_MDIO															
DPH_RESET_SYS															
DPH_PHY_INT															
DPH2_25MHZOSC															
DPH1_25MHZOSC															
RBPB143															
NC75Z86 U															
BUFFER															
UB70															
PY25MHZOSC															
V3_3															
V3_3															
GND															
TP19															
TP20															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															
V3_3															
GND															



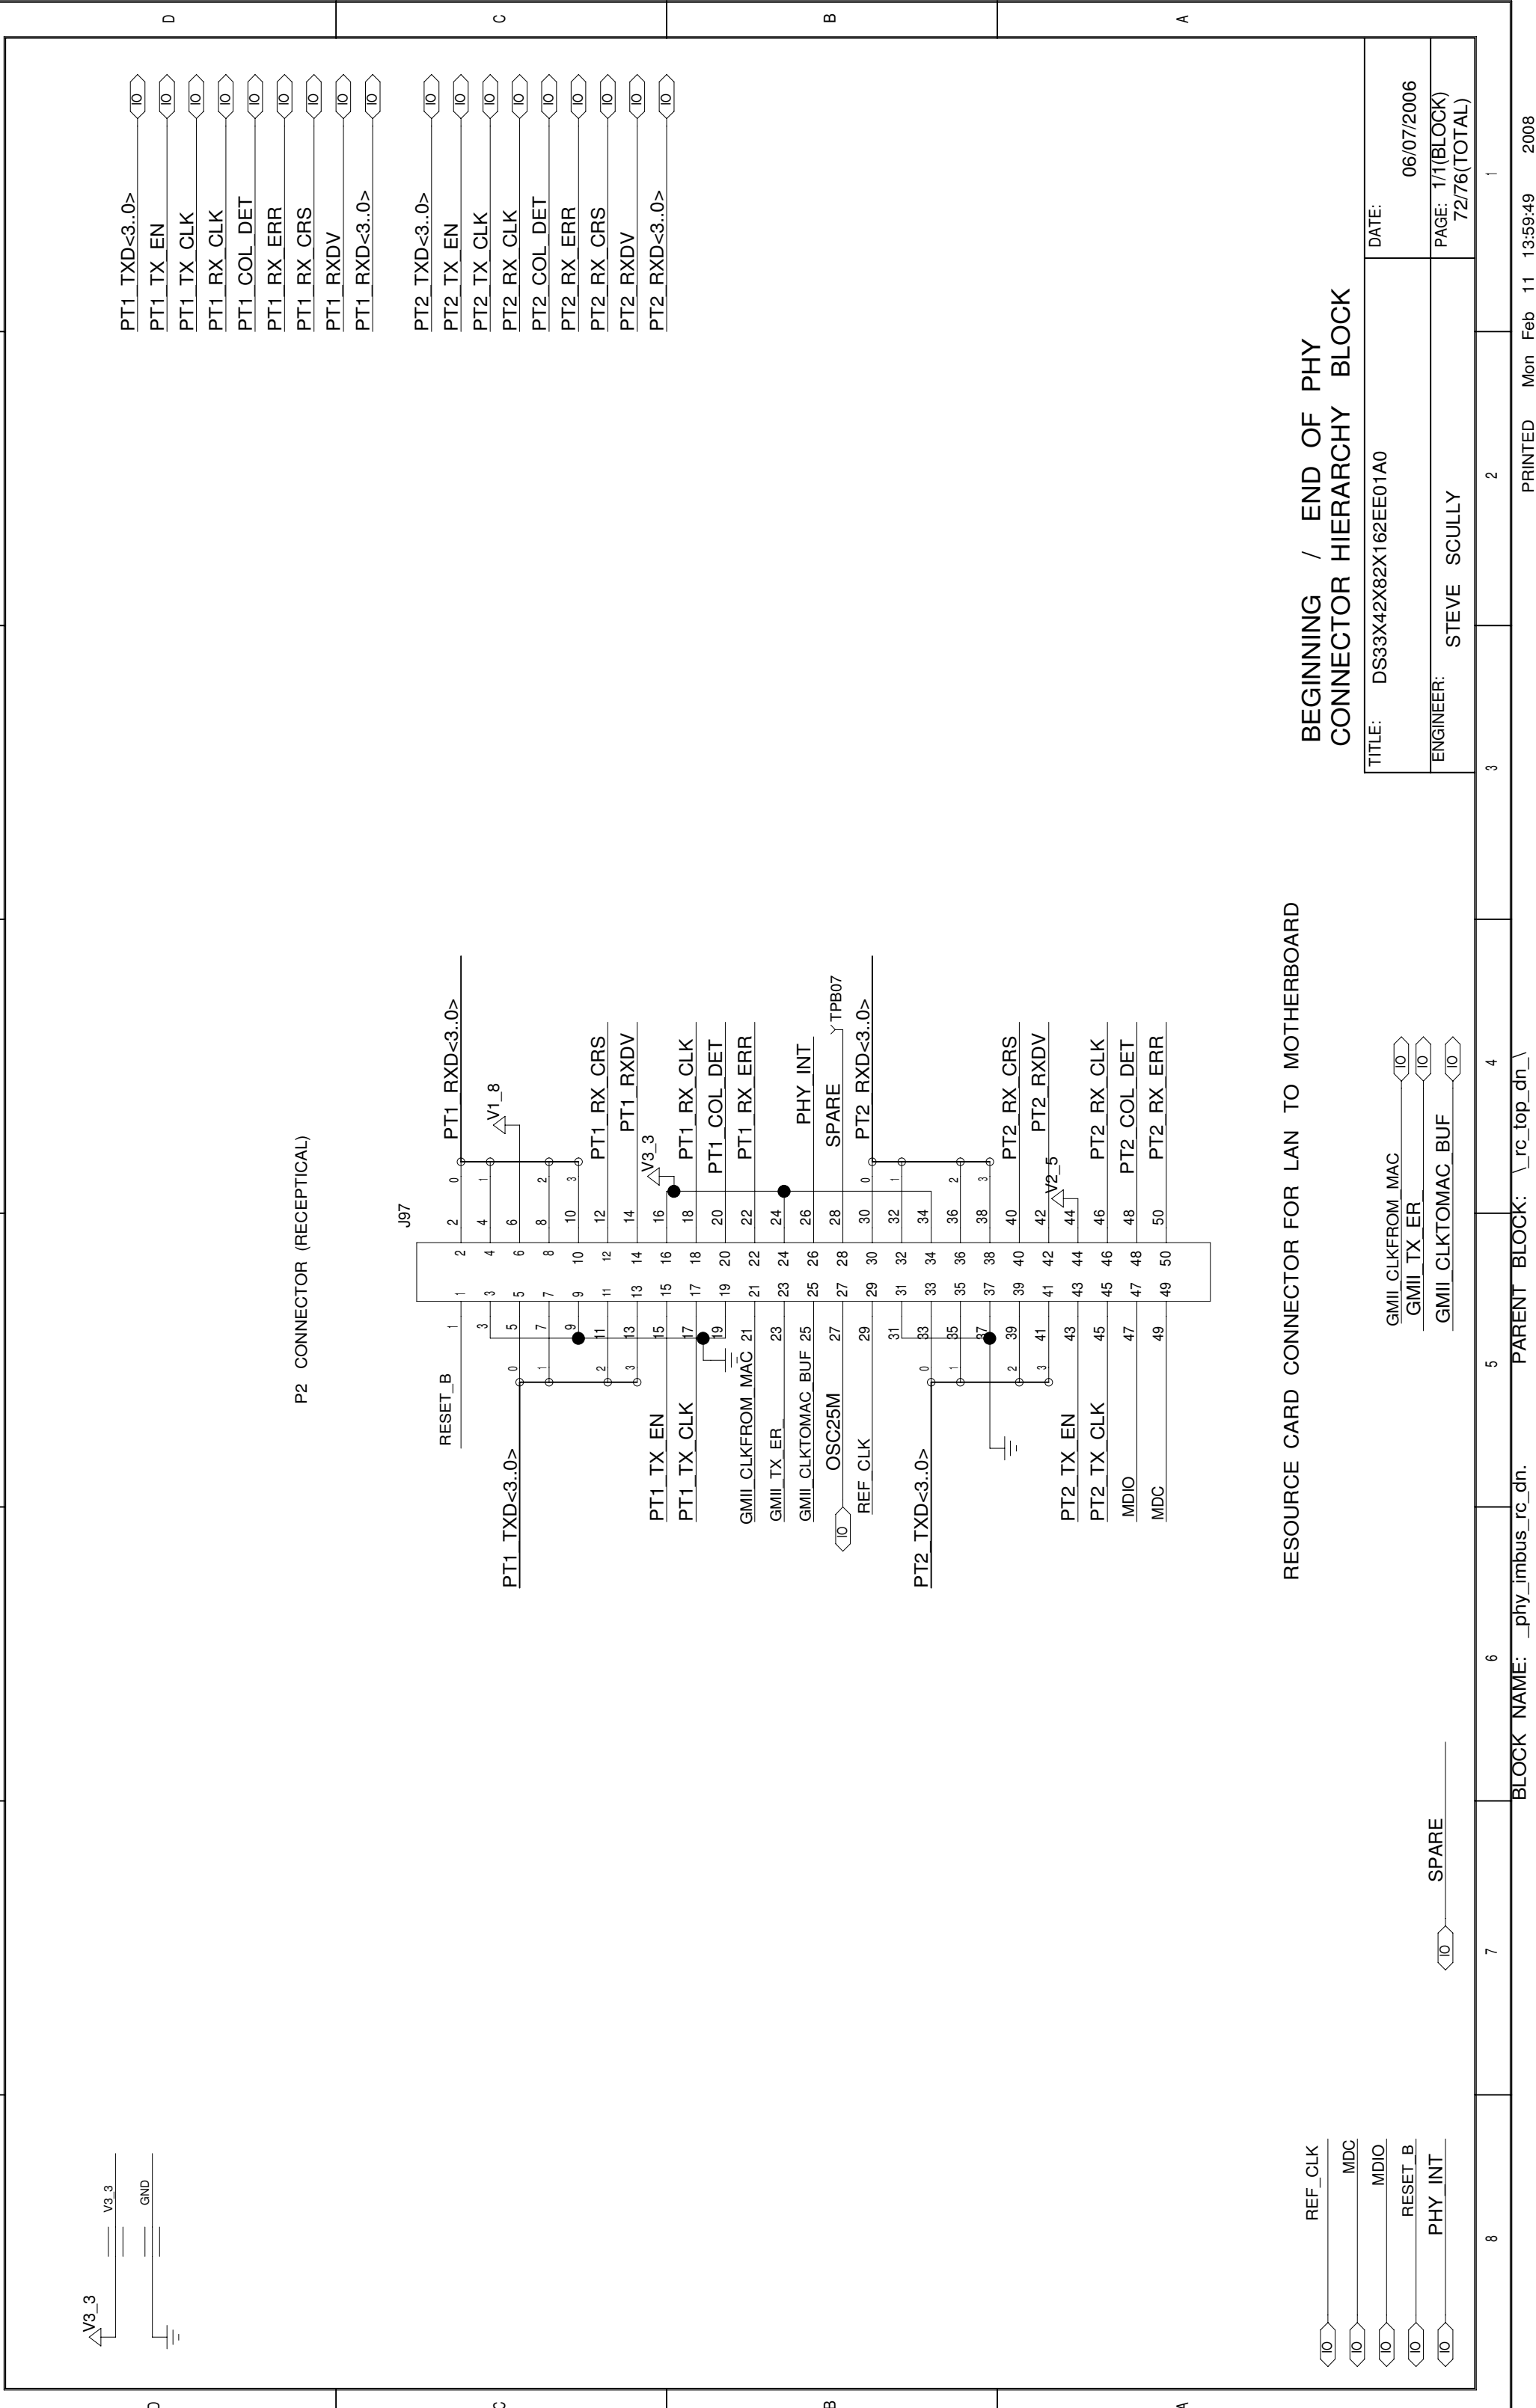


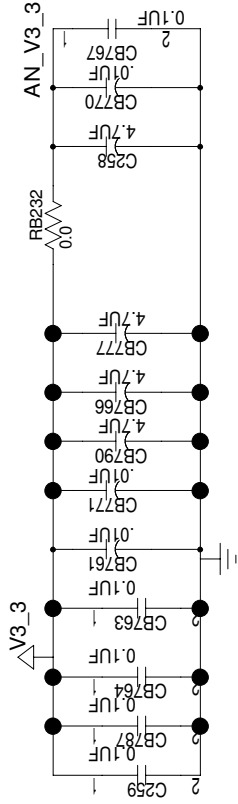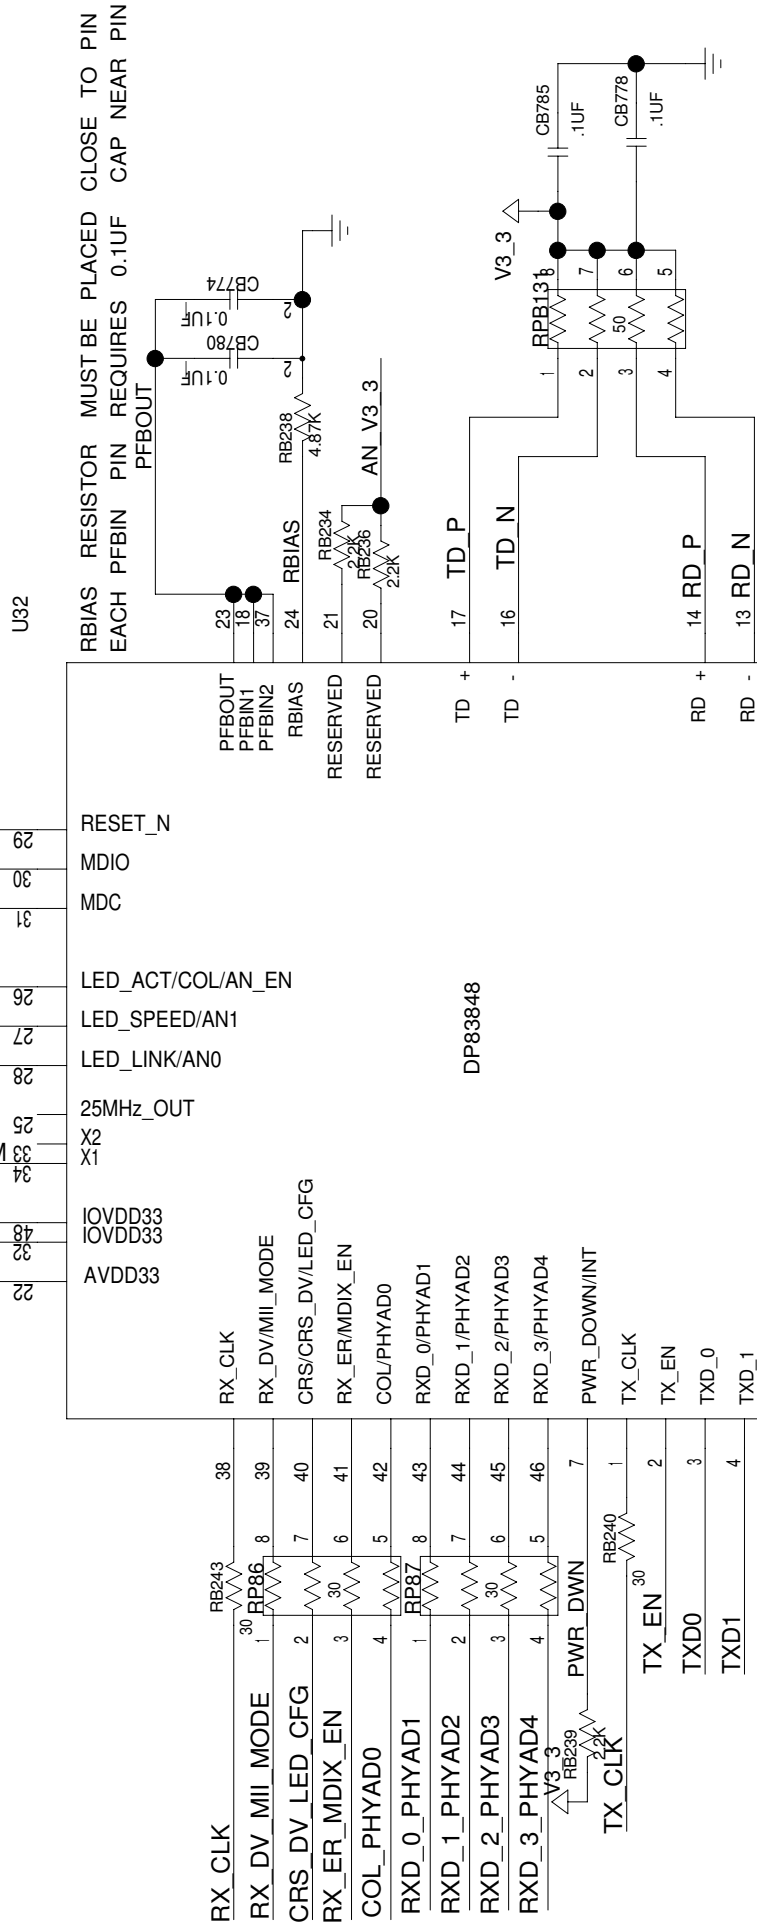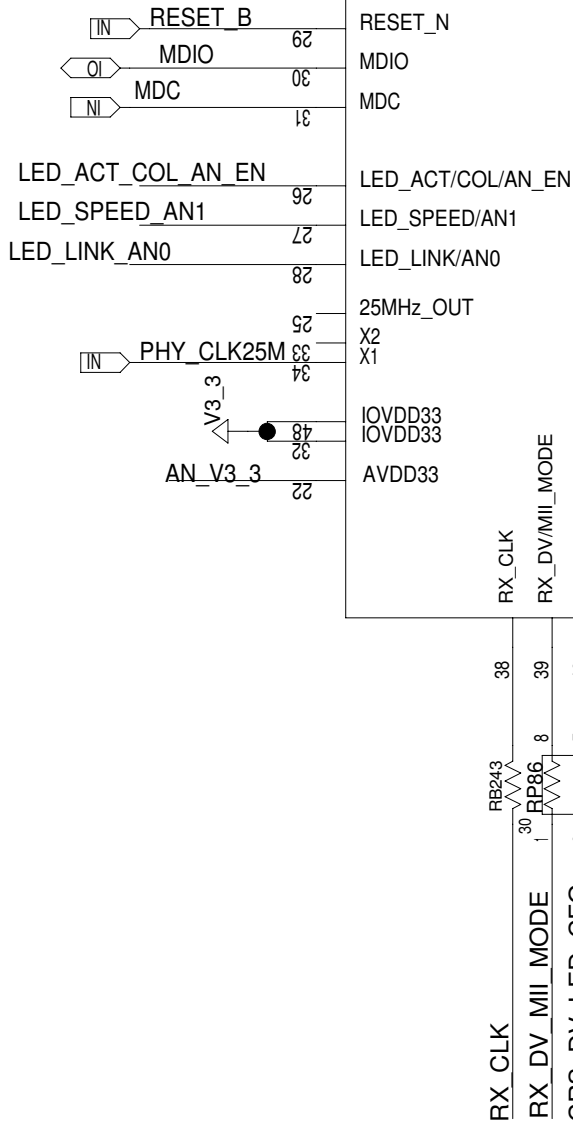

PLACEMENT NOTE:
TESTPOINTS (SHOWN ABOVE) MUST BE PLACED THE SAME FOR EACH PORT TO
ALLOW USE OF A DIFFERENT PHY CARD IF DESIRED. PLACEMENT SHOULD ALLOW
0.2" BETWEEN CONNECTORS.
ON Z44 CARD ALL 4 PORTS MUST BE PLACED WITH EQUAL SPACING AND A COMMON CENTER LINE

BEGINNING OF PHY HIERARCHY BLOCK






TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	1/2 (BLOCK) 73/76 (TOTAL)

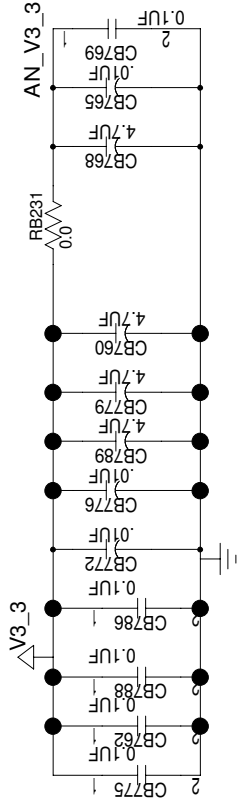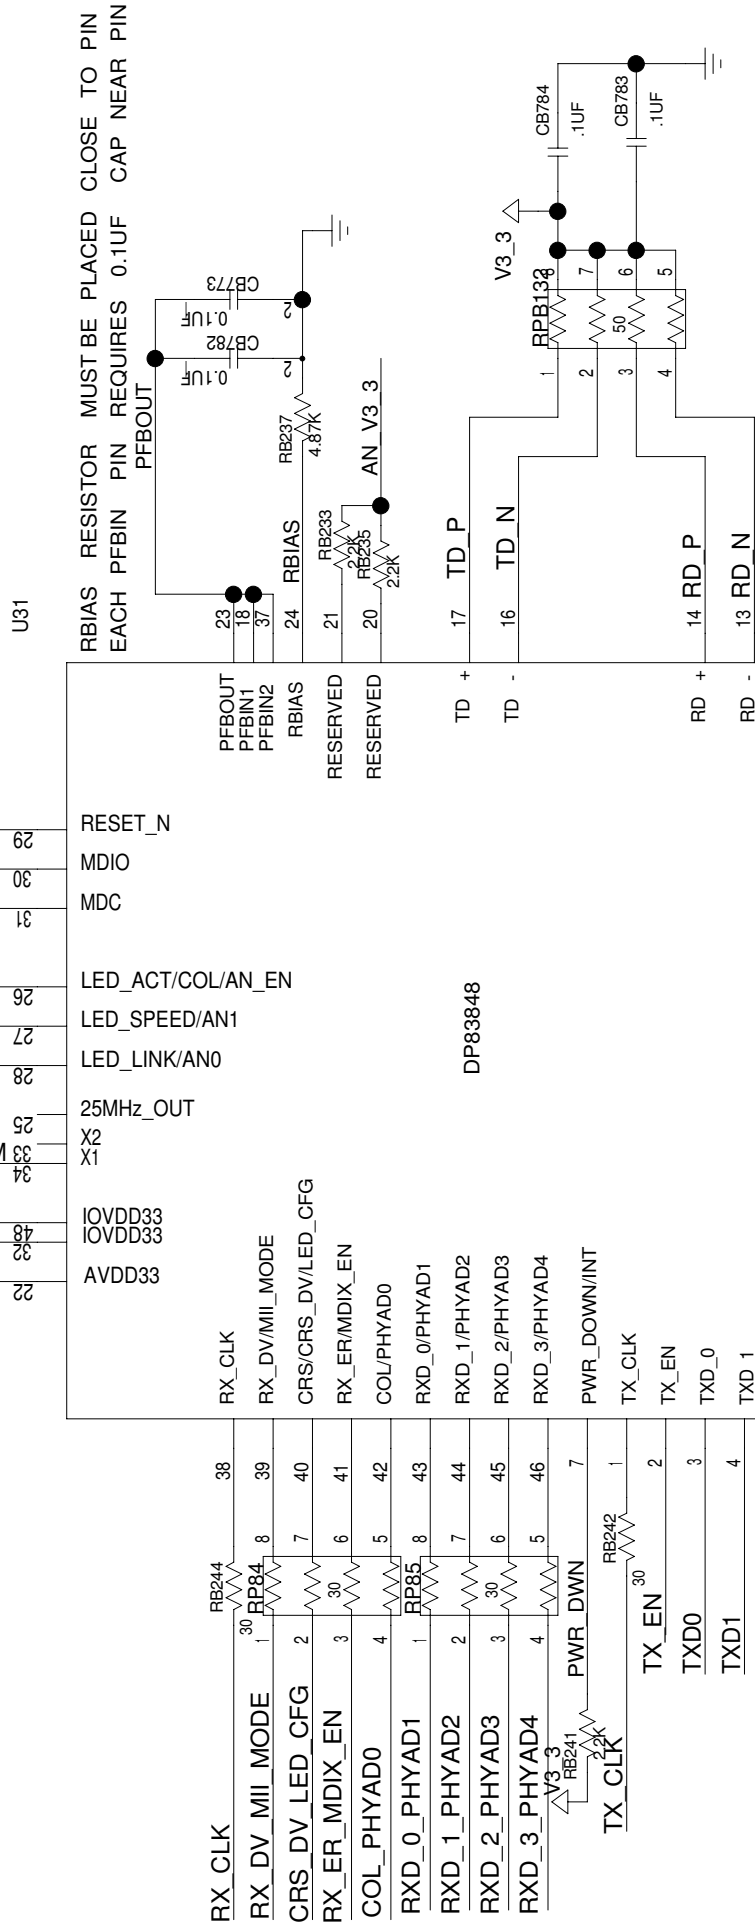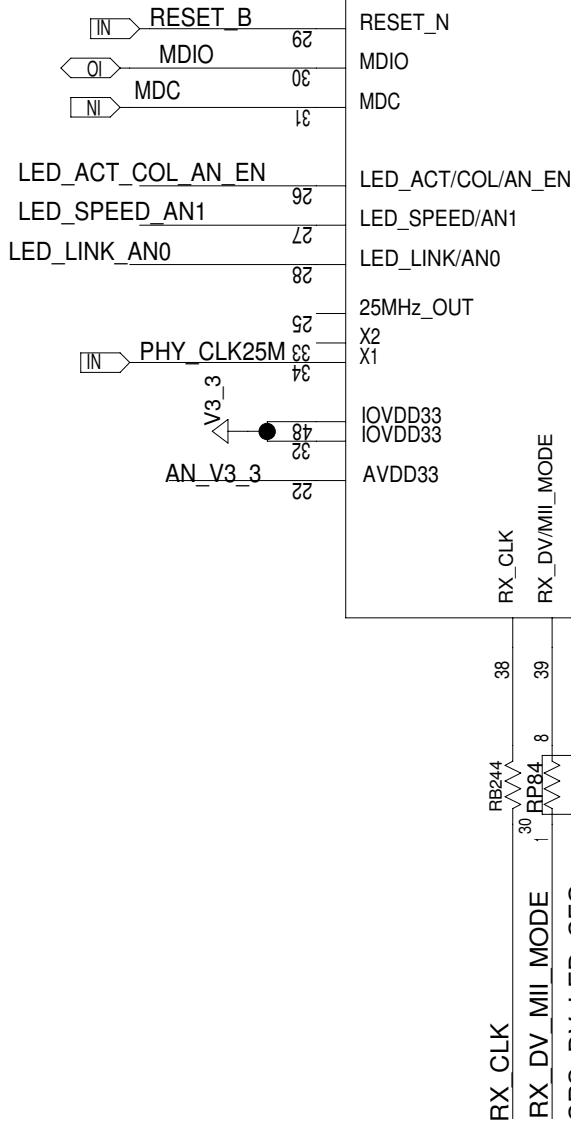

PLACEMENT NOTE:
TESTPOINTS (SHOWN ABOVE) MUST BE PLACED THE SAME FOR EACH PORT TO
ALLOW USE OF A DIFFERENT PHY CARD IF DESIRED. PLACEMENT SHOULD ALLOW
0.2" BETWEEN CONNECTORS.
ON Z44 CARD ALL 4 PORTS MUST BE PLACED WITH EQUAL SPACING AND A COMMON CENTER LINE

BEGINNING OF PHY HIERARCHY BLOCK

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	1/2 (BLOCK) 75/76 (TOTAL)

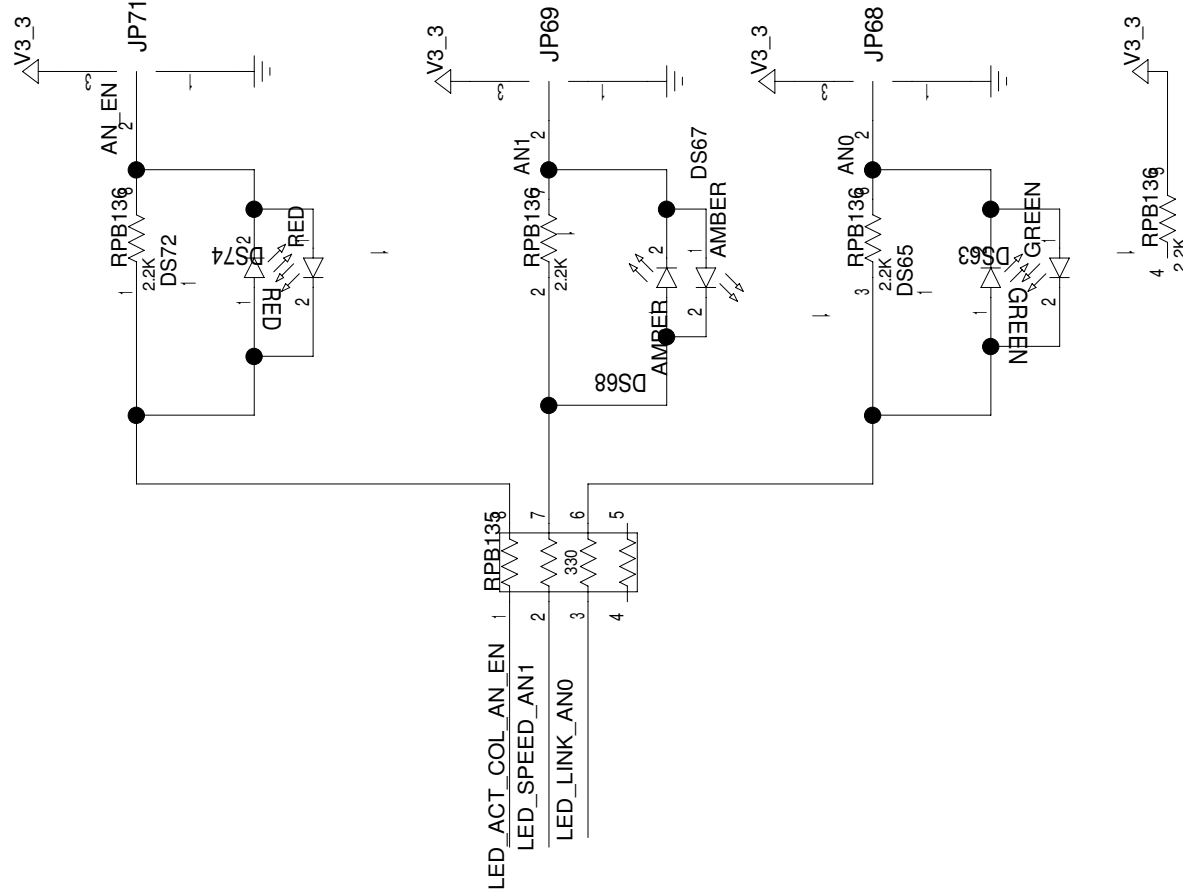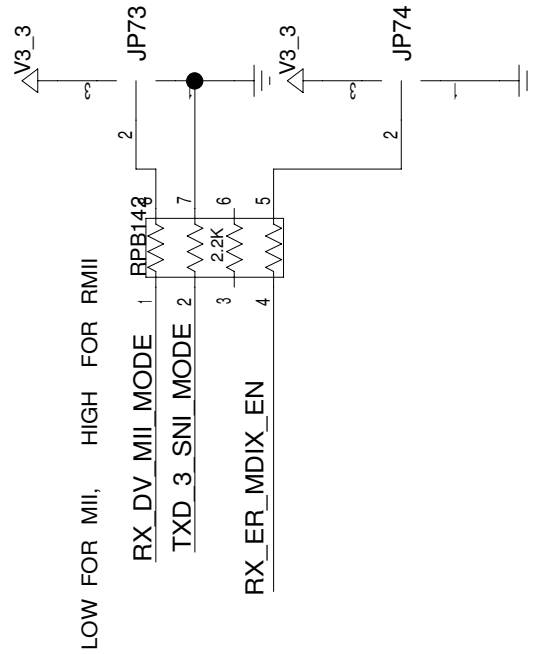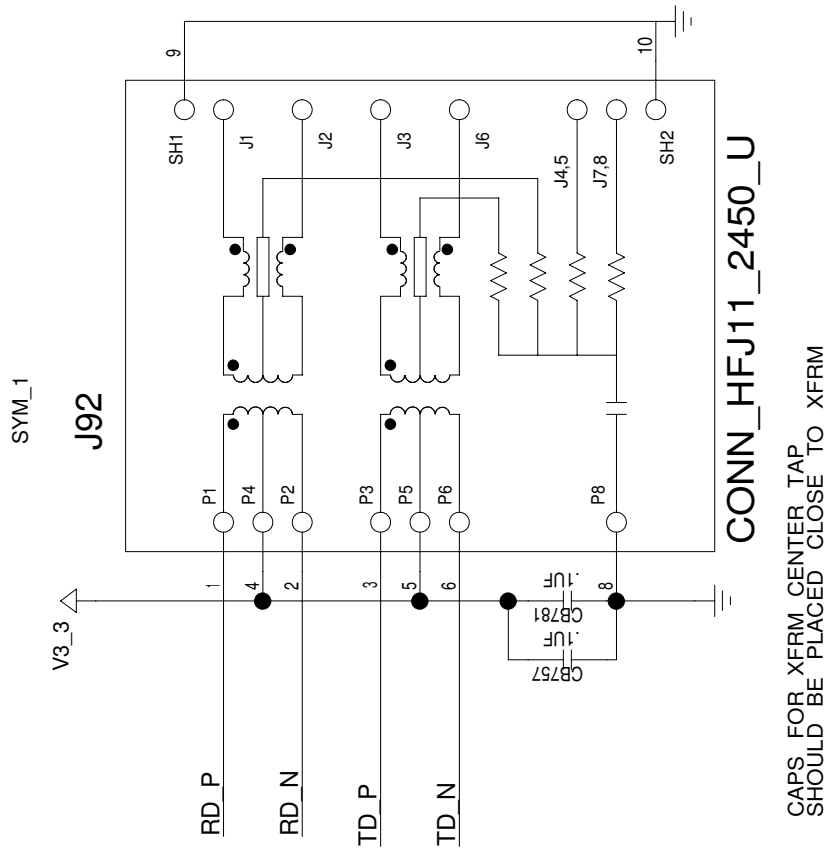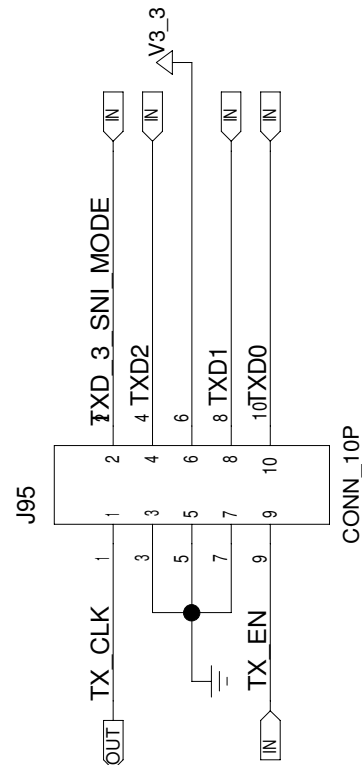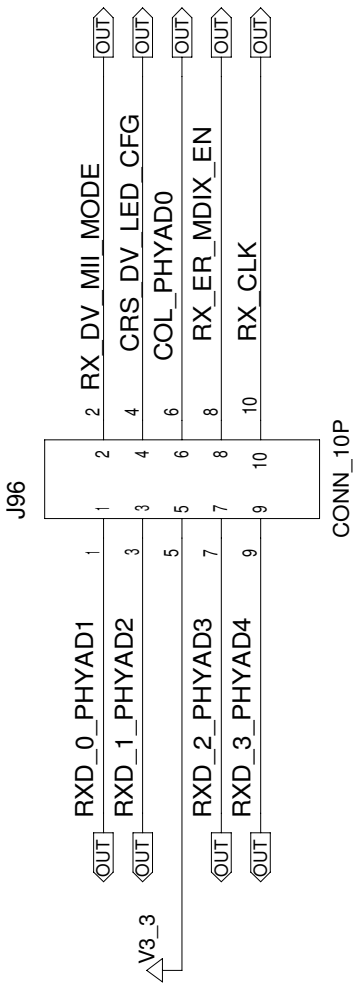

END OF PHY HIERARCHY BLOCK

TITLE:	DS33X42X82X162EE01A0	DATE:	06/07/2006
ENGINEER:	STEVE SCULLY	PAGE:	2/2(BLOCK) 76/76(TOTAL)

STRAP OPTIONS HERE DO NOT FOLLOW DATASHEET

ENSURE THAT SAME RPACK
IS USED FOR LED

BLOCK NAME: dp83848 wan dn.

PARENT BLOCK: \ rc top dn \

[illegible]

1