

TPS65279V Buck Converter Evaluation Module User's Guide



ABSTRACT

This document is provided with the TPS65279V PMIC evaluation module (EVM) as a supplement to the TPS65279V datasheet. This user's guide includes the schematic, hardware setup, software installation and bill of materials (BOM).

Table of Contents

1 Introduction	2
2 Background	3
3 TPS65279V Schematic	4
4 Board Layout	5
5 Bench Test Setup Conditions	8
5.1 Header Description and Jumper Placement	8
5.2 Hardware Requirement	9
5.3 Hardware Setup	9
5.4 Installing Software	10
5.5 Software Operation	11
6 Power-Up Procedure	12
7 TPS65279V EVM Bill of Materials	13
8 Revision History	14

List of Figures

Figure 3-1. TPS65279V Schematic	4
Figure 4-1. Component Placement (Top Layer)	5
Figure 4-2. Board Layout (Top Layer)	6
Figure 4-3. Board Layout (Second Layer)	6
Figure 4-4. Board Layout (Third Layer)	7
Figure 4-5. Board Layout (Bottom Layer)	7
Figure 5-2. USB Interface Adapter Quick Connection Diagram	10
Figure 5-3. Screen Capture of TPS65279V Software GUI Interface	11

List of Tables

Table 2-1. Summary of Performance	3
Table 5-1. Input/Output Connection	8
Table 5-2. Jumpers and Switches	9
Table 7-1. TPS65279V EVM Bill of Materials	13

Trademarks

Windows®, Microsoft®, and Internet Explorer® are registered trademarks of Microsoft Corporation.

VeriSign® is a registered trademark of VeriSign, Inc.

All trademarks are the property of their respective owners.

1 Introduction

This document presents the information required to operate the TPS65279V PMIC as well as the support documentation including schematic, layout, hardware setup, software installation and bill of materials.

2 Background

The TPS65279V PMIC is designed to provide dual 5 A of continuous currents with an operational range of 4.5 to 18 V. The TPS65279V features I²C controlled voltage identification (VID) and the output voltage can be set by I²C from 0.68 V to 1.95 V. Without I²C, voltage can also be programmed by an external resistor divider. The TPS65279V features externally programmed switching frequency ranging from 200 kHz to 1.6 MHz, external compensation, soft-start and enable.

As there are many possible options to set the converters, [Table 2-1](#) presents the performance specification summary for the EVM.

Table 2-1. Summary of Performance

Test Conditions	Performance
V _{in} = 4.5 V to 18 V	Buck1 : 1.0 V, up to 5 A, VID control
f _{sw} = 500 kHz (25°C ambient)	Buck2 : 1.1 V, up to 5 A, VID control

The EVM is designed to provide access to the features of the TPS65279V. Some modifications can be made to this module to test performance at different input and output voltages, current and switching frequency. Please contact TI Field Applications Group for advice on these matters.

3 TPS65279V Schematic

Figure 3-1 shows the TPS65279V PMIC EVM schematic.

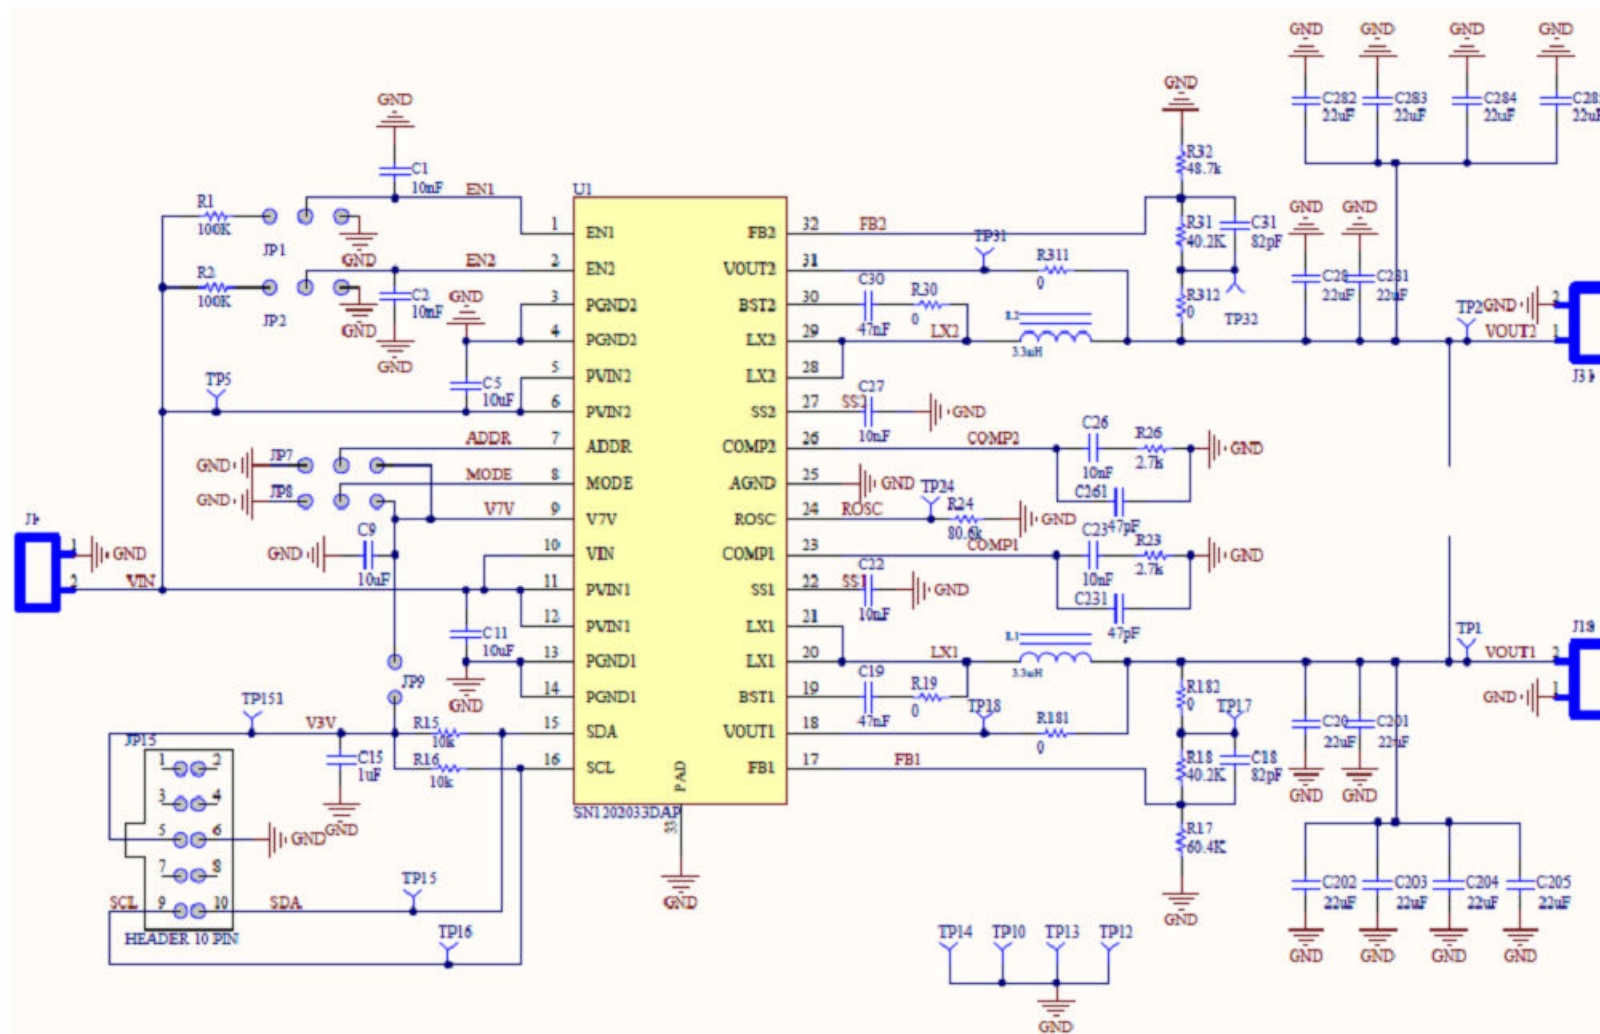


Figure 3-1. TPS65279V Schematic

4 Board Layout

Figure 4-1 through Figure 4-5 illustrate the printed-circuit boards for this EVM.

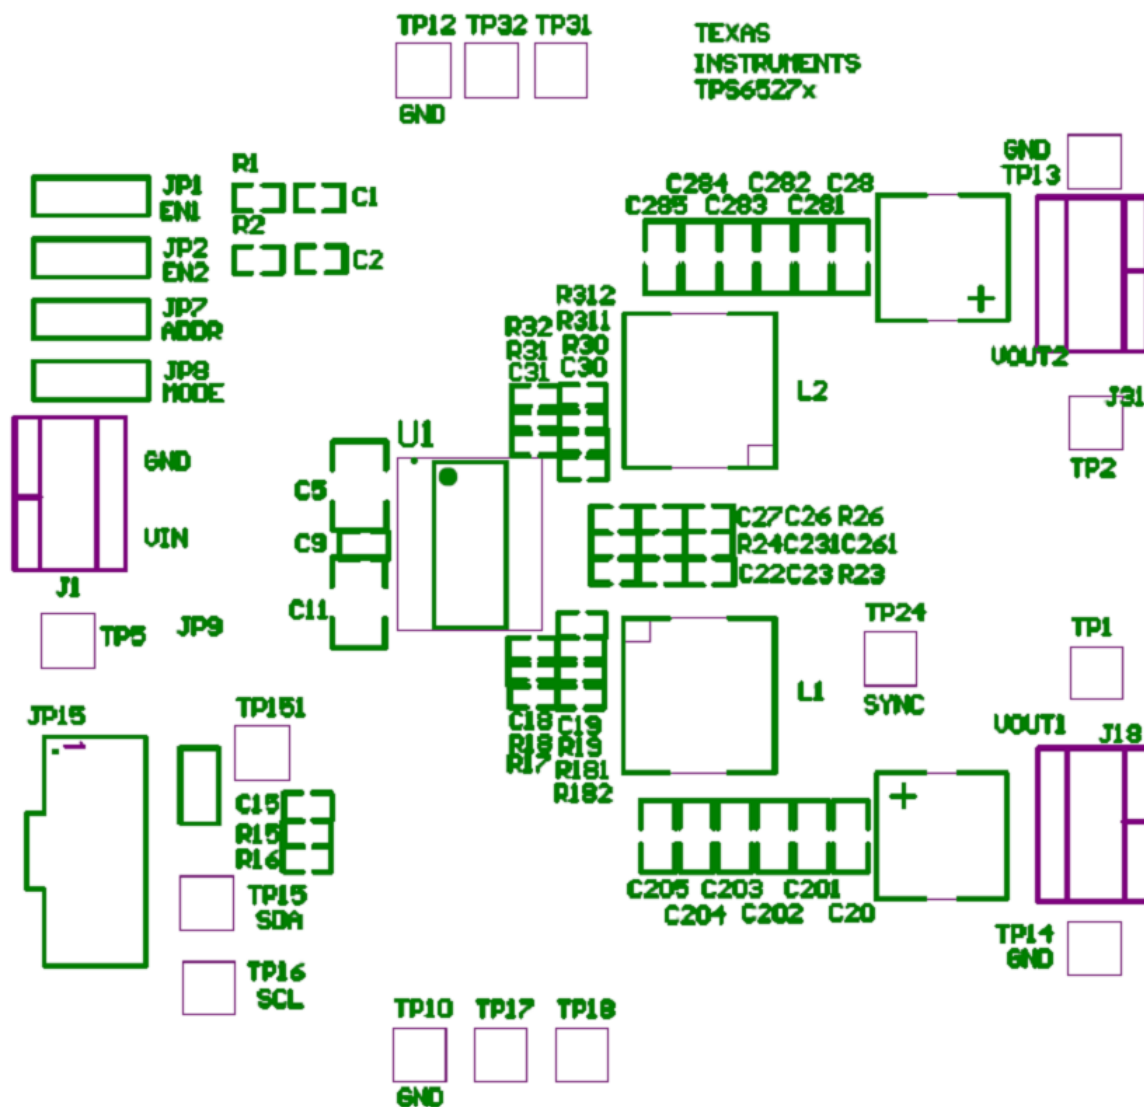


Figure 4-1. Component Placement (Top Layer)

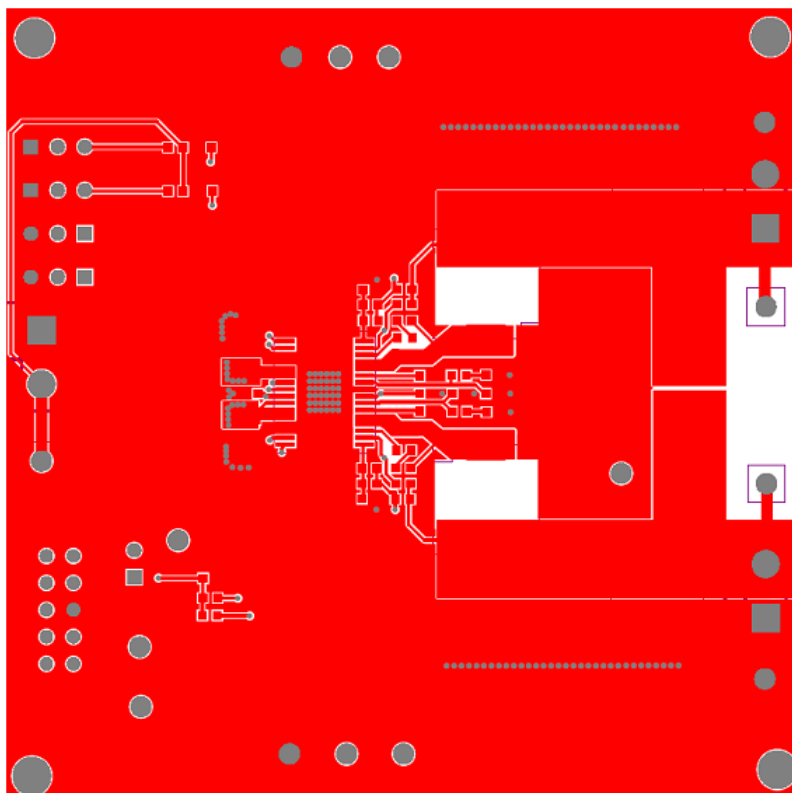


Figure 4-2. Board Layout (Top Layer)

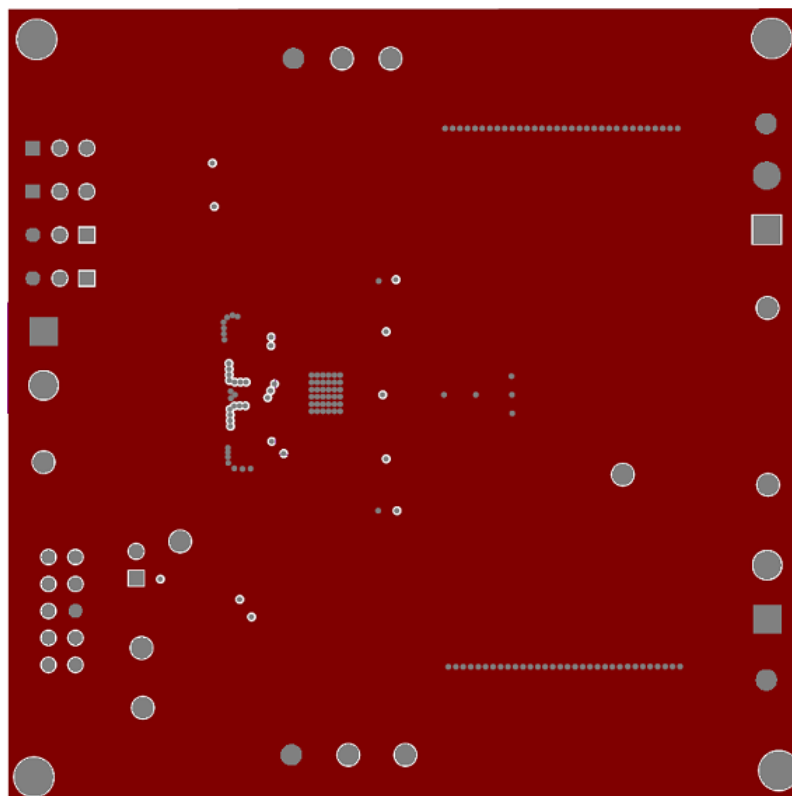


Figure 4-3. Board Layout (Second Layer)

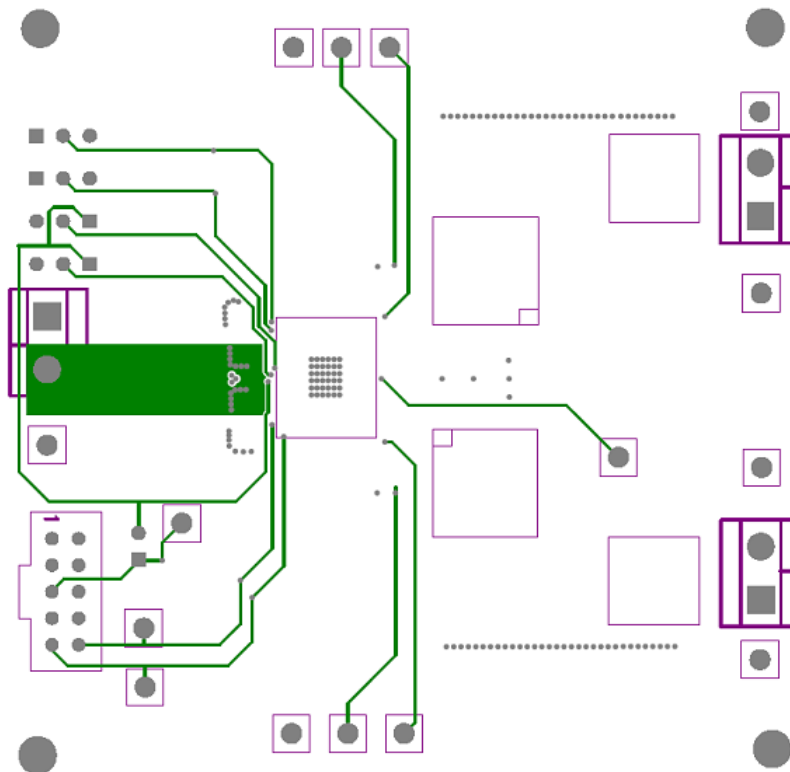


Figure 4-4. Board Layout (Third Layer)


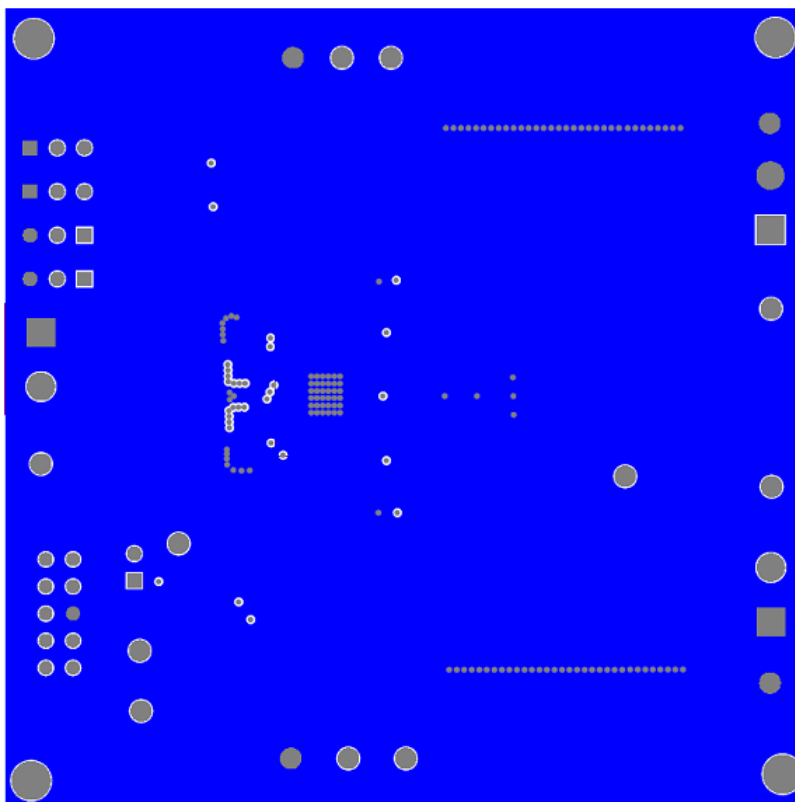


Figure 4-5. Board Layout (Bottom Layer)

5 Bench Test Setup Conditions

5.1 Header Description and Jumper Placement

Figure 5-1 illustrates the header description and jumper placement for the EVM.

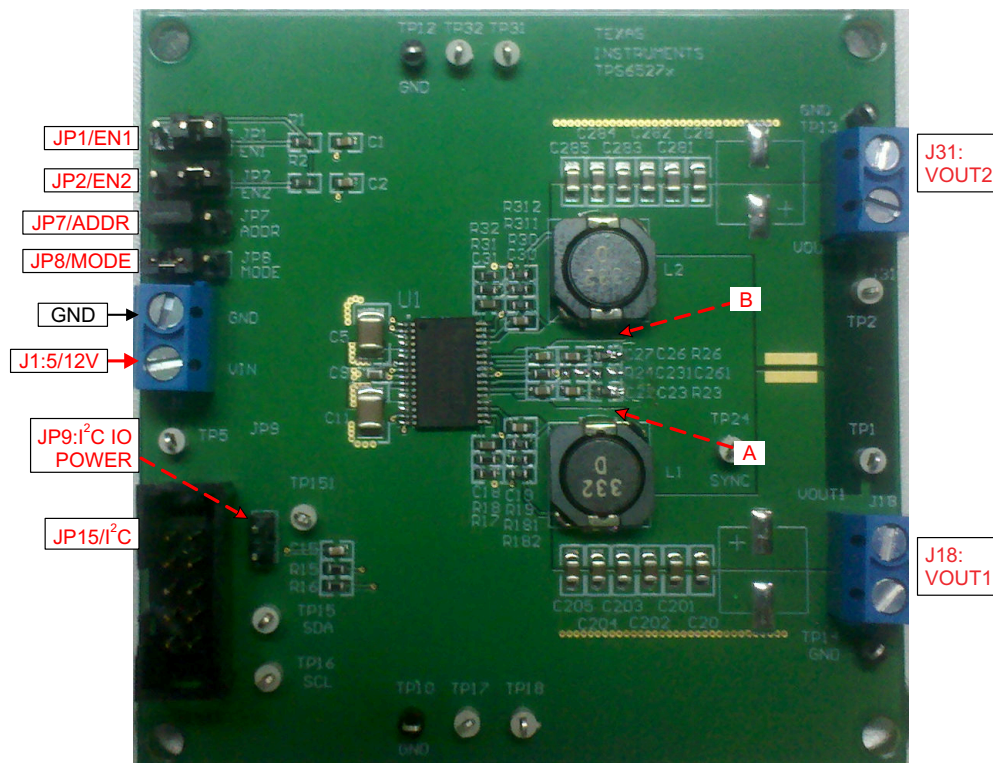

Test points:

A: LX of Vout1
B: LX of Vout2
Vout1, Vout2

Figure 5-1. Header Description and Jumper Placement

Table 5-1 shows the I/O connections for the EVM.

Table 5-1. Input/Output Connection

Jumper Number	Function	Description
J1	Vin Connector	Apply power supply to this connector
J18	Buck1 Connector	Output of Buck1
J31	Buck2 Connector	Output of Buck2

Table 5-2 shows the jumpers and switches for the EVM.

Table 5-2. Jumpers and Switches

Jumper Number	Function	Placement	Comment
JP1	Buck1 enable (EN1)	Connect EN1 to GND to disable Vout1, connect EN1 to Vin through a 100-k Ω resistor to enable Vout1; Leave open to enable Vout1	
JP2	Buck2 enable (EN2)	Connect EN2 to GND to disable Vout2, connect EN2 to Vin through a 100-k Ω resistor to enable Vout2; Leave open to enable Vout2	
JP7	I ² C address	I ² C address configuration pin. Connect this pin to GND to set address 0x60H; connect it to Vcc to set address 0x61H; leave it open to set address 0x62H	On board Vcc is 6.25 V
JP8	Mode	Operation mode control pin. Connect this pin to GND to set forced PWM mode; leave the pin open to set auto PSM-PWM; connect this pin to Vcc set the IC to run in current share mode.	
JP9	I ² C Power	Power connected to the I ² C IO pull-up resistor; Leave the two pins un-connected set the power to be 3.3V from the I ² C interface adaptor; short the two pins set the power to be Vcc.	On board Vcc is 6.25 V
JP15	I ² C interface connector	Pin 5 is 3.3 V from adaptor; pin 6 is Ground; pin 9 is SCL, pin 10 is SDA.	

5.2 Hardware Requirement

This EVM requires an external power supply capable of providing 4.5 V to 18 V at 7 A.

A function generator capable of driving the SYNC pin with 0.4- to 3.3-V amplitude and a 200-kHz to 1.6-MHz square wave signal is required for synchronization. The EVM kit includes a USB-TO-GPIO interface box which, when installed on a PC and connected to the EVM, allows communication with the EVM via a GUI interface. The minimum PC requirements are:

- Windows® 2000 or Windows XP operating system
- USB port
- Minimum of 30 MB of free hard disk space (100 MB recommended)
- Minimum of 256 MB of RAM

5.3 Hardware Setup

After connecting the power supply to J1, turn on the power supply, and connect JP1 to Vin through a 100-k Ω resistor, connect JP2 to Vin through a 100-k Ω resistor, connect JP7 to GND, connect JP8 to GND, the EVM will regulate the output voltages to the values shown in Table 2-1. Additional input capacitance may be required in order to mitigate the inductive voltage droop that may occur during a load transient event.

The output voltage is changed by sending the digital control signal via a PC running the TPS65279V controller software and USB-TO-GPIO interface box. Change the output voltage with the following steps:

- Connect one end of the USB-TO-GPIO box to the PC using the USB cable and the other end to JP15 of the TPS65279V using the supplied 10-pin ribbon cable as shown in Figure 5-2. The connectors on the ribbon cable are keyed to prevent incorrect installation.
- Connect the power supply on J1, and turn on the power supply.
- Run the software as explained in the next section.

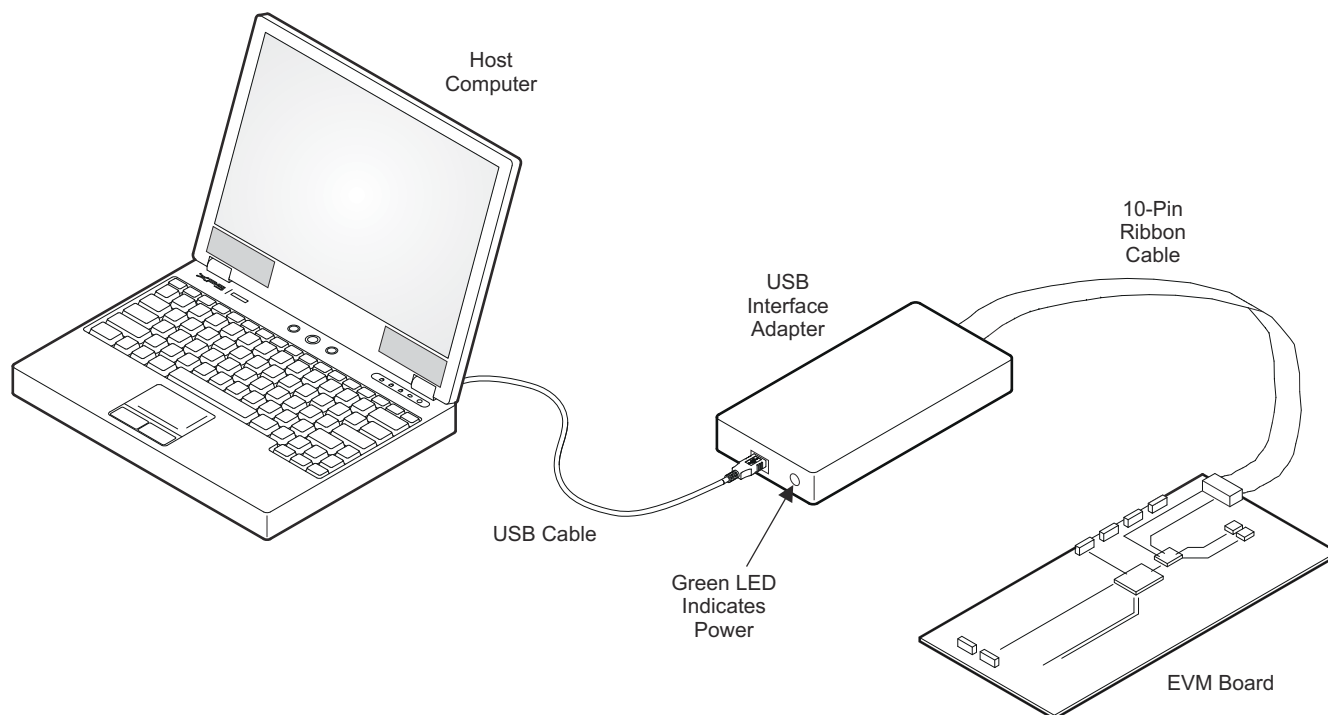


Figure 5-2. USB Interface Adapter Quick Connection Diagram

5.4 Installing Software

If installing from the TI Web site, go to www.ti.com.

Note: This installation page is best viewed with the Microsoft® Internet Explorer® browser (It may not work correctly with other browsers)

Click on the install button; your PC should give you a security warning and ask if you want to install this application. Select Install to proceed. If a pre-release or Beta version is currently installed on your PC, you must uninstall this version of the software before installing the final version.

To run the software after installation, go to Start → All programs → Texas Instruments → TPS65279V EVM Software.

At start-up, the software first checks the firmware version of the USB-TO-GPIO adapter box. If an incorrect firmware version is installed, the software automatically searches on the internet (if connected) for updates. If a new update is available, the software gives notification of the update, and downloads and installs the software. Note that after the firmware is updated the USB cable between the adapter and PC must be disconnected and then reconnected, as instructed during the install process. The host PC software also automatically searches on the internet (if connected) for updates. If a new update is available, the software gives notification of the update and downloads and installs it. During future use of the software, a prompt may be given to install a new version, if one becomes available.

Note

VeriSign® Code Signing is used to prevent any malicious code from changing this application. If at any time in the future the binaries are modified, the code will no longer attempt to run.

5.5 Software Operation

This section provides descriptions of the EVM software.

The supplied software is used to communicate with the TPS65279V EVM. Click on the icon on the host computer to start the software. The software displays the main control panel for the user interface (Figure 5-3).

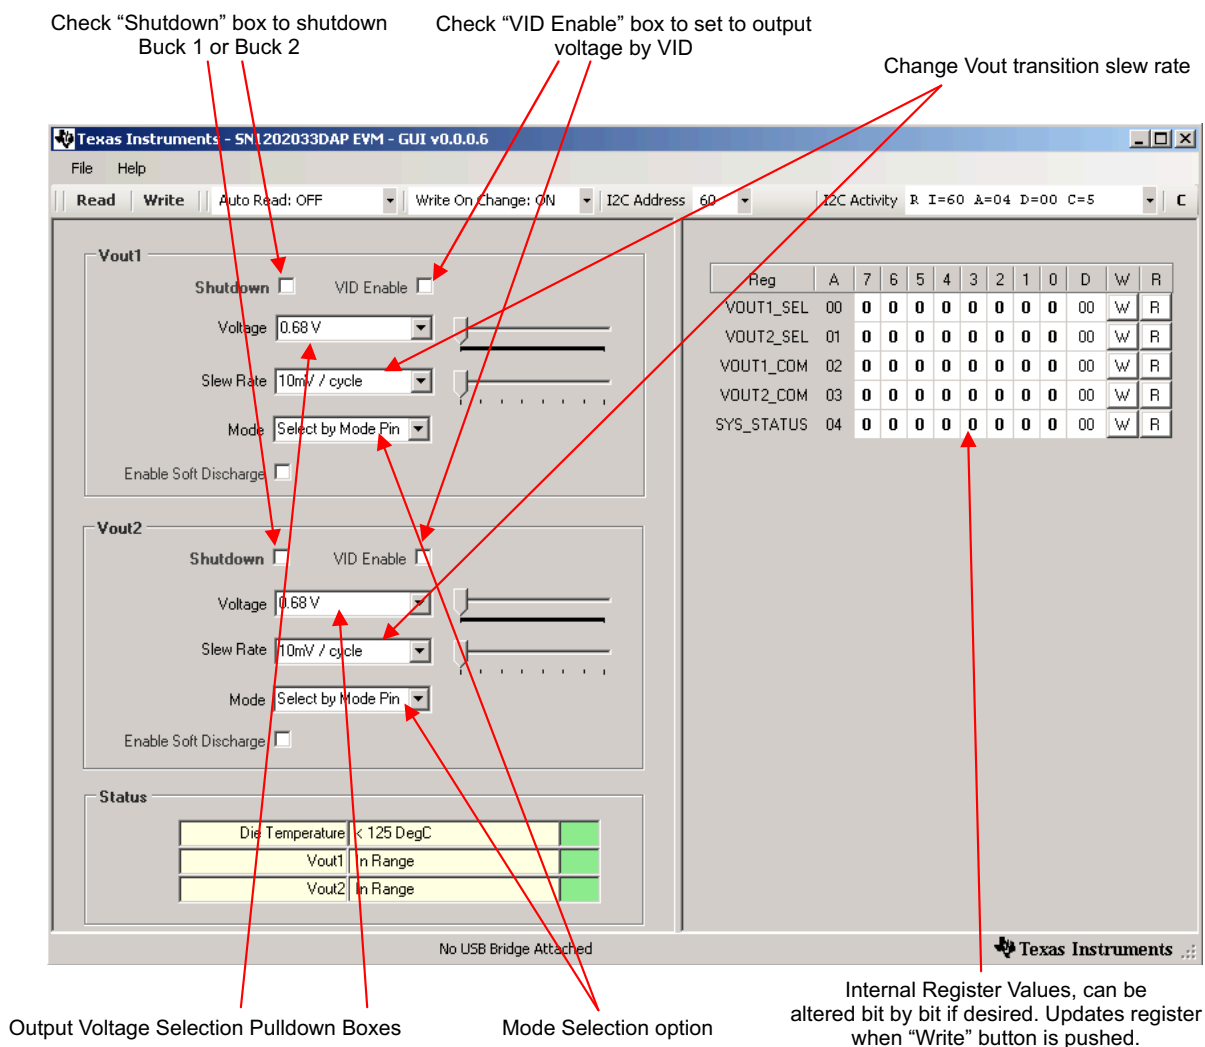


Figure 5-3. Screen Capture of TPS65279V Software GUI Interface

Figure 5-3 shows the GUI control interface. There are five 8-bit registers embedded in TPS65279V, two to select the output voltage, two to configure the buck converter's operation, and one for status feedback. Changes are made by selecting and checking the components in the GUI on the left hand side and can also be made by directly clicking the bits of each register. I²C address is set to default 0x60H, this address is corresponding to the EVM jumper JP7 to connect to GND. Changing the I²C address requires that the EVM be configured accordingly.

An option is to "write on change", if this option is set to ON, any change is sent to the EVM immediately; if this option is set to OFF, "Write" button or "W" button for each register must be clicked to send the control signal.

Register values can be read back from the EVM by clicking "Read" or "R" for each register.

6 Power-Up Procedure

Use the following steps to power-up the EVM:

1. Connect I²C adaptor to JP15
2. Apply 4.5 V to J1
3. Toggle JP1 or JP2 to enable Vout1 and Vout2, respectively
4. Apply loads to the output connectors.

7 TPS65279V EVM Bill of Materials

Table 7-1 is the BOM for the EVM.

Table 7-1. TPS65279V EVM Bill of Materials

#	Value	Qty	Designator	Footprint	MFG	MFG Part Number	Description
1	10nF	2	C1, C2	0603	Generic		CAP 10nF 50V CERAMIC X7R 0603
2	10nF	4	C22, C23, C26, C27	0603	Generic		CAP 10nF 50V CERAMIC X7R 0603
3	10uF	2	C5, C11	1210	Panasonic -ECG	ECJ-4YB1E106M	CAP 10UF 25V CERAMIC X5R 1210
4	10uF	1	C9	0603	Panasonic -ECG	ECJ-1VB1A106M	CAP 10UF 10V CERAMIC X5R 0603
5	1uF	1	C15	0603	Generic		CAP 1UF 10V CERAMIC X5R 0603
6	82pF	2	C18, C31	0603	Generic		CAP 82pF 50V CERAMIC X7R 0603
7	47nF	2	C19, C30	0603	Generic		CAP 47nF 50V CERAMIC X7R 0603
8	22uF	12	C20, C28, C201, C202, C203, C204, C205, C281, C282, C283, C284, C285	0805	TDK	C2012X6S0J226M	CAP CER 22UF 6.3V 20% X6S 0805
9 ⁽³⁾	470uF	DNI	C204, C284	E_CAP_D8_L6.7	Nichicon	RHA0J471MCN1GS	CAP ALUM 470UF 6.3V 20% SMD
10	47pF	DNI	C231, C261	0603	Generic		CAP 47pF 50V CERAMIC X7R 0603
11 ⁽³⁾	ED500/2DS	3	J1, J18, J31	TB_2X5.0MM	OnShore Technology Inc	ED500/2DS	Terminal Block, 2-pin, 15-A, 5.0mm
12	HEADER 3 PIN	4	JP1, JP2, JP7, JP8	JMP0.3	Mil-Max	800-10-064-10-001000	Three Pin Header
13	HEADER 2 PIN ⁽⁴⁾	1	JP9	JMP0.2	Mil-Max	800-10-064-10-001000	Two Pin Header
14	HEADER 10 PIN ⁽⁵⁾	1	JP15,	HEADER10	3M	N2510-6002-RB	Ten Pin Header
15	3.3uH	2	L1, L2	IND3	Coilcraft	MSS1048-332NLB	SMT power inductor
16	100K	2	R1, R2	0603	Generic		RES 100k OHM 1/10W 1% 0603 SMD
17	100K	1	R24	0603	Generic		RES 100k OHM 1/10W 1% 0603 SMD
18	10k	2	R15, R16	0603	Generic		RES 10k OHM 1/10W 1% 0603 SMD
19	60.4K	1	R17	0603	Generic		RES 60.4k OHM 1/10W 1% 0603 SMD
20	40.2K	2	R18, R31	0603	Generic		RES 40.2k OHM 1/10W 1% 0603 SMD
21	0	6	R19, R30, R181, R182, R311, R312	0603	Generic		RES 0 OHM 1/10W 1% 0603 SMD
22	3.74k	2	R23, R26	0603	Generic		RES 3.7k OHM 1/10W 1% =0603 SMD
23	48.7k	1	R32	0603	Generic		RES 48.7k OHM 1/10W 1% 0603 SMD
24	Test Point White	11	TP1, TP2, TP5, TP15, TP16, TP17, TP18, TP24, TP31, TP32, TP151	TP	Keystone	5002	TEST POINT PC MINI .040"D WHITE
25	Test Point Black	4	TP10, TP12, TP13, TP14	TP	Keystone	5001	TEST POINT PC MINI .040"D BLACK
26 ⁽²⁾		4					Jumper, 2.54mm, applied on item 13
27 ⁽¹⁾		4			3M	SJ-5303 (CLEAR)	BUMPON HEMISPHERE .44X.20 CLEAR
28		1	U1		Texas Instruments	TPS65279V	

- (1) Install item 27 on bottom at corners
- (2) Install item 26 on item 13 no order - be consistent
- (3) Item 9, 11: optional
- (4) Item 13: split into 3 pins
- (5) Item 14: split into 2 pins

8 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Revision * (February 2013) to Revision A (May 2021)	Page
• Updated user's guide title.....	2
• Updated the numbering format for tables, figures, and cross-references throughout the document.	2

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on [ti.com](#) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2022, Texas Instruments Incorporated