

Smart Charger/Calibrator Specification

Document Number

DS136A

Description

Smart Charger/Calibrator Electronics

Inspired Energy Part Number

CH5000

Statement Of Confidentiality

The information contained within this document is confidential and proprietary to Inspired Energy, Inc. This information should not, in whole or in part, be reproduced, disclosed or used except as expressly and duly authorized by Inspired Energy, Inc.

<p>This information is descriptive only. No representation, guarantee or warranty of merchantability or fitness for purpose is made or implied. Specifications are subject to change without notice.</p>
--



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

TABLE OF CONTENTS

1. REVISION HISTORY	4
2. INTRODUCTION	4
2.1. SCOPE	4
2.2. SMART CHARGER/CALIBRATOR OVERVIEW	4
2.3. GENERAL PRECAUTIONS	5
2.3.1. Handling	5
2.3.2. Charge & Discharge	5
2.3.3. Storage	5
3. REQUIREMENTS	5
3.1. GENERAL REQUIREMENTS	5
3.1.1. Input Power	5
3.1.2. Power-On-Reset	5
3.1.3. Operation	5
3.1.4. Storage	5
3.1.5. Terminal Specifications	6
3.2. CHARGER/CALIBRATOR ELECTRONICS	6
3.2.1. Overview Of Operation	6
3.2.2. DC Specifications	7
3.2.3. Charging	7
3.2.4. Calibration	7
3.2.5. What is recalibration & why is it needed?	8
3.2.6. Regulation/Measurement Accuracy	9
3.2.6.1. Voltage	9
3.2.6.2. Current	9
3.2.7. LED Indication	9
3.3. SMBUS AND SBDS PARAMETERS	9
3.3.1. Overview Of Operations	9
3.3.2. SMBus Logic Levels	9
3.3.3. Communication Protocol	10
3.3.4. Initialization Procedure	10
3.3.4.1. Write Word	10
3.3.4.2. Read Word	10
3.3.4.3. Block Read	11
3.3.5. Charger To Battery Message	11
3.3.6. Battery To Charger Messages	11
3.3.7. Critical Messages	12
3.4. MECHANICAL SPECIFICATIONS	13
3.4.1. Weight	13
3.4.2. Mating Connector	13
3.4.3. Date Code	13
3.4.4. Mechanical Drawing	13
3.5. ENVIRONMENTAL/SAFETY SPECIFICATIONS	15
3.5.1. EMC And Safety	15



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

3.6. RELIABILITY	15
3.6.1. Warranty.....	15



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

1. REVISION HISTORY

Revision	Release Date	Revisions	Issued By	Approved By
0.1	2/17/05	Discussion Only.	RAH	
0.2	5/21/08	Corrected calibration retry language.	RAH	DB
1.0	5/21/08	Release.	RAH	DB, LJ

2. INTRODUCTION

2.1. Scope

This specification describes the physical, functional and electrical characteristics of a smart charger/calibrator supplied by Inspired Energy. This specification is the interface document between Inspired Energy and its customers. It is understood that the customer may create their own internal specification. However, this specification is the master that defines the charger/calibrator's operation. The charger/calibrator produced will meet this specification.

2.2. Smart Charger/Calibrator Overview

This specification describes the physical, functional and electrical requirements for the CH5000 Smart Charger/Calibrator assembly.

The CH5000 is capable of communicating with battery through the System Management Bus (SMBus) and is fully SMBus Rev. 1.0, SBDS Rev. 1.0 and SCDS Rev. .95 compliant.

Redundant safety protection is provided by constant communications between the battery and charger and by monitoring the battery on-board thermistor. In addition, the charger has passive over current protection and active current monitoring of current to the battery as well as current being sourced at its input.



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

2.3. General Precautions

2.3.1. Handling

- Avoid shorting.
- Do not immerse in water.
- Do not disassemble or deform.
- Avoid excessive physical shock or vibration.
- Never cover/block the fan exhaust or obstruct the airflow, as this will cause overheating.

2.3.2. Charge & Discharge

- Never use a charger or battery that appears to have suffered abuse.
- Only approved batteries should be charged/calibrated.
- Never use a modified or damaged battery or charger.
- Specified product use only.
- Caution – during recalibration the battery connector and base of the charger may become warm.

2.3.3. Storage

- Store in a cool, dry and well-ventilated area.

3. REQUIREMENTS

3.1. General Requirements

3.1.1. Input Power

The input power should comply to the following parameters: 24V, 60W.

3.1.2. Power-On-Reset

The LEDs will flash for 1 second on charger power up.

3.1.3. Operation

Operational Temperature Limits: 0°C to +50°C, ≤ 80%RH

3.1.4. Storage

Storage Temperature Limits: -20°C to +80°C, ≤ 80%RH

The Smart Charger/Calibrator should be stored in an environment with low humidity, free from corrosive gas.



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

3.1.5. Terminal Specifications

J1 pin assignments (also refer to the mechanical drawing for additional details).

Terminal	Legend	Description
1	(+)	24V DC input.
2	(-)	DC GND input.

J2 pin (also refer to the mechanical drawing for additional details).

Terminal	Legend	Description
1A,1B	(+)	DC Positive to battery.
2A,2B	(C)	SMBus Clock.
3A,3B	(D)	SMBus Data.
4A,4B	(THM)	Thermistor connection to battery.
5A,5B	(-)	DC Negative to battery.

- The SMBus Clock and data lines will be pulled up by the charger to a nominal 5V Vdd. Typically a 10K Ω pull-up resistor is used, but please refer to the SMBus Specification for additional information.

3.2. Charger/Calibrator Electronics

3.2.1. Overview Of Operation

The Smart Charger/Calibrator is capable of providing all auxiliary battery functions needed to recharge and recalibrate a Smart Battery.

The charger is capable of communicating with battery through the System Management Bus (SMBus). The charger is fully SMBus and SBDS Revision 1.0 compliant. The charger is implemented as a level III SBS compliant system.

An 8-bit Reduced Instruction Set CPU (RISC) is used to process the core algorithms and perform operations required for battery monitoring, charge/calibration control and user display.

Pertinent battery parameters are constantly monitored through out the charge/calibration cycle to insure safe and reliable operation. The battery thermistor is monitored as an independent and redundant safety monitor. SMBus Alarms are monitored and acted upon as defined in the Smart Charger Data Specification (SCDS).

The user is notified of operational mode and fault conditions by the on-board LEDs.



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

3.2.2. DC Specifications

Parameter	Limits	Remarks
Active current consumption	<15mA	24V input power is applied.
Battery leakage current consumption	<30uA	Parasitic leakage current from the battery when input power has been removed from the charge control board.

3.2.3. Charging

During charge, the charger reads the battery status, battery mode, battery current, battery voltage, and battery temp. The battery voltage and current are then passed on to the charge control chip which has been configured to deliver up to 16.8 volts and 3 amps. The specified voltage and current of the battery is constantly read from the battery then relayed to the charge control chip every second. Normal charge termination occurs when the battery reaches full charge and begins requesting 0 current and issues the `TERMINATE_CHARGE_ALARM` Warning.

Once fully charged, if the battery is left in the charger, the charger will re-initiate charge as requested by the battery. Typically, the battery will either request a trickle current, else will begin requesting current following a predetermined amount of self-discharge.

3.2.4. Calibration

The calibration cycle is needed for the battery to relearn its capacity, thereby proving more accurate data to host device.

The calibration cycle consist of both charge and discharge cycles sequenced it a manner to allow the battery to relearn its capacity.

The charge cycle is controlled as described above. The final step in the calibration cycle is to fully charge the battery.

During discharge, the battery is discharged at a constant 10 OHM resistance. Discharge cycles are terminated when the battery issues the `TERMINATE_DISCHARGE_ALARM`.

If the battery is in need of fuel gauge recalibration, the red LED will flash upon insertion of the battery.

This indicator provides feedback to the user on the accuracy of the fuel gauge and avoids unnecessary battery calibration cycles.

The user has the option to calibrate the fuel gauge and charge the battery, or to only charge the battery.

This option is given because a recalibration cycle is longer than a charge cycle.

To recalibrate the battery, press the calibrate button.

No action is required if only a recharge is required, as the charger will automatically begin to charge the battery.

The blue calibration LED will flash to indicate that the battery is undergoing the recalibration cycle.

There may be a short delay before the calibration begins. During calibration the discharge resistors will heat up and the fan will operate to maintain temperature within acceptable limits.



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

At the end of this procedure the blue LED will stay constant indicating a fully charged, fully calibrated battery.

If the charger fails to calibrate the battery correctly the blue LED will light solid and the red LED will flash.

3.2.5. What is recalibration & why is it needed?

The fuel gauge in the battery uses a highly accurate voltmeter, ammeter and time clock to measure actual charge in & out of the battery pack. In addition there are algorithms to compensate for the effects of discharge rate, discharge temperature, self-discharge and charging efficiency etc.

All this combines to provide a highly accurate fuel gauging system. What is also required is the means to ensure the continued reliability of this system throughout the life of the battery pack.

Even with all this technology, the only time at which the battery is absolutely certain of its real capacity is when it is either completely full or completely empty. Anywhere in between is a calculated estimate - albeit a highly accurately calculated one.

Also, as the battery ages, the amount of available capacity shrinks - so each cycle the "full" point gets a little bit lower. Imagine if the fuel tank in your car got smaller as your car got older – you'd need to occasionally recalibrate your car's fuel gauge too.

What's more, if the battery only sees partial charges and discharges during its application, then it may not get the benefit of a "full" or "empty" reference point for some time and must rely more and more on its calculated figure. So the fuel gauging system may be subject to drift during use.

In use, as the fuel gauge mathematically works out the battery's remaining capacity. It will also work out an estimated accuracy figure known as the "Max Error". This keeps track of the overall accuracy of the system. In this way the battery can tell the device not only how much capacity is remaining, but also how reliable this estimate is. When an Inspired Energy battery achieves a max. error of 10% the recalibration bit is set.

Some devices use this recalibration bit to trigger a note on the device screen to tell the user to recalibrate their battery. Other systems simply put a note in their instruction manual to recalibrate the battery every so often.

So the recalibration is used to re-set the fuel gauge algorithms, re-establish the full and empty points, and re-calculate the actual capacity in the battery. In this way, even as the battery ages and things change, the accuracy and reliability of the fuel gauge can be retained throughout the life of the battery.

Now in order to carry out a full recalibration the following must occur:

- Fully charge the battery (this tells the system how much charge has been put into the battery to take it to 100% charged, and establishes the current "Full" point.)
- Fully discharge the battery (This tells the system how much of the full charge input is available for discharging, and re-sets the Max Error)

At this point the battery is calibrated, but it is also empty - so it needs a full recharge to return it to use.



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

3.2.6. Regulation/Measurement Accuracy

3.2.6.1.Voltage

The charge voltage is measured and regulated to $\pm 0.8\%$ of the battery requested value.

3.2.6.2.Current

The charge current is measured and regulated to $\pm 5\%$ of the battery requested value.

3.2.7. LED Indication

The charger/calibrator provides LED display to inform the user of operation mode and fault conditions.

Off:	No Battery
GREEN Flashing:	Charge in process
GREEN Solid:	Charge complete
BLUE Flashing:	Calibration in process
BLUE Solid:	Calibration complete
RED Flashing:	Battery requesting calibration
RED:	Error

Error Conditions:

Smart Charge:	Unsuccessful Charger communications w/i timeout.
Battery:	No Battery Communications w/i timeout.

3.3. SMBus and SBDS Parameters

3.3.1. Overview Of Operations

The Smart Charger/Calibrator is fitted with a microprocessor and associated circuitry for communication with the smart battery. Reference should be made to the following specifications when reading this section:

- System Management Bus Specification (Rev 1.0, Feb 15, 1995)
- Smart Battery Data Specification (Rev 1.0, Feb 15, 1995)
- Smart battery Charger Specification (Rev 0.95a, Feb 15, 1995)

3.3.2. SMBus Logic Levels

Symbol	Parameter	Limits		Units
		Min	Max	
Vil	Data/Clock input low voltage		0.6	V
Vih	Data/Clock input high voltage	1.4	5.5	V
Vol			0.4	V



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

3.3.3. Communication Protocol

SMBus Interface complies with SBS Specification Version 1.0. The charger includes a simple bi-directional serial data interface. The charger processor uses the interface to access various battery pack registers.

3.3.4. Initialization Procedure



The interface uses a command-based protocol, where the charger processor sends the battery address command byte to the battery pack. The command directs the battery pack to either store the next data received to a register specified command byte or output the data specified by the command byte.

The Charger communicates with the battery pack using one of three protocols:

- Write Word
- Read Word
- Read Block

3.3.4.1. Write Word



The first byte of a Write Word access is the command code. The next two Bytes are the data to be written. In this example the master asserts the slave device address followed by the write bit. The device acknowledges and the master delivers the command code. The slave again acknowledges before the master sends the data word (low byte first). The slave acknowledges each byte according to the I²C specification, and the entire transaction is finished with a stop condition.



3.3.4.2. Read Word

Reading data is slightly more complex than writing data. First the host must write a command to the slave device. Then it must follow that command with a repeated start condition to denote a read from that device's address. The slave then returns two bytes of data.

Note that there is not a stop condition before the repeated start condition, and that a "Not Acknowledge" signifies the end of the read transfer.





3.3.4.3. Block Read

Figure 1 illustrates the sequence of messages for the battery status read. The sequence is as follows:

- Message 1:** S (Start), Battery Address (7 bits), Wr (Write), Command Code (8 bits), S (Start), Battery Address (7 bits), Rd (Read).
- Message 2:** Block Read (8 bytes).

The Block Read consists of the following bytes:

- A (Address)
- 8 bytes of data
- A (Address)
- = (Status)
- 8 bytes of data
- !A (Not Address)
- P (Present)

The diagram shows the SMBus Host (master) sending the first message and the Smart Battery (slave) responding with the Block Read.

The Charger acting in the role of a bus master, uses the read word, write word, and read block protocols to communicate with the battery, operating in slave mode.

Function	Command Code	Description	Unit	Access
BatteryMode()	0x03	Battery Operational Modes.	Bit flags	r/w
Temperature()	0x08	Returns the pack's internal temperature.	0.1 °K	r
Voltage()	0x09	Returns the battery's voltage (measured at the cell stack)	mV	r
Current()	0x0a	Returns the current being supplied (or accepted) through the battery's terminals.	mA	r
RemainingCapacity()	0x0f	Returns the predicted remaining battery capacity.	mAh	r
FullChargeCapacity()	0x10	Returns the predicted battery capacity when fully charged.	mAh	r
AverageTimeToFull()	0x13	Returns the rolling average of the predicted remaining time until the battery reaches full charge.	minutes	r
ChargingCurrent()	0x14	Returns the battery's desired charging rate.	mA	r
ChargingVoltage()	0x15	Returns the battery's desired charging voltage.	mV	r
BatteryStatus()	0x16	Returns the battery's status word.	Bit flags	r
ManufacturerName()	0x20	Returns a character array containing the manufacture's name.	string	r
DeviceName()	0x21	Returns a character array that contains the battery's name.	string	r
DeviceChemistry()	0x22	Returns a character array that contains the battery's chemistry.	string	r
ManufacturerData()	0x23	Returns data specific to the manufacture.		r

The battery, acting in the role of a bus master, uses the write word protocol to communicate with the charger, operating in slave mode. If the CHARGER_MODE bit in BatteryMode() is clear, the Battery will broadcast Charger request information at 15-second intervals.

Function	Command Code	Description	Unit	Access
ChargingCurrent()	0x14	Sends the desired charging rate to the battery charger	mA	W
ChargingVoltage()	0x15	Sends the desired charging voltage to the battery	mV	W



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

3.3.7. Critical Messages

Whenever the Battery detects a critical condition, it takes the role of a bus master and sends AlarmWarning() message to the Charger. The Battery broadcasts the AlarmWarning() message at 10 second intervals until the critical condition(s) has been corrected.

Battery Critical Messages

Function	Command Code	Description	Unit	Access
AlarmWarning()	0x16	This message is to the host and/or charger to notify them that one or more alarm conditions exist.	Formatted word	W

Alarm Bit Definitions

Hex	Battery Status	Status	Definition
4000	TERMINATE_CHARGE_ALARM	ON	Set when the battery detects that one or more of its charging parameters are out of range.
		OFF	Cleared when the parameters fall back within range.
1000	OVER_TEMP_ALARM	ON	Set when the battery detects that its internal temperature is greater than allowed.
		OFF	Cleared when the battery temperature falls back within acceptable range.
800	TERMINATE_DISCHARGE_ALARM	ON	Set when the battery determines that it has supplied all the charge it can without being damaged.
		OFF	Cleared when the battery reaches a state-of-charge sufficient for it to once again safely supply power.

Status Bit Definitions

80	INITIALIZED	ON	Always
		OFF	
40	DISCHARGING	ON	Battery "Current()" is not positive
		OFF	Battery "Current()" is positive
20	FULLY_CHARGED	ON	Set when the battery determines that it has reached a full charge termination point.
		OFF	Cleared when the battery determines that it can be charged again.
10	FULLY_DISCHARGED	ON	Set when the battery determines that it has supplied all the energy it can.
		OFF	Cleared when "RelativeStateOfCharge()" \geq 20%.

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

Charger/Calibrator Spec Specification

3.4. Mechanical Specifications

3.4.1. Weight

Approximately 0.51 lbs. (0.23Kg).

3.4.2. Mating Connector


The recommended interconnection mating connectors are AMP/TYCO 787615-1, 787614-1 and 787613-1,

3.4.3. Date Code

A date code is stamped on the back of each charger. The format is in the form of an 8 digit alphanumeric code

ZZ YYWW XX
 Manufacturing site ___↑ ↑___ Charger Revision
 Manufacturing date _____↑

3.4.4. Mechanical Drawing

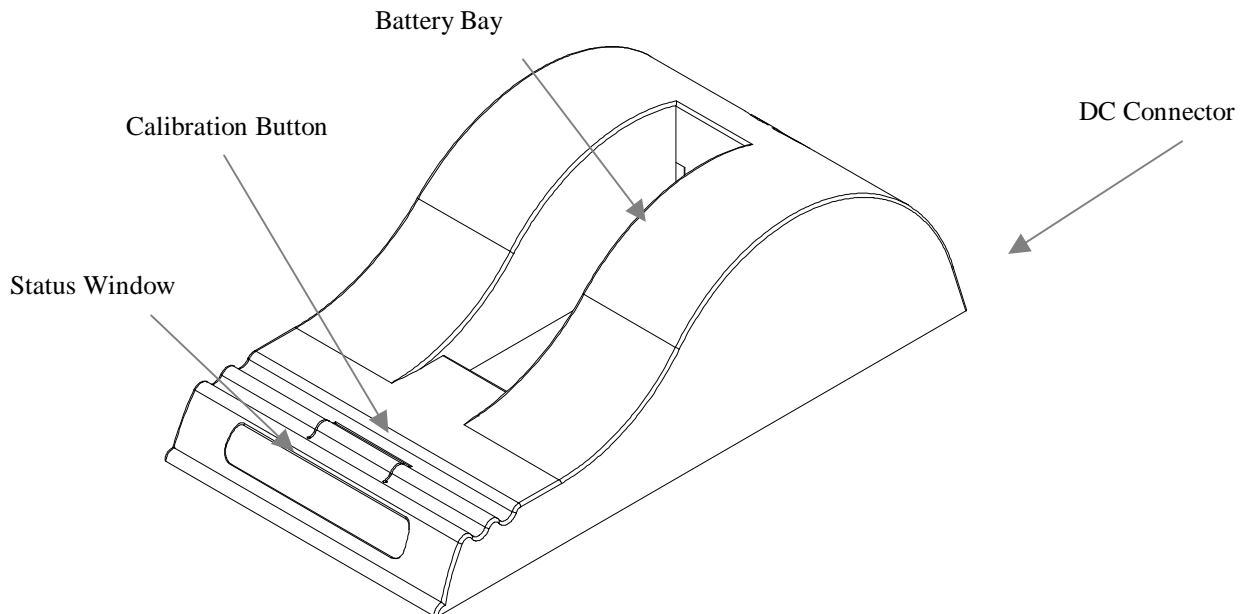



Confidential To Inspired Energy



Charger/Calibrator Spec Specification

Specification Number	DS136A
Specification Revision	1.0
Prepared By	RAH
Issue date	5/21/08

3.5. Environmental/Safety Specifications

3.5.1. EMC And Safety

The Smart Charger has the following approvals:

- CE EN550022 conducted and radiated emissions
- CE EN55024 immunity
- FCC Part 15 Class B conducted and radiated emissions

3.6. Reliability

3.6.1. Warranty

A high quality standard is maintained by Inspired Energy. All products are warranted against defects in workmanship, material and construction. The warranty period is one (1) year from the date of shipment from Inspired Energy.