



- True sine wave output (THD<3%)
- High surge power up to 3000W
- U.P.S. mode and energy saving mode (selectable)
- High efficiency up to 91%
- Power ON-OFF switch
- Standby saving mode can be selectable
- Front panel indicator for operation status
- Thermostatically controlled cooling fan
- Protections: Bat. low alarm / Bat. low shutdown / Over voltage / Over temp. / Output short / Input polarity reverse / Overload / AC circuit breaker
- Application : Home appliance, power tools, office and portable equipment, vehicle and yacht ...etc.
- Built-in solar / AC charger
- Optional monitoring software
- 3 years warranty



SPECIFICATION

| MODEL | | TN-1500-112 | TN-1500-124 | TN-1500-148 | TN-1500-212 | TN-1500-224 | TN-1500-248 | |
|--------------------------|---|---|--|-------------|--|--------------|-------------|------------|
| OUTPUT | RATED POWER (Typ.) | 1500W | | | | | | |
| | MAXIMUM OUTPUT POWER (Typ.) | 1725W for 180 sec. / 2250W for 10 sec. / surge power 3000W for 30 cycles | | | | | | |
| | AC VOLTAGE | Factory setting set at 110VAC 100 / 110 / 115 / 120VAC selectable by setting button S.W | | | Factory setting set at 230VAC 200 / 220 / 230 / 240VAC selectable by setting button S.W | | | |
| | FREQUENCY | 60±0.1Hz 50/60Hz selectable by setting button S.W | | | 50±0.1%Hz 50/60Hz selectable by setting button S.W | | | |
| | WAVEFORM | Note.2 | True sine wave (THD<3%) at rated input voltage | | | | | |
| | AC REGULATION (Typ.) | ±3.0% | | | | | | |
| | TRANSFER TIME (Typ.) | 10ms inverter → by pass | | | | | | |
| | SAVING MODE (Typ.) | Default disabled. Load ≤ 5W will be changed to standby mode | | | | | | |
| | FRONT PANEL INDICATOR | Battery voltage level, output load level, saving mode, fault and operation status | | | | | | |
| INPUT | BAT. VOLTAGE | 12V | 24V | 48V | 12V | 24V | 48V | |
| | VOLTAGE RANGE (Typ.) | Note.1 | 10.5 ~ 15VDC | 21 ~ 30VDC | 42 ~ 60VDC | 10.5 ~ 15VDC | 21 ~ 30VDC | 42 ~ 60VDC |
| | DC CURRENT (Typ.) | Note.5 | 150A | 75A | 37.5A | 150A | 75A | 37.5A |
| | NO LOAD DISSIPATION | ≤ 18W @ standby saving mode | | | | | | |
| | OFF MODE CURRENT DRAW | ≤ 1mA | | | | | | |
| | EFFICIENCY (Typ.) | Note.2 | 87% | 89% | 89% | 88% | 90% | 91% |
| | BATTERY TYPES | Open & sealed Lead Acid | | | | | | |
| BATTERY INPUT PROTECTION | FUSE | 40A*5 | 30A*3 | 30A*2 | 40A*5 | 30A*3 | 30A*2 | |
| | BAT. LOW ALARM | 11.3±4% | 22.5±4% | 45±4% | 11.3±4% | 22.5±4% | 45±4% | |
| | BAT. LOW SHUTDOWN | 10.5±4% | 21±4% | 42±4% | 10.5±4% | 21±4% | 42±4% | |
| | REVERSE POLARITY | By internal fuse open | | | | | | |
| OUTPUT PROTECTION | OVER TEMPERATURE | 82℃±5℃ | 82℃±5℃ | 96℃±5℃ | 68℃±5℃ | 68℃±5℃ | 68℃±5℃ | |
| | | Protection type : Shut down o/p voltage, re-power on to recover ; by internal RTH3 detect on heatsink of power transistor | | | | | | |
| | OUTPUT SHORT | Protection type : Shut down o/p voltage, re-power on to recover | | | | | | |
| | OVER LOAD (Typ.) | 105 ~ 115% load for 180 sec., 115% ~ 150% load for 10 sec. Protection type : Shut down o/p voltage, re-power on to recover | | | | | | |
| | CIRCUIT BREAKER | 20A | | | | 10A | | |
| | GFCI PROTECTION | Optional (Only type F) | | | | None | | |
| ENVIRONMENT | WORKING TEMP. | Note.3 | 0 ~ +40℃ @ 100% load ; 60℃ @ 50% load | | | | | |
| | WORKING HUMIDITY | 20% ~ 90% RH non-condensing | | | | | | |
| | STORAGE TEMP., HUMIDITY | -30 ~ +70℃ / -22 ~ +158°F, 10 ~ 95% RH | | | | | | |
| | VIBRATION | 10 ~ 500Hz, 3G 10min./1cycle, 60min. each along X, Y, Z axes | | | | | | |
| SAFETY & EMC | SAFETY STANDARDS | UL458 (only for "GFCI" receptacle-Type F) | | | None | | | |
| | LVD | None | | | EN60950-1 | | | |
| | WITHSTAND VOLTAGE | Bat I/P - AC I/P:3.0KVAC Bat I/P - AC O/P:3.0KVAC AC O/P - FG:1.5KVAC | | | | | | |
| | EMC EMISSION | Compliance to FCC class A | | | Compliance to EN55022 class B, 72/ 245/ CEE, 95/ 54/ CE, E-Mark | | | |
| | EMC IMMUNITY | None | | | Compliance to EN61000-4-2,3,4,5,6,8,11 | | | |
| AC CHARGER | CHARGE CURRENT (Typ.) | 5.5A | 2.7A | 1.35A | 5.5A | 2.7A | 1.35A | |
| | CHARGE VOLTAGE | 14.3V±4% | 28.5V±4% | 57V±4% | 14.3V±4% | 28.5V±4% | 57V±4% | |
| SOLAR CHARGER | MAX OPEN CIRCUIT VOLTAGE | 25V | 45V | 75V | 25V | 45V | 75V | |
| | CHARGE CURRENT (max.) | 30A | | | | | | |
| | CHARGE VOLTAGE | 14.3V±4% | 28.5V±4% | 57V±4% | 14.3V±4% | 28.5V±4% | 57V±4% | |
| OTHERS | CONTROL WIRING | RJ11 -RS232 (Option) | | | | | | |
| | DIMENSION | 420*220*88mm (L*W*H) | | | | | | |
| | PACKING | 6.85Kg; 2pcs/15.7Kg/1.61CUFT | | | | | | |
| NOTE | 1. Output derating capacity referenced by curve 1. 2. THD and Efficiency is tested by 1000W, linear load at 13V, 26V, 52V input voltage. 3. Output derating capacity referenced by curve 2. 4. All parameters not specified above are measured at rated load, 25℃ of ambient temperature. 5. DC current is tested by 1500W, linear load at 13V, 26V, 52V input voltage. | | | | | | | |

Instructions for TN-1500 monitoring software

1. Installation of TN-1500 unit and PC

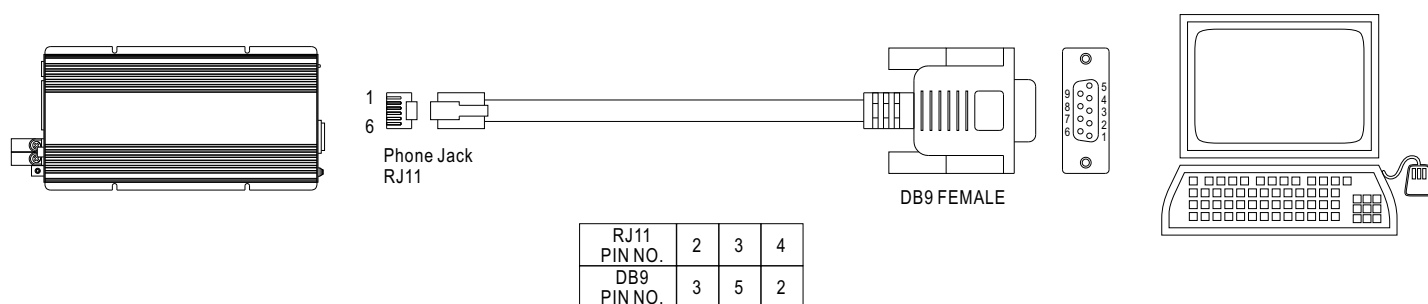


Figure 1

2. Explanation of Monitoring Manu

2.1 Main Page


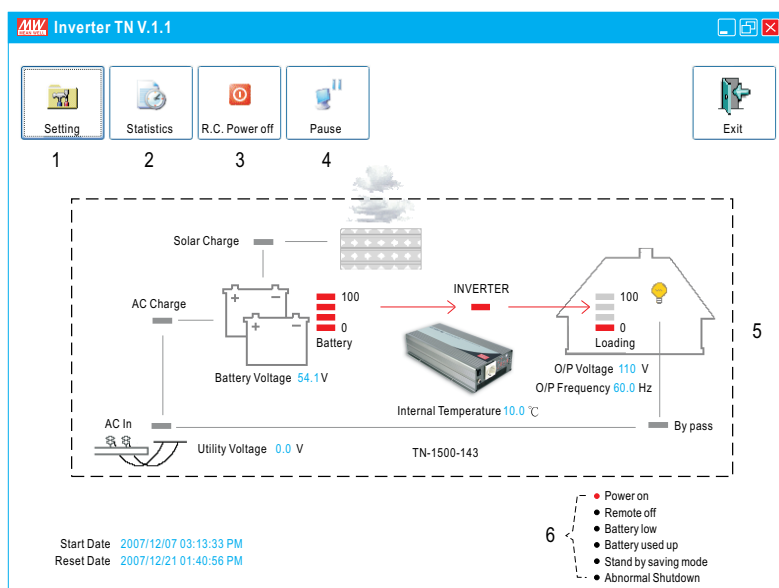


Figure 2

1. Setting: Adjustment for output voltage, charging related voltage, frequency, and operation mode. Please refer to Figure 3 for details.
2. Statistics: Calculate for the percentage of operating period for each operation mode. Please refer to Figure 4 for details.
3. R.C. Power off: Power can be turned ON or OFF at the remote location.
4. Pause: Stop refreshing the page of monitoring software.
5. Status of unit: Indicating current operating status of TN-1500.
6. Signals that display current condition of the unit.

2.2 Setting Page

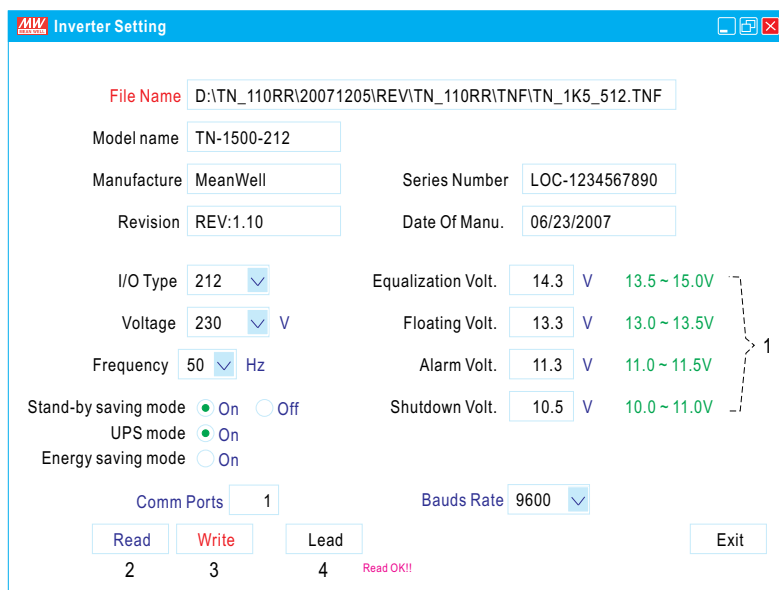

The Inverter Setting window displays various configuration parameters for the TN-1500 unit. It includes fields for File Name, Model name, Manufacture, Series Number, Revision, Date Of Manu., I/O Type, Voltage, Frequency, Stand-by saving mode, UPS mode, Energy saving mode, Comm Ports, Bauds Rate, and buttons for Read, Write, Load, and Exit. A bracket labeled '1' groups the Equalization Volt., Floating Volt., Alarm Volt., and Shutdown Volt. settings.


| Parameter | Value | Range |
|----------------------|--|--------------|
| File Name | D:\TN_110RR\20071205\REV\TN_110RR\TNF\TN_1K5_512.TNF | |
| Model name | TN-1500-212 | |
| Manufacture | MeanWell | |
| Series Number | LOC-1234567890 | |
| Revision | REV:1.10 | |
| Date Of Manu. | 06/23/2007 | |
| I/O Type | 212 | |
| Voltage | 230 V | |
| Frequency | 50 Hz | |
| Stand-by saving mode | On | |
| UPS mode | On | |
| Energy saving mode | On | |
| Comm Ports | 1 | |
| Bauds Rate | 9600 | |
| Equalization Volt. | 14.3 V | 13.5 ~ 15.0V |
| Floating Volt. | 13.3 V | 13.0 ~ 13.5V |
| Alarm Volt. | 11.3 V | 11.0 ~ 11.5V |
| Shutdown Volt. | 10.5 V | 10.0 ~ 11.0V |

Buttons: Read (2), Write (3), Load (4), Exit. Status: Read OK!!

Figure 3

1. User can adjust the settings based on the characteristics of batteries been used: Equalization Voltage, Floating Voltage, Alarm Voltage, and Shut-down Voltage. UPS Mode / Energy Saving Mode selection and AC output voltage and frequency can also be set in this page.
2. Read: Read current settings of the unit.
3. Write: Write the revised setting into the unit.
4. Load: Load in factory default settings.

2.3 Statistic Page

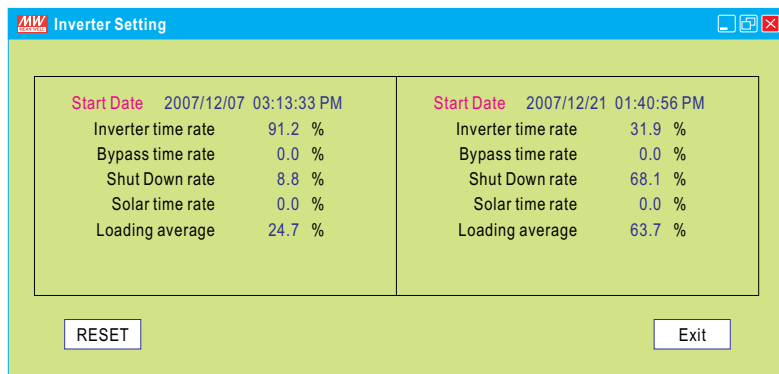


The Inverter Setting window displays statistical data for two periods. It includes a table with Start Date, Inverter time rate, Bypass time rate, Shut Down rate, Solar time rate, and Loading average. Buttons for RESET and Exit are at the bottom.

| Start Date | Inverter time rate | Bypass time rate | Shut Down rate | Solar time rate | Loading average |
|------------------------|--------------------|------------------|----------------|-----------------|-----------------|
| 2007/12/07 03:13:33 PM | 91.2 % | 0.0 % | 8.8 % | 0.0 % | 24.7 % |
| 2007/12/21 01:40:56 PM | 31.9 % | 0.0 % | 68.1 % | 0.0 % | 63.7 % |

Buttons: RESET, Exit

Figure 4


1. Start Date: Date that installing the monitoring software.
2. Reset Date: Date that resetting the statistics. The Start Date will not be influenced by resetting the statistics or turning off the unit.
3. Inverter time rate: Operating period of "Inverter Mode" represents how many percent of the whole operating period.
4. Bypass time rate: Operating period of "Bypass Mode" (energy provides directly by the utility) represents how many percent of the whole operating period.
5. Shut down rate: Percentage of time period that the unit is under the condition of shut down.
*** Inverter time rate + Bypass time rate + Shut down rate = 100%**
6. Solar time rate: Percentage of time period that the solar charger is functioning after turning on the TN-1500 unit.
7. Loading average: Average loading after turning on the TN-1500 unit.

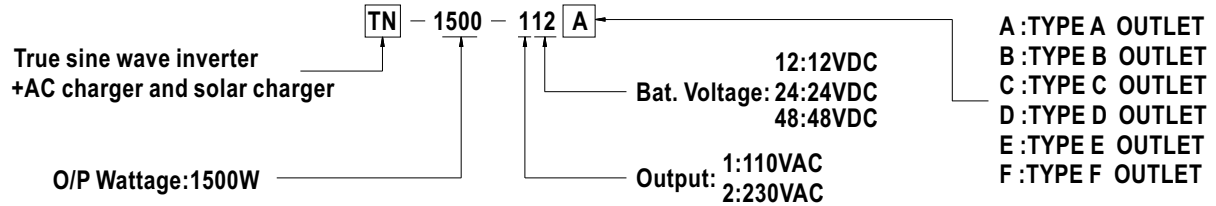

AC Output Receptacles (optional)

| Receptacle type | | | | | | |
|-----------------|--------|--------|-----------|--------|--------|--------|
| | TYPE-A | TYPE-B | TYPE-C | TYPE-D | TYPE-E | TYPE-F |
| Country | USA | EUROPE | AUSTRALIA | U.K | JAPAN | GFCI |
| Certificate | | | | | | |

Mechanical Specification

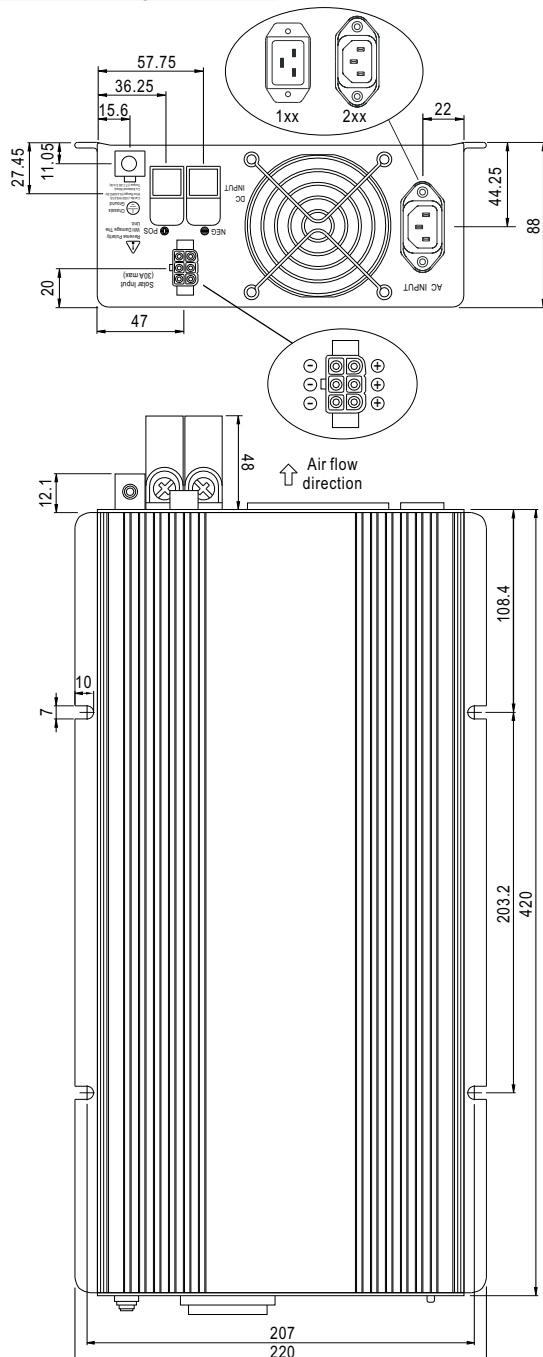

Derating Curve

