


Effectively Cuts the Influence of Workpiece Characteristics, Such as Gloss, Incline, and Color.



 Be sure to read *Safety Precautions* on page 12.

CE

Features


A 1-mm-dia. Pin-point Beam Allows Detection of Minute Objects

E3G-L1

OMRON's unique Hyper LED achieves a pin-point light source only 1/7 the size of conventional light sources, with uniform light-intensity distribution. The Hyper LED achieves stable detection of small objects by eliminating the dead band that results from the drop-out that commonly occurs at the center of conventional LEDs.

The clearly visible spot makes it easy to check the optical axis adjustment and sensing position.

Smallest
in the
Industry

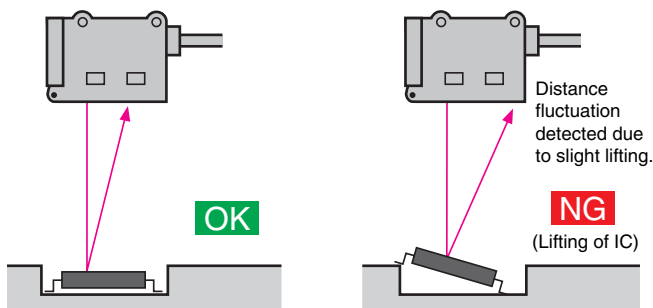

Stable Detection Based Not Only on Object Color, But Also on Inclination and Glossiness

First
in the
Industry


The E3G-L1 is 2.6 times more stable than previous models with inclination characteristics.

The use of the shine-proof optical system with conventional triangulation reduces the discrepancies in sensing distance due to object color, surface, and inclination.

(The E3G-L3 is 2.2 times more stable than previous models.)

Shine-proof Optical System (E3G-L1, E3G-L3)

Previous Distance-setting Models

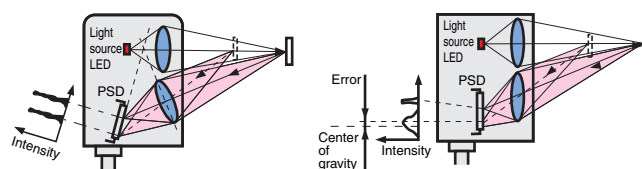


A low-error distance signal is assured because an image is formed on the photosensing device (PSD), irrespective of the sensing distance. Detection is also stable with respect to the inclination of the object.

At some distances, images cannot be formed on the photosensing device (PSD). The spot diameter is large, distance errors occur due to displacement of the center of gravity, and detection is unstable with respect to the inclination of the object.

Simple Detection of Glossy, Uneven Objects

First in the Industry

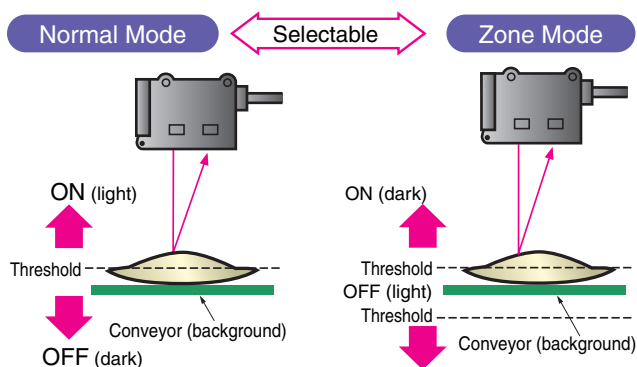

Triangulation with hysteresis of 4% or less (E3G-L1) is used, so objects beyond the set distance are not detected.

At a set distance of 30 mm, steps that are 1.2 mm high can be detected.

Glossy, uneven objects are reliably detected because OFF (light) status occurs only when the conveyor is detected, and ON (dark) status occurs when an object is present.

- IP67 Waterproofing
- CE Marking

The Sensor meets the European EMC Directive, allowing it to be mounted in export devices with confidence.

Optimal Background and Conveyor Teaching. Double-bar Display Shows Excess Gain at a Glance.


The Sensor features one-touch teaching settings. After the workpiece, background, and conveyor teaching are complete, fine adjustment of the sensitivity can be made in 13 levels for Normal Mode or 5 levels for Zone Mode. The excess gain in distance or detecting of small steps can be easily set.

The operation indicator turns ON when the light incident level exceeds a certain threshold. Excess gain can also be checked at a glance.



A Lineup of M8 Connectors

Easy to disconnect, making maintenance simple.

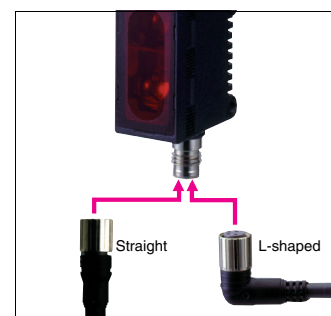


Meets the Needs of All Industries, Including Semiconductors, Electronic Components, Food, and Packaging


Normal Mode

E3G-L1 (50-mm Models)

Detecting minute electronic components in a tray

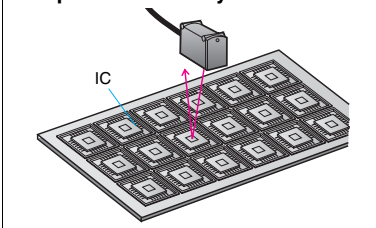


Detecting thin or uneven objects

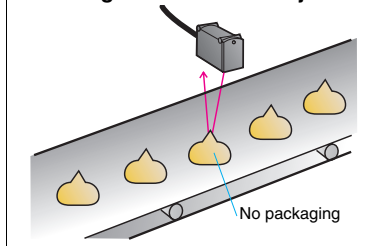

E3G-L3 (200-mm Models)


Detecting objects on a production line with a glossy background

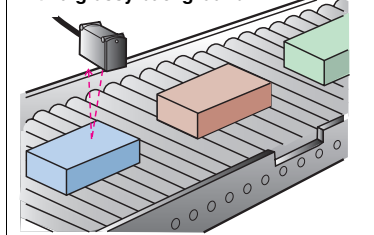


Zone Mode

E3G-L1 (50-mm Models)

Detecting packaged candies

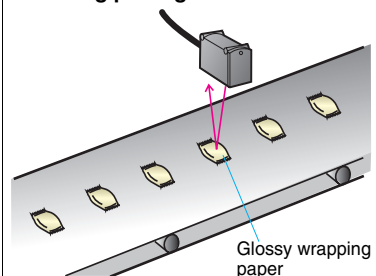


Detecting tiles on a conveyor

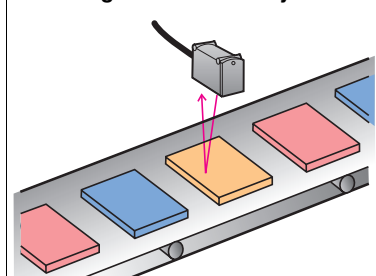

E3G-L3 (200-mm Models)




Detecting packaged confectionery on a conveyor

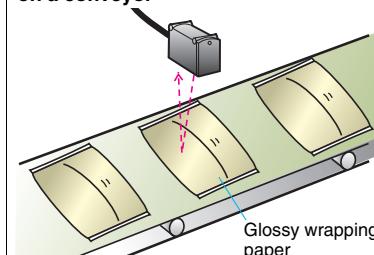

Ordering Information



Sensors

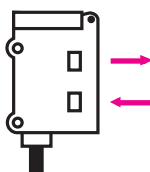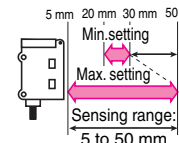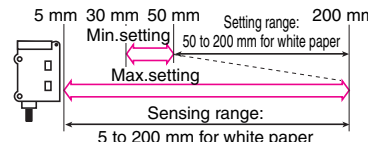 Red light
  Infrared light



Appearance	Connection method	Sensing/Setting range	Operation mode	Model	
				NPN output	PNP output
	Pre-wired	 <p>Setting range: 30 to 50 mm</p>	E3G-L11	E3G-L12	
	Connector (M8)		E3G-L15	E3G-L16	
	Pre-wired	 <p>Setting range: 200 mm</p> <p>50 to 200 mm for white paper</p>	E3G-L31	E3G-L32	
	Connector (M8)		E3G-L35	E3G-L36	

Accessories (Order Separately)

Mounting Brackets

Appearance	Model	Quantity	Remarks
	E39-L139	1	Provided with the E3G-L□1/-L□2
	E39-L140	1	Provided with the E3G-L□5/-L□6

Sensor I/O Connectors (M8)

Cable specifications	Appearance	Cable type		Model
Standard Cable	Straight 	2 m	Four-wire type	XS3F-M421-402-A
		5 m		XS3F-M421-405-A
	L-shaped 	2 m		XS3F-M422-402-A
		5 m		XS3F-M422-405-A


Ratings and Specifications

Sensing method		Distance-setting				
Item	Model	NPN output	E3G-L11	E3G-L15	E3G-L31	E3G-L35
		PNP output	E3G-L12	E3G-L16	E3G-L32	E3G-L36
Sensing range		5 to 50 mm (50 × 50 mm white paper, setting distance: 50 mm)			50 to 200 mm (50 × 50 mm white paper, setting distance: 200 mm) 50 to 150 mm (50 × 50 mm black paper, setting distance: 150 mm)	
Setting range		30 to 50 mm (50 × 50 mm white paper, black paper)			50 to 200 mm (50 × 50 mm white paper) 5 to 150 mm (50 × 50 mm black paper)	
Differential travel		4% max. of setting distance			10% max. of setting distance (typical)	
Reflectivity characteristics (black/white error)		4% max. of setting distance			10% max. of setting distance (at 50 to 150-mm setting distance)	
Light source (wavelength)		Red LED (670 nm)			Infrared LED (860 nm)	
Spot size		1-mm dia. max. (at 38-mm sensing distance)			15-mm dia. max. (at 150-mm sensing distance)	
Power supply voltage		10 to 30 VDC including 10% (p-p) ripple				
Current consumption		55 mA max.			65 mA max.	
Control output		Load power supply voltage: 30 VDC max., Load current: 100 mA max. (Residual voltage: NPN output: 1.2 V max., PNP output: 2.0 V max.) Open collector output (NPN/PNP, depends on the model) Light ON/Dark ON selectable				
Protection circuit		Power supply reverse polarity protection, Load short-circuit protection, Mutual interference prevention				
Response time		Operate or reset: 1.5 ms max.			Operate or reset: 2.5 ms max.	
Distance setting		Teaching (in NORMAL or ZONE mode)				
Fine distance adjustment		Manual fine threshold adjustment (NORMAL mode: 13 levels, ZONE mode: 5 levels)				
Indications		Operation indicator (orange), Distance indicator (green: 8 levels), Threshold indicator (red, NORMAL mode: 13 levels, ZONE mode: 5 levels)				
Ambient illumination (Receiver side)		Incandescent lamp: 3,000 lx max., Sunlight: 10,000 lx max.				
Ambient temperature		Operating: -25°C to 55°C, Storage: -30°C to 70°C (with no icing or condensation)				
Ambient humidity		Operating: 35% to 85%, Storage: 35% to 95% (with no condensation)				
Insulation resistance		20 MΩ min. at 500 VDC				
Dielectric strength		1,000 VAC, 50/60Hz for 1 min				
Vibration resistance (destruction)		10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions				
Shock resistance (destruction)		500m/s ² 3 times each in X, Y, and Z directions				
Degree of protection		IEC IP67 (with protective cover)				
Connection method		Pre-wired (Standard length: 2 m)		Connector (M8)	Pre-wired (Standard length: 2 m)	Connector (M8)
Weight (packed state)		Approx. 64 g		Approx. 21 g	Approx. 64 g	Approx. 21 g
Material	Case	PBT (polybutylene terephthalate)				
	Cover	Methacrylic resin				
	Mounting Bracket	Stainless steel (SUS304)				
Accessories		Mounting Bracket (with screws), Instruction sheet				


Engineering Data (Typical)

Operating Range


E3G-L1□ (in NORMAL Mode)

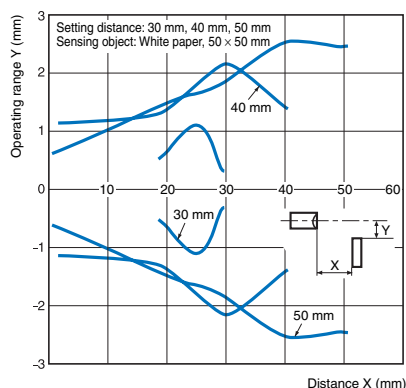


E3G-L1□ (in ZONE Mode)

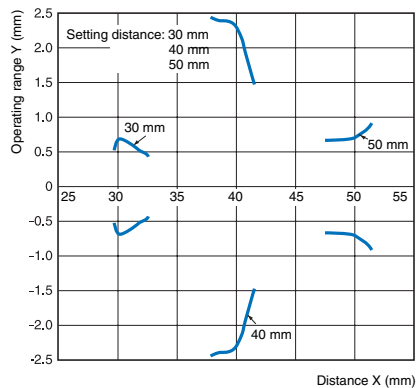

E3G-L3□ (in NORMAL Mode)

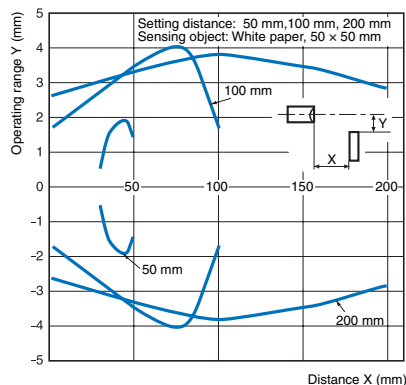


E3G-L3□ (in ZONE Mode)

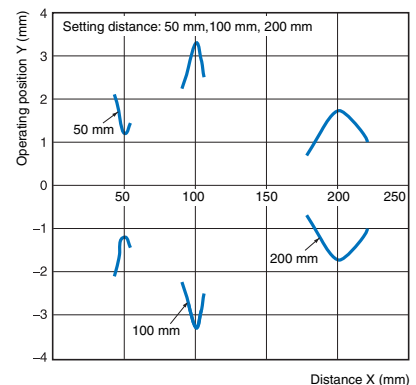


Spot Diameter vs. Sensing Distance

E3G-L1□

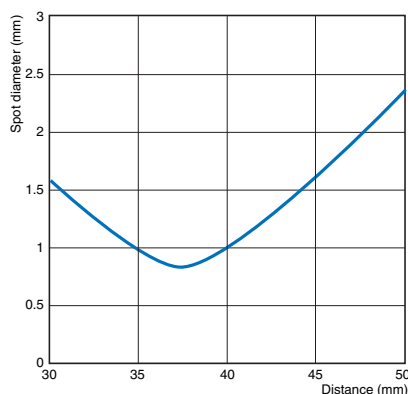


E3G-L3□

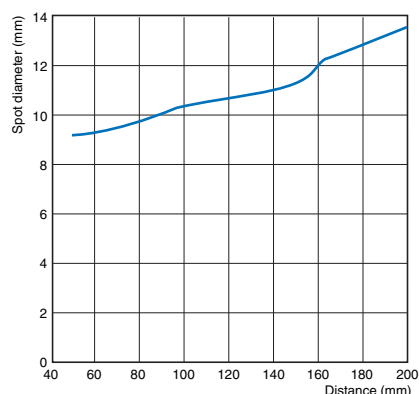


Angle Characteristics


E3G-L1□ (Vertical)

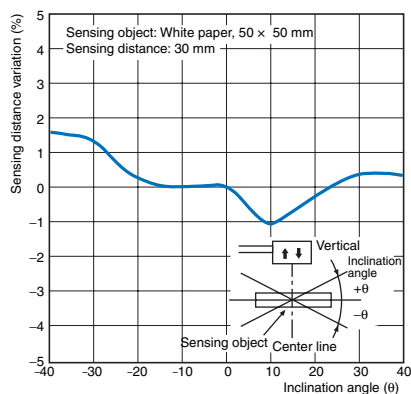


E3G-L1□ (Horizontal)

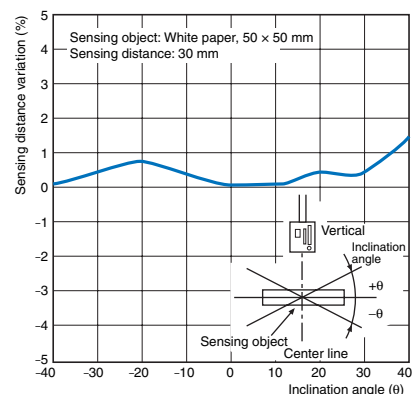

E3G-L1□ (Vertical)

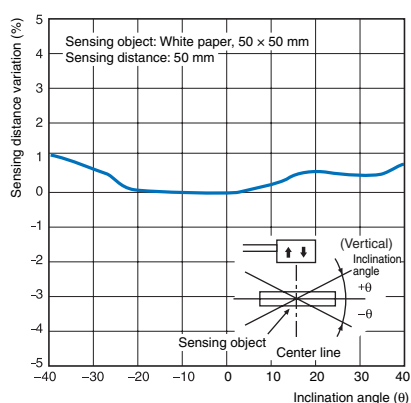


E3G-L1□ (Horizontal)

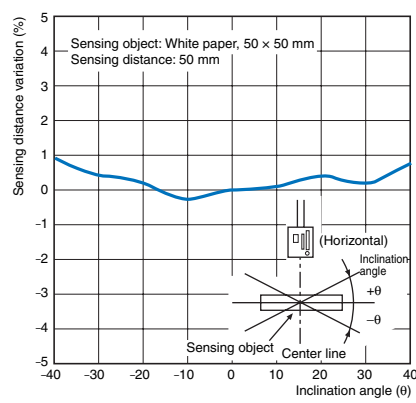


Sensing Object Size vs. Setting Distance

E3G-L1□

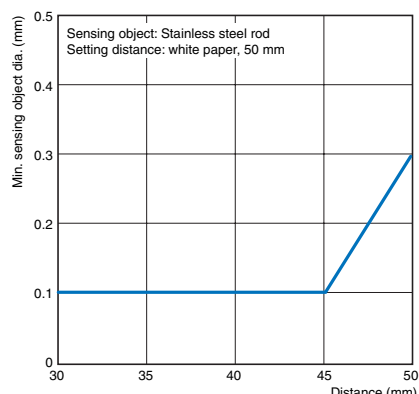


E3G-L3□

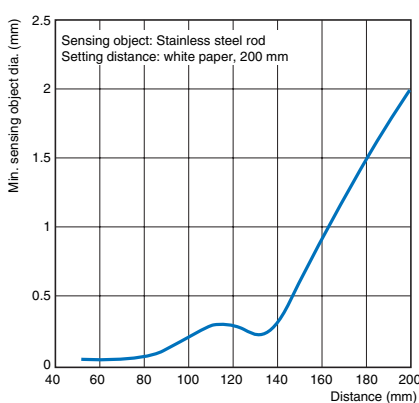


Angle Characteristics


E3G-L3 (Vertical)

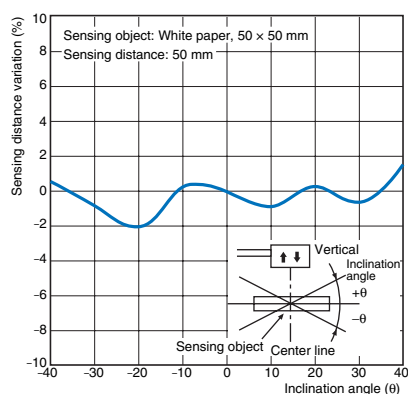


E3G-L3 (Horizontal)

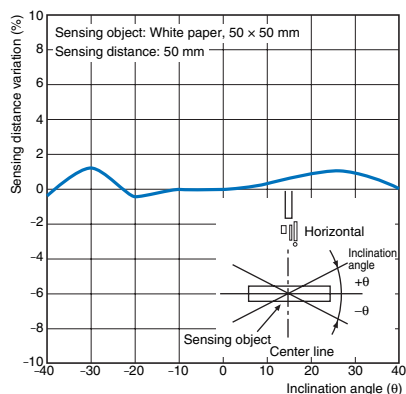

E3G-L3 (Vertical)

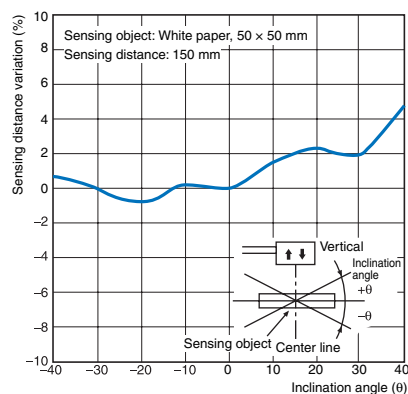


E3G-L3 (Horizontal)

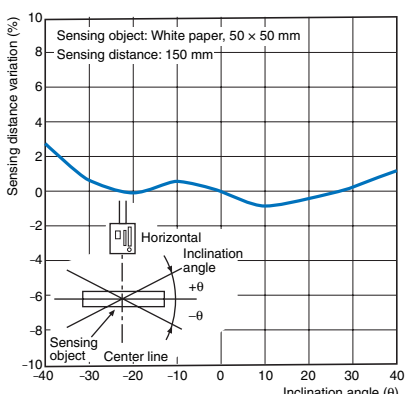


Close-range Characteristics

E3G-L1

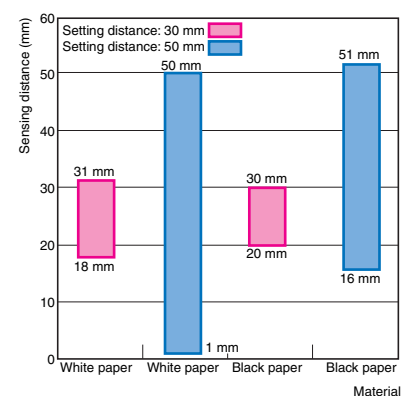


E3G-L3

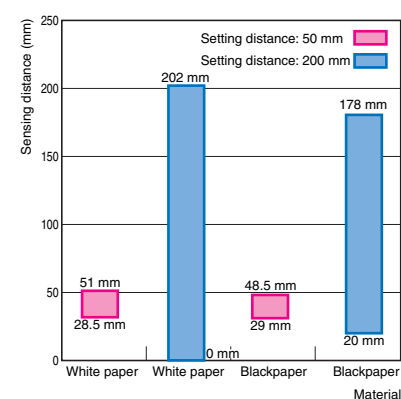


Sensing Distance vs. Sensing Object Material


E3G-L1 (at 30-mm Setting Distance)

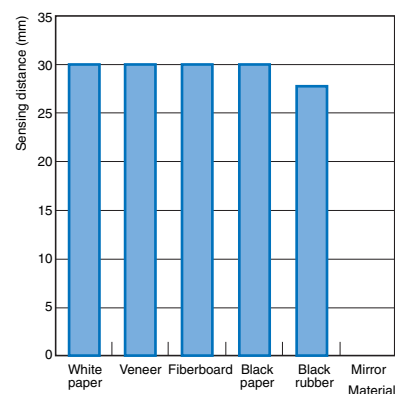


E3G-L1 (at 40-mm Setting Distance)

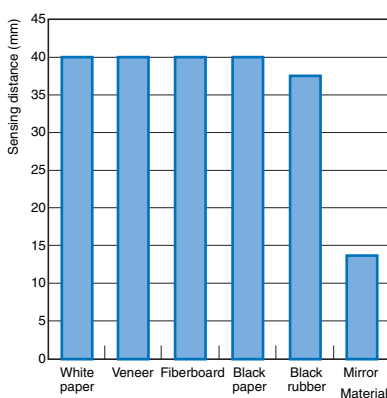


E3G-L1 (at 50-mm Setting Distance)

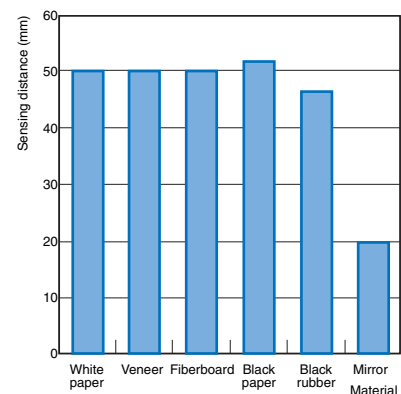


E3G-L3 (at 50-mm Setting Distance)

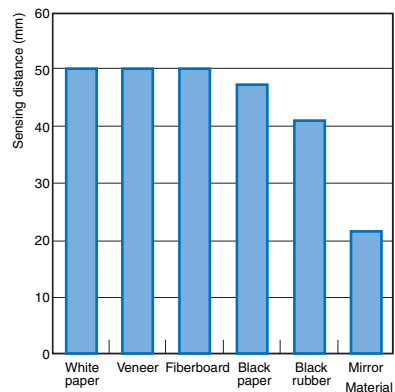

E3G-L3 (at 100-mm Setting Distance)

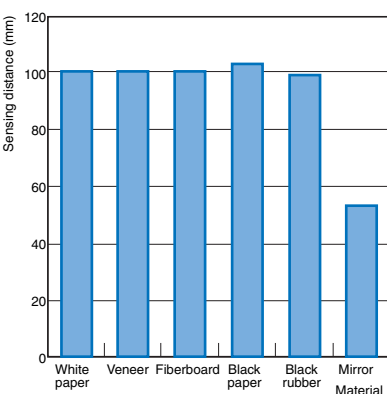

E3G-L3 (at 150-mm Setting Distance)

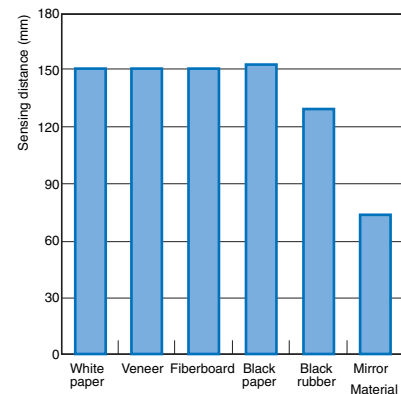

I/O Circuit Diagrams


NPN Output

Model	Operation mode	Timing charts	Mode selector switch	Output circuit
E3G-L11 E3G-L15 E3G-L31 E3G-L35	Light-ON	<div>Incident light</div> <div>No incident light</div> <div>Operation indicator (orange) ON</div> <div>OFF</div> <div>Output transistor ON</div> <div>OFF</div> <div>Load (e.g., relay) Operate</div> <div>Reset</div> <div>(Between brown and black)</div>	L-ON (LIGHT ON)	<div><div><div>8-level distance indicator (green)</div><div>13-level threshold indicator (red)</div><div>Operation indicator (orange)</div><div>Photo-electric Sensor main circuit</div></div><div><div>NPN output transistor</div><div>ZD</div><div>Control output</div><div>100 mA max.</div><div>10 to 30 VDC</div><div>0 V</div></div></div> <div>Connector Pin Arrangement</div> <div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div>Note: Pin 2 is not used.</div></div>
	Dark-ON	<div>Incident light</div> <div>No incident light</div> <div>Operation indicator (orange) ON</div> <div>OFF</div> <div>Output transistor ON</div> <div>OFF</div> <div>Load (e.g., relay) Operate</div> <div>Reset</div> <div>(Between brown and black)</div>	D-ON (DARK ON)	

PNP Output

Model	Operation mode	Timing charts	Mode selector switch	Output circuit
E3G-L12 E3G-L16 E3G-L32 E3G-L36	Light-ON	<div>Incident light No incident light</div> <div>Operation indicator (orange) ON OFF</div> <div>Output transistor ON OFF</div> <div>Load (e.g., relay) Operate Reset (Between blue and black)</div>	L-ON (LIGHT ON)	<div><p>Connector Pin Arrangement</p><div><p>Note: Pin 2 is not used.</p></div></div>
	Dark-ON	<div>Incident light No incident light</div> <div>Operation indicator (orange) ON OFF</div> <div>Output transistor ON OFF</div> <div>Load (e.g., relay) Operate Reset (Between blue and black)</div>	D-ON (DARK ON)	


Plugs (Sensor I/O Connectors)

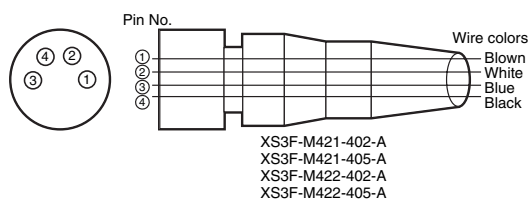

Classification	Wire color	Connector pin No.	Application
DC	Blown	1	Power supply (+ V)
	White	2	---
	Blue	3	Power supply (0 V)
	Black	4	Output

Note: Pin 2 is not used.

Nomenclature

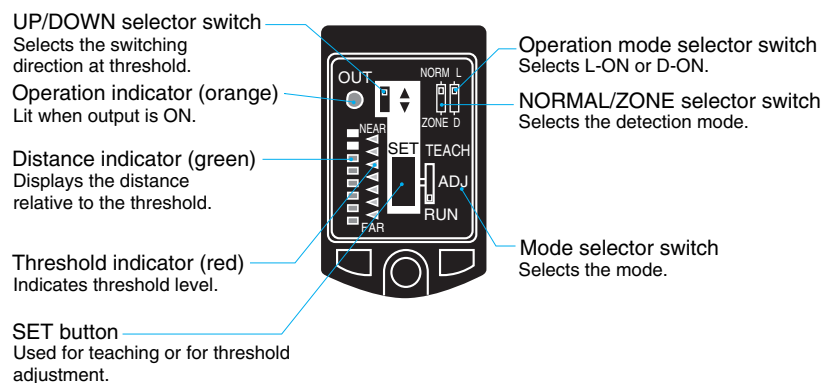

Adjustments







Adjustment Procedure

Step	Operation
1	Install, wire, and turn ON the Sensor.
2	Perform distance setting (teaching). → Refer to <i>Distance Setting (Teaching)</i> , below.
3	Make a fine adjustment of the threshold, if necessary. Refer to <i>Manual Teaching (Fine Distance Setting)</i> . → Page 11
4	Check that the mode selector switch is set to RUN .

Distance Setting (Teaching)

Select the most appropriate teaching method in reference to the following descriptions.

Application	1	2	3
	<ul style="list-style-type: none"> Teaching without sensing objects (i.e., teaching the background). 	<ul style="list-style-type: none"> Detection of slight differences in surface level. Setting a threshold in the middle between the background and sensing object for operation. 	<ul style="list-style-type: none"> Detection of glossy objects in front of the background.

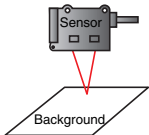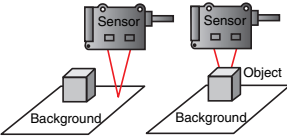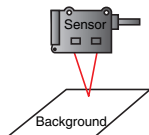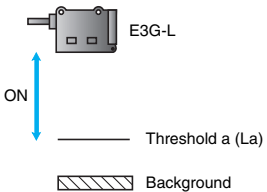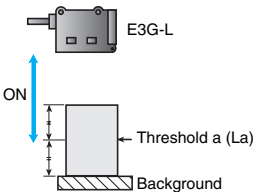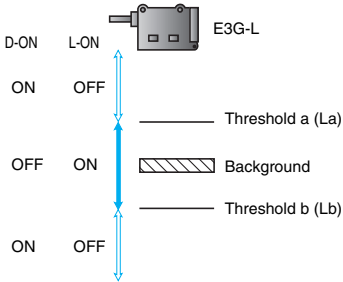Teaching	1 Normal one-point teaching	2 Normal two-point teaching	3 Zone one-point teaching
Setting method	Press the TEACH button with the background object. 	Press the TEACH button with the background object and with the sensing object. 	Press the TEACH button with the background object (conveyor, etc.). 
Set threshold	Threshold (a) is set immediately in front of the background.	Threshold (a) is set approximately in the middle between the background and sensing object.	A pair of thresholds, (a) and (b), are set.
Output ON range	The output is ON between the Sensor and La. 	The output is ON between the Sensor and La. 	The output is ON between La and Lb. 

La: Distance equivalent to threshold (a)

Lb: Distance equivalent to threshold (b)

● The following settings are also possible:

Setting the maximum sensing distance of the Sensor: Maximum distance setting.



Setting the minimum differential travel of the Sensor: Minimum distance setting.

● Distance from Sensor to background must not exceed the values shown below during normal one-point or zone one-point teaching.

Model	Distance from Sensor to background
E3G-L1□	32 mm min.
E3G-L3□	55 mm min.

● Maximum sensing distance of the E3G-L3□ may differ depending on the color of the sensing object when setting distance is more than 150 mm. Confirm the operation of the Sensor before actual operation.



1 Normal One-point Teaching

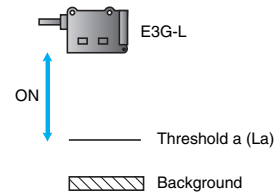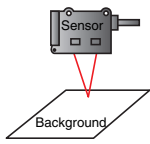

Step	Operation	Panel status
1	Set the mode selector switch to TEACH .	
2	Set the NORMAL/ZONE mode selector switch to NORMAL .	
3	Press the SET button with the background. • The threshold indicator (red) will turn ON.	
4	Set the mode selector switch to RUN .	
5	Set to L-ON or D-ON mode with the operation mode selector switch. L-ON: Output ON between background and Sensor. D-ON: Output OFF between background and Sensor.	
Application Example 1 Adjusting the Sensor differential travel to the minimum distance.		
1	Set the mode selector switch to TEACH .	
2	Set the NORMAL/ZONE mode selector switch to NORMAL .	
3	Set the UP/DOWN selector switch to DOWN.	
4	Press the SET button for at least 3 s. • The threshold indicator (red) will turn ON.	
5	The distance indicator (green) will turn ON. This means that teaching is successful. Set the mode selector switch to RUN to complete the teaching operation.	
6	Set to L-ON or D-ON mode with the operation mode selector switch. (Refer to Normal One-point Teaching)	
Application Example 2 Setting the Sensor to the maximum distance.		
1	Set the mode selector switch to TEACH .	
2	Set the NORMAL/ZONE mode selector switch to NORMAL .	
3	Set the UP/DOWN selector switch to UP.	
4	Press the SET button for 3 s or more. • The threshold indicator (red) will turn ON.	
5	The distance indicator (green) will turn ON. This means that teaching is successful. Set the mode selector switch to RUN to complete the teaching operation.	
6	Set to L-ON or D-ON mode with the operation mode selector switch. (Refer to Normal One-point Teaching)	

La: Distance equivalent to threshold (a)



2 Normal Two-point Teaching

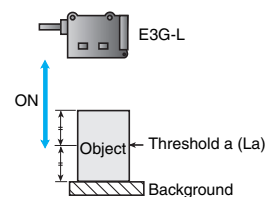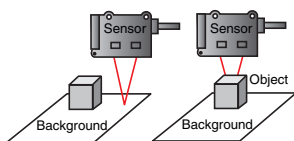

Step	Operation	Panel status
1	Set the mode selector switch to TEACH .	<p>• Object</p> <p>Press</p> <p>• Background</p> <p>Press</p> <p>OK</p> <p>NG</p>
2	Set the NORMAL/ZONE mode selector switch to NORMAL .	
3	Press the SET button with a sensing object located at sensing position. • The threshold indicator (red) will turn ON.	
4	Move the sensing object and press the SET button with the background. • If the teaching is successful, the distance indicator (green) will turn ON. • If the teaching is not successful, the threshold indicator (red) will start to flash.	
5	If the teaching is successful, set the mode selector switch to RUN to complete the teaching operation. If the teaching is not successful, change the position of the object and setting distance that have been set and repeat from the above step 3.	
6	Set to L-ON or D-ON mode with the operation mode selector switch.	

La: Distance equivalent to threshold (a)








3 Zone One-point Teaching

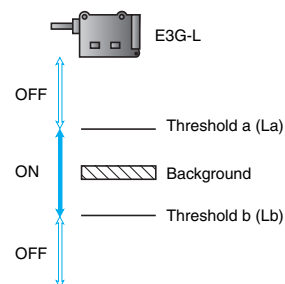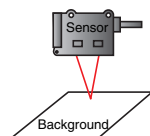

Step	Operation	Panel status
1	Set the mode selector switch to TEACH .	<p>Press</p> <p>OK</p> <p>NG</p>
2	Set the NORMAL/ZONE mode selector switch to ZONE .	
3	Press the SET button with the background. All threshold indicators (red) will turn ON while the SET button is pressed. When the SET button is released: • If the teaching is successful, the distance indicator (green) will turn ON. • If the teaching is not successful, the threshold indicator (red) will start to flash.	
4	Set the mode selector switch to RUN .	
5	Set to L-ON or D-ON mode with the operation mode selector switch. L-ON: Output ON with the background. D-ON: Output OFF with the background.	

La: Distance equivalent to threshold (a)


Manual Teaching (Fine Distance Setting)

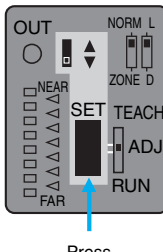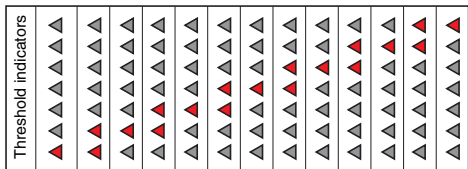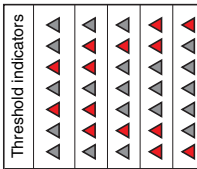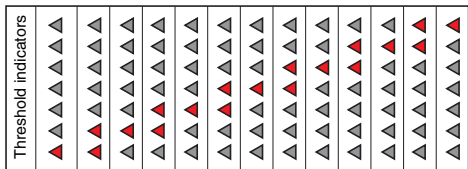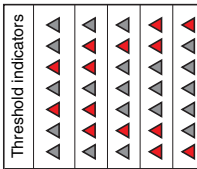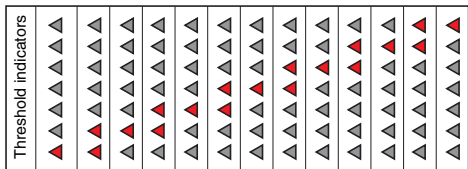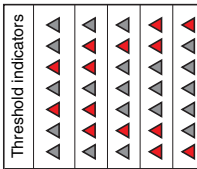Step	Operation	Panel status								
	Fine adjustment of the threshold is possible after teaching.									
1	Set the mode selector switch to ADJ .									
2	Set the adjustment direction in the ADJ mode with the UP/DOWN selector switch. The threshold changes each time the SET button is pressed. The setting can be made in up to 13 levels (for normal one-point or two-point teaching).	<div><p>OUT</p><p>NORM L</p><p>NEAR</p><p>ZONE D</p><p>SET</p><p>TEACH</p><p>ADJ</p><p>RUN</p><p>Press</p><p>[SET] pressed with UP/DOWN selector switch set to UP. → Threshold increases.</p><p>[SET] pressed with UP/DOWN selector switch set to DOWN. → Threshold decreases.</p></div>								
3	After the adjustment is complete, set the mode selector switch to RUN .	<p>Threshold Indicator Display during Distance Adjustment</p> <p>Max. 13 adjustment levels for normal teaching.</p> <table><tr><td>Threshold indicators</td><td></td></tr><tr><td>Level</td><td>1 2 3 4 5 6 7 8 9 10 11 12 13</td></tr></table> <p>Five adjustment levels for zone teaching.</p> <table><tr><td>Threshold indicators</td><td></td></tr><tr><td>Level</td><td>1 2 3 4 5</td></tr></table>	Threshold indicators		Level	1 2 3 4 5 6 7 8 9 10 11 12 13	Threshold indicators		Level	1 2 3 4 5
Threshold indicators										
Level	1 2 3 4 5 6 7 8 9 10 11 12 13									
Threshold indicators										
Level	1 2 3 4 5									

Threshold and Distance Indicator Displays


Display for Distance Setting with Normal One-point or Two-point Teaching

The distance indicators show the distance level. The distance indicators show distances relative to the threshold. The threshold can be shifted using the UP/DOWN selector and SET button. The differential travel cannot be changed.

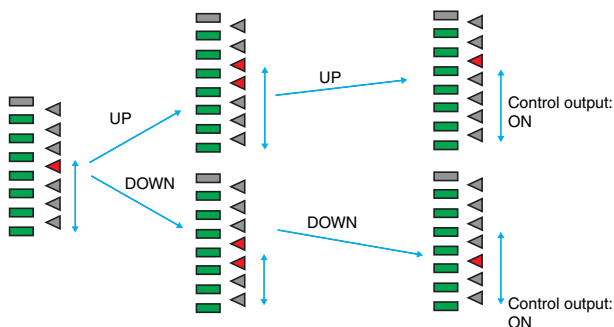

Display for Distance Setting with Zone Teaching

The distance indicators show the current distance band. The distance indicators show distances relative to the threshold. The ON range can be shifted using the UP/DOWN selector and SET button. The differential travel cannot be changed.

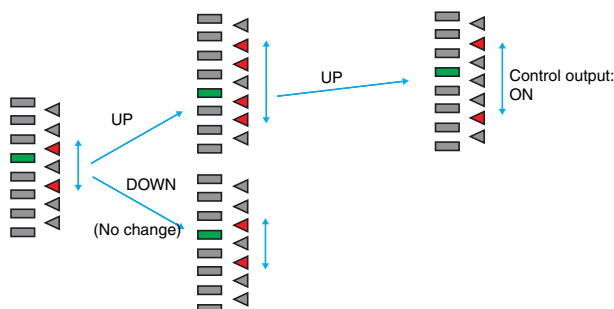

Safety Precautions

⚠ WARNING

This product is not designed or rated for ensuring safety of persons. Do not use it for such purpose.



Precautions for Correct Use

Do not use the product in atmospheres or environment that exceed product ratings.

● Wiring

Cable

The bending radius of the cable must be no smaller than 25 mm.

Avoiding Malfunctions

If using the Photoelectric Sensor with an inverter or servomotor, be sure to ground the FG (frame ground) and G (ground) terminals, otherwise the Sensor may malfunction.

● Mounting

Mounting Conditions


- If Sensors are mounted face-to-face, make sure that no optical axes cross each other. Otherwise, mutual interference may result.
- Be sure to install the Sensor carefully so that the directional angle range of the Sensor will not be directly exposed to intensive light, such as sunlight, fluorescent light, or incandescent light.
- Do not strike the Photoelectric Sensor with a hammer or any other tool during the installation of the Sensor, or the Sensor will lose its water-resistant properties.
- Use M3 screws to mount the Sensor.
- When mounting the case, make sure that the tightening torque applied to each screw does not exceed 0.54 N·m.

M8 Connector


- Always turn OFF the Sensor before connecting or disconnecting the M8 connector.
- Be sure to hold the connector cover when connecting or disconnecting the M8 connector.
- Secure the M8 connector by hand. Do not use any pliers, otherwise the connector may be damaged.
- If the M8 connector is not connected securely, the M8 connector may be disconnected by vibration or the proper degree of protection of the Sensor may not be maintained.

Mounting Directions


- Make sure that the sensing side of the Sensor is parallel with the surface of each sensing object. Do not incline the Sensor towards the sensing object.

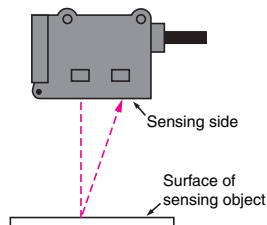


If the sensing object has a glossy surface, incline the Sensor by 5° to 10° as shown below, provided that the Sensor is not influenced by any background objects.

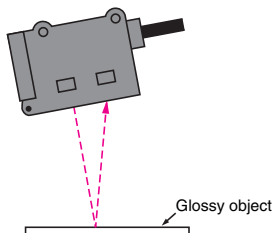


- If there is a mirror-like object below the Sensor, the Sensor may not be in stable operation. Therefore, incline the Sensor or keep the Sensor a distance away from the mirror-like object as shown below.

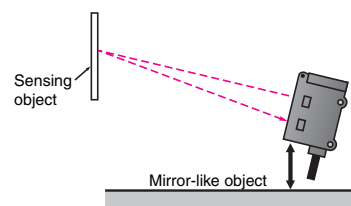

- Make sure not to install the Sensor in the incorrect direction. Refer to the following.

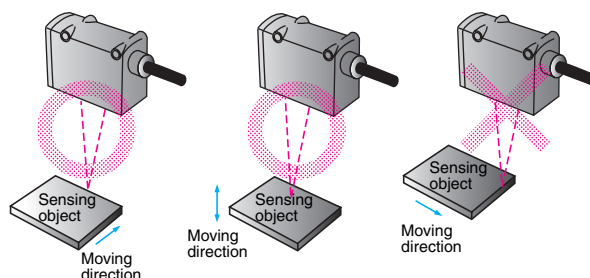

Install the Sensor as shown in the following if each sensing object greatly differs in color or material.

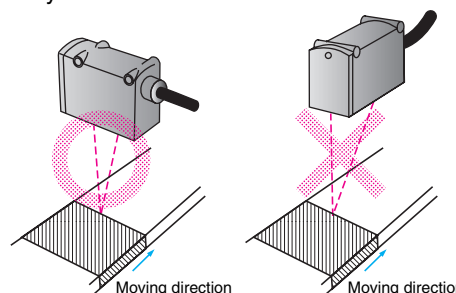

● Adjustments

If the Sensor is not in stable operation due to color differences, make a fine adjustment of the threshold level and confirm that Sensor operation is stable. Refer to *Manual Teaching (Fine Distance Setting)* → Page 11

● Maintenance and Inspection

Cleaning

Paint thinner will damage the casing of the Sensor. Do not use paint thinner to clean the Sensor.

● Others

EEPROM Writing Error

If a teaching data error occurs with the operation indicator flashing due to a power failure or static noise, perform the teaching operation of the Sensor again.

Water Resistivity

To ensure the water resistivity of the Sensor, tighten the screws of the operation panel cover to a torque of 0.2 to 0.3 N·m.

Dimensions



Unless otherwise specified, the tolerance class IT16 is used for dimensions in this data sheet.

Sensors

Pre-wired Models

E3G-L11/L31

E3G-L12/L32

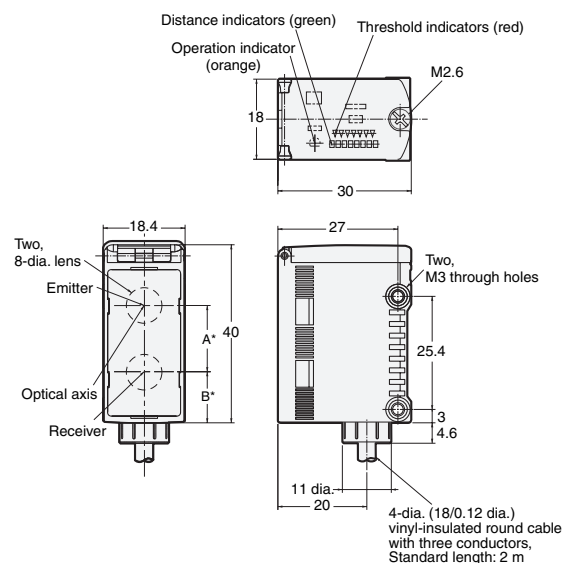
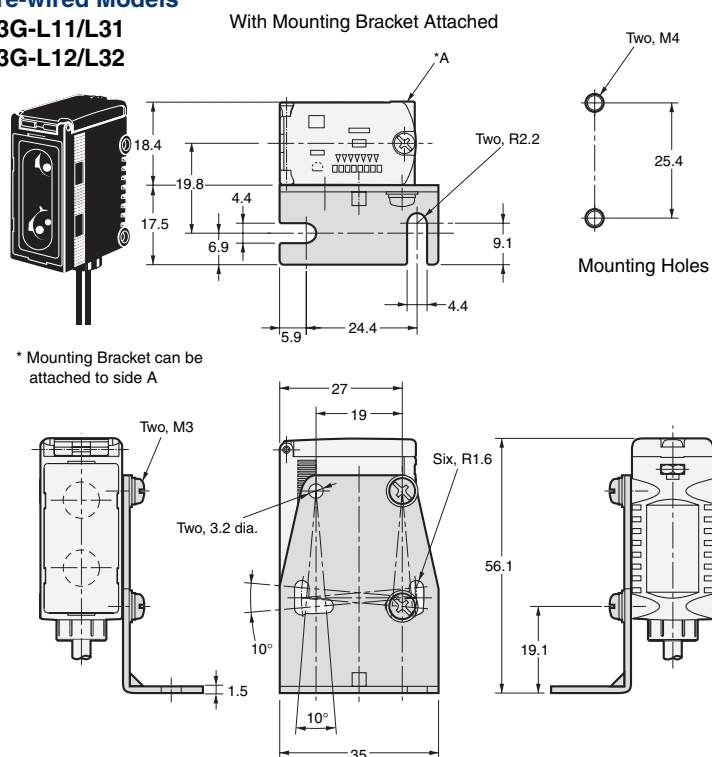


* Model	A	B
E3G-L1□	14.5	11.88
E3G-L3□	16	10.35

Connector Models

E3G-L15/L35

E3G-L16/L36

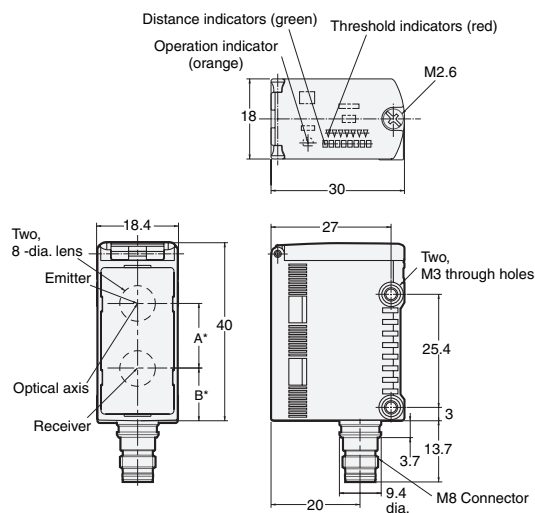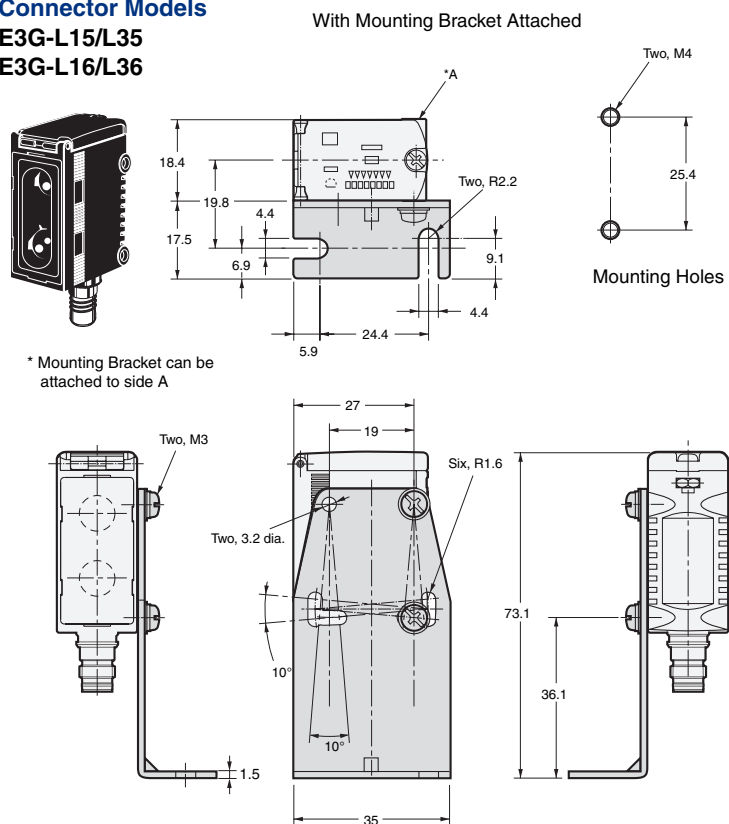

* Model	A	B
E3G-L1□	14.5	11.88
E3G-L3□	16	10.35

Accessories (Order Separately)

Mounting Brackets

In the interest of product improvement, specifications are subject to change without notice.

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this catalog.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

2008.9

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation
Industrial Automation Company

<http://www.ia.omron.com/>

(c)Copyright OMRON Corporation 2008 All Right Reserved.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Omron:

E3G-L35