New

Electro-Pneumatic Regulator Electronic Vacuum Regulator
















Compact Electro-Pneumatic Regulator Series IT V0000 Compact Vacuum Regulator Series IT V009




Cable connectors

Straight type and right angle type are available.

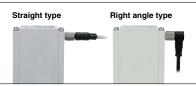

- Built-in One-touch fittings
- With error indication LED
- Brackets
 Flat and L-brackets are available.

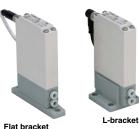

Realizes spacesaving and reduction of weight for manifold use.

Stations can easily be increased or decreased due to DIN rail mount design.


Model	Pressure range	Power supply voltage	Input signal	Output signal	Option	
ITV001□	0.1 MPa		4 to 20 mA DC		Cable connectors Straight type	
ITV003□	0.5 MPa		24 VDC		Analog	Straight type Right angle type
ITV005□	0.9 MPa			Output	Brackets Flat bracket	
ITV009□	-100 kPa		0 10 10 100		L-bracket	

.

- Equivalent to IP65
- Linearity: Within ±1% (F.S.)

 Hysteresis: Within 0.5% (F.S.)

 Repeatability: Within ±0.5% (F.S.)
- High-speed response time: 0.1 sec (Without load)
- High stability

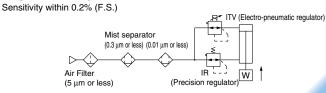

Electro-Pneumatic Regulator Series ITV1000/2000/3000 Electronic Vacuum Regulator Series ITV209



Added Fieldbus compliant specifications to Series *ITV1000/2000/3000*!

Reduced wiring

- Applicable Fieldbus protocols











ITV1000

ITV3000



ITV2000


Added RS-232C specification to serial communications!


- Sensitivity: Within 0.2% (F.S.)
- Linearity: Within ±1% (F.S.)
- Hysteresis: Within 0.5% (F.S.)
- IP65
- Cable connections in 2 directions
 Straight type
 Right angle type



■ Grease-free specification (Series ITV1000)

Application examples

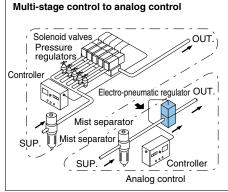

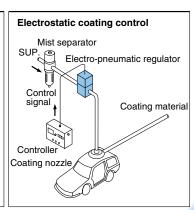



Electro-Pneumatic Regulator Electronic Vacuum Regulator

• Stepless control of air pressure proportional to an electrical signal.

Series ITV

Features 2

	Series	Model	Set pressure range	Input signal	Port size	Page
	Series ITV0000	ITV001□	0.001 to 0.1 MPa	Current type: 4 to 20 mA DC		
		ITV003□	0.001 to 0.5 MPa	Current type: 0 to 20 mA DC Voltage type: 0 to 5 VDC	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	1
	B	ITV005□	0.001 to 0.9 MPa	Voltage type: 0 to 10 VDC		
ō	Series ITV1000	ITV101□	0.005 to 0.1 MPa			
egulat	NATION AND ADDRESS OF THE PARTY	ITV103□	0.005 to 0.5 MPa		1/8, 1/4	9
atic R		ITV105□	0.005 to 0.9 MPa	Current type: 4 to 20 mA DC (Sink type)		
Pneum	Series ITV2000	ITV201□	0.005 to 0.1 MPa	Current type: 0 to 20 mA DC (Sink type)	1/4, 3/8	
ectro-	Series ITV2000	ITV203□	0.005 to 0.5 MPa	Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC		9
•		ITV205□	0.005 to 0.9 MPa	Preset input New CC-Link compatible		
	Series ITV3000 New New	ITV301□	0.005 to 0.1 MPa	New DeviceNet™ compatible New PROFIBUS DP compatible New RS-232C communication		
П	No.	ITV303□	0.005 to 0.5 MPa		1/4, 3/8, 1/2	9
		ITV305□	0.005 to 0.9 MPa			
n Regulator	Series ITV009□	ITV009□	−1 to −100 kPa	Current type: 4 to 20 mA DC Current type: 0 to 20 mA DC Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	27
Electronic Vacuum Regulator	Series ITV209	ITV209□	−1.3 to −80 kPa	Current type: 4 to 20 mA DC (Sink type) Current type: 0 to 20 mA DC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC Preset input New CC-Link compatible New PROFIBUS DP compatible New PROFIBUS DP compatible New RS-232C communication	1/4	34

SMC


Compact Electro-Pneumatic Regulator

Series ITV0000





How to Order

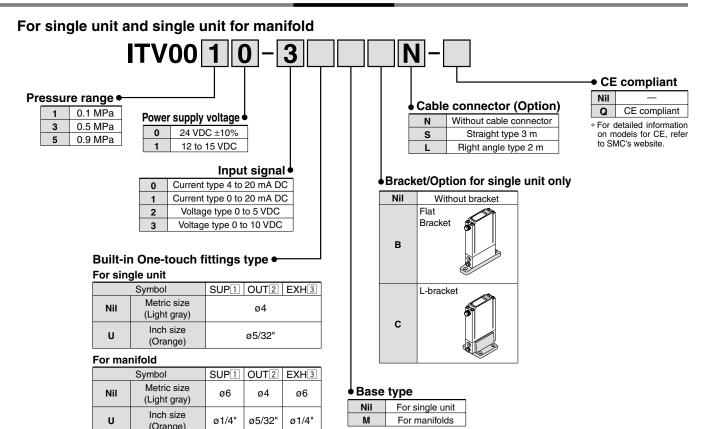

Manifold IITV00 - 02 Option If a DIN rail longer than Stations • the specified stations is 02 2 stations required, specify the 03 3 stations applicable stations in two digits. 10 stations (Maximum 10 stations) Example) IITV00-05-07 One-touch fitting size for supply/ exhaust parts (End plate) Nil ø6 (Light gray) ø1/4" (Orange) U

Note) A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

How to Order Manifold Assembly (Example)

Indicate the part numbers of electro-pneumatic regulators and options to be mounted below the manifold part number.

Example)

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.


IITV00-03.....1 set (Manifold part no.)

- *ITV0030-3MS-----2 sets (Electro-pneumatic regulator part no. (1, 2 stations))
- *ITV0030-3ML······1 set (Electro-pneumatic regulator part no. (3 stations))

Indicate part numbers in order starting from the first station on --

→ Note) Combination with having different pressure ranges is not available due to common supply/exhaust features.

The asterisk (∗) specifies mounting. Add an asterisk (∗) at the beginning of electro-pneumatic regulator part numbers to be mounted.

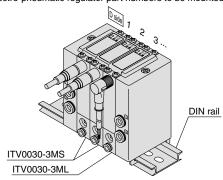



Compact Electro-Pneumatic Regulator Series ITV0000



Specifications

Mode	1	ITV001□	ITV003□	ITV005□	
Minimum supply p			et pressure +0.1 MF		
Maximum supply		0.2 MPa	1.0 MPa		
Set pressure range		0.001 to 0.1 MPa	0.001 to 0.5 MPa	0.001 to 0.9 MPa	
	Maximum flow rate		6 e/min(ANR) (Supply pressure: 0.6 MPa)	6 e/min(ANR) (Supply pressure: 0.6 MPa)	
	Voltage	24 V	/DC ±10%, 12 to 15	VDC	
Power supply	Current consumption		oltage 24 VDC type age 12 to 15 VDC ty		
Input signal	Voltage type	0	to 5 VDC, 0 to 10 VE	C	
iliput signai	Current type	4 to 2	20 mA DC, 0 to 20 m	A DC	
Input impedance	Voltage type	Approximately 10 k Ω			
input impedance	Current type	Approximately 250 Ω			
Output signal	Analog output	t 1 to 5 VDC (Load impedance: 1 kΩ or more) Output accuracy: Within ±6% (Full span)			
Linearity		Within ±1% (Full span)			
Hysteresis		Within 0.5% (Full span)			
Repeatability		Within ±0.5% (Full span)			
Sensitivity		Within 0.2% (Full span)			
Temperature chara	acteristics	Within ±0.12% (Full span)/°C			
Operating tempera	ture range	0 to 50°C (No condensation)			
Enclosure	Enclosure		Equivalent to IP65 *		
Connection type		Built-in One-touch fittings			
	For single unit	Metric size		3: ø4	
Connection size	Tor single unit	Inch size	1, 2, 3	: ø5/32"	
Commodition Size	Manifold	Metric size	1, 3: ø6, 2: ø4		
		Inch size	1, 3: ø1/4", 2: ø5/32"		
Weight Note 1)			g or less (without op	tion)	

Note 1) Indicates the weight of a single unit.

For IITV00-n

Total weight (g) \leq Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail

Note 2) When there is a downstream flow consumption, pressure may become unstable depending on piping conditions.

Note 3) When the power is turned on, a noise may be generated. This noise is normal and does not indicate a fault.

* When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on back page 2)

Accessories (Option)

Bracket

Flat bracket assembly (includes 2 mounting screws) P39800022



L-bracket assembly (includes 2 mounting screws) P39800023



Tighting torque when assembling is 0.3 N·m.

Cable connector

Straight type M8-4DSX3MG4



Right angle type ELWIKA-KV4408 PVC025 2M






Series ITV0000


Working Principle

When the input signal rises, the air supply soloenoid valve 1 turns ON. Due to this, part of the supply pressure passes through the air supply solenoid valve 1 and changes to output pressure. This output pressure feeds back to the control circuit 4 via the pressure sensor 3. Here, pressure corrections continue until output pressure becomes proportional to the input signal, enabling output pressure that is proportional to the input signal.

Diagram of working principle

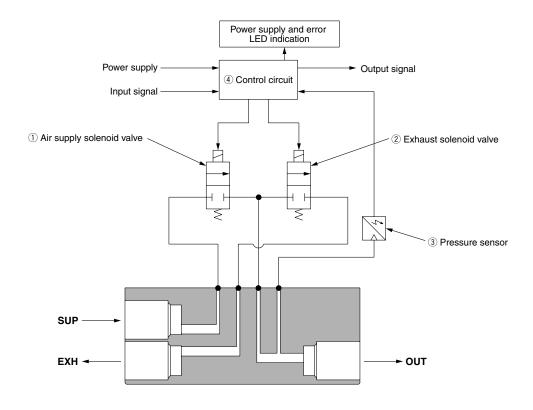



Block diagram

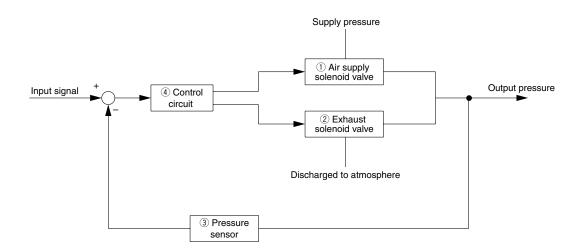





Series ITV001□

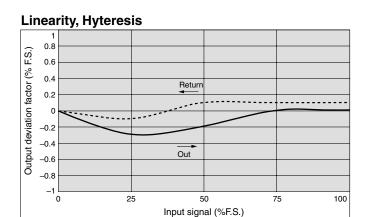


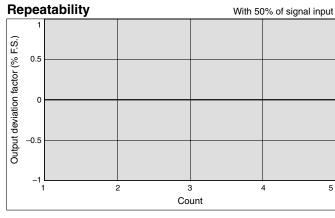


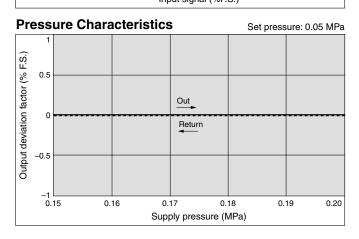


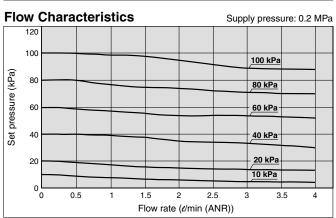


Series ITV003□

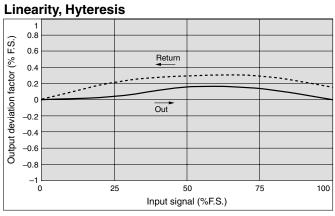

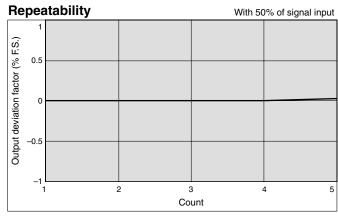

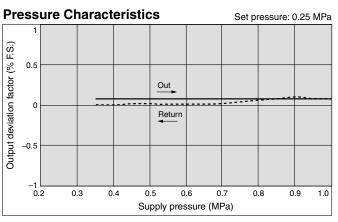


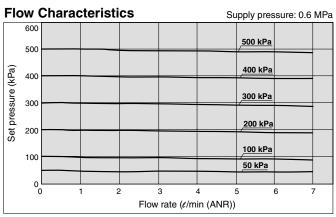



Series ITV0000


Series ITV005□

Linearity, Hyteresis

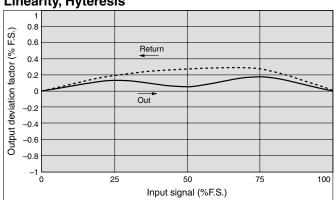


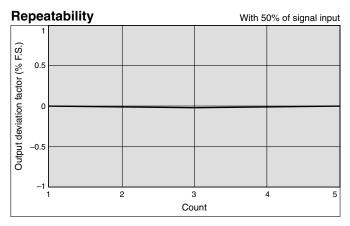

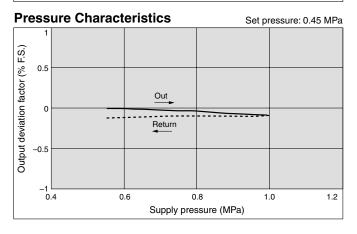

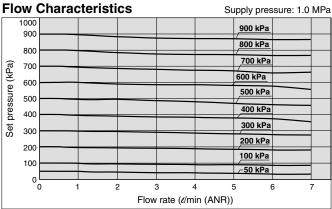


Dimensions

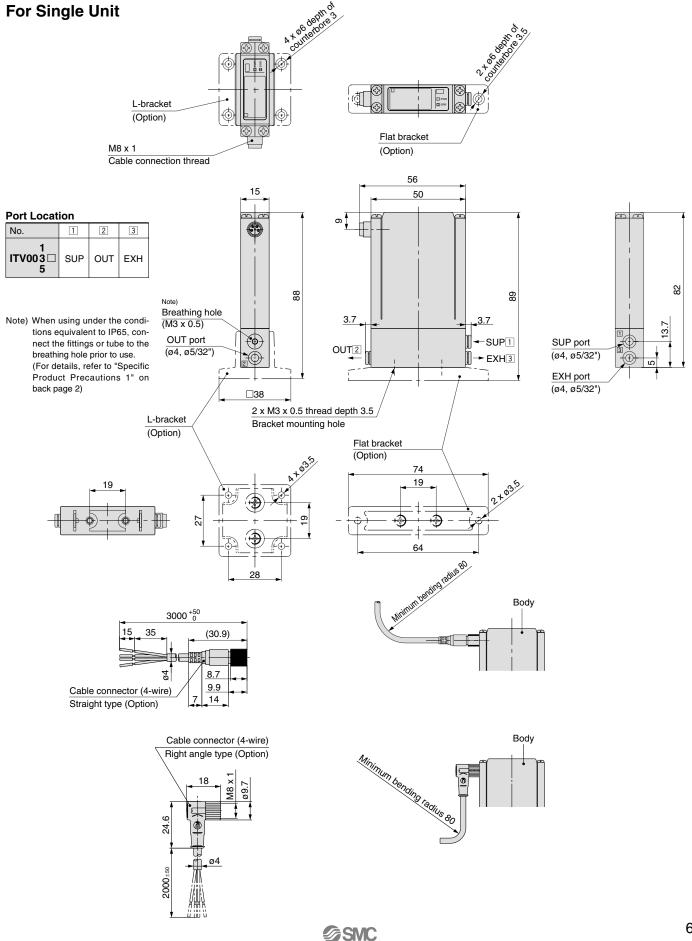


Series ITV0000


Dimensions


Single unit for manifold

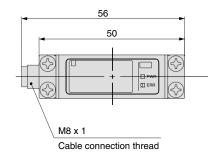


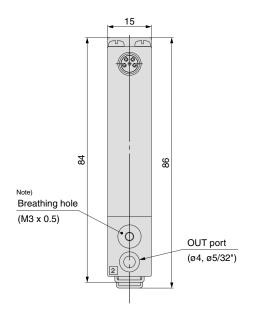

Note) When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on back page 2)

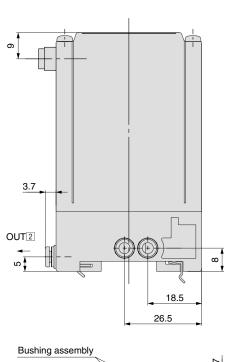

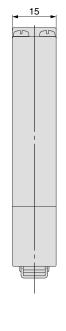


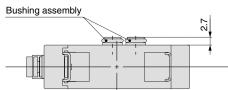

Note) For dimensions of the cable connector, refer to single unit on page 6.

Dimensions


Manifold

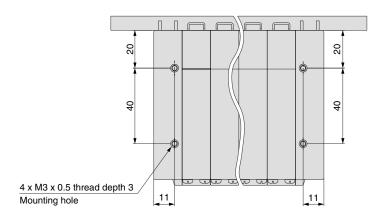



Port Location

No.	1	2	3
1 ITV003□ 5	SUP	OUT	EXH

Note) Stations are counted starting from the D side.

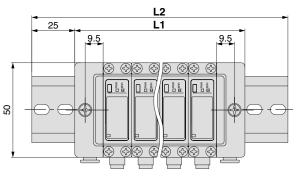

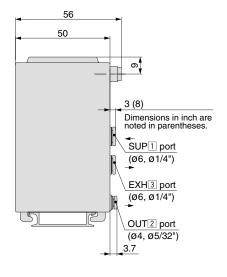

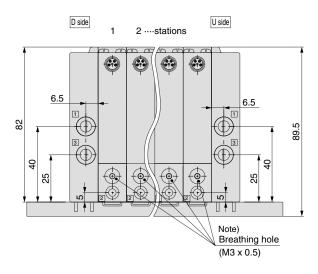

Note) For dimensions of the cable connector, refer to single unit on page 6.

									(mm)
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail (g)	20	22	27	29	31	34	36	41	43

Note) When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on back page 2).




Electro-Pneumatic Regulator

Series ITV1000/2000/3000



How to Order

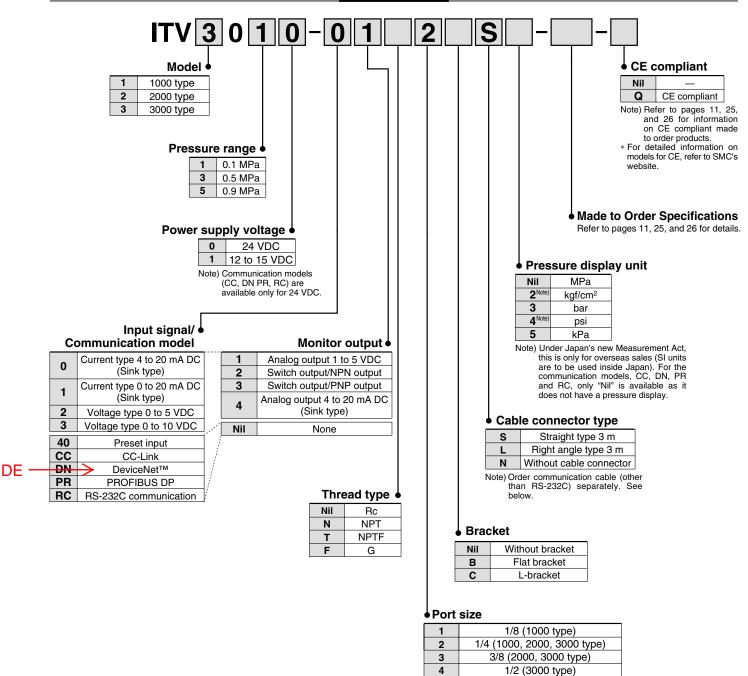

For communication cables, use the parts listed below (refer to the catalog [M8/M12 Connector] CAT.ES100-73 for details)

or order the product certified for the respective protocol (with M12 connector) separately.

Application	Communication cable part number	Remarks		
CC-Link compatibility	PCA-1567720 (Socket type)	Dedicated Bus adapter supplied		
CC-Link compatibility	PCA-1567717 (Plug type)	with the product.		
DeviceNet [™] PCA-1557633 (Socket type)		T-branch connector not supplied.		
compatibility	PCA-1557646 (Plug type)	1-branch connector not supplied.		
PROFIBUS DP	PCA-1557688 (Socket type)	T branch connector not cumplied		
compatibility	PCA-1557691 (Plug type)	T-branch connector not supplied.		



ITV1000 ITV2000 ITV3000 Fieldbus-compatible

JIS Symbol


Rated pressure

Output pressure

0.005MPa 0

model

Standard Specifications

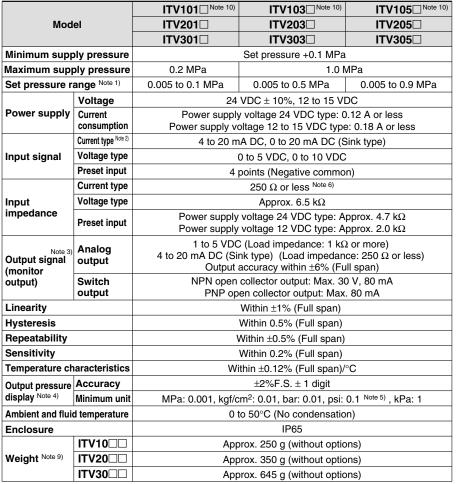

- Note 1) Please refer to Figure 1 for the relationship between set pressure and input. Because the maximum set pressure differs for each pressure display, refer to back page 6.
- Note 2) 2-wire type 4 to 20 mA DC is not available. Power supply voltage (24 VDC or 12 to 15 VDC) is required. Note 3) Select either analog output or switch output.
- Further, when switch output is selected, select either NPN output or PNP output.

 Note 4) Adjustment of numerical values such as the zero/span adjustment or preset input type is set based on the minimum units for output pressure display (e.g. 0.01 to 0.50 MPa). Note that the unit cannot be changed. Note 5) The minimum unit for 0.9 MPa (130 psi) types is 1 psi.
- Note 6) Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input current. This is 350 Ω or less for an input current of 20
- Note 7) The above characteristics are confined to the static state. When air is consumed on the output side, the pres-
- sure may fluctuate.

 Note 8) For communication models, the maximum current consumption is 0.16 A or less
- Note 9) For communication models, add roughly 80 g to the weight (100 g for the PROFIBUS DP). Note 10) The ITV1000 series is a Grease-free specification (Wetted parts).

Communication Specifications (CC, DN, PR, RC)

Input signal (%F.S.) Figure 1. Input/output characteristics chart

This range is outside of the control (output)

Model	ITV□0□0-CC	ITV□0□0-DN	ITV□0□0-PR	ITV□0□0-RC
Protocol	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C
Version Note 1)	Ver 1.10	Release2.0	DP-V0	_
Communication speed	156 k/625 k 2.5 M/5 M/10 M bps	125 k/250 k/500 k bps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 M bps	9.6 kbps
Configulation file Note 2)	_	EDS	GSD	_
I/O occupation area (input/output data)	4 word/4 word, 32 bit/32 bit (per station, remote device station)	16 bit/16 bit	16 bit/16 bit	_
Communication data resolution	12 bit (4096 resolution)	12 bit (4096 resolution)	12 bit (4096 resolution)	10 bit (1024 resolution)
Fail safe	HOLD Note 3)/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD
Electric insulation Note 4)	No	No	Yes No	
Terminating resistor	_		Built into the product (Switch setting)	_

Note 1) Note that version information is subject to change.


Note 2) Configulation files can be downloaded from the SMC's website: http://www.smcworld.com


Note 3) The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.

Note 4) The insulation between the electrical signal of the communication system and ITV power supply.



Series ITV1000/2000/3000

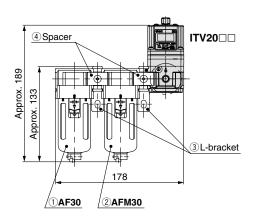

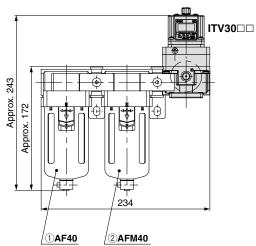

Combinations

Standard specifications

○ Combination □ possible

Combination not possible

* ITV10 models are not applicable.

		Symbol	Applicab	le model
	Specifications		ITV20□□	ITV30□□
	Set pressure max. 0.1 MPa	1	0	0
Standard specifications	Set pressure max. 0.5 MPa	3	0	0
Standard	Set pressure max. 0.9 MPa	5	0	0
cifia	Connection Rc 1/4	02	0	0
Seg	Connection Rc 3/8	03	0	0
,	Connection Rc 1/2	04		0
Acces-	Bracket	В	0	0
sories	Bracket	С	0	0
ဟ	Connection NPT1/4	N02	0	0
le je	Connection NPT3/8	N03	0	0
Optional specifications	Connection NPT1/2	N04		0
g g	Connection G 1/4	F02	0	0
) eds	Connection G 3/8	F03	0	0
	Connection G 1/2	F04		0

Modular Products and Accessory Combinations

* ITV10 models are not applicable.

Applicable products and accessories	Applicable model				
Applicable products and accessories	ITV20□□	ITV30□□			
1) Air filter	AF30	AF40			
② Mist separator	AFM30	AFM40			
③ L-bracket	B310L	B410L			
4 Spacer	Y30	Y40			
5 Spacer with L-bracket (3 + 4)	Y30L	Y40L			
6 Spacer with T-bracket	_	Y40T			

Accessories (Option)/Part No.

Symbol	CE-compliant	Specifications	
X81	Not compliant	16 points preset input type	
X156	Compliant	To points preset input type	
X93	Not compliant	Digital input type	
X157	Compliant	Digital input type	
X102	Not compliant	Reverse type	
X321	Compliant	neverse type	
X224	Not compliant	High pressure type	
X322	Compliant	(SUP 1.2 MPa, OUT 1.0 MPa)	
X25	Not compliant	Set pressure range 1 to 100 kPa	
X323	Compliant	(Except Series ITV3000)	
X88	Not compliant	(Except Series ITV3000)	
X154	Compliant		
X26	Not compliant		

(Refer to pages 25 and 26 for details.)

Made to Order


Note 1) Manifolds are compatible with 2 to 8 stations. Consult with SMC for 9 stations or more.

X153 | Compliant (Except Series ITV3000)

Note 2) Products without symbols are also compatible. Consult with SMC separately.

De	poorintion	Part No.				
De	escription	ITV10□□	ITV20□□	ITV30□□		
Flat bracket assembly	(including mounting screws)	KT-ITV-F1	KT-ITV-F2			
L-bracket assembly (including mounting screws)		KT-ITV-L1	KT-IT	V-L2		
Straight type 3 m		P398020-500-3 (P398020-504-3 for DeviceNet™)				
connector	nector Right angle type 3 m		P398020-501-3 (P398020-505-3 for DeviceNet™)			
Bus adapter (CC-	Link model only)	EX9-ACY00-MJ				

Dimensions

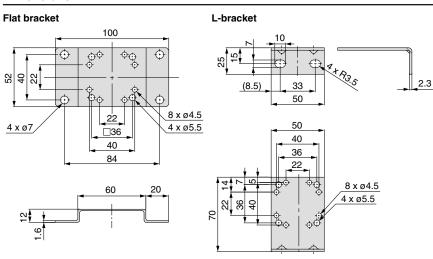




Working Principles

When the input signal rises, the air supply solenoid valve ① turns ON, and the exhaust solenoid valve ② turns OFF. Therefore, supply pressure passes through the air supply solenoid valve ① and is applied to the pilot chamber ③. The pressure in the pilot chamber ③ increases and operates on the upper surface of the diaphragm ④.


As a result, the air supply valve 5 linked to the diaphragm 4 opens, and a portion of the supply pressure becomes output pressure.

This output pressure feeds back to the control circuit ® via the pressure sensor ⑦. Here, a correct operation functions until the output pressure is proportional to the input signal, making it possible to always obtain output pressure proportional to the input signal.

Working Principle Diagram

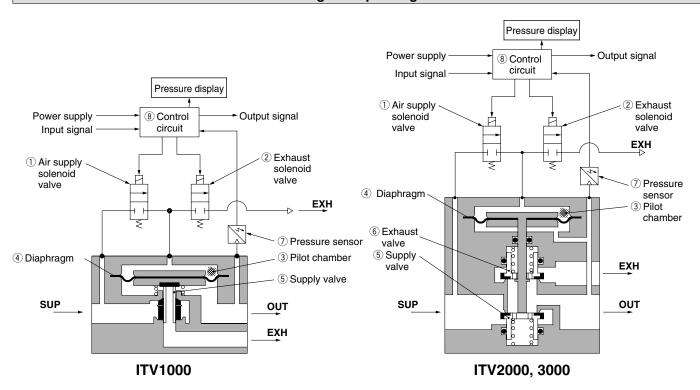

Block diagram

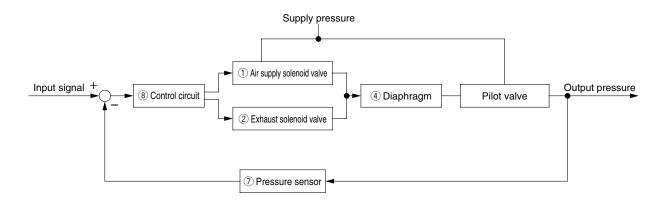





Series ITV1000/2000/3000

Series ITV101


Linearity

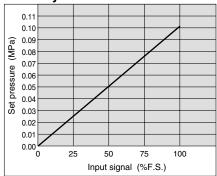


Hysteresis

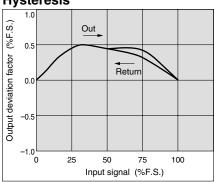


Repeatability

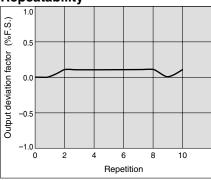


Pressure characteristics Set pressure: 0.05 MPa

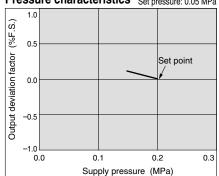

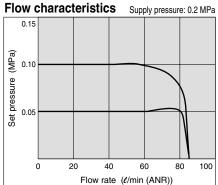


Relief flow characteristics Supply pressure: 0.2 MPa

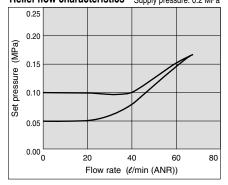


Series ITV201□


Linearity

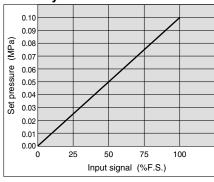


Hysteresis

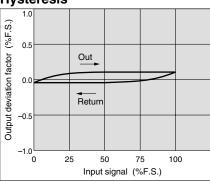


Repeatability

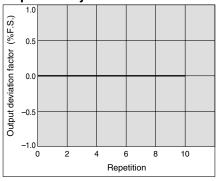


Pressure characteristics Set pressure: 0.05 MPa

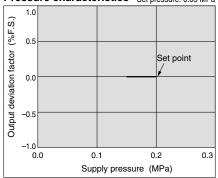

Flow characteristics

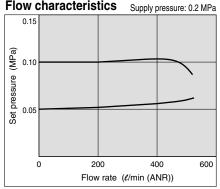


Relief flow characteristics Supply pressure: 0.2 MPa

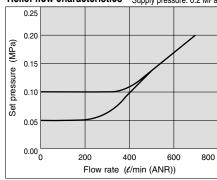




Series ITV301□


Linearity

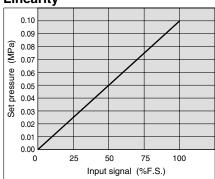


Hysteresis

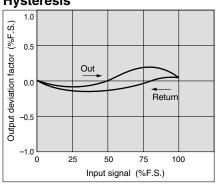


Repeatability

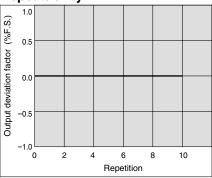


Pressure characteristics Set pressure: 0.05 MPa

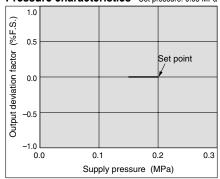



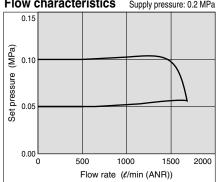

Relief flow characteristics Supply pressure: 0.2 MPa

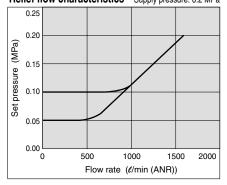





Series ITV1000/2000/3000

Series ITV103□


Linearity

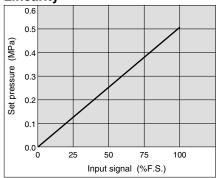


Hysteresis

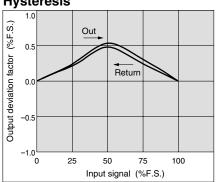


Repeatability

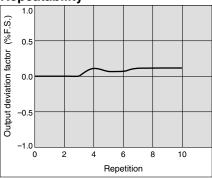


Pressure characteristics Set pressure: 0.2 MPa

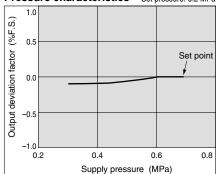

Flow characteristics

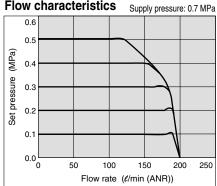


Relief flow characteristics Supply pressure: 0.7 MPa

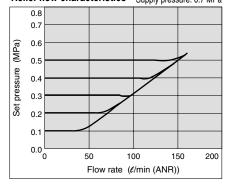


Series ITV203□


Linearity

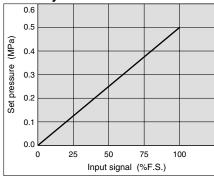


Hysteresis

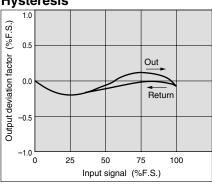


Repeatability

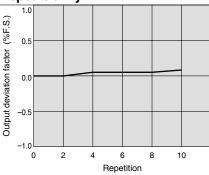


Pressure characteristics Set pressure: 0.2 MPa

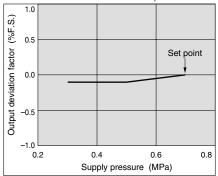

Flow characteristics Supply pressure: 0.7 MPa

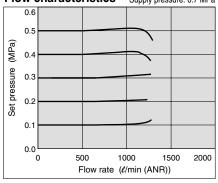


Relief flow characteristics Supply pressure: 0.7 MPa

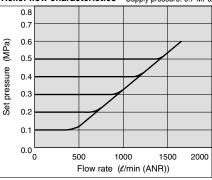




Series ITV303□


Linearity

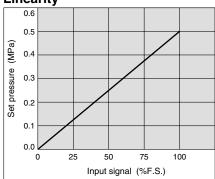


Hysteresis

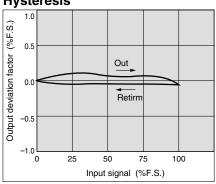


Repeatability

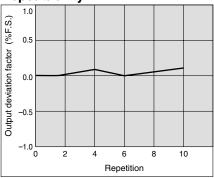


Pressure characteristics Set pressure: 0.2 MPa

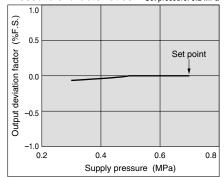

Flow characteristics Supply pressure: 0.7 MPa

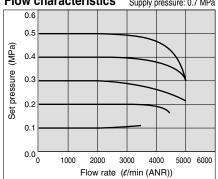

Relief flow characteristics Supply pressure: 0.7 MPa

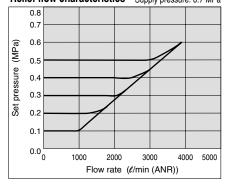





Series ITV1000/2000/3000

Series ITV105


Linearity

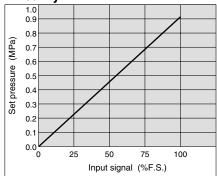


Hysteresis

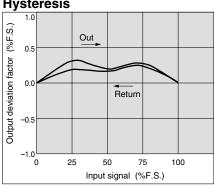


Repeatability

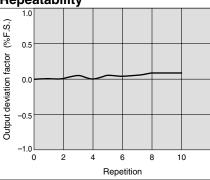


Pressure characteristics Set pressure: 0.4 MPa

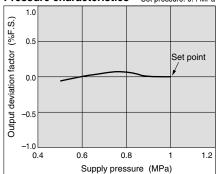

Flow characteristics Supply pressure: 1.0 MPa

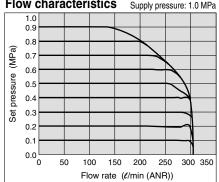


Relief flow characteristics Supply pressure: 1.0 MPa

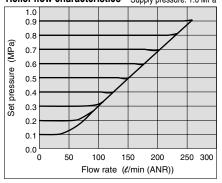


Series ITV205□


Linearity

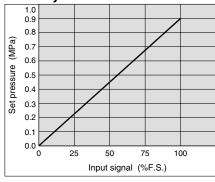


Hysteresis

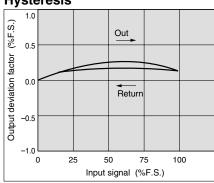


Repeatability

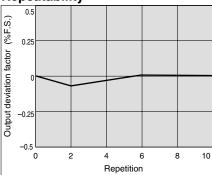


Pressure characteristics Set pressure: 0.4 MPa

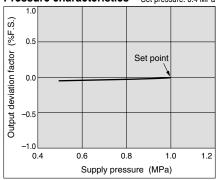

Flow characteristics Supply pressure: 1.0 MPa

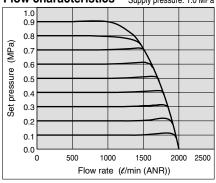

Relief flow characteristics Supply pressure: 1.0 MPa

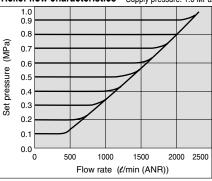







Series ITV305


Linearity

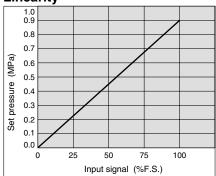


Hysteresis

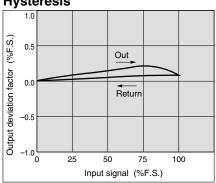


Repeatability

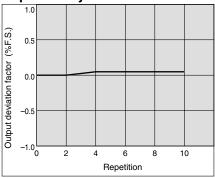


Pressure characteristics Set pressure: 0.4 MPa

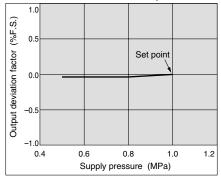

Flow characteristics Supply pressure: 1.0 MPa

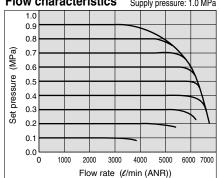

Relief flow characteristics Supply pressure: 1.0 MPa

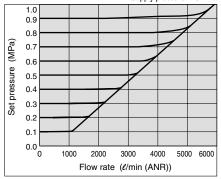





Series ITV1000/2000/3000

Dimensions


ITV10□□ Flat bracket

Note) Do not attempt to rotate, as the cable connector does not turn.

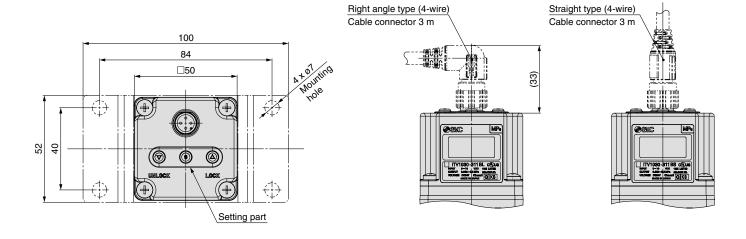

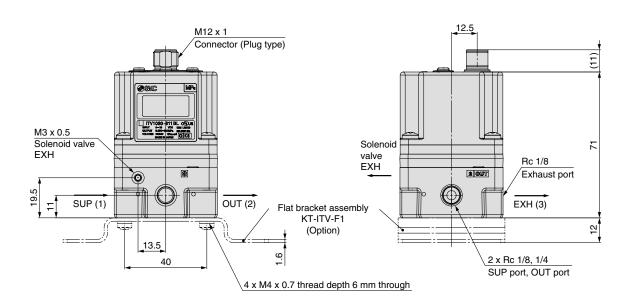

L-bracket

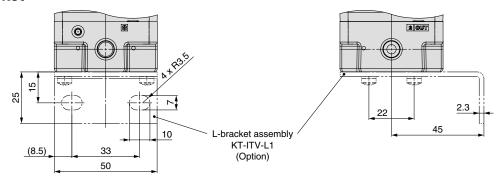




Dimensions (CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

CC-Link/ITV10□0-CC M12 x 1 M1<u>2 x 1</u> Communication cable Communication cable connection thread connection thread (Plug type) (Socket type) 10 M12 x 1 Power cable connection thread (Plug type) BUS adapter 8.5 8 Solenoid M3 x 0.5 valve Rc 1/8 Solenoid EXH Exhaust valve EXH port OUT (2) EXH (3) **SUP (1)** 2 x Rc 1/8, 1/4 SUP port, OUT port


* Dimensions not shown are as on page 19

DeviceNet™/ITV10□0-DN

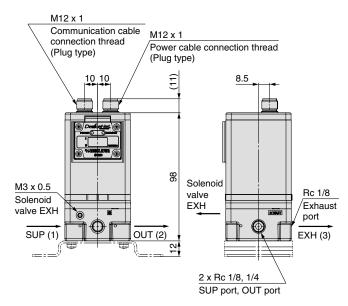


* Dimensions not shown are as on page 19

PROFIBUS DP/ITV10□0-PR

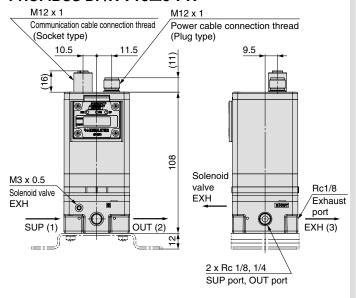

st Dimensions not shown are as on page 19.

RS-232C/ITV10□0-RC

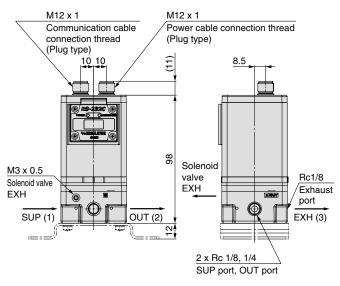


* Dimensions not shown are as on page 19.

With power cable connector ∗ ITV10□0- PR common dimensions

Note) Order communication cable (other than RS-232C) separately. (Refer to page 9.)



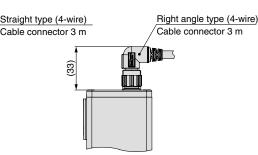

Note) Do not attempt to rotate, as the cable connector does not turn.




Series ITV1000/2000/3000


Dimensions

ITV20□□


Flat bracket

Note) Do not attempt to rotate, as the cable connector does not turn.

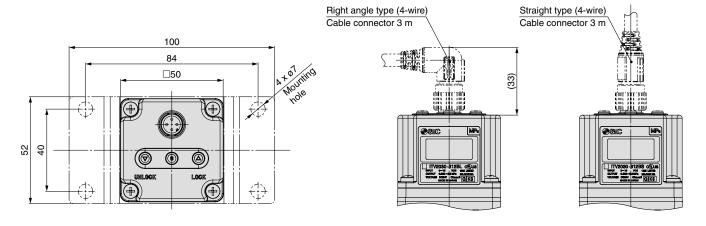

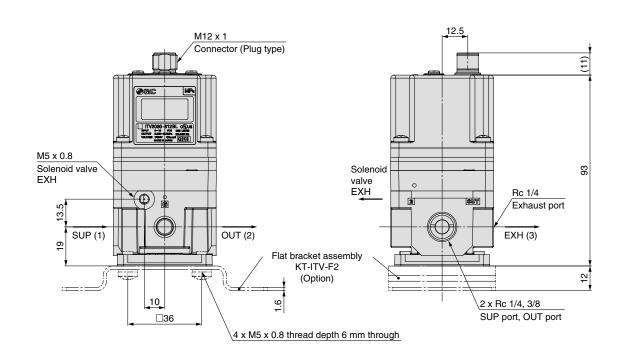

L-bracket

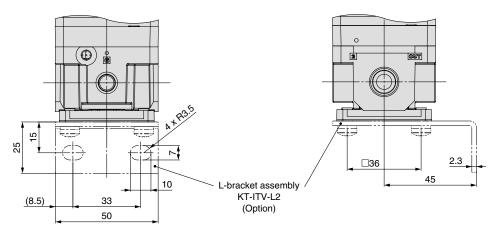



DeviceNet™/ITV20□0-DN

* Dimensions not shown are as on page 21.


Dimensions (CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)


CC-Link/ITV20□0-CC M12 x 1 M12 x 1 Communication cable connection thread Communication cable connection thread (Plug type) 10 (Socket type) M12 x 1 Power cable connection thread (Plug type) (53) BUS adapter 8.5 Solenoid M5 x 0.8 valve Rc 1/4 Solenoid EXH Exhaust valve EXH port EXH (3) SUP (1) OUT (2) 12 2 x Rc 1/4, 3/8 SUP port, OUT port * Dimensions not shown are as on page 21.

M12 x 1 Communication cable M12 x 1 connection thread Power cable connection thread (Plug type) (Plug type) 120 Solenoid M5 x 0.8 valve Rc 1/4 Solenoid EXH Exhaust valve EXH (**©**) port OUT (2) SUP (1 EXH(3) 12 2 x Rc 1/4, 3/8

SUP port, OUT port

PROFIBUS DP/ITV20□0-PR Power cable connection thread Communication cable connection thread (Socket type) (Plug type) 10.5 11.5 Solenoid M5 x 0.8 valve Rc 1/4 Solenoid EXH Exhaust valve EXH port SUP (1) OUT (2) EXH (3) 2 x Rc 1/4, 3/8 SUP port, OUT port * Dimensions not shown are as on page 21.

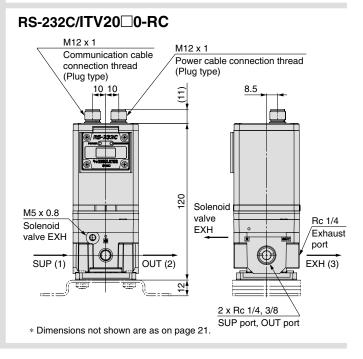

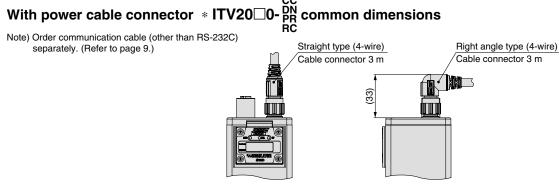

Note) Do not attempt to rotate, as the cable connector does not turn.




Series ITV1000/2000/3000


Dimensions


ITV30□□

Flat bracket


Note) Do not attempt to rotate, as the cable connector does not turn.

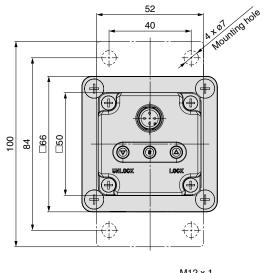

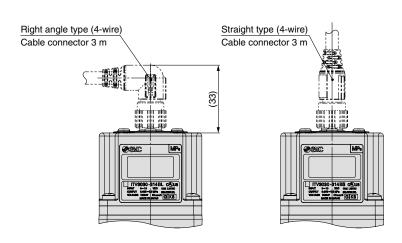

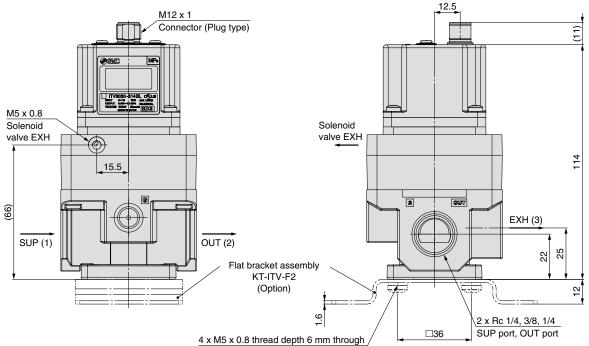

L-bracket

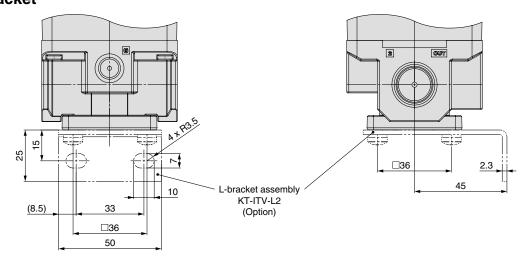




DeviceNet™/ITV30□-DN


Dimensions (CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

CC-Link/ITV30□-CC M12 x 1 Communication cable connection thread 10 10 Communication cable connection (Plug type) thread (Socket type) M12 x 1 Power cable connection thread (23)(Plug type) BUS adapter 8.5 M5 x 0.8 Solenoid 51 valve EXH Solenoid valve EXH FXH (3) OUT (2) SUP (1) 2 x Rc1/4, 3/8, 1/4 SUP port, OUT port * Dimensions not shown are as on page 23.

M12 x 1 Communication cable M12 x 1 connection thread Power cable connection thread Plug type ío 10 (Plug type) M5 x 0.8 Solenoid valve 4 EXH Solenoid valve EXH EXH (3) SUP (1) OUT (2) 25 2 x Rc 1/4, 3/8, 1/4 SUP port, OUT port * Dimensions not shown are as on page 23.

PROFIBUS DP/ITV30□-PR M12 x 1 Power cable connection thread Communication cable connection thread (Socket type) (Plug type) 10.5 M5 x 0.8 Solenoid 5 valve Solenoid valve EXH EXH (3) OUT (2) SUP (1) 2 x Rc 1/4, 3/8, 1/4 SUP port, OUT port * Dimensions not shown are as on page 23.

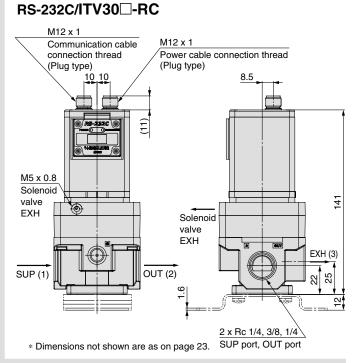

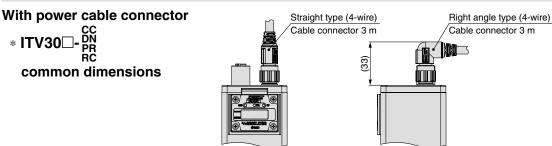

Note) Do not attempt to rotate, as the cable connector does not turn.



Series ITV1000/2000/3000 Made to Order Specifications 1 Please contact SMC for detailed dimensions, specifications and lead times.



Symbol CE-compliant

X81 Not compliant

X156 Compliant

16 Points Preset Input Type

Able to control 16-point-pressure by 4 bit switching input

ITV10 0 - 4 2
ITV20 0 - 4 2
ITV30 0 - 4 2

Note 1) \square in part number is the same model no. for the standard products.

Note 2) Monitor output is switch output type only. This cannot be selected for types without a monitor output or with analog output.

Note 3) Values can be adjusted starting from the minimum output pressure display units.


MPa	kgf/cm ²	bar	psi	kPa
0.01	0.01	0.01	0.1	1

^{* 130} psi type: 1 psi

Reverse Type


In compliance with input, inverse proportional pressure is displayed.



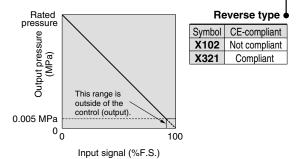

Input/output characteristics chart

Note 1) \square in part number is the same model no. for the standard products. Note 2) Except for preset input type.

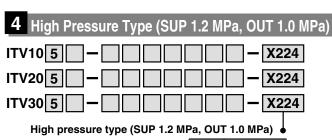

	•				
Symbol	CE-compliant				
X224	Not compliant				
X322	Compliant				

Digital Input Type

Parallel input type with digital 10 bit.

ITV10 0 - 4 0 S - X93
ITV20 0 - 4 0 S - X93
ITV30 0 - 4 0 S - X93

Digital input type

Symbol	CE-compliant
X93	Not compliant
X157	Compliant

Note 1) $\ \square$ in part number is the same model no. for the standard products. Note 2) Right angle type cable connectors cannot be selected.

5 Set Pressure Range ITV10 1

Set pressure range 1 to 100 kPa

•	iige i t	o ioo ki a •					
	Symbol	CE-compliant					
	X25	Not compliant					
	X323	Compliant					




ITV20 1

Series ITV1000/2000/3000 Made to Order Specifications 2 Please contact SMC for detailed dimensions, specifications and lead times.



6 High-Speed Response Time Type


Pressure response with no load is approx. 0.1 sec.

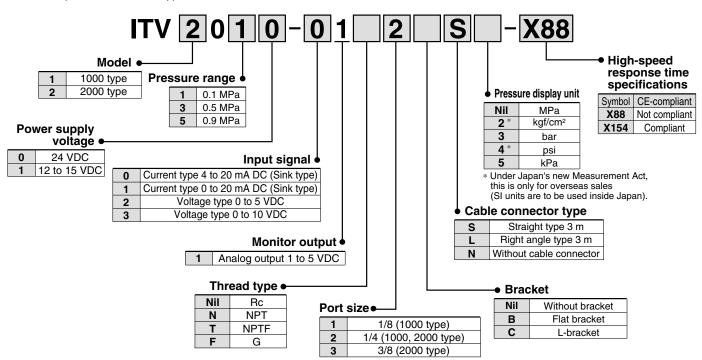

Manifold Specifications (Except Series ITV3000)

2 through 8 station manifold.

How to Order Manifolds

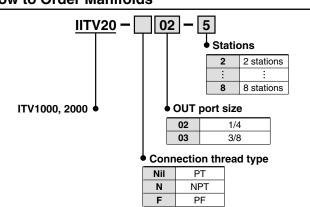


IITV20-02-3
The * is the symbol for mounting. Add the * symbol at the beginning of part numbers for electro-pneumatic regulators, etc. to be mounted on the base.

Note) Refer to the table below for possible mixed combination.

Model	ITV101□	ITV103□	ITV105□	ITV201□	ITV203□	ITV205□			
ITV101□	•	_	_	•	_	_			
ITV103□	_	•	•	_	•	•			
ITV105□	_	•	•	_	•	•			
ITV201□	•	_	_	•	_	_			
ITV203□	_	•	•	_	•	•			
ITV205□		•	•	_	•	•			

How to Order Manifold Assemblies

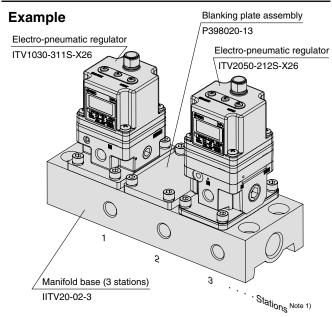

- Note 1) Electro-pneumatic regulators are counted starting from station 1 on the left side with the OUT ports in front.

 Note 2) The port size for mounted electro-pneumatic regulators is Rc 1/8
- (ITV1000), Rc 1/4 (ITV2000) only.
- Note 3) When there is a large number of stations, use piping with the largest possible inside diameter for the supply side, such as steel piping.

 Note 4) The use of the straight type cable connector is recommended. To
- mount right angle type, be certain to check that no possible interference occurs.
- Note 5) When mounting a blanking plate and the regulator with different pressure set, please inform SMC of the order of a manifold station beside a purchase order.



Compact Vacuum Regulator


Series ITV009






How to Order

For single unit and single unit for manifold

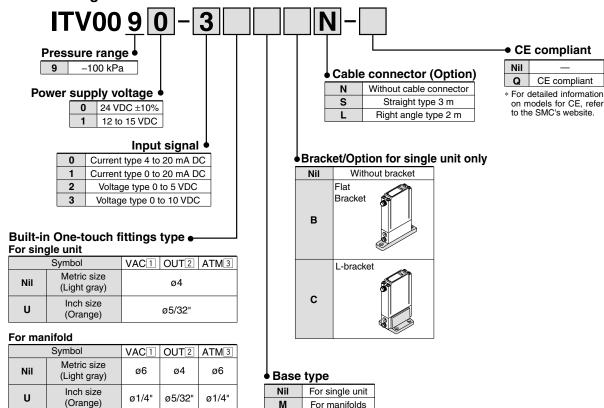



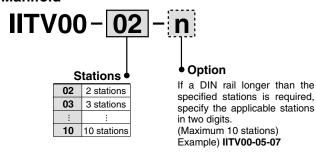

Note) A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

How to Order Manifold Assembly (Example)


Indicate the part numbers of electro-pneumatic regulators and options to be mounted below the manifold part number.

Example)

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.

IITV00-03.....1 set (Manifold part no.)

- *ITV0090-3MS-----2 sets (Vacuum regulator part no. (1, 2 stations))
- *ITV0090-3ML······1 set (Vacuum regulator part no. (3 stations))
 - Indicate part numbers in order starting from the first station on ← the D side.
 - Note) Combination with having different pressure ranges is not available due to common supply/exhaust features.
 - The asterisk (*) specifies mounting. Add an asterisk (*) at the beginning of electro-pneumatic regulator part numbers to be mounted.

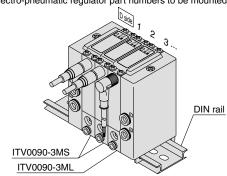



Specifications



Model		ITV009□					
Minimum supply pressure		Set pressure –1 kPa					
Maximum supply p	ressure	-101 kPa					
Set pressure range	•		-1 to -100 kPa				
Maximum flow rate	•	2 ℓ/min (ANR) (Supply pressure: –101 kPa)					
	Voltage		24 VDC ±10%, 12 to 15 VDC				
Power supply	Power supply Current consumption		Power supply voltage 24 VDC type: 0.12 A or less Power supply voltage 12 to 15 VDC type: 0.18 A or less				
Input signal	Voltage type		0 to 5 VDC, 0 to 10 VDC				
iliput signai	Current type	4 to 20 mA DC, 0 to 20 mA DC					
Input impedance	Voltage type	Approximately 10 kΩ					
input impedance	Current type		Approximately 250 Ω				
Output signal Analog output		1 to 5 VDC (Load impedance: 1 $k\Omega$ or more) Output accuracy: Within $\pm 6\%$ (Full span)					
Linearity			Within ±1% (Full span)				
Hysteresis			Within 0.5% (Full span)				
Repeatability		Within ±0.5% (Full span)					
Sensitivity		Within 0.2% (Full span)					
Temperature chara	ecteristics	Within ±0.12% (Full span)/°C					
Operating tempera	ture range	0 to 50°C (No condensation)					
Enclosure		IP65 equivalent *					
Connection type		Built-in One-touch fittings					
	For single	Metric size	1, 2, 3: ø4				
Connection size	unit	Inch size	1, 2, 3: ø5/32"				
Commodition size	Manifold	Metric size	1, 3: ø6, 2: ø4				
	Marinoid	Inch size 1, 3: Ø1/4", 2: Ø5/32"					
Weight Note 1)		100 g or less (without option)					

Note 1) Indicates the weight of a single unit.

For IITV00-n

Total weight (g) \leq Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail

Note 2) When there is a downstream flow consumption, pressure may become unstable depending on piping conditions.

* When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on back page 2)

Accessories (Option)

Bracket

Flat bracket assembly (including 2 mounting screws) P39800022



L-bracket assembly (including 2 mounting screws) P39800023



Tighting torque when assembling is 0.3 N·m.

Cable connector

Straight type M8-4DSX3MG4



Right angle type ELWIKA-KV4408 PVC025 2M






Series ITV009


Working Principle

When the input signal rises, the air supply soloenoid valve ① turns ON. Due to this, part of the supply pressure passes through the air supply solenoid valve ① and changes to output pressure. This output pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, pressure corrections continue until output pressure becomes proportional to the input signal, enabling output pressure that is proportional to the input signal.

Diagram of working principle

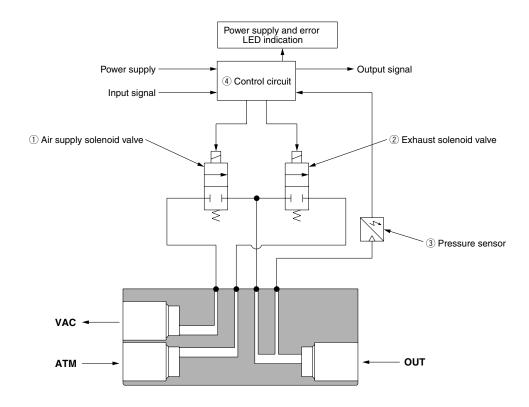


Block diagram

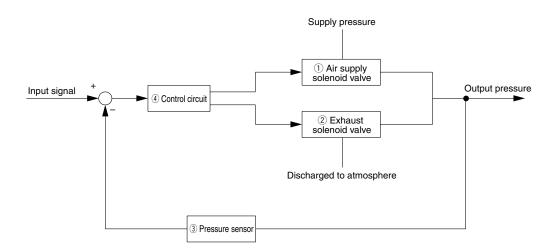


Compact Vacuum Regulator Series ITV009


Series ITV009□

Linearity, Hyteresis

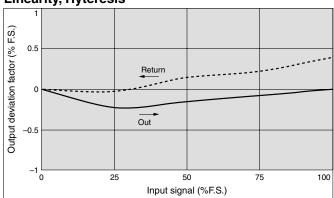


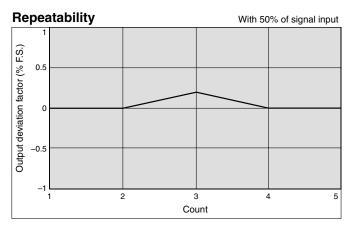

Pressure Characteristics

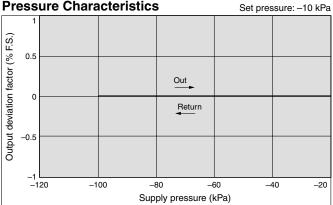


Flow Characteristics

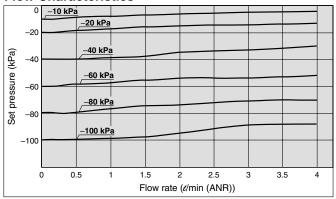




Series ITV009□


Dimensions

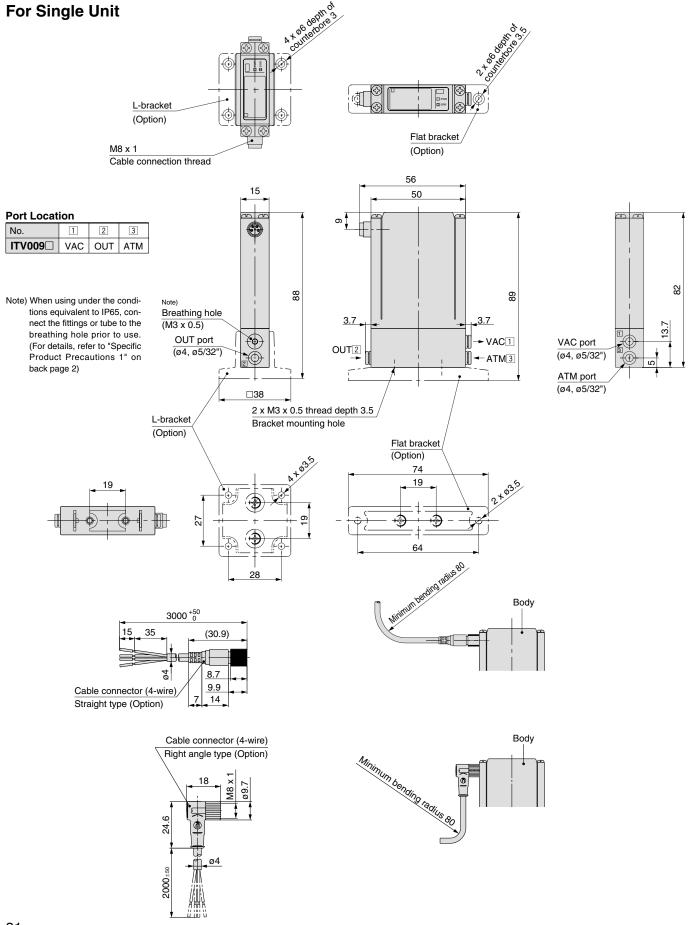


Dimensions


Single unit for manifold

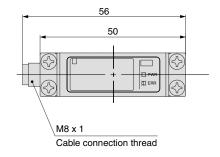


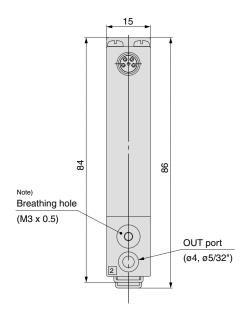

Note) When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on back page 2)

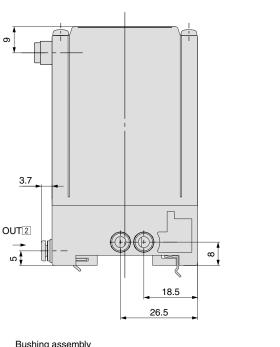

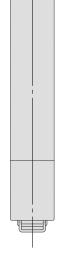

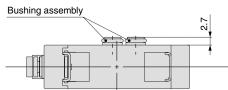


Note) For dimensions of the cable connector, refer to single unit on page 31.

Series ITV009□

Dimensions


Manifold

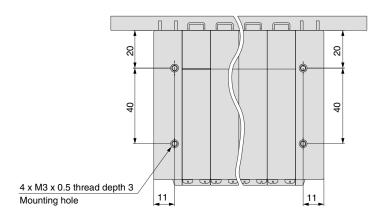



Port Location

No.	1	2	3	
ITV009□	VAC	OUT	ATM	

Note) Stations are counted starting from the D side.

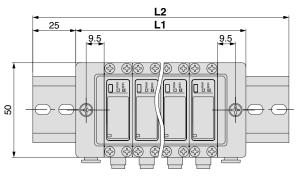

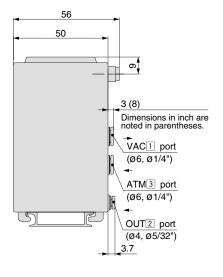

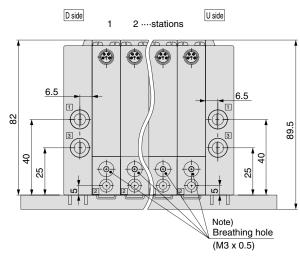

Note) For dimensions of the cable connector, refer to single unit on page 31.

									(mm)
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail (g)	20	22	27	29	31	34	36	41	43


Note) When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on back page 2)

Electronic Vacuum Regulator

Series ITV2090/2091





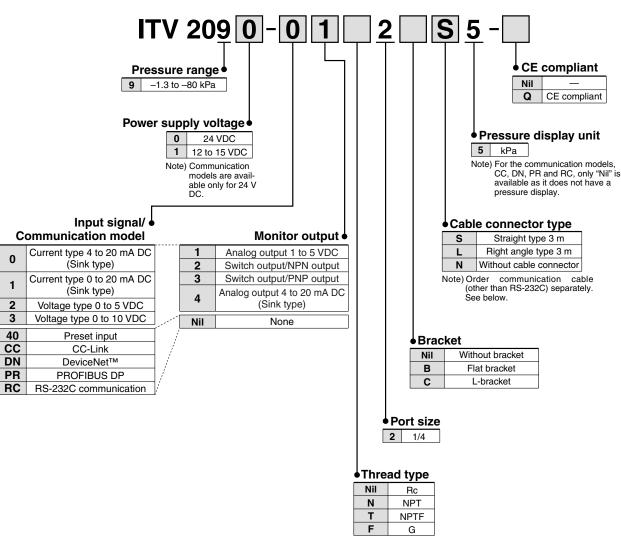

For communications cables, use the parts listed below (refer to the catalog [M8/M12 Connector] CAT.ES100-73 for details) or order the product certified for the respective protocol (with M12 connector) separately.

Application	Communication cable part number	Remarks
CC-Link compatibility	PCA-1567720 (Socket type)	Dedicated Bus adapter supplied
CC-Link compatibility	PCA-1567717 (Plug type)	with the product.
DeviceNet™	PCA-1557633 (Socket type)	T branch connector not cumplied
compatibility	PCA-1557646 (Plug type)	T-branch connector not supplied.
PROFIBUS DP	PCA-1557688 (Socket type)	T branch connector not cumplied
compatibility	PCA-1557691 (Plug type)	T-branch connector not supplied.




Stepless control of vacuum pressure in proportion to an





Piping/Wiring Diagram

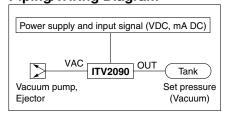

Standard Specifications

Mod	del	ITV2090	ITV2091	
	Voltage	24 VDC ±10%	12 to 15 VDC	
Power supply Current consumption		Power supply voltage 24 VDC type: 0.12 A or less Note 6) Power supply voltage 12 to 15 VDC type: 0.18 A or less		
Minimum supply vac	euum pressure Note 1)	Set pressur	e –13.3 kPa	
Maximum supply va	cuum pressure	-101	kPa	
Set pressure rang	je	–1.3 to	-80 kPa	
	Current type Note 2)	4 to 20 mA DC,	0 to 20 mA DC	
Input signal	Voltage type	0 to 5 VDC,	0 to 10 VDC	
	Preset input		ative common)	
	Current type	250 Ω or	less Note 3)	
Input	Voltage type	Approximately 6.5 kΩ		
impedance	Preset input	Power supply voltage 24 VDC type: Approximately 4.7 k Ω Power supply voltage 12 VDC type: Approximately 2.0 k Ω		
Note 4) Output signal (Monitor output)	Analog output	1 to 5 VDC (Load impedance: $1 \text{ k}\Omega$ or more) 4 to 20 mA DC (Sink type) (Load impedance: 250Ω or less Output accuracy within $\pm 6\%$ (Full span)		
(Monitor output)	Switch output	NPN open collector output: Max. 30 V, 80 mA PNP open collector output: Max. 80 mA		
Linearity		Within ±1% (Full span)		
Hysteresis		Within 0.5% (Full span)		
Repeatability		Within ±0.5% (Full span)		
Sensitivity		Within 0.2% (Full span)		
Temperature characteristics		Within ±0.12% (Full span)/°C		
Output pressure Accuracy		±2%F.S. 1 digit		
display	Units	kPa Note 5) Minimum display: 1		
Ambient and fluid temperature		0 to 50°C (No condensation)		
Enclosure		IP65		
Weight Note 7)		350 g		

Note 1) The minimum supply vacuum pressure should be 13.3 kPa less than the maximum vacuum pressure setting value.

Note 2) 4 to 20~mA DC is not possible with the 2-wire type. Power supply voltage (24 VDC or 12 to 15 VDC) is required.

Note 3) Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input power supply. This is 350 Ω or less for an input current of 20 mA DC.

Note 4) Either analog output or switch output must be selected. Furthermore, when switch output is selected, either NPN output or PNP output must also be selected. Use caution that the preset input type is not equipped with an output signal function.

Note 5) Please contact SMC regarding indication with other units of pressure.

Note 6) For communication models, the maximum current consumption is 0.16 A or less.

Note 7) For communication models, add roughly 80 g to the weight (100 g for the PROFIBUS

Communication Specifications (CC, DN, PR, RC)

Model	ITV□0□0-CC□□	ITV□0□0-DN□□	ITV□0□0-PR□□	ITV□0□0-RC□□
Protocol	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C
Version Note 1)	Ver 1.10	Release2.0	DP-V0	_
Communication speed	156 k/625 k 2.5 M/5 M/10 M bps	125 k/250 k/500 k bps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 M bps	
Configulation file Note 2)	_	EDS	GSD	_
I/O occupation area (input/output data)	4 word/4 word, 32 bit/32 bit (per station, remote device station)	16 bit/16 bit	16 bit/16 bit	_
Communication data resolution	12 bit (4096 resolution)	12 bit (4096 resolution)	12 bit (4096 resolution)	10 bit (1024 resolution)
Fail safe	HOLD Note 3)/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD
Terminating resistor	_		Built into the product (Switch setting)	_

Note 1) Note that version information is subject to change. Note 2) Configulation files can be downloaded from the SMC's website: http://www.smcworld.com

Note 3) The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.



Working Principle


Pressure display Output signal Power supply 8 Control circuit Input signal 1 Vacuum pressure 2 Atmospheric pressure solenoid valve solenoid valve Atmospheric pressure 7 Pressure sensor 4 Diaphragm 3 Pilot chamber VAC. (5) Vacuum pressure (Vacuum pump, etc.) valve OUT. ATM (Atmospheric pressure) (Set pressure) 6 Atmospheric pressure

Working Principle


When the input signal increases, the vacuum pressure solenoid valve ① turns ON, and the atmospheric pressure solenoid valve 2 turns OFF. Because of this, VAC. and the pilot chamber 3 are connected, the pressure in the pilot chamber 3 becomes negative and acts on the top of the diaphragm 4.

As a result, the vacuum pressure valve (5) which is linked to the diaphragm (4) opens, VAC. and OUT. are connected, and the set pressure becomes negative.


This negative pressure feeds back to the control circuit ® via the pressure sensor 7. Then, a correct operation works until a vacuum pressure proportional to the input signal is reached, and a vacuum pressure is obtained which is always proportional to the input signal.

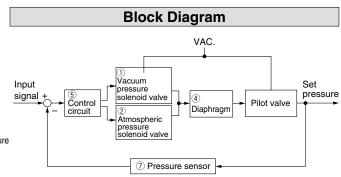


Series ITV209□

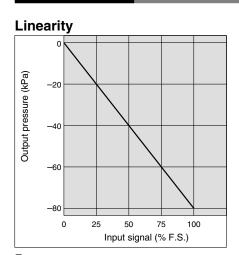


Hysteresis

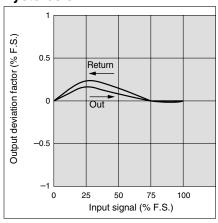


Repeatability

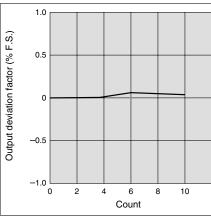

Pressure Characteristics Set pressure: -20 kPa

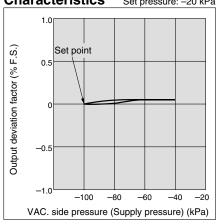

Flow

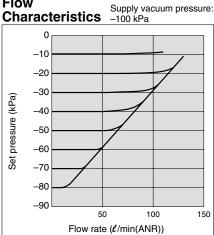


Flow characteristics measurement conditions

- Exhaust flow rate of the vacuum pump used for measurement: 500 ℓ/min (ANR)
- Inlet vacuum pressure: -100 kPa (When outlet flow rate is 0 ℓ/min (ANR))
- Maximum flow rate: 132 ℓ/min (ANR) (With inlet vacuum pressure at -39 kPa)



Series ITV209□

Dimensions

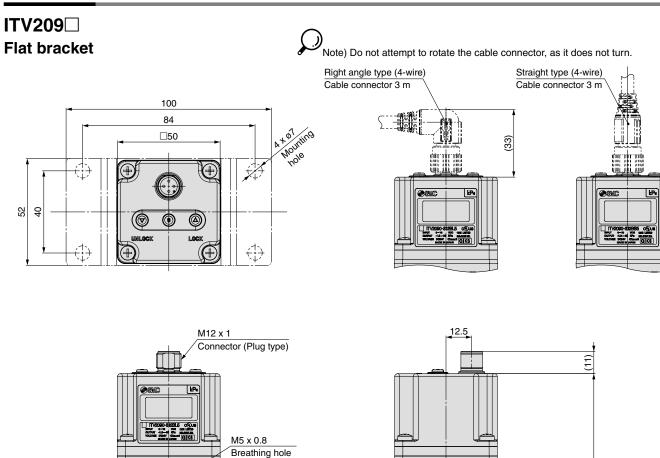

66

42

Rc 1/4

VAC.

(Vacuum pressure)

ATM. port, OUT port

2 x Rc 1/4

VAC. port


L-bracket

(23)

ATM.

(Atmospheric

pressure)

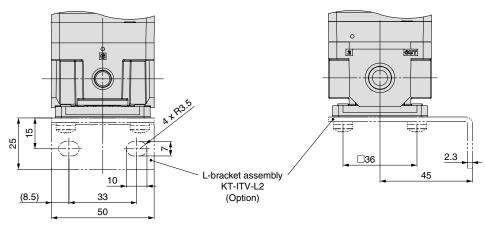

Flat bracket assembly KT-ITV-F2

(Option)

4 x M5 x 0.8 thread depth 6 mm through

(D)

13.5

□36

OUT

(Set

pressure)

Electronic Vacuum Regulator Series ITV209

DeviceNet™/ITV2090-DN

Dimensions (CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

CC-Link/ITV2090-CC M12 x 1 Communication cable M12 x 1 connection thread Communication cable connection (Plug type) thread (Socket type) M12 x 1 Power cable connection thread 53 (Plug type) = BUS adapter 8.5 M5 x 0.8 Air introduction **(6)** Rc 1/4 VAC. port OUT VAC. 2 2 x Rc 1/4 ATM. port, OUT port * Dimensions not shown are as on page 37.


M12 x 1 Communication cable connection thread M12 x 1 (Plug type) Power cable connection thread (Plug type) 10 10 8.5 M5 x 0.8 Air introduction **(** Rc 1/4 VAC. port OUT VAC.

2

2 x Rc 1/4


ATM. port, OUT port

PROFIBUS DP/ITV2090-PR

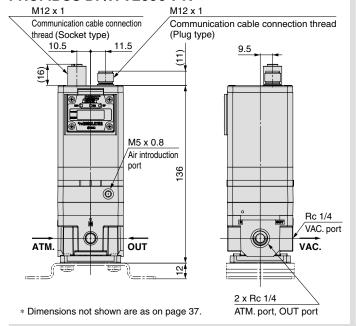


RS-232C/ITV2090-RC

* Dimensions not shown are as on page 37.

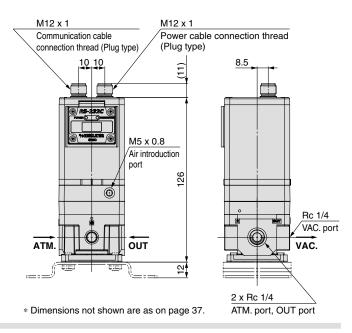

With power cable connector

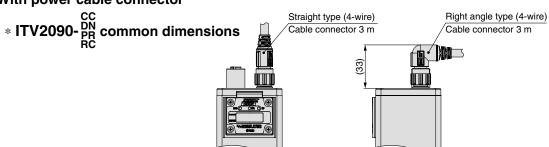

Note) Do not attempt to rotate the cable connector, as it does not turn.




Series ITV209□

Accessories (Option)/Part No.

Description		Part no.
Flat bracket assembly		KT-ITV-F2
L-bracket assembly		KT-ITV-L2
Power cable Straight type 3 m		P398020-500-3
connector	Right angle type 3 m	P398020-501-3
Bus adapter (CC-Link model only)		EX9-ACY00-MJ

Dimensions

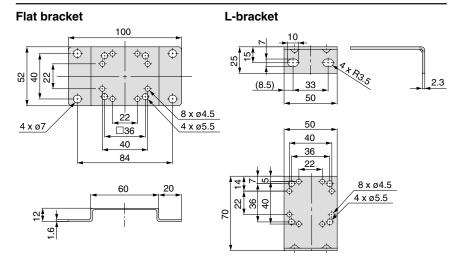

⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk ⚠ Danger: which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*2)
 - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
 - This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

↑ Safety Instructions | Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.



Be sure to read before handling. Refer to back page 1 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV0000/009 ☐ Precautions

Air Supply

- 1. Install an air filter near this product on the supply side. Select a filtration degree of 5 μ m or less.
- Compressed air containing large amounts of drainage can cause malfunction of this product and other pneumatic equipment. As a countermeasure, install an aftercooler, air dryer or Drain Catch, etc.
- 3. If large amounts of carbon dust are generated by the compressor, it can accumulate inside this product and cause malfunction.


For details on the above compressed air quality, refer to SMC's "Air Preparation Systems".


Wiring

A Caution


Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can cause damage.

Further, use DC power with sufficient capacity and a low ripple.

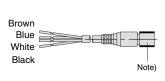

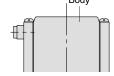



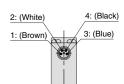

Note) A right angle type cable is also available. The entry direction for the right angle type connector is to downwards (SUP port side).

Never turn the connector as it is not designed to turn. Using force to turn the connector will damage the connector coupling.

<u>Brown</u>


Blue

White

0 to 10 VDC

Wiring Diagrams

Current signal type

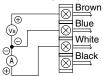


Vs: Power Supply 24 VDC ±10% 12 to 15 VDC A: Input signals 4 to 20 mA DC Vs : Power Supply 24 VDC ±10%
12 to 15 VDC

Vin: Input signals 0 to 5 VDC

Voltage signal type

Monitor output wiring diagram

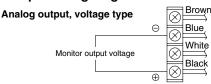

0 to 20 mA DC

Handling

⚠ Caution

- Do not use a lubricator on the supply side of this product, as this can cause malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side.
 - However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If power to this product is cut off due to a power failure, etc. when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated.
 - Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as this can lead to malfunction.
- 6. The optional cable connector is a 4 wire type. When the monitor output (analog output or switch output) is not being used, keep it from touching the other wires as this can cause malfunction.
- 7. Please note that the right angle cable does not rotate and is limited to only one entry direction.
- 8. Take the following steps to avoid malfunction due to noise.
 - 1) Remove power supply noise during operation by installing a line filter, etc. in the AC power line.
 - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
 - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 9. The product characteristics are confined to the static state. When air is consumed on the output side, and especially used in the system with large leakage, pressure cannot approach the set pressure and the service life is drastically shortened with a humming noise of the solenoid valve.
- For details on the handling of this product, refer to the instruction manual which is included with the product.
- 11. In locations where the body is exposed to water, dust, etc., there is a possibility that moisture or dust could enter the body through the breathing hole.

Mount a fitting and tube (M-3AU-3 fitting and TIU01m-mm tube recommended) onto the breathing hole and run the tube to a location not exposed to moisture or dust, etc.



6

12. If this product will be used in a sealed environment, such as inside an inspection box, a ventilation fan should be installed to ensure adequate ventilation as this product can generate heat in some operating conditions.

When the power is turned on, a noise may be generated as a means of checking the operating condition of the solenoid valve. This noise is normal and does not indicate a fault.





Be sure to read before handling. Refer to back page 1 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV1000/2000/3000/209 ☐ Precautions

Piping


⚠ Warning

1. Screw piping together with the recommended proper torque while holding the side that has female threads.

Looseness or faulty sealing will occur if tightening torque is insufficient, while thread damage will result if the torque is excessive. Furthermore, if the side with the female threads is not held while tightening, excessive force will be applied directly to piping brackets, etc. causing damage or other problems.


Recommended proper torque: N · m

Connection thread	1/8	1/4	3/8	1/2
Torque	7 to 9	12 to 14	22 to 24	28 to 30

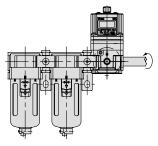

Do not allow twisting or bending moment to be applied other than the weight of the equipment itself.

Provide separate support for external piping, as damage may otherwise occur.

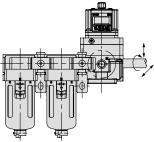

3. Since excessive moment loads and the propagation of vibrations, etc. can easily result from inflexible piping made of materials such as steel, avoid these problems by using flexible tubing for intermediate connections.

⚠ Caution


1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Wrapping of pipe tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the piping.

Also, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

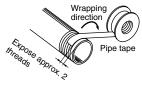

Operating Environment

⚠ Warning

- Do not operate in locations having an atmosphere of corrosive gases, chemicals, sea water, or where there will be contact with the same.
- Do not operate in locations where vibration or impact occurs.

⚠ Caution

- In locations where the body is exposed to water, steam, dust, etc., there is a possibility that moisture or dust could enter the body through the EXH (solenoid) ports, thereby causing problems.
- 2. To overcome this, simply install tubing to each port, using the fittings, and extend the tubing so that the other end is at a location where no water splash, etc. occurs. Make sure not to bend, or block the I.D. of the tubing as this will have a detrimental affect on the pressure control.
- Do not operate in locations where vibration or impact occurs.
- 4. In locations which receive direct sunlight, provide a protective cover, etc.
- In locations near heat sources, block off any radiated heat.
- 6. In locations where there is contact with spatter from water, oil or solder etc., implement suitable protective measures.

Air Supply

⚠ Warning

- Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.
- 2. Consult with SMC when used in power plants, or if instrumentation related.

∧ Caution

- 1. Install an air filter near this product on the supply side. Select a filtration degree of 5 μ m or less.
- 2. Compressed air containing large amounts of drainage can cause malfunction of this product and other pneumatic equipment. As a countermeasure, install an aftercooler, air dryer or Drain Catch, etc.
- If large amounts of carbon dust are generated by the compressor, it can accumulate inside this product and cause malfunction. For details on the above compressed air quality, refer to SMC's "Air Preparation Systems".



Be sure to read before handling. Refer to back page 1 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV1000/2000/3000/209 ☐ Precautions

Handling

- Do not use a lubricator on the supply side of this product, as this can cause malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- If electric power is shut off while pressure is being applied, pressure will be retained on the output side.
 - However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If power to this product is cut off due to a power failure, etc. when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated. Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- 5. In this product, the output side pressure cannot be completely relieved within the range of 0.005 MPa or less. If it is desired to reduce the pressure completely to 0 MPa, install a 3 way valve or other device on the output side to exhaust the pressure.
- This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as this can lead to malfunction.
- 7. The optional cable connector is a 4-wire type. When the monitor output (analog output or switch output) is not being used, keep it from touching the other wires as this can cause malfunction.
- 8. Please note that the right angle cable does not rotate and is limited to only one entry direction.
- Take the following steps to avoid malfunction due to noise.
 - 1) Remove power supply noise during operation by installing a line filter, etc. in the AC power line.
 - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
 - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).

Handling

⚠ Caution

- 10. Due to the large volume of the output side, a loud exhaust noise will be produced when being used for the purpose of a relief function. Therefore, install a silencer (SMC Series AN200 or AN400) on the exhaust port (EXH port). The port sizes are Rc 1/8, Rc 1/4 and Rc 1/2.
- 11. Specifications on page 10 is in case of static environment. Pressure may fluctuate when air is consumed at the output side.
- For details on the handling of this product, refer to the instruction manual which is included with the product.

Design and Selection

⚠ Caution


- 1. The direct-current power supply to combine should be UL authorized power supply.
- (1) Limited voltage current circuit in accordance with UL 508. A circuit in which power is supplied by the secondary coil of a transformer that meets the following conditions.
 - Maximum voltage (with no load):
 30 Vrms (42.4 V peak) or less
 - Maximum current:
 - (1) 8 A or less (including when short circuited)
 - (2) limited by circuit protector (such as fuse) with the following ratings.

No load voltage (V peak)	Max. current rating	
0 to 20 [V]	5.0	
Al 00 t- 00 D/I	100	
Above 20 to 30 [V]	Peak voltage	

- (2) A circuit using max. 30 Vrms or less (42.4 V peak), which is powered by UL1310 or UL1585 compatible Class-2 power supply.
- 2. Operate these products only within the specified voltage.

Using voltages beyond the specified levels could cause faults or malfunctions.

3. Use 0 V as the baseline for the power supplied to the unit for output, control and input.

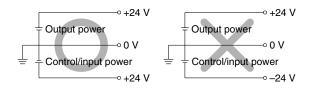






Be sure to read before handling. Refer to back page 1 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.


Series ITV1000/2000/3000/209 ☐ Precautions

Wiring

⚠ Caution

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can cause damage. Further, use DC power with sufficient capacity and a low ripple.

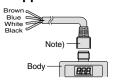

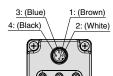



Current Signal Type Voltage Signal Type


1	Brown	Power supply
2	White	Input signal
3	Blue	GND (COMMON)
4	Black	Monitor output

Preset Input Type

1	Brown	Power supply
2	White	Input signal 1
3	Blue	GND (COMMON)
4	Black	Input signal 2

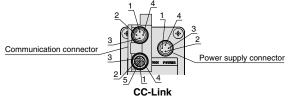

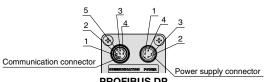

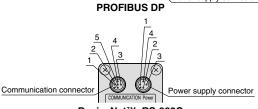

DeviceNet™, RS-232C

	IN/OUT communication connector					
Pin No.	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C		
1	SLD	DRAIN	NC	NC		
2	DB	V+	RxD/TxD-N	TxD		
3	DG	V–	NC	RxD		
4	DA	CAN_H	RxD/TxD-P	GND		
5	NC	CAN_L	NC	NC		

	Power supply connector				
Pin No.	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C	
1	Vcc	Vcc	Vcc	Vcc	
2	FG	No connection	NC	NC	
3	GND	GND	GND	GND	
4	NC	No connection	NC	FG	

Note) The cable is also available in a right angle type. (Communication cable: straight type only)

A right angle type connector is attached facing left (towards the SUP port). On communication models, the connector faces backwards (towards the EXH port). Do not attempt to rotate, as the connector does not turn.

■ Trademark Information

DeviceNet™ is a trademark of ODVA.

Current signal type

Wiring diagram




Vs : Power supply 24 VDC 12 to 15 VDC A : Input signal 4 to 20 mA DC 0 to 20 mA DC

Voltage signal type



Vs : Power supply 24 VDC 12 to 15 VDC Vin: Input signal 0 to 5 VDC 0 to 10 VDC

Preset input type

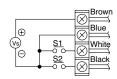

Vs : Power supply 24 VDC 12 to 15 VDC

One of the preset pressures P1 through P4 is selected by the ON/OFF combination of S1 and S2.

S1	OFF	ON	OFF	ON
S2	OFF	OFF	ON	ON
Preset pressure	P1	P2	P3	P4


- * For safety reasons, it is recommended that one of the preset pressures be set to 0 MPa.
- * Preset pressures are set based on the minimum unit for output display.

MPa	kgf/cm ²	bar	psi	kPa
0.001	0.01	0.01	0.1	1

· Note that this is 1 psi for 130 psi types.


Monitor output wiring diagram

Analog output: Voltage type

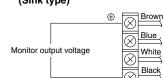

Θ Blue White, Monitor output voltage


Switch output: NPN type

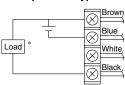

Analog output: Current type (Sink type)



Switch output: PNP type

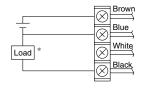

* When 80 mA DC or more is applied, detecting device for overcurrentstarts activating and then emits an error signal. (Error number "5")





Be sure to read before handling. Refer to back page 1 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV1000/2000/3000/209 ☐ Precautions

Set Pressure Range

The set pressure range, by unit of standard measured pressure, is shown in the table below.

Set pressure range, by unit of standard measured pressure

Unit	Set pressure range									
Offit	ITV□01□			ITV□03□			ITV□05□			ITV209□
MPa	0.005	to	0.1	0.005	to	0.5	0.005	to	0.9	_
kgf/cm ²	0.05	to	1	0.05	to	5	0.05	to	9	_
bar	0.05	to	1	0.05	to	5	0.05	to	9	
psi	0.7	to	15	0.7	to	70	0.7	to	130	_
kPa	5	to	100	5	to	500	5	to	900	−1.3 to −80

CE Marking

When using the power supply cable for the CE compliant product (including Made to Order), mount the ferrite core on the cable according to the following "Ferrite core necessity".

• Series ITV0000

Model	Ferrite core necessity	Recommended power supply cable			
ITV0000-□□-Q	Unnecessary	M8-4DSX3MG4 (Straight type) ELWIKA-KV4408 PVC025 2M (Right angle type)			

• Series ITV1000/2000/3000

Model	Ferrite core necessity	Recommended power supply cable			
ITV::::-Q	Necessary	P398010-12 (Straight type) (With ferrite core) P398010-13 (Right angle type) (With ferrite core)			
ITV□□-CC□-Q	Unnecessary	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)			
ITV□□-DN□-Q	Necessary (Ferrite core is supplied as an accessory for the body.	P398020-504-3 (Straight type) P398020-505-3 (Right angle type)			
ITV□□-PR□-Q ITV□□-RC□-Q Necessary (Ferrite core is supplied as an accessory for the body.		P398020-500-3 (Straight type) P398020-501-3 (Right angle type)			

Note) Recommended power supply cable length is 3 m. (ELWIKA-KV4408 PVC025 2M is 2 m.) If any other length is desired, please consult with SMC.





Be sure to read before handling. Refer to back page 1 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Common Precautions.

Series ITV009□/209□ Precautions

Handling

⚠ Caution

- Connect the vacuum pump to the port, which is labeled "VAC".
- Pressure adjustment changes from "atmospheric pressure to vacuum pressure" when the input signal is increased, and from "vacuum pressure to atmospheric pressure" when the input signal is decreased.
- 3. When adjusting the vacuum pressure, be careful not to block the atmospheric pressure inlet port labeled "ATM".
- 4. Since this product is designed exclusively for use with negative pressure, be careful not to apply positive pressure in error.
- 5. In cases where the vacuum pump being used has a relatively small capacity, or the piping has a small inside diameter, etc., large variations in the set pressure (the range of pressure variation when changing from no flow to flow state) may appear. In this situation, the vacuum pump or the piping, etc. should be changed. In cases where it is not practical to change the vacuum pump, install a capacity tank (volume depending on the operating conditions) on the VAC side.
- 6. The vacuum pressure response time after a change in the input signal is influenced by the internal volume on the setting side (including piping). Since the capacity of the vacuum pump also influences the response time, give careful consideration to these points before operation.
- 7. If the electric power is shut off when in a control state, the pressure on the setting side will go into a holding condition. However, this setting side pressure will be held only temporarily and is not guaranteed. In addition, when atmospheric pressure is desired, shut off the power after reducing the set pressure, and then introduce atmospheric pressure by using a vacuum release valve, etc.
- 8. If the power for this product is cut off by a power failure, etc. when it is in a controlled state, the setting side pressure will be held temporarily. Further, if operated without sealing the setting side so that atmospheric air is sucked in, handle with care as air will continue to be sucked in.

- 9. If the VAC side pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and may cause a humming noise. Since this may shorten the life of the product, be sure to shut off the power when the VAC side pressure is shut off.
- 10. The setting side pressure cannot be completely released from this product in the range below -1.3 kPa. In cases where the pressure needs to be reduced completely to 0 kPa, install a 3 port valve, etc. on the setting side to discharge the residual pressure.
- 11. This product is adjusted for each specification at the factory before shipment. Avoid careless disassembly or removal of parts, as this can cause failure.
- 12. The optional cable connector is a 4-wire type. When the monitor output (analog output, switch output) is not being used, keep it from touching the other wires, as this can cause malfunction.
- 13. Use caution that the right angle cable does not rotate and is limited to only one entry direction.
- 14. Take the following steps to avoid malfunction due to noise.
 - 1) Eliminate power supply noise during operation by installing a line filter, etc. in the AC power line.
 - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
 - 3) Make sure to take protective measures against load surge for an induction load (solenoid valves, relays, etc.).
- 15. Refer to the instruction manual included with the product for details on its handling.



Revision history Edition D * Addition of Series ITV1000. * Number of pages from 16 to 20. HX Edition E * Addition of Series ITV0000/009□. * Addition of Series ITV209□. * Addition of Fieldbus-compatible specifications CC-Link, DeviceNet™ and PROFIBUS DP. * Addition of RS-232C serial communication specification. * Addition of RS-232C serial communication specification. * Addition of CE [option] and UL. * Number of pages from 20 to 52. NS Edition F * Change of dimensions of Series ITV1000/2000/3000/209□. * Change of enclosure for Series ITV209□ to conform to IP65. OZ

SMC Corporation

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362 URL http://www.smcworld.com © 2010 SMC Corporation All Rights Reserved