$Max. 80 \text{ m}^3/\text{h}$

DC centrifugal fans

□ 127 x 25 mm



Scroll housing: GRP1) Material: Impeller: GRP1)

Base plate: Sheet steel

Direction of air flow: Axial: Intake,

Centrifugal: Exhaust

Connection: via single wires AWG 22, TR 64 **Highlights:** Optional protective cap for

outlet opening

Backward-curved impeller


Weight: 320 g - Possible special versions:

(See chapter DC fans - specials)

- Speed signal
- Go / NoGo alarm
- Alarm with speed limit
- External temperature sensor
- Internal temperature sensor
- PWM control input
- Analog control input
- Moisture protection
- Degree of protection: IP 54

1) Fiberglass-reinforced plastic

	Series RLF 100			ltage	Je	ır level	e bearings s	nottion	ped	e range	tho (40°C) standard L10 (Tmax) standard	ıcy L _{10IPC} age 17	
	Nominal data	Air flow	Air flow	Nominal voltage	Voltage range	Sound power level	Sintec sleeve b Ball bearings	Power consumption	Nominal speed	Temperature range	Service life L- ebm-papst str Service life L- ebm-papst str	Life expectancy L (40 °C) see page	Curve
	Туре	m³/h	cfm	VDC	VDC	Bel(A)	■/■	Watts	rpm ⁻¹	°C	Hours	Hours	
	RLF 100-11/12	64	37.7	12	815	6.4	•	8.0	5 100	-20+75	80 000 / 30 000	135 000	1
	RLF 100-11/14	64	37.7	24	1630	6.4		8.0	5 100	-20+75	80 000 / 30 000	135 000	1
	RLF 100-11/18	64	37.7	48	3660	6.4		8.6	5 100	-20+75	80 000 / 30 000	135 000	1
High speed models with open-collector tachometer and PWM speed control.													
	RLF 100-11/12/2 HP-200	80	47.1	12	1013.2	7.5	-	18.6	6 400	-20+60	72 500 / 45 000	122 500	2
	RLF 100-11/18/2 HP-182	80	47.1	48	4353	7.5	-	17.0	6 400	-20+70	72 500 / 35 000	122 500	2
	Subject to change												

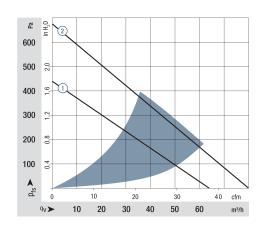


Air performance measured according to: ISO 5801. Installation category A, without contact protection. Noise: Total sound power level L_WA ISO 103002 measured on a hemisphere with a radius of 2 m. Sound pressure level L_pA measured at 1 m distance from fan axis.

The values given are applicable only under the specified

measuring conditions and may differ depending on the installation conditions.

In the event of deviation from the standard configuration. the parameters must be checked after installation! For detailed information see

http://www.ebmpapst.com/general conditions

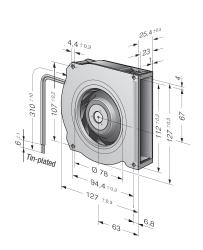

2016-01